

ZF transmissions



TRACTOR AUTOMOBILE SPARES

ZF ECOSPLIT

series I- II-III

illustrated catalogue ZF 4-510

www.tas-spa.com

The TAS name and logo are registered names, brands or trademarks owned by TAS.

All other trademarks, brands, company names and logos are the exclusive property of the respective owners.

All our parts are not original but perfectly interchangeable with them. All original manufacturers' numbers and names are used for reference purposes only..



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF ECOSPLIT
series I-II-III

UPDATED MAY 2010

1

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 4-510

HOW TO READ THIS CATALOGUE

T 00000 : CURRENT PRODUCTION

ORIGINAL PART NUMBER

MERCEDES PART NUMBER

TECHNICAL NOTES

FIGURE NUMBER

- TRANSMISSION -

MAIN DRIVE GEAR MAINSHAFT INTERSHAFT - REVERSE IDLER GEAR

TAS S.p.A.

KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	-----	1296 302 002	-----	CONSTANT GEAR (30 T.)	
1	T 11161	1296 302 003	000 262 3910	CONSTANT GEAR (28-58 T.)	
1	T 14807	1296 302 023	000 262 3010	CONSTANT GEAR (28-61 T.)	
2	T 08858	1295 304 165	000 262 1440	SYNCHRONIZER CONE (57 T.)	
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	1
3	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	1
4	T 11173	1296 202 001	001 262 2002	MAIN DRIVE GEAR (57 T.)	A
4	T 15119	1296 202 004	000 262 9402	MAIN DRIVE GEAR (57 T.)	
4	-----	1296 202 006	-----	MAIN DRIVE GEAR	B
4	-----	1296 202 010	-----	MAIN DRIVE GEAR	C
4	-----	1296 221 001	001 262 0902	MAIN DRIVE GEAR	
4	-----	1296 221 002	001 262 3302	MAIN DRIVE GEAR	
5	-----	1296 202 011	-----	MAIN DRIVE GEAR	D
6	-----	0635 470 012	005402 007200	SYNCHRONIZER CYLINDER ROLLER	
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	1-2-3-4-5
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	1-2-3-4-5
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	1-2-3-4-5
10	-----	0730 062 323	000 261 0766	MAIN DRIVE GEAR TUBE	
11	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
12	T 11154	1296 304 090	000 262 2414	FOURTH SPEED GEAR (58-30-58 T.)	
12	-----	1296 304 091	-----	FOURTH SPEED GEAR (28 T.)	
13	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	3
14	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	2
14	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	3
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	2-3
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	2-3
17	T 11156	1296 304 087	000 262 3113	THIRD SPEED GEAR (34-58 T.)	
17	-----	1296 304 088	-----	THIRD SPEED GEAR (32 T.)	
18	T 19135	1296 304 119	000 262 2505	MAINSHAFT	
19	T 19132	1296 304 070	000 262 2512	SECOND SPEED GEAR (38-58 T.)	
19	-----	1296 304 071	-----	SECOND SPEED GEAR (37 T.)	
20	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	
20	T 09054	1297 304 196	000 262 2140	SYNCHRONIZER CONE (63 T.)	5
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	4-5
21	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	
22	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	4-5
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	4-5
23	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	
24	-----	1296 304 099	000 262 4811	FIRST SPEED GEAR (47 T.)	
24	-----	1296 304 100	-----	FIRST SPEED GEAR (44 T.)	
25	T 19360	1295 304 206	000 262 1540	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	
26	T 19100	1295 304 012	000 262 2050	REVERSE GEAR SLEEVE	
27	-----	1296 304 097	000 262 4911	REVERSE GEAR (38 T.)	
27	-----	1296 304 098	-----	REVERSE GEAR (39 T.)	
28	T 15359	1295 304 247	000 262 0109	PLANETARY REDUCTION SUN GEAR (27 T.)	
29	-----	1296 303 013	-----	COUNTERSHAFT CONSTANT GEAR (31 T.)	
29	T 11165	1296 303 014	000 263 3210	COUNTERSHAFT CONSTANT GEAR (34 T.)	
30	T 11169	1296 303 002	000 263 3310	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	
30	-----	1296 303 003	-----	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	
31	-----	1296 303 008	-----	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	
31	T 11163	1296 303 009	000 263 3110	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	
32	T 15364	1296 303 025	000 263 3502	COUNTERSHAFT (17-20 T.)	
32	-----	1296 303 026	-----	COUNTERSHAFT (19-23 T.)	
33	T 11447	1295 305 056	000 263 1430	REVERSE IDLER GEAR SHAFT	
34	-----	1295 305 051	000 263 0232	REVERSE IDLER GEAR (21 T.)	
34	-----	1295 305 052	000 263 0032	REVERSE IDLER GEAR (24 T.)	
35	T 14283	0730 150 064	343 263 0062	REVERSE IDLER GEAR THRUST WASHER	
36	-----	1297 302 011	-----	MAIN DRIVE GEAR BEARING RETAINER	B
36	T 15567	1297 302 012	000 262 3329	MAIN DRIVE GEAR BEARING RETAINER	A
36	-----	1297 302 013	-----	MAIN DRIVE GEAR BEARING RETAINER	A
36	-----	1297 302 108	-----	MAIN DRIVE GEAR BEARING RETAINER	C
36	-----	1297 302 169	-----	MAIN DRIVE GEAR BEARING RETAINER	C
37	-----	1295 302 100	000 262 4529	MAIN DRIVE GEAR BEARING RETAINER	D
38	T 09751	1295 202 041	000 260 1290	MAIN DRIVE GEAR OIL PUMP	
39	T 15289	0730 061 816	000 262 0673	SPACER RING	
40	T 09503	0630 501 024	000471 030000	MAINSHAFT BEARING CIRCLIP	
41	T 15366	0737 502 092	000 990 2360	MAINSHAFT NUT	
42	T 16154	1295 298 936	-----	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	1 ^(*)
43	T 16161	1297 204 059	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	2 ^(*)
43	T 18620	1297 298 958	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	3 ^(*)

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme

Items with same letter or number must be coupled together

(*) Per la composizione dei kit vedi pagina 81

(*) For the composition of the kits please see page 81

TECHNICAL NOTES

TRANSMISSION MODEL

TABLE NUMBER

16 S 112
 ZF 37
 4-510

PROGRESSIVE ZF REFERENCESCHART I
PROGRESSIVE MERCEDES REFERENCESCHART II
PROGRESSIVE TAS REFERENCESCHART III

ZF ECOSPLIT	MODEL	TABLE
Series I	16 S 112	ZF 37
	16 K 130	ZF 40
	16 S 130	ZF 41
	16 K 160	ZF 43
	16 S 160	ZF 44
	16 K 190	ZF 46
	16 S 190	ZF 47
Series II	16 S 150	ZF 50
	16 S 220	ZF 51
Series III	16 S 151	ZF 55
	16 S 181	ZF 56
	16 S 221	ZF 57
	16 S 251	ZF 58

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
0501 305 887	T 08940	003 264 2252	ZF 37	64	GEAR THRUST WASHER	16 S 112
0501 305 887	T 08940	003 264 2252	ZF 40	64	GEAR THRUST WASHER	16 K 130
0501 305 887	T 08940	003 264 2252	ZF 41	64	GEAR THRUST WASHER	16 S 130
0501 306 212	T 15745	000 263 0562	ZF 41	64	GEAR THRUST WASHER	16 S 130
0501 306 212	T 15745	000 263 0562	ZF 43	64	GEAR THRUST WASHER	16 K 160
0501 306 212	T 15745	000 263 0562	ZF 44	64	GEAR THRUST WASHER	16 S 160
0501 306 212	T 15745	000 263 0562	ZF 46	64	GEAR THRUST WASHER	16 K 190
0501 306 212	T 15745	000 263 0562	ZF 47	64	GEAR THRUST WASHER	16 S 190
0501 306 212	T 15745	000 263 0562	ZF 51	64	GEAR THRUST WASHER	16 S 220
0501 308 981	-----	000 263 0762	ZF 47	64	GEAR THRUST WASHER	16 S 190
0501 308 981	-----	000 263 0762	ZF 50	64	GEAR THRUST WASHER	16 S 150
0501 308 981	-----	000 263 0762	ZF 51	64	GEAR THRUST WASHER	16 S 220
0501 308 981	-----	000 263 0762	ZF 55	64	GEAR THRUST WASHER	16 S 151
0501 308 981	-----	000 263 0762	ZF 57	64	GEAR THRUST WASHER	16 S 221
0501 311 230	USE 0501 308 981					
0501 314 060	T 18524	-----	ZF 50	49	MAIN DRIVE GEAR DIAPHRAGM	16 S 150
0501 314 060	T 18524	-----	ZF 51	49	MAIN DRIVE GEAR DIAPHRAGM	16 S 220
0501 314 060	T 18524	-----	ZF 55	42	MAIN DRIVE GEAR DIAPHRAGM	16 S 151
0501 314 060	T 18524	-----	ZF 56	42	MAIN DRIVE GEAR DIAPHRAGM	16 S 181
0501 314 060	T 18524	-----	ZF 57	43	MAIN DRIVE GEAR DIAPHRAGM	16 S 221
0501 314 060	T 18524	-----	ZF 58	35	MAIN DRIVE GEAR DIAPHRAGM	16 S 251
0501 320 435	USE 0501 314 060					
0630 501 024	T 09503	000471 030000	ZF 37	40	MAINSHAFT BEARING CIRCLIP	16 S 112
0630 501 024	T 09503	000471 030000	ZF 40	34	MAINSHAFT BEARING CIRCLIP	16 K 130
0630 501 024	T 09503	000471 030000	ZF 41	40	MAINSHAFT BEARING CIRCLIP	16 S 130
0630 502 027	T 18530	-----	ZF 50	48	MAIN DRIVE GEAR SEEGER RING	16 S 150
0630 502 027	T 18530	-----	ZF 51	48	MAIN DRIVE GEAR SEEGER RING	16 S 220
0630 502 027	T 18530	-----	ZF 55	41	MAIN DRIVE GEAR SEEGER RING	16 S 151
0630 502 027	T 18530	-----	ZF 56	41	MAIN DRIVE GEAR SEEGER RING	16 S 181
0630 502 027	T 18530	-----	ZF 57	42	MAIN DRIVE GEAR SEEGER RING	16 S 221
0630 502 027	T 18530	-----	ZF 58	34	MAIN DRIVE GEAR SEEGER RING	16 S 251
0630 531 055	T 19907	003 994 3841	ZF 37	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 112
0630 531 055	T 19907	003 994 3841	ZF 40	-----	POWER TAKE OFF SHAFT LOCK RING	16 K 130
0630 531 055	T 19907	003 994 3841	ZF 41	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 130
0630 531 055	T 19907	003 994 3841	ZF 43	-----	POWER TAKE OFF SHAFT LOCK RING	16 K 160
0630 531 055	T 19907	003 994 3841	ZF 44	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 160
0630 531 055	T 19907	003 994 3841	ZF 46	-----	POWER TAKE OFF SHAFT LOCK RING	16 K 190
0630 531 055	T 19907	003 994 3841	ZF 47	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 190
0630 531 055	T 19907	003 994 3841	ZF 55	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 151
0630 531 055	T 19907	003 994 3841	ZF 56	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 181
0630 531 055	T 19907	003 994 3841	ZF 57	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 221
0630 531 055	T 19907	003 994 3841	ZF 58	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 251
0631 329 017	T 15771	001481 003028	ZF 37	63	GEAR SHAFT ELASTIC PIN	16 S 112
0631 329 017	T 15771	001481 003028	ZF 40	63	GEAR SHAFT ELASTIC PIN	16 K 130
0631 329 017	T 15771	001481 003028	ZF 41	63	GEAR SHAFT ELASTIC PIN	16 S 130
0631 329 017	T 15771	001481 003028	ZF 43	63	GEAR SHAFT ELASTIC PIN	16 K 160
0631 329 017	T 15771	001481 003028	ZF 44	63	GEAR SHAFT ELASTIC PIN	16 S 160
0631 329 017	T 15771	001481 003028	ZF 46	63	GEAR SHAFT ELASTIC PIN	16 K 190
0631 329 017	T 15771	001481 003028	ZF 47	63	GEAR SHAFT ELASTIC PIN	16 S 190
0631 329 050	T 15775	001481 005036	ZF 37	62	GEAR SHAFT ELASTIC PIN	16 S 112
0631 329 050	T 15775	001481 005036	ZF 40	62	GEAR SHAFT ELASTIC PIN	16 K 130
0631 329 050	T 15775	001481 005036	ZF 41	62	GEAR SHAFT ELASTIC PIN	16 S 130
0631 329 050	T 15775	001481 005036	ZF 43	62	GEAR SHAFT ELASTIC PIN	16 K 160
0631 329 050	T 15775	001481 005036	ZF 44	62	GEAR SHAFT ELASTIC PIN	16 S 160
0631 329 050	T 15775	001481 005036	ZF 46	62	GEAR SHAFT ELASTIC PIN	16 K 190
0631 329 050	T 15775	001481 005036	ZF 47	62	GEAR SHAFT ELASTIC PIN	16 S 190
0631 329 051	-----	-----	ZF 47	62	GEAR SHAFT ELASTIC PIN	16 S 190
0631 329 051	-----	-----	ZF 50	62	GEAR SHAFT ELASTIC PIN	16 S 150
0631 329 051	-----	-----	ZF 51	62	GEAR SHAFT ELASTIC PIN	16 S 220
0631 329 051	-----	-----	ZF 55	62	GEAR SHAFT ELASTIC PIN	16 S 151
0631 329 051	-----	-----	ZF 56	62	GEAR SHAFT ELASTIC PIN	16 S 181
0631 329 051	-----	-----	ZF 57	62	GEAR SHAFT ELASTIC PIN	16 S 221
0631 329 051	-----	-----	ZF 58	62	GEAR SHAFT ELASTIC PIN	16 S 251
0631 329 167	-----	-----	ZF 47	63	GEAR SHAFT ELASTIC PIN	16 S 190
0631 329 167	-----	-----	ZF 50	63	GEAR SHAFT ELASTIC PIN	16 S 150
0631 329 167	-----	-----	ZF 51	63	GEAR SHAFT ELASTIC PIN	16 S 220
0631 329 167	-----	-----	ZF 55	63	GEAR SHAFT ELASTIC PIN	16 S 151
0631 329 167	-----	-----	ZF 56	63	GEAR SHAFT ELASTIC PIN	16 S 181
0631 329 167	-----	-----	ZF 57	63	GEAR SHAFT ELASTIC PIN	16 S 221
0631 329 167	-----	-----	ZF 58	63	GEAR SHAFT ELASTIC PIN	16 S 251
0635 331 390	T 19914	004 981 8625	ZF 37	-----	BALL BEARING 45X75X16 MM	16 S 112
0635 331 390	T 19914	004 981 8625	ZF 40	-----	BALL BEARING 45X75X16 MM	16 K 130

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
0635 331 390	T 19914	004 981 8625	ZF 41	-----	BALL BEARING 45X75X16 MM	16 S 130
0635 331 390	T 19914	004 981 8625	ZF 43	-----	BALL BEARING 45X75X16 MM	16 K 160
0635 331 390	T 19914	004 981 8625	ZF 44	-----	BALL BEARING 45X75X16 MM	16 S 160
0635 331 390	T 19914	004 981 8625	ZF 46	-----	BALL BEARING 45X75X16 MM	16 K 190
0635 331 390	T 19914	004 981 8625	ZF 47	-----	BALL BEARING 45X75X16 MM	16 S 190
0635 331 390	T 19914	004 981 8625	ZF 55	-----	BALL BEARING 45X75X16 MM	16 S 151
0635 331 390	T 19914	004 981 8625	ZF 56	-----	BALL BEARING 45X75X16 MM	16 S 181
0635 331 390	T 19914	004 981 8625	ZF 57	-----	BALL BEARING 45X75X16 MM	16 S 221
0635 331 390	T 19914	004 981 8625	ZF 58	-----	BALL BEARING 45X75X16 MM	16 S 251
0635 470 012	-----	005402 007200	ZF 37	6	SYNCHRONIZER CYLINDER ROLLER	16 S 112
0635 470 012	-----	005402 007200	ZF 40	5	SYNCHRONIZER CYLINDER ROLLER	16 K 130
0635 470 012	-----	005402 007200	ZF 41	6	SYNCHRONIZER CYLINDER ROLLER	16 S 130
0635 470 012	-----	005402 007200	ZF 43	5	SYNCHRONIZER CYLINDER ROLLER	16 K 160
0635 470 012	-----	005402 007200	ZF 44	6	SYNCHRONIZER CYLINDER ROLLER	16 S 160
0635 470 012	-----	005402 007200	ZF 46	6	SYNCHRONIZER CYLINDER ROLLER	16 K 190
0635 470 012	-----	005402 007200	ZF 47	6	SYNCHRONIZER CYLINDER ROLLER	16 S 190
0635 470 012	-----	005402 007200	ZF 50	6	SYNCHRONIZER CYLINDER ROLLER	16 S 150
0635 470 012	-----	005402 007200	ZF 51	6	SYNCHRONIZER CYLINDER ROLLER	16 S 220
0730 061 816	T 15289	000 262 0673	ZF 37	39	SPACER RING	16 S 112
0730 061 816	T 15289	000 262 0673	ZF 40	33	SPACER RING	16 K 130
0730 061 816	T 15289	000 262 0673	ZF 41	39	SPACER RING	16 S 130
0730 061 816	T 15289	000 262 0673	ZF 43	35	SPACER RING	16 K 160
0730 061 816	T 15289	000 262 0673	ZF 44	40	SPACER RING	16 S 160
0730 061 816	T 15289	000 262 0673	ZF 46	36	SPACER RING	16 K 190
0730 061 816	T 15289	000 262 0673	ZF 47	40	SPACER RING	16 S 190
0730 061 816	T 15289	000 262 0673	ZF 50	46	SPACER RING	16 S 150
0730 061 816	T 15289	000 262 0673	ZF 51	46	SPACER RING	16 S 220
0730 062 323	-----	000 261 0766	ZF 37	10	MAIN DRIVE GEAR TUBE	16 S 112
0730 062 323	-----	000 261 0766	ZF 40	9	MAIN DRIVE GEAR TUBE	16 K 130
0730 062 323	-----	000 261 0766	ZF 41	10	MAIN DRIVE GEAR TUBE	16 S 130
0730 062 323	-----	000 261 0766	ZF 43	9	MAIN DRIVE GEAR TUBE	16 K 160
0730 062 323	-----	000 261 0766	ZF 44	10	MAIN DRIVE GEAR TUBE	16 S 160
0730 062 323	-----	000 261 0766	ZF 46	10	MAIN DRIVE GEAR TUBE	16 K 190
0730 062 323	-----	000 261 0766	ZF 47	10	MAIN DRIVE GEAR TUBE	16 S 190
0730 102 412	USE 0730 107 168					
0730 103 846	T 08939	003 264 2052	ZF 37	65	GEAR SPACER RING	16 S 112
0730 103 846	T 08939	003 264 2052	ZF 40	65	GEAR SPACER RING	16 K 130
0730 103 846	T 08939	003 264 2052	ZF 41	65	GEAR SPACER RING	16 S 130
0730 103 846	T 08939	003 264 2052	ZF 43	65	GEAR SPACER RING	16 K 160
0730 103 846	T 08939	003 264 2052	ZF 44	65	GEAR SPACER RING	16 S 160
0730 103 846	T 08939	003 264 2052	ZF 46	65	GEAR SPACER RING	16 K 190
0730 103 846	T 08939	003 264 2052	ZF 47	65	GEAR SPACER RING	16 S 190
0730 103 846	T 08939	003 264 2052	ZF 51	65	GEAR SPACER RING	16 S 220
0730 107 168	-----	000 264 0947	ZF 47	65	GEAR SPACER RING	16 S 190
0730 107 168	-----	000 264 0947	ZF 50	65	GEAR SPACER RING	16 S 150
0730 107 168	-----	000 264 0947	ZF 51	65	GEAR SPACER RING	16 S 220
0730 107 168	-----	000 264 0947	ZF 55	65	GEAR SPACER RING	16 S 151
0730 107 168	-----	000 264 0947	ZF 56	66	GEAR SPACER RING	16 S 181
0730 107 168	-----	000 264 0947	ZF 57	65	GEAR SPACER RING	16 S 221
0730 107 168	-----	000 264 0947	ZF 57	67	GEAR SPACER RING	16 S 221
0730 109 309	-----	-----	ZF 56	66	GEAR SPACER RING	16 S 181
0730 109 309	-----	-----	ZF 57	67	GEAR SPACER RING	16 S 221
0730 109 323	-----	-----	ZF 56	64	GEAR SPACER RING	16 S 181
0730 109 323	-----	-----	ZF 57	65	GEAR SPACER RING	16 S 221
0730 109 323	-----	-----	ZF 58	64	GEAR SPACER RING	16 S 251
0730 150 064	T 14283	343 263 0062	ZF 37	35	REVERSE IDLER GEAR THRUST WASHER	16 S 112
0730 150 064	T 14283	343 263 0062	ZF 40	30	REVERSE IDLER GEAR THRUST WASHER	16 K 130
0730 150 064	T 14283	343 263 0062	ZF 41	35	REVERSE IDLER GEAR THRUST WASHER	16 S 130
0730 150 064	T 14283	343 263 0062	ZF 43	31	REVERSE IDLER GEAR THRUST WASHER	16 K 160
0730 150 064	T 14283	343 263 0062	ZF 44	36	REVERSE IDLER GEAR THRUST WASHER	16 S 160
0730 150 064	T 14283	343 263 0062	ZF 46	32	REVERSE IDLER GEAR THRUST WASHER	16 K 190
0730 150 064	T 14283	343 263 0062	ZF 47	36	REVERSE IDLER GEAR THRUST WASHER	16 S 190
0730 150 064	T 14283	343 263 0062	ZF 50	42	REVERSE IDLER GEAR THRUST WASHER	16 S 150
0730 150 064	T 14283	343 263 0062	ZF 51	42	REVERSE IDLER GEAR THRUST WASHER	16 S 220
0730 162 801	-----	-----	ZF 58	66	GEAR SPACER BUSHING	16 S 251
0730 260 330	T 16568	000 268 2150	ZF 43	-----	SELECTOR SHAFT BUSHING	16 K 160
0730 260 330	T 16568	000 268 2150	ZF 44	-----	SELECTOR SHAFT BUSHING	16 S 160
0730 260 330	T 16568	000 268 2150	ZF 47	-----	T/M SELECTOR SHAFT BUSHING	16 S 190
0730 260 330	T 16568	000 268 2150	ZF 50	-----	T/M SELECTOR SHAFT BUSHING	16 S 150
0730 260 330	T 16568	000 268 2150	ZF 51	-----	T/M SELECTOR SHAFT BUSHING	16 S 220
0730 260 330	T 16568	000 268 2150	ZF 55	-----	T/M SELECTOR SHAFT BUSHING	16 S 151
0730 260 330	T 16568	000 268 2150	ZF 56	-----	T/M SELECTOR SHAFT BUSHING	16 S 181

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
0730 260 330	T 16568	000 268 2150	ZF 57	-----	T/M SELECTOR SHAFT BUSHING	16 S 221
0730 260 330	T 16568	000 268 2150	ZF 58	-----	T/M SELECTOR SHAFT BUSHING	16 S 251
0732 040 385	T 08950	336 264 0693	ZF 37	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 112
0732 040 385	T 08950	336 264 0693	ZF 37	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 112
0732 040 385	T 08950	336 264 0693	ZF 40	6	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 130
0732 040 385	T 08950	336 264 0693	ZF 40	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 130
0732 040 385	T 08950	336 264 0693	ZF 41	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 130
0732 040 385	T 08950	336 264 0693	ZF 41	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 130
0732 040 385	T 08950	336 264 0693	ZF 43	6	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 160
0732 040 385	T 08950	336 264 0693	ZF 43	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 160
0732 040 385	T 08950	336 264 0693	ZF 44	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 160
0732 040 385	T 08950	336 264 0693	ZF 44	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 160
0732 040 385	T 08950	336 264 0693	ZF 46	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 190
0732 040 385	T 08950	336 264 0693	ZF 46	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 190
0732 040 385	T 08950	336 264 0693	ZF 47	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 190
0732 040 385	T 08950	336 264 0693	ZF 47	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 190
0732 040 385	T 08950	336 264 0693	ZF 50	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 150
0732 040 385	T 08950	336 264 0693	ZF 51	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 220
0732 040 385	T 08950	336 264 0693	ZF 55	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 151
0732 040 385	T 08950	336 264 0693	ZF 56	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 181
0732 040 385	T 08950	336 264 0693	ZF 57	75	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 221
0732 040 385	T 08950	336 264 0693	ZF 58	75	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 251
0732 040 386	T 08951	336 264 0793	ZF 37	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 112
0732 040 386	T 08951	336 264 0793	ZF 37	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 112
0732 040 386	T 08951	336 264 0793	ZF 40	7	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 130
0732 040 386	T 08951	336 264 0793	ZF 40	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 130
0732 040 386	T 08951	336 264 0793	ZF 41	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 130
0732 040 386	T 08951	336 264 0793	ZF 41	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 130
0732 040 386	T 08951	336 264 0793	ZF 43	7	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 160
0732 040 386	T 08951	336 264 0793	ZF 43	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 160
0732 040 386	T 08951	336 264 0793	ZF 44	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 160
0732 040 386	T 08951	336 264 0793	ZF 44	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 160
0732 040 386	T 08951	336 264 0793	ZF 46	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 190
0732 040 386	T 08951	336 264 0793	ZF 46	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 190
0732 040 386	T 08951	336 264 0793	ZF 47	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 190
0732 040 386	T 08951	336 264 0793	ZF 47	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 190
0732 040 386	T 08951	336 264 0793	ZF 50	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 150
0732 040 386	T 08951	336 264 0793	ZF 51	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 220
0732 040 386	T 08951	336 264 0793	ZF 55	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 151
0732 040 386	T 08951	336 264 0793	ZF 56	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 181
0732 040 386	T 08951	336 264 0793	ZF 57	76	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 221
0732 040 386	T 08951	336 264 0793	ZF 58	76	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 251
0732 040 409	T 13440	005 993 6101	ZF 41	7	SYNCHRONIZER PRESSURE SPRING	16 S 130
0732 040 409	T 13440	005 993 6101	ZF 47	7	SYNCHRONIZER PRESSURE SPRING	16 S 190
0732 040 409	T 13440	005 993 6101	ZF 50	7	SYNCHRONIZER PRESSURE SPRING	16 S 150
0732 040 409	T 13440	005 993 6101	ZF 51	7	SYNCHRONIZER PRESSURE SPRING	16 S 220
0732 040 409	T 13440	005 993 6101	ZF 55	5	SYNCHRONIZER PRESSURE SPRING	16 S 151
0732 040 409	T 13440	005 993 6101	ZF 56	5	SYNCHRONIZER PRESSURE SPRING	16 S 181
0732 040 409	T 13440	005 993 6101	ZF 57	5	SYNCHRONIZER PRESSURE SPRING	16 S 221
0732 040 409	T 13440	005 993 6101	ZF 58	5	SYNCHRONIZER PRESSURE SPRING	16 S 251
0732 040 736	T 09068	002 993 7501	ZF 37	-----	PRESSURE SPRING	16 S 112
0732 040 736	T 09068	002 993 7501	ZF 40	-----	PRESSURE SPRING	16 K 130
0732 040 736	T 09068	002 993 7501	ZF 41	-----	PRESSURE SPRING	16 S 130
0732 040 736	T 09068	002 993 7501	ZF 43	-----	PRESSURE SPRING	16 K 160
0732 040 736	T 09068	002 993 7501	ZF 44	-----	PRESSURE SPRING	16 S 160
0732 040 736	T 09068	002 993 7501	ZF 46	-----	PRESSURE SPRING	16 K 190
0732 040 736	T 09068	002 993 7501	ZF 47	-----	PRESSURE SPRING	16 S 190
0732 040 736	T 09068	002 993 7501	ZF 50	-----	PRESSURE SPRING	16 S 150
0732 040 736	T 09068	002 993 7501	ZF 51	-----	PRESSURE SPRING	16 S 220
0735 470 057	T 08936	001 981 1187	ZF 37	66	GEAR NEEDLE ROLLER	16 S 112
0735 470 057	T 08936	001 981 1187	ZF 40	66	GEAR NEEDLE ROLLER	16 K 130
0735 470 057	T 08936	001 981 1187	ZF 41	66	GEAR NEEDLE ROLLER	16 S 130
0735 470 163	USE 0750 119 116					
0735 470 164	-----	-----	ZF 50	66	GEAR NEEDLE ROLLER	16 S 150
0735 470 164	-----	-----	ZF 55	66	GEAR NEEDLE ROLLER	16 S 151
0737 502 092	T 15366	000 990 2360	ZF 37	41	MAINSHAFT NUT	16 S 112
0737 502 092	T 15366	000 990 2360	ZF 41	41	MAINSHAFT NUT	16 S 130
0737 502 092	T 15366	000 990 2360	ZF 43	36	MAINSHAFT NUT	16 K 160
0737 502 092	T 15366	000 990 2360	ZF 44	41	MAINSHAFT NUT	16 S 160
0737 502 092	T 15366	000 990 2360	ZF 46	37	MAINSHAFT NUT	16 K 190
0737 502 092	T 15366	000 990 2360	ZF 47	41	MAINSHAFT NUT	16 S 190
0750 116 233	USE 0635 331 390					

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
0750 119 109	T 15760	001 981 5487	ZF 41	66	GEAR NEEDLE ROLLER	16 S 130
0750 119 109	T 15760	001 981 5487	ZF 43	66	GEAR NEEDLE ROLLER	16 K 160
0750 119 109	T 15760	001 981 5487	ZF 44	66	GEAR NEEDLE ROLLER	16 S 160
0750 119 109	T 15760	001 981 5487	ZF 46	66	GEAR NEEDLE ROLLER	16 K 190
0750 119 109	T 15760	001 981 5487	ZF 47	66	GEAR NEEDLE ROLLER	16 S 190
0750 119 116	-----	000 981 4686	ZF 47	66	GEAR NEEDLE ROLLER	16 S 190
0750 119 116	-----	000 981 4686	ZF 51	66	GEAR NEEDLE ROLLER	16 S 220
0750 119 116	-----	000 981 4686	ZF 56	65	GEAR NEEDLE ROLLER	16 S 181
0750 119 116	-----	000 981 4686	ZF 57	66	GEAR NEEDLE ROLLER	16 S 221
0750 119 116	-----	000 981 4686	ZF 58	65	GEAR NEEDLE ROLLER	16 S 251
0750 470 074	USE 0750 119 109					
1240 304 278	T 08949	336 264 0239	ZF 37	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 112
1240 304 278	T 08949	336 264 0239	ZF 37	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 112
1240 304 278	T 08949	336 264 0239	ZF 40	8	SYNCHRONIZER PRESSURE PLUNGER	16 K 130
1240 304 278	T 08949	336 264 0239	ZF 40	76	SYNCHRONIZER PRESSURE PLUNGER	16 K 130
1240 304 278	T 08949	336 264 0239	ZF 41	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 130
1240 304 278	T 08949	336 264 0239	ZF 41	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 130
1240 304 278	T 08949	336 264 0239	ZF 43	8	SYNCHRONIZER PRESSURE PLUNGER	16 K 160
1240 304 278	T 08949	336 264 0239	ZF 43	76	SYNCHRONIZER PRESSURE PLUNGER	16 K 160
1240 304 278	T 08949	336 264 0239	ZF 44	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 160
1240 304 278	T 08949	336 264 0239	ZF 44	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 160
1240 304 278	T 08949	336 264 0239	ZF 46	9	SYNCHRONIZER PRESSURE PLUNGER	16 K 190
1240 304 278	T 08949	336 264 0239	ZF 46	76	SYNCHRONIZER PRESSURE PLUNGER	16 K 190
1240 304 278	T 08949	336 264 0239	ZF 47	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 190
1240 304 278	T 08949	336 264 0239	ZF 47	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 190
1240 304 278	T 08949	336 264 0239	ZF 50	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 150
1240 304 278	T 08949	336 264 0239	ZF 51	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 220
1240 304 278	T 08949	336 264 0239	ZF 55	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 151
1240 304 278	T 08949	336 264 0239	ZF 56	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 181
1240 304 278	T 08949	336 264 0239	ZF 57	77	SYNCHRONIZER PRESSURE PLUNGER	16 S 221
1240 304 278	T 08949	336 264 0239	ZF 58	77	SYNCHRONIZER PRESSURE PLUNGER	16 S 251
1240 317 075	T 08917	000 264 1423	ZF 37	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 112
1240 317 075	T 08917	000 264 1423	ZF 40	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 K 130
1240 317 075	T 08917	000 264 1423	ZF 41	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 130
1240 317 075	T 08917	000 264 1423	ZF 43	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 K 160
1240 317 075	T 08917	000 264 1423	ZF 44	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 160
1240 317 075	T 08917	000 264 1423	ZF 46	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 K 190
1240 317 075	T 08917	000 264 1423	ZF 47	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 190
1240 317 075	T 08917	000 264 1423	ZF 55	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 151
1240 317 075	T 08917	000 264 1423	ZF 56	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 181
1240 317 075	T 08917	000 264 1423	ZF 57	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 221
1240 317 075	T 08917	000 264 1423	ZF 58	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 251
1246 304 278	T 08874	000 262 2434	ZF 37	21	SYNCHRONIZER BLOCKING RING	16 S 112
1246 304 278	T 08874	000 262 2434	ZF 41	21	SYNCHRONIZER BLOCKING RING	16 S 130
1246 304 278	T 08874	000 262 2434	ZF 44	21	SYNCHRONIZER BLOCKING RING	16 S 160
1246 304 278	T 08874	000 262 2434	ZF 47	21	SYNCHRONIZER BLOCKING RING	16 S 190
1250 304 160	USE 1257 304 020					
1257 304 020	T 08946	336 262 0023	ZF 37	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 112
1257 304 020	T 08946	336 262 0023	ZF 41	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 130
1257 304 020	T 08946	336 262 0023	ZF 44	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 160
1257 304 020	T 08946	336 262 0023	ZF 47	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 190
1268 304 424	T 15059	000 262 2636	ZF 50	20	SYNCHRONIZER INTERNAL RING	16 S 150
1268 304 424	T 15059	000 262 2636	ZF 51	20	SYNCHRONIZER INTERNAL RING	16 S 220
1268 304 424	T 15059	000 262 2636	ZF 55	19	SYNCHRONIZER INTERNAL RING	16 S 151
1268 304 424	T 15059	000 262 2636	ZF 56	19	SYNCHRONIZER INTERNAL RING	16 S 181
1268 304 424	T 15059	000 262 2636	ZF 57	19	SYNCHRONIZER INTERNAL RING	16 S 221
1268 304 476	USE 1312 304 159					
1268 304 491	USE 1268 304 494					
1268 304 494	T 15065	000 262 3436	ZF 50	21	SYNCHRONIZER INTERMEDIATE RING	16 S 150
1268 304 494	T 15065	000 262 3436	ZF 51	21	SYNCHRONIZER INTERMEDIATE RING	16 S 220
1268 304 494	T 15065	000 262 3436	ZF 55	20	SYNCHRONIZER INTERMEDIATE RING	16 S 151
1268 304 494	T 15065	000 262 3436	ZF 56	20	SYNCHRONIZER INTERMEDIATE RING	16 S 181
1268 304 494	T 15065	000 262 3436	ZF 57	20	SYNCHRONIZER INTERMEDIATE RING	16 S 221
1268 304 510	USE 1297 304 436					
1268 304 525	T 15072	000 262 3934	ZF 50	22	SYNCHRONIZER BLOCKING RING	16 S 150
1268 304 525	T 15072	000 262 3934	ZF 51	22	SYNCHRONIZER BLOCKING RING	16 S 220
1268 304 525	T 15072	000 262 3934	ZF 55	21	SYNCHRONIZER BLOCKING RING	16 S 151
1268 304 525	T 15072	000 262 3934	ZF 56	21	SYNCHRONIZER BLOCKING RING	16 S 181
1268 304 525	T 15072	000 262 3934	ZF 57	21	SYNCHRONIZER BLOCKING RING	16 S 221
1269 202 087	USE 1295 202 041					
1269 202 093	USE 1295 202 041					
1269 202 101	USE 1295 202 057					

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1269 302 127	USE 0635 470 012					
1269 332 036	T 08919	000 264 1618	ZF 37	61	GEAR SHAFT	16 S 112
1269 332 036	T 08919	000 264 1618	ZF 40	61	GEAR SHAFT	16 K 130
1269 332 036	T 08919	000 264 1618	ZF 41	61	GEAR SHAFT	16 S 130
1285 333 007	USE 1240 304 278					
1295 142 011	T 19902	000 260 4605	ZF 40	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 K 130
1295 142 011	T 19902	000 260 4605	ZF 43	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 K 160
1295 142 011	T 19902	000 260 4605	ZF 44	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 160
1295 142 011	T 19902	000 260 4605	ZF 46	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 K 190
1295 142 011	T 19902	000 260 4605	ZF 47	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 190
1295 142 011	T 19902	000 260 4605	ZF 55	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 151
1295 142 011	T 19902	000 260 4605	ZF 56	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 181
1295 142 011	T 19902	000 260 4605	ZF 57	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 221
1295 142 011	T 19902	000 260 4605	ZF 58	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 251
1295 202 001	USE 1295 202 019					
1295 202 004	T 09793	001 262 1802	ZF 40	4	MAIN DRIVE GEAR (57 T.)	16 K 130
1295 202 004	T 09793	001 262 1802	ZF 41	4	MAIN DRIVE GEAR (57 T.)	16 S 130
1295 202 005	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 006	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 007	T 11210	-----	ZF 40	4	MAIN DRIVE GEAR (57 T.)	16 K 130
1295 202 007	T 11210	-----	ZF 41	4	MAIN DRIVE GEAR (57 T.)	16 S 130
1295 202 008	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 011	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 012	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 013	-----	-----	ZF 40	4	MAIN DRIVE GEAR	16 K 130
1295 202 013	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 015	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 019	T 19096	001 262 0202	ZF 41	4	MAIN DRIVE GEAR (57 T.)	16 S 130
1295 202 020	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 021	-----	-----	ZF 41	1	CONSTANT GEAR (28 T.)	16 S 130
1295 202 022	-----	-----	ZF 41	1	CONSTANT GEAR (30 T.)	16 S 130
1295 202 023	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 024	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 025	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 028	T 11171	001 262 1902	ZF 41	4	MAIN DRIVE GEAR (57 T.)	16 S 130
1295 202 035	USE 1295 202 041					
1295 202 036	-----	-----	ZF 40	4	MAIN DRIVE GEAR	16 K 130
1295 202 036	-----	-----	ZF 41	5	MAIN DRIVE GEAR	16 S 130
1295 202 039	-----	-----	ZF 40	4	MAIN DRIVE GEAR	16 K 130
1295 202 039	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 041	T 09751	000 260 1290	ZF 37	38	MAIN DRIVE GEAR OIL PUMP	16 S 112
1295 202 041	T 09751	000 260 1290	ZF 40	32	MAIN DRIVE GEAR OIL PUMP	16 K 130
1295 202 041	T 09751	000 260 1290	ZF 41	38	MAIN DRIVE GEAR OIL PUMP	16 S 130
1295 202 041	T 09751	000 260 1290	ZF 43	34	MAIN DRIVE GEAR OIL PUMP	16 K 160
1295 202 041	T 09751	000 260 1290	ZF 44	39	MAIN DRIVE GEAR OIL PUMP	16 S 160
1295 202 041	T 09751	000 260 1290	ZF 46	35	MAIN DRIVE GEAR OIL PUMP	16 K 190
1295 202 041	T 09751	000 260 1290	ZF 47	39	MAIN DRIVE GEAR OIL PUMP	16 S 190
1295 202 041	T 09751	000 260 1290	ZF 50	45	MAIN DRIVE GEAR OIL PUMP	16 S 150
1295 202 041	T 09751	000 260 1290	ZF 51	45	MAIN DRIVE GEAR OIL PUMP	16 S 220
1295 202 044	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 045	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 052	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 202 054	USE 1295 202 041					
1295 202 056	USE 1295 202 044					
1295 202 057	-----	-----	ZF 46	35	MAIN DRIVE GEAR OIL PUMP	16 K 190
1295 202 057	-----	-----	ZF 47	39	MAIN DRIVE GEAR OIL PUMP	16 S 190
1295 202 057	-----	-----	ZF 51	45	MAIN DRIVE GEAR OIL PUMP	16 S 220
1295 203 003	USE 1295 203 005					
1295 203 005	T 20125	-----	ZF 37	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 112
1295 203 005	T 20125	-----	ZF 41	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 130
1295 204 005	-----	-----	ZF 41	17	THIRD SPEED GEAR (34 T.)	16 S 130
1295 204 006	-----	-----	ZF 41	19	SECOND SPEED GEAR (38 T.)	16 S 130
1295 204 007	-----	-----	ZF 41	24	FIRST SPEED GEAR (47 T.)	16 S 130
1295 204 009	-----	-----	ZF 41	17	THIRD SPEED GEAR (32 T.)	16 S 130
1295 204 011	-----	-----	ZF 41	24	FIRST SPEED GEAR (44 T.)	16 S 130
1295 221 001	-----	001 262 1302	ZF 40	4	MAIN DRIVE GEAR	16 K 130
1295 221 001	-----	001 262 1302	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 221 002	-----	-----	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 221 003	-----	001 262 3802	ZF 41	4	MAIN DRIVE GEAR	16 S 130
1295 232 027	T 16702	000 260 1497	ZF 37	68	GEAR SET (26 T.) (5 PCS.)	16 S 112
1295 232 027	T 16702	000 260 1497	ZF 40	68	GEAR SET (26 T.) (5 PCS.)	16 K 130
1295 232 027	T 16702	000 260 1497	ZF 41	68	GEAR SET (26 T.) (5 PCS.)	16 S 130

11

I riferimenti originali sono riportati solo come indicazione di particolari originali corrispondenti.
 I particolari inseriti nel presente catalogo non sono originali, ma con essi perfettamente intercambiabili.
 All manufacturers names, numbers, symbols and descriptions are used for reference purposes only, and it is not implied that any part listed is the product of these manufacturers.

CHART I
ZF 4-510

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1295 232 032	USE 1295 232 027					
1295 232 037	-----	-----	ZF 40	60	CARRIER	16 K 130
1295 232 038	-----	-----	ZF 40	68	GEAR SET (5 PCS.)	16 K 130
1295 232 044	USE 1295 232 048					
1295 232 045	USE 1295 232 037					
1295 232 048	-----	000 260 4361	ZF 37	60	CARRIER	16 S 112
1295 232 048	-----	000 260 4361	ZF 40	60	CARRIER	16 K 130
1295 232 048	-----	000 260 4361	ZF 41	60	CARRIER	16 S 130
1295 233 025	T 09063	000 263 1920	ZF 37	78	SYNCHRONIZER CONE (63 T.)	16 S 112
1295 233 025	T 09063	000 263 1920	ZF 40	78	SYNCHRONIZER CONE (63 T.)	16 K 130
1295 233 025	T 09063	000 263 1920	ZF 41	78	SYNCHRONIZER CONE (63 T.)	16 S 130
1295 238 003	-----	-----	ZF 37	79	CARRIER COUPLING FLANGE	16 S 112
1295 238 003	-----	-----	ZF 41	80	CARRIER COUPLING FLANGE	16 S 130
1295 298 915	T 20194	-----	ZF 37	-----	GASKET KIT	16 S 112
1295 298 915	T 20194	-----	ZF 41	-----	GASKET KIT	16 S 130
1295 298 915	T 20194	-----	ZF 44	-----	GASKET KIT	16 S 160
1295 298 915	T 20194	-----	ZF 47	-----	GASKET KIT	16 S 190
1295 298 915	T 20194	-----	ZF 50	-----	GASKET KIT	16 S 150
1295 298 915	T 20194	-----	ZF 51	-----	GASKET KIT	16 S 220
1295 298 917	USE 1295 298 960					
1295 298 936	T 16154	-----	ZF 37	42	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 S 112
1295 298 936	T 16154	-----	ZF 40	35	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 K 130
1295 298 936	T 16154	-----	ZF 41	42	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 S 130
1295 298 936	T 16154	-----	ZF 43	37	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 K 160
1295 298 936	T 16154	-----	ZF 44	42	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 S 160
1295 298 936	T 16154	-----	ZF 46	38	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 K 190
1295 298 936	T 16154	-----	ZF 47	42	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 S 190
1295 298 937	T 16155	-----	ZF 37	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
1295 298 937	T 16155	-----	ZF 40	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
1295 298 937	T 16155	-----	ZF 41	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 130
1295 298 938	T 16156	-----	ZF 37	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
1295 298 938	T 16156	-----	ZF 40	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
1295 298 938	T 16156	-----	ZF 41	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 130
1295 298 939	T 16157	-----	ZF 41	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 130
1295 298 939	T 16157	-----	ZF 43	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 K 160
1295 298 939	T 16157	-----	ZF 44	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 160
1295 298 939	T 16157	-----	ZF 46	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 K 190
1295 298 939	T 16157	-----	ZF 47	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 190
1295 298 950	T 16159	-----	ZF 41	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 130
1295 298 950	T 16159	-----	ZF 43	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 K 160
1295 298 950	T 16159	-----	ZF 44	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 160
1295 298 950	T 16159	-----	ZF 46	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 K 190
1295 298 950	T 16159	-----	ZF 47	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 190
1295 298 959	T 16167	-----	ZF 37	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
1295 298 959	T 16167	-----	ZF 40	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
1295 298 959	T 16167	-----	ZF 41	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 130
1295 298 960	T 20200	-----	ZF 37	-----	OIL SEAL KIT	16 S 112
1295 298 960	T 20200	-----	ZF 41	-----	OIL SEAL KIT	16 S 130
1295 298 960	T 20200	-----	ZF 44	-----	OIL SEAL KIT	16 S 160
1295 298 960	T 20200	-----	ZF 47	-----	OIL SEAL KIT	16 S 190
1295 298 962	T 16168	-----	ZF 47	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 190
1295 298 962	T 16168	-----	ZF 51	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 220
1295 302 053	USE 1295 302 099					
1295 302 064	USE 1295 302 100					
1295 302 070	T 19448	000 262 5210	ZF 40	1	CONSTANT GEAR (30-58 T.)	16 K 130
1295 302 070	T 19448	000 262 5210	ZF 41	1	CONSTANT GEAR (30-58 T.)	16 S 130
1295 302 071	T 09771	000 262 4010	ZF 40	1	CONSTANT GEAR (28-58 T.)	16 K 130
1295 302 071	T 09771	000 262 4010	ZF 41	1	CONSTANT GEAR (28-58 T.)	16 S 130
1295 302 074	T 15362	000 262 3110	ZF 41	1	CONSTANT GEAR (28-61 T.)	16 S 130
1295 302 076	USE 1295 202 013					
1295 302 086	USE 1295 202 004					
1295 302 087	USE 1295 202 005					
1295 302 089	USE 1295 202 007					
1295 302 092	USE 1295 202 008					
1295 302 099	-----	-----	ZF 40	31	MAIN DRIVE GEAR BEARING RETAINER	16 K 130
1295 302 099	-----	-----	ZF 46	34	MAIN DRIVE GEAR BEARING RETAINER	16 K 190
1295 302 100	-----	000 262 4529	ZF 37	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 112
1295 302 100	-----	000 262 4529	ZF 41	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1295 302 100	-----	000 262 4529	ZF 44	38	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1295 302 100	-----	000 262 4529	ZF 47	38	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
1295 302 100	-----	000 262 4529	ZF 50	44	MAIN DRIVE GEAR BEARING RETAINER	16 S 150
1295 302 121	USE 1295 202 012					

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1295 302 122	T 19500	-----	ZF 40	1	CONSTANT GEAR (29-58 T.)	16 K 130
1295 302 122	T 19500	-----	ZF 41	1	CONSTANT GEAR (29-58 T.)	16 S 130
1295 302 129	USE 1295 202 019					
1295 302 168	-----	-----	ZF 40	1	CONSTANT GEAR (29 T.)	16 K 130
1295 302 168	-----	-----	ZF 41	1	CONSTANT GEAR (29 T.)	16 S 130
1295 302 173	USE 1295 302 071					
1295 302 174	-----	-----	ZF 40	1	CONSTANT GEAR (30 T.)	16 K 130
1295 302 174	-----	-----	ZF 41	1	CONSTANT GEAR (30 T.)	16 S 130
1295 303 005	-----	-----	ZF 40	26	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 K 130
1295 303 006	-----	-----	ZF 40	26	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 K 130
1295 303 025	T 19986	000 263 8310	ZF 41	31	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 130
1295 303 026	T 09783	000 263 3510	ZF 41	31	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 130
1295 303 027	T 09785	000 263 3610	ZF 40	25	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 K 130
1295 303 027	T 09785	000 263 3610	ZF 41	30	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 130
1295 303 028	T 19455	000 263 8510	ZF 40	25	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 K 130
1295 303 028	T 19455	000 263 8510	ZF 41	30	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 S 130
1295 303 036	T 09799	000 263 8410	ZF 40	24	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 K 130
1295 303 036	T 09799	000 263 8410	ZF 41	29	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 S 130
1295 303 037	T 09787	000 263 3710	ZF 40	24	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 K 130
1295 303 037	T 09787	000 263 3710	ZF 41	29	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 130
1295 303 042	-----	-----	ZF 40	27	COUNTERSHAFT (19-23 T.)	16 K 130
1295 303 045	-----	-----	ZF 41	32	COUNTERSHAFT (19-23 T.)	16 S 130
1295 303 053	USE 1295 303 066					
1295 303 054	USE 1295 303 067					
1295 303 055	-----	-----	ZF 40	27	COUNTERSHAFT (17-20 T.)	16 K 130
1295 303 056	-----	-----	ZF 40	27	COUNTERSHAFT (19-23 T.)	16 K 130
1295 303 060	USE 1295 303 092					
1295 303 061	USE 1295 303 094					
1295 303 063	USE 1295 203 005					
1295 303 066	T 09781	000 263 3402	ZF 41	32	COUNTERSHAFT (17-20 T.)	16 S 130
1295 303 067	T 19464	000 263 4902	ZF 41	32	COUNTERSHAFT (19-23 T.)	16 S 130
1295 303 071	-----	-----	ZF 41	31	COUNTERSHAFT THIRD SPEED GEAR (36 T.)	16 S 130
1295 303 072	-----	-----	ZF 41	32	COUNTERSHAFT	16 S 130
1295 303 082	USE 1295 303 094					
1295 303 089	-----	-----	ZF 40	27	COUNTERSHAFT (19-23 T.)	16 K 130
1295 303 091	-----	-----	ZF 41	31	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 130
1295 303 092	-----	-----	ZF 40	24	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 K 130
1295 303 092	-----	-----	ZF 41	29	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 130
1295 303 094	T 19512	-----	ZF 40	25	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 K 130
1295 303 094	T 19512	-----	ZF 41	30	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 130
1295 303 101	USE 1295 303 037					
1295 303 102	-----	-----	ZF 40	24	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 K 130
1295 303 102	-----	-----	ZF 41	29	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 S 130
1295 303 103	-----	-----	ZF 41	30	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 130
1295 303 104	-----	-----	ZF 40	25	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 K 130
1295 303 104	-----	-----	ZF 41	30	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 S 130
1295 304 002	T 09056	000 262 3623	ZF 37	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 112
1295 304 002	T 09056	000 262 3623	ZF 37	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 112
1295 304 002	T 09056	000 262 3623	ZF 37	23	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 112
1295 304 002	T 09056	000 262 3623	ZF 40	10	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 K 130
1295 304 002	T 09056	000 262 3623	ZF 41	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
1295 304 002	T 09056	000 262 3623	ZF 41	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
1295 304 002	T 09056	000 262 3623	ZF 41	23	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
1295 304 002	T 09056	000 262 3623	ZF 43	10	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 K 160
1295 304 002	T 09056	000 262 3623	ZF 44	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 160
1295 304 002	T 09056	000 262 3623	ZF 44	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 160
1295 304 002	T 09056	000 262 3623	ZF 46	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 K 190
1295 304 002	T 09056	000 262 3623	ZF 47	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 190
1295 304 002	T 09056	000 262 3623	ZF 47	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 190
1295 304 004	T 08795	000 262 2034	ZF 37	3	SYNCHRONIZER BLOCKING RING	16 S 112
1295 304 004	T 08795	000 262 2034	ZF 37	14	SYNCHRONIZER BLOCKING RING	16 S 112
1295 304 004	T 08795	000 262 2034	ZF 37	21	SYNCHRONIZER BLOCKING RING	16 S 112
1295 304 004	T 08795	000 262 2034	ZF 41	3	SYNCHRONIZER BLOCKING RING	16 S 130
1295 304 004	T 08795	000 262 2034	ZF 41	14	SYNCHRONIZER BLOCKING RING	16 S 130
1295 304 004	T 08795	000 262 2034	ZF 41	21	SYNCHRONIZER BLOCKING RING	16 S 130
1295 304 004	T 08795	000 262 2034	ZF 43	3	SYNCHRONIZER BLOCKING RING	16 K 160
1295 304 004	T 08795	000 262 2034	ZF 44	3	SYNCHRONIZER BLOCKING RING	16 S 160
1295 304 004	T 08795	000 262 2034	ZF 44	14	SYNCHRONIZER BLOCKING RING	16 S 160
1295 304 004	T 08795	000 262 2034	ZF 46	3	SYNCHRONIZER BLOCKING RING	16 K 190
1295 304 004	T 08795	000 262 2034	ZF 47	3	SYNCHRONIZER BLOCKING RING	16 S 190
1295 304 004	T 08795	000 262 2034	ZF 47	14	SYNCHRONIZER BLOCKING RING	16 S 190
1295 304 006	USE 1295 304 234					

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1295 304 008	USE 1295 304 235					
1295 304 010	-----	-----	ZF 41	19	SECOND SPEED GEAR (37 T.)	16 S 130
1295 304 012	T 19100	000 262 2050	ZF 37	26	REVERSE GEAR SLEEVE	16 S 112
1295 304 012	T 19100	000 262 2050	ZF 40	21	REVERSE GEAR SLEEVE	16 K 130
1295 304 012	T 19100	000 262 2050	ZF 41	26	REVERSE GEAR SLEEVE	16 S 130
1295 304 024	-----	-----	ZF 40	20	FIRST SPEED AND REVERSE GEAR CONE	16 K 130
1295 304 024	-----	-----	ZF 41	25	FIRST SPEED AND REVERSE GEAR CONE	16 S 130
1295 304 115	-----	-----	ZF 40	22	REVERSE GEAR (39 T.)	16 K 130
1295 304 115	-----	-----	ZF 41	27	REVERSE GEAR (39 T.)	16 S 130
1295 304 120	-----	000 262 6312	ZF 41	19	SECOND SPEED GEAR (37 T.)	16 S 130
1295 304 121	T 15708	000 262 2612	ZF 41	19	SECOND SPEED GEAR (38-58 T.)	16 S 130
1295 304 123	-----	-----	ZF 41	24	FIRST SPEED GEAR (44 T.)	16 S 130
1295 304 127	T 15731	000 262 7113	ZF 41	17	THIRD SPEED GEAR (32-58 T.)	16 S 130
1295 304 128	T 11158	000 262 3213	ZF 41	17	THIRD SPEED GEAR (34-58 T.)	16 S 130
1295 304 135	T 09759	000 262 2514	ZF 41	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 130
1295 304 136	T 15713	000 262 4814	ZF 41	12	FOURTH SPEED GEAR (58-28-58 T.)	16 S 130
1295 304 165	T 08858	000 262 1440	ZF 37	2	SYNCHRONIZER CONE (57 T.)	16 S 112
1295 304 165	T 08858	000 262 1440	ZF 41	2	SYNCHRONIZER CONE (57 T.)	16 S 130
1295 304 165	T 08858	000 262 1440	ZF 44	2	SYNCHRONIZER CONE (57 T.)	16 S 160
1295 304 178	T 19109	-----	ZF 40	18	FIRST AND SECOND SPEED SLIDING COLLAR (22 T.)	16 K 130
1295 304 179	-----	-----	ZF 40	13	THIRD AND FOURTH SPEED SLIDING COLLAR	16 K 130
1295 304 181	-----	-----	ZF 40	11	FOURTH SPEED GEAR (28 T.)	16 K 130
1295 304 182	-----	-----	ZF 40	11	FOURTH SPEED GEAR (30 T.)	16 K 130
1295 304 184	-----	-----	ZF 40	16	SECOND SPEED GEAR (38 T.)	16 K 130
1295 304 185	-----	-----	ZF 40	16	SECOND SPEED GEAR (37 T.)	16 K 130
1295 304 187	-----	-----	ZF 40	14	THIRD SPEED GEAR (34 T.)	16 K 130
1295 304 188	-----	-----	ZF 40	14	THIRD SPEED GEAR (32 T.)	16 K 130
1295 304 194	-----	-----	ZF 40	19	FIRST SPEED GEAR (44 T.)	16 K 130
1295 304 200	-----	000 262 5111	ZF 40	22	REVERSE GEAR (38 T.)	16 K 130
1295 304 200	-----	000 262 5111	ZF 41	27	REVERSE GEAR (38 T.)	16 S 130
1295 304 201	-----	000 262 9111	ZF 40	22	REVERSE GEAR (39 T.)	16 K 130
1295 304 201	-----	000 262 9111	ZF 41	27	REVERSE GEAR (39 T.)	16 S 130
1295 304 202	T 15719	000 262 5011	ZF 41	24	FIRST SPEED GEAR (47-58 T.)	16 S 130
1295 304 203	-----	000 262 9011	ZF 41	24	FIRST SPEED GEAR (44 T.)	16 S 130
1295 304 204	-----	-----	ZF 40	19	FIRST SPEED GEAR (44 T.)	16 K 130
1295 304 205	-----	-----	ZF 40	19	FIRST SPEED GEAR (47 T.)	16 K 130
1295 304 206	T 19360	000 262 1540	ZF 37	25	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 112
1295 304 206	T 19360	000 262 1540	ZF 40	20	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 K 130
1295 304 206	T 19360	000 262 1540	ZF 41	25	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 130
1295 304 234	-----	-----	ZF 40	12	THIRD AND FOURTH SPEED CLUTCH GEAR	16 K 130
1295 304 235	T 09753	000 262 2127	ZF 40	17	FIRST AND SECOND SPEED CLUTCH GEAR (22 T.)	16 K 130
1295 304 235	T 09753	000 262 2127	ZF 43	17	FIRST AND SECOND SPEED CLUTCH GEAR (22 T.)	16 K 160
1295 304 235	T 09753	000 262 2127	ZF 46	18	FIRST AND SECOND SPEED CLUTCH GEAR (22 T.)	16 K 190
1295 304 236	T 19111	-----	ZF 41	12	FOURTH SPEED GEAR (58-26-58 T.)	16 S 130
1295 304 243	-----	-----	ZF 40	15	MAINSHAFT	16 K 130
1295 304 245	T 09763	000 262 2605	ZF 41	18	MAINSHAFT	16 S 130
1295 304 247	T 15359	000 262 0109	ZF 37	28	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 112
1295 304 247	T 15359	000 262 0109	ZF 40	23	PLANETARY REDUCTION SUN GEAR (27 T.)	16 K 130
1295 304 248	T 15377	000 262 0209	ZF 41	28	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 130
1295 304 250	-----	-----	ZF 41	18	MAINSHAFT	16 S 130
1295 304 251	-----	-----	ZF 40	23	PLANETARY REDUCTION SUN GEAR (24 T.)	16 K 130
1295 304 251	-----	-----	ZF 41	28	PLANETARY REDUCTION SUN GEAR (24 T.)	16 S 130
1295 304 263	-----	-----	ZF 41	26	REVERSE GEAR SLEEVE	16 S 130
1295 304 269	-----	-----	ZF 41	17	THIRD SPEED GEAR (25 T.)	16 S 130
1295 304 270	-----	-----	ZF 41	24	FIRST SPEED GEAR (41 T.)	16 S 130
1295 304 271	-----	-----	ZF 41	19	SECOND SPEED GEAR (34 T.)	16 S 130
1295 304 272	-----	-----	ZF 41	27	REVERSE GEAR (39 T.)	16 S 130
1295 304 273	-----	-----	ZF 41	18	MAINSHAFT	16 S 130
1295 304 278	T 08871	000 262 1940	ZF 37	2	SYNCHRONIZER CONE (57 T.)	16 S 112
1295 304 278	T 08871	000 262 1940	ZF 37	13	SYNCHRONIZER CONE (57 T.)	16 S 112
1295 304 278	T 08871	000 262 1940	ZF 37	20	SYNCHRONIZER CONE (57 T.)	16 S 112
1295 304 278	T 08871	000 262 1940	ZF 40	2	SYNCHRONIZER CONE (57 T.)	16 K 130
1295 304 278	T 08871	000 262 1940	ZF 41	2	SYNCHRONIZER CONE (57 T.)	16 S 130
1295 304 278	T 08871	000 262 1940	ZF 41	13	SYNCHRONIZER CONE (57 T.)	16 S 130
1295 304 278	T 08871	000 262 1940	ZF 43	2	SYNCHRONIZER CONE (57 T.)	16 K 160
1295 304 278	T 08871	000 262 1940	ZF 44	2	SYNCHRONIZER CONE (57 T.)	16 S 160
1295 304 278	T 08871	000 262 1940	ZF 44	13	SYNCHRONIZER CONE (57 T.)	16 S 160
1295 304 278	T 08871	000 262 1940	ZF 46	2	SYNCHRONIZER CONE (57 T.)	16 K 190
1295 304 278	T 08871	000 262 1940	ZF 47	2	SYNCHRONIZER CONE (57 T.)	16 S 190
1295 304 278	T 08871	000 262 1940	ZF 47	13	SYNCHRONIZER CONE (57 T.)	16 S 190
1295 304 303	-----	-----	ZF 40	11	FOURTH SPEED GEAR (26 T.)	16 K 130
1295 304 304	-----	-----	ZF 40	15	MAINSHAFT	16 K 130

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1295 304 305	-----	-----	ZF 41	19	SECOND SPEED GEAR (37 T.)	16 S 130
1295 304 306	-----	-----	ZF 41	24	FIRST SPEED GEAR (44 T.)	16 S 130
1295 304 307	-----	-----	ZF 41	17	THIRD SPEED GEAR (32 T.)	16 S 130
1295 304 322	-----	-----	ZF 41	12	FOURTH SPEED GEAR (30 T.)	16 S 130
1295 304 323	-----	-----	ZF 41	12	FOURTH SPEED GEAR (28 T.)	16 S 130
1295 304 324	-----	-----	ZF 41	17	THIRD SPEED GEAR (34 T.)	16 S 130
1295 305 008	USE 1295 305 056					
1295 305 051	-----	000 263 0232	ZF 37	34	REVERSE IDLER GEAR (21 T.)	16 S 112
1295 305 051	-----	000 263 0232	ZF 40	29	REVERSE IDLER GEAR (21 T.)	16 K 130
1295 305 051	-----	000 263 0232	ZF 41	34	REVERSE IDLER GEAR (21 T.)	16 S 130
1295 305 051	-----	000 263 0232	ZF 43	30	REVERSE IDLER GEAR (21 T.)	16 K 160
1295 305 051	-----	000 263 0232	ZF 44	35	REVERSE IDLER GEAR (21 T.)	16 S 160
1295 305 051	-----	000 263 0232	ZF 46	31	REVERSE IDLER GEAR (21 T.)	16 K 190
1295 305 051	-----	000 263 0232	ZF 47	35	REVERSE IDLER GEAR (21 T.)	16 S 190
1295 305 052	-----	000 263 0032	ZF 37	34	REVERSE IDLER GEAR (24 T.)	16 S 112
1295 305 052	-----	000 263 0032	ZF 40	29	REVERSE IDLER GEAR (24 T.)	16 K 130
1295 305 052	-----	000 263 0032	ZF 41	34	REVERSE IDLER GEAR (24 T.)	16 S 130
1295 305 052	-----	000 263 0032	ZF 43	30	REVERSE IDLER GEAR (24 T.)	16 K 160
1295 305 052	-----	000 263 0032	ZF 44	35	REVERSE IDLER GEAR (24 T.)	16 S 160
1295 305 052	-----	000 263 0032	ZF 46	31	REVERSE IDLER GEAR (24 T.)	16 K 190
1295 305 052	-----	000 263 0032	ZF 47	35	REVERSE IDLER GEAR (24 T.)	16 S 190
1295 305 056	T 11447	000 263 1430	ZF 37	33	REVERSE IDLER GEAR SHAFT	16 S 112
1295 305 056	T 11447	000 263 1430	ZF 40	28	REVERSE IDLER GEAR SHAFT	16 K 130
1295 305 056	T 11447	000 263 1430	ZF 41	33	REVERSE IDLER GEAR SHAFT	16 S 130
1295 305 056	T 11447	000 263 1430	ZF 43	29	REVERSE IDLER GEAR SHAFT	16 K 160
1295 305 056	T 11447	000 263 1430	ZF 44	34	REVERSE IDLER GEAR SHAFT	16 S 160
1295 305 056	T 11447	000 263 1430	ZF 46	30	REVERSE IDLER GEAR SHAFT	16 K 190
1295 305 056	T 11447	000 263 1430	ZF 47	34	REVERSE IDLER GEAR SHAFT	16 S 190
1295 305 056	T 11447	000 263 1430	ZF 50	40	REVERSE IDLER GEAR SHAFT	16 S 150
1295 305 056	T 11447	000 263 1430	ZF 51	40	REVERSE IDLER GEAR SHAFT	16 S 220
1295 306 028	USE 1295 306 132					
1295 306 132	T 08933	000 268 0849	ZF 37	90	SLIDING BLOCK (BRONZE)	16 S 112
1295 306 132	T 08933	000 268 0849	ZF 40	90	SLIDING BLOCK (BRONZE)	16 K 130
1295 306 132	T 08933	000 268 0849	ZF 41	90	SLIDING BLOCK (BRONZE)	16 S 130
1295 306 132	T 08933	000 268 0849	ZF 43	90	SLIDING BLOCK (BRONZE)	16 K 160
1295 306 132	T 08933	000 268 0849	ZF 44	90	SLIDING BLOCK (BRONZE)	16 S 160
1295 306 132	T 08933	000 268 0849	ZF 46	90	SLIDING BLOCK (BRONZE)	16 K 190
1295 306 132	T 08933	000 268 0849	ZF 47	90	SLIDING BLOCK (BRONZE)	16 S 190
1295 307 080	USE 1295 307 294					
1295 307 158	T 19945	000 267 0046	ZF 37	-----	GEAR SHIFT SELECTOR PLATE	16 S 112
1295 307 158	T 19945	000 267 0046	ZF 41	-----	GEAR SHIFT SELECTOR PLATE	16 S 130
1295 307 158	T 19945	000 267 0046	ZF 44	-----	GEAR SHIFT SELECTOR PLATE	16 S 160
1295 307 158	T 19945	000 267 0046	ZF 47	-----	GEAR SHIFT SELECTOR PLATE	16 S 190
1295 307 241	USE 1295 307 533					
1295 307 243	T 19116	000 267 0474	ZF 37	-----	GEAR SHIFT CONTROL ROD PIN	16 S 112
1295 307 243	T 19116	000 267 0474	ZF 40	-----	GEAR SHIFT CONTROL ROD PIN	16 K 130
1295 307 243	T 19116	000 267 0474	ZF 41	-----	GEAR SHIFT CONTROL ROD PIN	16 S 130
1295 307 243	T 19116	000 267 0474	ZF 43	-----	GEAR SHIFT CONTROL ROD PIN	16 K 160
1295 307 243	T 19116	000 267 0474	ZF 44	-----	GEAR SHIFT CONTROL ROD PIN	16 S 160
1295 307 243	T 19116	000 267 0474	ZF 46	-----	GEAR SHIFT CONTROL ROD PIN	16 K 190
1295 307 243	T 19116	000 267 0474	ZF 47	-----	GEAR SHIFT CONTROL ROD PIN	16 S 190
1295 307 243	T 19116	000 267 0474	ZF 50	-----	GEAR SHIFT CONTROL ROD PIN	16 S 150
1295 307 243	T 19116	000 267 0474	ZF 51	-----	GEAR SHIFT CONTROL ROD PIN	16 S 220
1295 307 274	T 18581	000 267 0503	ZF 37	-----	GEAR SHIFT FORK SHAFT	16 S 112
1295 307 274	T 18581	000 267 0503	ZF 40	-----	GEAR SHIFT FORK SHAFT	16 K 130
1295 307 274	T 18581	000 267 0503	ZF 41	-----	GEAR SHIFT FORK SHAFT	16 S 130
1295 307 274	T 18581	000 267 0503	ZF 43	-----	GEAR SHIFT FORK SHAFT	16 K 160
1295 307 274	T 18581	000 267 0503	ZF 44	-----	GEAR SHIFT FORK SHAFT	16 S 160
1295 307 274	T 18581	000 267 0503	ZF 47	-----	GEAR SHIFT FORK SHAFT	16 S 190
1295 307 274	T 18581	000 267 0503	ZF 50	-----	GEAR SHIFT FORK SHAFT	16 S 150
1295 307 274	T 18581	000 267 0503	ZF 51	-----	GEAR SHIFT FORK SHAFT	16 S 220
1295 307 275	T 18886	000 267 0803	ZF 37	-----	GEAR SHIFT FORK SHAFT	16 S 112
1295 307 275	T 18886	000 267 0803	ZF 41	-----	GEAR SHIFT FORK SHAFT	16 S 130
1295 307 275	T 18886	000 267 0803	ZF 44	-----	GEAR SHIFT FORK SHAFT	16 S 160
1295 307 275	T 18886	000 267 0803	ZF 46	-----	GEAR SHIFT FORK SHAFT	16 K 190
1295 307 275	T 18886	000 267 0803	ZF 47	-----	GEAR SHIFT FORK SHAFT	16 S 190
1295 307 275	T 18886	000 267 0803	ZF 50	-----	GEAR SHIFT FORK SHAFT	16 S 150
1295 307 275	T 18886	000 267 0803	ZF 51	-----	GEAR SHIFT FORK SHAFT	16 S 220
1295 307 294	T 19124	000 267 0820	ZF 37	-----	GEAR SHIFT CONTROL ROD COVER	16 S 112
1295 307 294	T 19124	000 267 0820	ZF 40	-----	GEAR SHIFT CONTROL ROD COVER	16 K 130
1295 307 294	T 19124	000 267 0820	ZF 41	-----	GEAR SHIFT CONTROL ROD COVER	16 S 130
1295 307 294	T 19124	000 267 0820	ZF 43	-----	GEAR SHIFT CONTROL ROD COVER	16 K 160

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1295 307 294	T 19124	000 267 0820	ZF 44	-----	GEAR SHIFT CONTROL ROD COVER	16 S 160
1295 307 294	T 19124	000 267 0820	ZF 47	-----	GEAR SHIFT CONTROL ROD COVER	16 S 190
1295 307 294	T 19124	000 267 0820	ZF 50	-----	GEAR SHIFT CONTROL ROD COVER	16 S 150
1295 307 294	T 19124	000 267 0820	ZF 51	-----	GEAR SHIFT CONTROL ROD COVER	16 S 220
1295 307 330	T 19994	000 267 1303	ZF 37	-----	GEAR SHIFT FORK SHAFT	16 S 112
1295 307 330	T 19994	000 267 1303	ZF 41	-----	GEAR SHIFT FORK SHAFT	16 S 130
1295 307 330	T 19994	000 267 1303	ZF 43	-----	GEAR SHIFT FORK SHAFT	16 K 160
1295 307 330	T 19994	000 267 1303	ZF 44	-----	GEAR SHIFT FORK SHAFT	16 S 160
1295 307 330	T 19994	000 267 1303	ZF 47	-----	GEAR SHIFT FORK SHAFT	16 S 190
1295 307 330	T 19994	000 267 1303	ZF 51	-----	GEAR SHIFT FORK SHAFT	16 S 220
1295 307 479	T 18869	000 267 2622	ZF 37	-----	FRONT CASE SIDE COVER	16 S 112
1295 307 479	T 18869	000 267 2622	ZF 40	-----	FRONT CASE SIDE COVER	16 K 130
1295 307 479	T 18869	000 267 2622	ZF 41	-----	FRONT CASE SIDE COVER	16 S 130
1295 307 479	T 18869	000 267 2622	ZF 43	-----	FRONT CASE SIDE COVER	16 K 160
1295 307 479	T 18869	000 267 2622	ZF 44	-----	FRONT CASE SIDE COVER	16 S 160
1295 307 479	T 18869	000 267 2622	ZF 46	-----	FRONT CASE SIDE COVER	16 K 190
1295 307 479	T 18869	000 267 2622	ZF 47	-----	FRONT CASE SIDE COVER	16 S 190
1295 307 479	T 18869	000 267 2622	ZF 50	-----	FRONT CASE SIDE COVER	16 S 150
1295 307 479	T 18869	000 267 2622	ZF 51	-----	FRONT CASE SIDE COVER	16 S 220
1295 307 533	T 19130	000 265 2031	ZF 37	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 112
1295 307 533	T 19130	000 265 2031	ZF 40	-----	GEAR SHIFT CONTROL ROD LEVER	16 K 130
1295 307 533	T 19130	000 265 2031	ZF 41	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 130
1295 307 533	T 19130	000 265 2031	ZF 43	-----	GEAR SHIFT CONTROL ROD LEVER	16 K 160
1295 307 533	T 19130	000 265 2031	ZF 44	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 160
1295 307 533	T 19130	000 265 2031	ZF 51	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 220
1295 332 016	USE 1295 232 027					
1295 332 021	-----	000 263 0025	ZF 37	70	RING GEAR CARRIER (83 T.)	16 S 112
1295 332 021	-----	000 263 0025	ZF 40	70	RING GEAR CARRIER (83 T.)	16 K 130
1295 332 021	-----	000 263 0025	ZF 41	70	RING GEAR CARRIER (83 T.)	16 S 130
1295 332 028	USE 1295 332 053					
1295 332 053	-----	000 263 6410	ZF 37	69	RING GEAR (83 T.)	16 S 112
1295 332 053	-----	000 263 6410	ZF 40	69	RING GEAR (83 T.)	16 K 130
1295 332 053	-----	000 263 6410	ZF 41	69	RING GEAR (83 T.)	16 S 130
1295 332 084	-----	-----	ZF 40	70	RING GEAR CARRIER (86 T.)	16 K 130
1295 332 086	-----	001 263 2110	ZF 40	69	RING GEAR (86 T.)	16 K 130
1295 332 086	-----	001 263 2110	ZF 41	69	RING GEAR (86 T.)	16 S 130
1295 332 086	-----	001 263 2110	ZF 43	69	RING GEAR (86 T.)	16 K 160
1295 332 086	-----	001 263 2110	ZF 44	69	RING GEAR (86 T.)	16 S 160
1295 332 086	-----	001 263 2110	ZF 46	69	RING GEAR (86 T.)	16 K 190
1295 332 086	-----	001 263 2110	ZF 47	69	RING GEAR (86 T.)	16 S 190
1295 332 086	-----	001 263 2110	ZF 50	69	RING GEAR (86 T.)	16 S 150
1295 332 086	-----	001 263 2110	ZF 51	69	RING GEAR (86 T.)	16 S 220
1295 332 086	-----	001 263 2110	ZF 55	68	RING GEAR (86 T.)	16 S 151
1295 332 086	-----	001 263 2110	ZF 57	69	RING GEAR (86 T.)	16 S 221
1295 333 105	USE 1295 303 026					
1295 338 012	USE 1295 338 083					
1295 338 014	-----	000 264 2745	ZF 37	79	CARRIER COUPLING FLANGE	16 S 112
1295 338 014	-----	000 264 2745	ZF 40	79	CARRIER COUPLING FLANGE	16 K 130
1295 338 014	-----	000 264 2745	ZF 41	80	CARRIER COUPLING FLANGE	16 S 130
1295 338 016	-----	-----	ZF 41	80	CARRIER COUPLING FLANGE	16 S 130
1295 338 017	-----	-----	ZF 41	80	CARRIER COUPLING FLANGE (38 SPLINES)	16 S 130
1295 338 028	-----	-----	ZF 41	80	CARRIER COUPLING FLANGE	16 S 130
1295 338 059	T 14811	000 264 3745	ZF 37	79	CARRIER COUPLING FLANGE (36 SPLINES)	16 S 112
1295 338 059	T 14811	000 264 3745	ZF 41	80	CARRIER COUPLING FLANGE (36 SPLINES)	16 S 130
1295 338 061	-----	000 264 3645	ZF 37	79	CARRIER COUPLING FLANGE	16 S 112
1295 338 061	-----	000 264 3645	ZF 40	79	CARRIER COUPLING FLANGE	16 K 130
1295 338 061	-----	000 264 3645	ZF 41	80	CARRIER COUPLING FLANGE	16 S 130
1295 338 083	T 19927	000 264 5150	ZF 37	-----	POWER TAKE OFF SHAFT BUSHING	16 S 112
1295 338 083	T 19927	000 264 5150	ZF 40	-----	POWER TAKE OFF SHAFT BUSHING	16 K 130
1295 338 083	T 19927	000 264 5150	ZF 41	-----	POWER TAKE OFF SHAFT BUSHING	16 S 130
1295 338 083	T 19927	000 264 5150	ZF 43	-----	POWER TAKE OFF SHAFT BUSHING	16 K 160
1295 338 083	T 19927	000 264 5150	ZF 44	-----	POWER TAKE OFF SHAFT BUSHING	16 S 160
1295 338 083	T 19927	000 264 5150	ZF 46	-----	POWER TAKE OFF SHAFT BUSHING	16 K 190
1295 338 083	T 19927	000 264 5150	ZF 47	-----	POWER TAKE OFF SHAFT BUSHING	16 S 190
1295 338 083	T 19927	000 264 5150	ZF 55	-----	POWER TAKE OFF SHAFT BUSHING	16 S 151
1295 338 083	T 19927	000 264 5150	ZF 56	-----	POWER TAKE OFF SHAFT BUSHING	16 S 181
1295 338 083	T 19927	000 264 5150	ZF 57	-----	POWER TAKE OFF SHAFT BUSHING	16 S 221
1295 338 083	T 19927	000 264 5150	ZF 58	-----	POWER TAKE OFF SHAFT BUSHING	16 S 251
1295 338 147	-----	-----	ZF 41	80	CARRIER COUPLING FLANGE (36 SPLINES)	16 S 130
1296 202 001	T 11173	001 262 2002	ZF 37	4	MAIN DRIVE GEAR (57 T.)	16 S 112
1296 202 004	T 15119	000 262 9402	ZF 37	4	MAIN DRIVE GEAR (57 T.)	16 S 112
1296 202 006	-----	-----	ZF 37	4	MAIN DRIVE GEAR	16 S 112

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1296 202 010	-----	-----	ZF 37	4	MAIN DRIVE GEAR	16 S 112
1296 202 011	-----	-----	ZF 37	5	MAIN DRIVE GEAR	16 S 112
1296 213 028	T 11462	000 264 4206	ZF 40	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 K 130
1296 213 028	T 11462	000 264 4206	ZF 43	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 K 160
1296 213 028	T 11462	000 264 4206	ZF 44	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 160
1296 213 028	T 11462	000 264 4206	ZF 46	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 K 190
1296 213 028	T 11462	000 264 4206	ZF 47	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 190
1296 213 028	T 11462	000 264 4206	ZF 50	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 150
1296 213 028	T 11462	000 264 4206	ZF 51	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 220
1296 213 028	T 11462	000 264 4206	ZF 55	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 151
1296 213 028	T 11462	000 264 4206	ZF 56	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 181
1296 213 028	T 11462	000 264 4206	ZF 57	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 221
1296 213 028	T 11462	000 264 4206	ZF 58	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 251
1296 221 001	-----	001 262 0902	ZF 37	4	MAIN DRIVE GEAR	16 S 112
1296 221 002	-----	001 262 3302	ZF 37	4	MAIN DRIVE GEAR	16 S 112
1296 232 002	-----	-----	ZF 50	60	CARRIER	16 S 150
1296 232 002	-----	-----	ZF 55	60	CARRIER	16 S 151
1296 233 005	USE 1296 233 006					
1296 233 006	T 08908	000 263 1720	ZF 37	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 112
1296 233 006	T 08908	000 263 1720	ZF 40	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 K 130
1296 233 006	T 08908	000 263 1720	ZF 41	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 130
1296 233 006	T 08908	000 263 1720	ZF 43	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 K 160
1296 233 006	T 08908	000 263 1720	ZF 44	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 160
1296 233 006	T 08908	000 263 1720	ZF 46	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 K 190
1296 233 006	T 08908	000 263 1720	ZF 47	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 190
1296 233 006	T 08908	000 263 1720	ZF 50	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 150
1296 233 006	T 08908	000 263 1720	ZF 51	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 220
1296 298 904	T 16700	000 262 0306	ZF 37	67	GEAR REPAIR KIT (26 T.)	16 S 112
1296 298 904	T 16700	000 262 0306	ZF 40	67	GEAR REPAIR KIT (26 T.)	16 K 130
1296 298 904	T 16700	000 262 0306	ZF 41	67	GEAR REPAIR KIT (26 T.)	16 S 130
1296 302 002	-----	-----	ZF 37	1	CONSTANT GEAR (30 T.)	16 S 112
1296 302 003	T 11161	000 262 3910	ZF 37	1	CONSTANT GEAR (28-58 T.)	16 S 112
1296 302 007	USE 1296 202 001					
1296 302 023	T 14807	000 262 3010	ZF 37	1	CONSTANT GEAR (28-61 T.)	16 S 112
1296 302 033	USE 1296 202 004					
1296 303 002	T 11169	000 263 3310	ZF 37	30	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 112
1296 303 003	-----	-----	ZF 37	30	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 S 112
1296 303 008	-----	-----	ZF 37	31	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 112
1296 303 009	T 11163	000 263 3110	ZF 37	31	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 112
1296 303 013	-----	-----	ZF 37	29	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 S 112
1296 303 014	T 11165	000 263 3210	ZF 37	29	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 112
1296 303 020	USE 1296 303 025					
1296 303 021	USE 1296 303 026					
1296 303 025	T 15364	000 263 3502	ZF 37	32	COUNTERSHAFT (17-20 T.)	16 S 112
1296 303 026	-----	-----	ZF 37	32	COUNTERSHAFT (19-23 T.)	16 S 112
1296 303 035	-----	-----	ZF 50	37	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	16 S 150
1296 303 036	-----	-----	ZF 50	36	COUNTERSHAFT FOURTH SPEED GEAR (37 T.)	16 S 150
1296 303 037	-----	-----	ZF 50	35	COUNTERSHAFT CONSTANT GEAR (39 T.)	16 S 150
1296 304 070	T 19132	000 262 2512	ZF 37	19	SECOND SPEED GEAR (38-58 T.)	16 S 112
1296 304 071	-----	-----	ZF 37	19	SECOND SPEED GEAR (37 T.)	16 S 112
1296 304 087	T 11156	000 262 3113	ZF 37	17	THIRD SPEED GEAR (34-58 T.)	16 S 112
1296 304 088	-----	-----	ZF 37	17	THIRD SPEED GEAR (32 T.)	16 S 112
1296 304 090	T 11154	000 262 2414	ZF 37	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 112
1296 304 091	-----	-----	ZF 37	12	FOURTH SPEED GEAR (28 T.)	16 S 112
1296 304 097	-----	000 262 4911	ZF 37	27	REVERSE GEAR (38 T.)	16 S 112
1296 304 098	-----	-----	ZF 37	27	REVERSE GEAR (39 T.)	16 S 112
1296 304 099	-----	000 262 4811	ZF 37	24	FIRST SPEED GEAR (47 T.)	16 S 112
1296 304 100	-----	-----	ZF 37	24	FIRST SPEED GEAR (44 T.)	16 S 112
1296 304 119	T 19135	000 262 2505	ZF 37	18	MAINSHAFT	16 S 112
1296 304 131	-----	-----	ZF 50	11	FOURTH SPEED GEAR (34 T.)	16 S 150
1296 304 135	USE 1246 304 278					
1296 312 016	USE 1296 312 042					
1296 312 042	T 16712	000 267 0519	ZF 37	92	SELECTOR ROD CYLINDER	16 S 112
1296 312 042	T 16712	000 267 0519	ZF 40	92	SELECTOR ROD CYLINDER	16 K 130
1296 312 042	T 16712	000 267 0519	ZF 41	92	SELECTOR ROD CYLINDER	16 S 130
1296 312 042	T 16712	000 267 0519	ZF 43	92	SELECTOR ROD CYLINDER	16 K 160
1296 312 042	T 16712	000 267 0519	ZF 44	92	SELECTOR ROD CYLINDER	16 S 160
1296 312 042	T 16712	000 267 0519	ZF 46	92	SELECTOR ROD CYLINDER	16 K 190
1296 312 042	T 16712	000 267 0519	ZF 47	92	SELECTOR ROD CYLINDER	16 S 190
1296 312 042	T 16712	000 267 0519	ZF 50	92	SELECTOR ROD CYLINDER	16 S 150
1296 312 042	T 16712	000 267 0519	ZF 51	92	SELECTOR ROD CYLINDER	16 S 220
1296 332 005	-----	-----	ZF 50	61	GEAR SHAFT	16 S 150

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1296 333 002	T 08899	000 263 0735	ZF 37	73	SYNCHRONIZER HUB	16 S 112
1296 333 002	T 08899	000 263 0735	ZF 40	73	SYNCHRONIZER HUB	16 K 130
1296 333 002	T 08899	000 263 0735	ZF 41	73	SYNCHRONIZER HUB	16 S 130
1296 333 002	T 08899	000 263 0735	ZF 43	73	SYNCHRONIZER HUB	16 K 160
1296 333 002	T 08899	000 263 0735	ZF 44	73	SYNCHRONIZER HUB	16 S 160
1296 333 002	T 08899	000 263 0735	ZF 46	73	SYNCHRONIZER HUB	16 K 190
1296 333 002	T 08899	000 263 0735	ZF 47	73	SYNCHRONIZER HUB	16 S 190
1296 333 022	T 09061	000 263 0234	ZF 37	72	SYNCHRONIZER BLOCKING RING	16 S 112
1296 333 022	T 09061	000 263 0234	ZF 40	72	SYNCHRONIZER BLOCKING RING	16 K 130
1296 333 022	T 09061	000 263 0234	ZF 41	72	SYNCHRONIZER BLOCKING RING	16 S 130
1296 333 022	T 09061	000 263 0234	ZF 43	72	SYNCHRONIZER BLOCKING RING	16 K 160
1296 333 022	T 09061	000 263 0234	ZF 44	72	SYNCHRONIZER BLOCKING RING	16 S 160
1296 333 022	T 09061	000 263 0234	ZF 46	72	SYNCHRONIZER BLOCKING RING	16 K 190
1296 333 022	T 09061	000 263 0234	ZF 47	72	SYNCHRONIZER BLOCKING RING	16 S 190
1296 333 022	T 09061	000 263 0234	ZF 50	72	SYNCHRONIZER BLOCKING RING	16 S 150
1296 333 022	T 09061	000 263 0234	ZF 51	72	SYNCHRONIZER BLOCKING RING	16 S 220
1296 333 022	T 09061	000 263 0234	ZF 55	71	SYNCHRONIZER BLOCKING RING	16 S 151
1296 333 022	T 09061	000 263 0234	ZF 56	72	SYNCHRONIZER BLOCKING RING	16 S 181
1296 333 022	T 09061	000 263 0234	ZF 57	72	SYNCHRONIZER BLOCKING RING	16 S 221
1296 333 022	T 09061	000 263 0234	ZF 58	73	SYNCHRONIZER BLOCKING RING	16 S 251
1296 333 023	T 09062	000 263 0523	ZF 37	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 112
1296 333 023	T 09062	000 263 0523	ZF 40	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 K 130
1296 333 023	T 09062	000 263 0523	ZF 41	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 130
1296 333 023	T 09062	000 263 0523	ZF 43	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 K 160
1296 333 023	T 09062	000 263 0523	ZF 44	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 160
1296 333 023	T 09062	000 263 0523	ZF 46	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 K 190
1296 333 023	T 09062	000 263 0523	ZF 47	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 190
1296 333 023	T 09062	000 263 0523	ZF 50	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
1296 333 023	T 09062	000 263 0523	ZF 51	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
1296 333 023	T 09062	000 263 0523	ZF 55	72	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
1296 333 023	T 09062	000 263 0523	ZF 56	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
1296 333 023	T 09062	000 263 0523	ZF 57	73	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
1296 333 023	T 09062	000 263 0523	ZF 58	78	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 251
1296 333 033	USE 1296 333 022					
1296 333 044	USE 1296 333 022					
1296 333 045	T 15084	000 263 0534	ZF 37	72	SYNCHRONIZER BLOCKING RING	16 S 112
1296 333 045	T 15084	000 263 0534	ZF 40	72	SYNCHRONIZER BLOCKING RING	16 K 130
1296 333 045	T 15084	000 263 0534	ZF 41	72	SYNCHRONIZER BLOCKING RING	16 S 130
1296 333 045	T 15084	000 263 0534	ZF 43	72	SYNCHRONIZER BLOCKING RING	16 K 160
1296 333 045	T 15084	000 263 0534	ZF 44	72	SYNCHRONIZER BLOCKING RING	16 S 160
1296 333 045	T 15084	000 263 0534	ZF 46	72	SYNCHRONIZER BLOCKING RING	16 K 190
1296 333 045	T 15084	000 263 0534	ZF 47	72	SYNCHRONIZER BLOCKING RING	16 S 190
1296 333 045	T 15084	000 263 0534	ZF 50	72	SYNCHRONIZER BLOCKING RING	16 S 150
1296 333 045	T 15084	000 263 0534	ZF 51	72	SYNCHRONIZER BLOCKING RING	16 S 220
1296 333 045	T 15084	000 263 0534	ZF 55	71	SYNCHRONIZER BLOCKING RING	16 S 151
1296 333 045	T 15084	000 263 0534	ZF 56	72	SYNCHRONIZER BLOCKING RING	16 S 181
1296 333 045	T 15084	000 263 0534	ZF 57	72	SYNCHRONIZER BLOCKING RING	16 S 221
1296 333 045	T 15084	000 263 0534	ZF 58	73	SYNCHRONIZER BLOCKING RING	16 S 251
1296 333 046	-----	-----	ZF 55	79	SYNCHRONIZER FLANGE	16 S 151
1296 333 046	-----	-----	ZF 56	70	SYNCHRONIZER FLANGE	16 S 181
1296 333 046	-----	-----	ZF 57	79	SYNCHRONIZER FLANGE	16 S 221
1296 333 050	T 18042	-----	ZF 55	80	SYNCHRONIZER CONE (63-58 T.)	16 S 151
1296 333 050	T 18042	-----	ZF 56	71	SYNCHRONIZER CONE (63-58 T.)	16 S 181
1296 333 050	T 18042	-----	ZF 57	80	SYNCHRONIZER CONE (63-58 T.)	16 S 221
1296 333 050	T 18042	-----	ZF 58	72	SYNCHRONIZER CONE (63-58 T.)	16 S 251
1296 334 004	T 17892	000 265 0649	ZF 37	91	SLIDING BLOCK (BRONZE)	16 S 112
1296 334 004	T 17892	000 265 0649	ZF 40	91	SLIDING BLOCK (BRONZE)	16 K 130
1296 334 004	T 17892	000 265 0649	ZF 41	91	SLIDING BLOCK (BRONZE)	16 S 130
1296 334 004	T 17892	000 265 0649	ZF 43	91	SLIDING BLOCK (BRONZE)	16 K 160
1296 334 004	T 17892	000 265 0649	ZF 44	91	SLIDING BLOCK (BRONZE)	16 S 160
1296 334 004	T 17892	000 265 0649	ZF 46	91	SLIDING BLOCK (BRONZE)	16 K 190
1296 334 004	T 17892	000 265 0649	ZF 47	91	SLIDING BLOCK (BRONZE)	16 S 190
1296 334 004	T 17892	000 265 0649	ZF 50	91	SLIDING BLOCK (BRONZE)	16 S 150
1296 334 004	T 17892	000 265 0649	ZF 51	91	SLIDING BLOCK (BRONZE)	16 S 220
1296 334 004	T 17892	000 265 0649	ZF 55	91	SLIDING BLOCK (BRONZE)	16 S 151
1296 334 004	T 17892	000 265 0649	ZF 56	91	SLIDING BLOCK (BRONZE)	16 S 181
1296 334 004	T 17892	000 265 0649	ZF 57	91	SLIDING BLOCK (BRONZE)	16 S 221
1296 334 004	T 17892	000 265 0649	ZF 58	91	SLIDING BLOCK (BRONZE)	16 S 251
1297 202 003	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 003	-----	-----	ZF 47	4	MAIN DRIVE GEAR	16 S 190
1297 202 004	-----	-----	ZF 43	4	MAIN DRIVE GEAR	16 K 160
1297 202 004	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1297 202 004	-----	-----	ZF 47	4	MAIN DRIVE GEAR	16 S 190
1297 202 005	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 008	-----	-----	ZF 43	4	MAIN DRIVE GEAR	16 K 160
1297 202 008	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 008	-----	-----	ZF 47	4	MAIN DRIVE GEAR	16 S 190
1297 202 009	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 009	-----	-----	ZF 47	4	MAIN DRIVE GEAR	16 S 190
1297 202 011	-----	-----	ZF 43	4	MAIN DRIVE GEAR	16 K 160
1297 202 011	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 011	-----	-----	ZF 47	4	MAIN DRIVE GEAR	16 S 190
1297 202 014	-----	-----	ZF 43	4	MAIN DRIVE GEAR	16 K 160
1297 202 014	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 023	USE 1297 202 003					
1297 202 024	USE 1297 202 004					
1297 202 025	USE 1297 202 009					
1297 202 026	USE 1297 202 008					
1297 202 027	USE 1297 202 014					
1297 202 030	T 09791	001 262 0302	ZF 44	4	MAIN DRIVE GEAR (57 T.)	16 S 160
1297 202 031	USE 1297 202 049					
1297 202 038	USE 1297 202 053					
1297 202 042	USE 1297 202 047					
1297 202 043	USE 1297 202 054					
1297 202 044	-----	001 262 3002	ZF 44	5	MAIN DRIVE GEAR	16 S 160
1297 202 044	-----	001 262 3002	ZF 46	5	MAIN DRIVE GEAR	16 K 190
1297 202 044	-----	001 262 3002	ZF 47	5	MAIN DRIVE GEAR	16 S 190
1297 202 045	-----	-----	ZF 43	4	MAIN DRIVE GEAR	16 K 160
1297 202 045	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 045	-----	-----	ZF 47	4	MAIN DRIVE GEAR	16 S 190
1297 202 046	-----	-----	ZF 43	4	MAIN DRIVE GEAR	16 K 160
1297 202 046	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 047	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 047	-----	-----	ZF 46	4	MAIN DRIVE GEAR	16 K 190
1297 202 048	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 049	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 049	-----	-----	ZF 47	4	MAIN DRIVE GEAR	16 S 190
1297 202 051	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 052	-----	-----	ZF 43	4	MAIN DRIVE GEAR	16 K 160
1297 202 052	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 053	T 15053	001 262 2802	ZF 43	4	MAIN DRIVE GEAR (57 T.)	16 K 160
1297 202 053	T 15053	001 262 2802	ZF 44	4	MAIN DRIVE GEAR (57 T.)	16 S 160
1297 202 053	T 15053	001 262 2802	ZF 46	4	MAIN DRIVE GEAR (57 T.)	16 K 190
1297 202 053	T 15053	001 262 2802	ZF 47	4	MAIN DRIVE GEAR (57 T.)	16 S 190
1297 202 054	-----	-----	ZF 44	4	MAIN DRIVE GEAR (57 T.)	16 S 160
1297 202 054	-----	-----	ZF 47	4	MAIN DRIVE GEAR (57 T.)	16 S 190
1297 202 061	-----	001 262 3202	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 061	-----	001 262 3202	ZF 47	4	MAIN DRIVE GEAR	16 S 190
1297 202 062	-----	-----	ZF 43	4	MAIN DRIVE GEAR	16 K 160
1297 202 062	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 063	-----	-----	ZF 43	4	MAIN DRIVE GEAR	16 K 160
1297 202 063	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 063	-----	-----	ZF 47	4	MAIN DRIVE GEAR	16 S 190
1297 202 064	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 066	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 067	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 202 069	-----	-----	ZF 47	4	MAIN DRIVE GEAR	16 S 190
1297 203 005	T 19936	000 264 4218	ZF 40	-----	POWER TAKE OFF SHAFT (12 T.)	16 K 130
1297 203 005	T 19936	000 264 4218	ZF 43	-----	POWER TAKE OFF SHAFT (12 T.)	16 K 160
1297 203 005	T 19936	000 264 4218	ZF 44	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 160
1297 203 005	T 19936	000 264 4218	ZF 46	-----	POWER TAKE OFF SHAFT (12 T.)	16 K 190
1297 203 005	T 19936	000 264 4218	ZF 47	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 190
1297 203 005	T 19936	000 264 4218	ZF 55	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 151
1297 203 005	T 19936	000 264 4218	ZF 56	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 181
1297 203 005	T 19936	000 264 4218	ZF 57	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 221
1297 203 005	T 19936	000 264 4218	ZF 58	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 251
1297 204 019	T 16160	-----	ZF 37	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 112
1297 204 019	T 16160	-----	ZF 41	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 130
1297 204 019	T 16160	-----	ZF 44	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 160
1297 204 019	T 16160	-----	ZF 47	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 190
1297 204 053	-----	-----	ZF 41	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 130
1297 204 053	-----	-----	ZF 47	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 190
1297 204 054	-----	-----	ZF 41	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 130
1297 204 054	-----	-----	ZF 47	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 190

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1297 204 059	T 16161	-----	ZF 37	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 112
1297 204 059	T 16161	-----	ZF 41	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 130
1297 204 059	T 16161	-----	ZF 44	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 160
1297 204 059	T 16161	-----	ZF 47	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 190
1297 221 002	USE 1297 221 006					
1297 221 006	-----	-----	ZF 43	4	MAIN DRIVE GEAR	16 K 160
1297 221 006	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 221 008	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 221 009	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 221 009	-----	-----	ZF 47	4	MAIN DRIVE GEAR	16 S 190
1297 221 010	-----	-----	ZF 44	4	MAIN DRIVE GEAR	16 S 160
1297 232 023	T 10131	000 260 1597	ZF 43	68	GEAR SET (26 T.) (5 PCS.)	16 K 160
1297 232 023	T 10131	000 262 1597	ZF 44	68	GEAR SET (26 T.) (5 PCS.)	16 S 160
1297 232 023	T 10131	000 260 1597	ZF 46	68	GEAR SET (26 T.) (5 PCS.)	16 K 190
1297 232 023	T 10131	000 260 1597	ZF 47	68	GEAR SET (26 T.) (5 PCS.)	16 S 190
1297 232 023	T 10131	000 260 1597	ZF 51	68	GEAR SET (26 T.) (5 PCS.)	16 S 220
1297 232 024	-----	-----	ZF 41	68	GEAR SET (5 PCS.)	16 S 130
1297 232 024	-----	-----	ZF 43	68	GEAR SET (5 PCS.)	16 K 160
1297 232 024	-----	-----	ZF 44	68	GEAR SET (5 PCS.)	16 S 160
1297 232 024	-----	-----	ZF 46	68	GEAR SET (5 PCS.)	16 K 190
1297 232 024	-----	-----	ZF 47	68	GEAR SET (5 PCS.)	16 S 190
1297 232 027	USE 1297 232 039					
1297 232 039	T 19961	000 260 3561	ZF 43	60	CARRIER	16 K 160
1297 232 039	T 19961	000 260 3561	ZF 44	60	CARRIER	16 S 160
1297 232 039	T 19961	000 260 3561	ZF 46	60	CARRIER	16 K 190
1297 232 039	T 19961	000 260 3561	ZF 47	60	CARRIER	16 S 190
1297 232 045	-----	000 260 4061	ZF 41	60	CARRIER	16 S 130
1297 232 045	-----	000 260 4061	ZF 43	60	CARRIER	16 K 160
1297 232 045	-----	000 260 4061	ZF 44	60	CARRIER	16 S 160
1297 232 045	-----	000 260 4061	ZF 46	60	CARRIER	16 K 190
1297 232 045	-----	000 260 4061	ZF 47	60	CARRIER	16 S 190
1297 233 014	USE 1313 233 001					
1297 233 018	USE 1313 233 001					
1297 233 042	USE 1313 233 001					
1297 233 056	T 15934	000 263 2220	ZF 47	78	SYNCHRONIZER CONE (63 T.)	16 S 190
1297 233 056	T 15934	000 263 2220	ZF 51	78	SYNCHRONIZER CONE (63 T.)	16 S 220
1297 233 056	T 15934	000 263 2220	ZF 57	78	SYNCHRONIZER CONE (63 T.)	16 S 221
1297 233 057	USE 1313 233 001					
1297 298 912	T 15659	000 262 0406	ZF 43	67	GEAR REPAIR KIT (26 T.)	16 K 160
1297 298 912	T 15659	000 262 0406	ZF 44	67	GEAR REPAIR KIT (26 T.)	16 S 160
1297 298 912	T 15659	000 262 0406	ZF 46	67	GEAR REPAIR KIT (26 T.)	16 K 190
1297 298 912	T 15659	000 262 0406	ZF 47	67	GEAR REPAIR KIT (26 T.)	16 S 190
1297 298 919	-----	000 262 2297	ZF 46	67	GEAR REPAIR KIT (26 T.)	16 K 190
1297 298 919	-----	000 260 2297	ZF 47	67	GEAR REPAIR KIT (26 T.)	16 S 190
1297 298 955	T 16173	-----	ZF 50	50	SYNCHRONIZER REPAIR KIT	16 S 150
1297 298 955	T 16173	-----	ZF 51	50	SYNCHRONIZER REPAIR KIT	16 S 220
1297 298 955	T 16173	-----	ZF 55	52	SYNCHRONIZER REPAIR KIT	16 S 151
1297 298 955	T 16173	-----	ZF 56	47	SYNCHRONIZER REPAIR KIT	16 S 181
1297 298 955	T 16173	-----	ZF 57	51	SYNCHRONIZER REPAIR KIT	16 S 221
1297 298 955	T 16173	-----	ZF 58	36	SYNCHRONIZER REPAIR KIT	16 S 251
1297 298 956	T 18619	-----	ZF 37	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 112
1297 298 956	T 18619	-----	ZF 41	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 130
1297 298 956	T 18619	-----	ZF 44	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 160
1297 298 956	T 18619	-----	ZF 47	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 190
1297 298 957	-----	-----	ZF 41	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 130
1297 298 957	-----	-----	ZF 47	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 190
1297 298 958	T 18620	-----	ZF 37	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 112
1297 298 958	T 18620	-----	ZF 41	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 130
1297 298 958	T 18620	-----	ZF 44	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 160
1297 298 958	T 18620	-----	ZF 47	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 190
1297 298 959	-----	-----	ZF 41	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 130
1297 298 959	-----	-----	ZF 47	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 190
1297 302 011	-----	-----	ZF 37	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 112
1297 302 011	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 011	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 012	T 15567	000 262 3329	ZF 37	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 112
1297 302 012	T 15567	000 262 3329	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 013	-----	-----	ZF 37	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 112
1297 302 013	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 013	-----	-----	ZF 43	32	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 302 013	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 013	-----	-----	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1297 302 014	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 015	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 015	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 015	-----	-----	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
1297 302 017	-----	-----	ZF 43	32	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 302 018	-----	000 262 4629	ZF 40	31	MAIN DRIVE GEAR BEARING RETAINER	16 K 130
1297 302 018	-----	000 262 4629	ZF 43	32	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 302 019	-----	-----	ZF 40	31	MAIN DRIVE GEAR BEARING RETAINER	16 K 130
1297 302 019	-----	-----	ZF 43	32	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 302 025	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 025	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 025	-----	-----	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
1297 302 029	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 042	T 15569	000 262 3429	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 042	T 15569	000 262 3429	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 042	T 15569	000 262 3429	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
1297 302 043	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 043	-----	-----	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
1297 302 053	-----	000 262 4329	ZF 40	31	MAIN DRIVE GEAR BEARING RETAINER	16 K 130
1297 302 053	-----	000 262 4329	ZF 43	32	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 302 053	-----	000 262 4329	ZF 46	33	MAIN DRIVE GEAR BEARING RETAINER	16 K 190
1297 302 056	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 056	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 067	USE 1297 202 005					
1297 302 070	USE 1297 302 177					
1297 302 071	USE 1297 302 176					
1297 302 074	T 15014	000 262 3210	ZF 44	1	CONSTANT GEAR (28-61 T.)	16 S 160
1297 302 079	USE 1297 302 241					
1297 302 081	-----	-----	ZF 46	33	MAIN DRIVE GEAR BEARING RETAINER	16 K 190
1297 302 082	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 082	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 082	-----	-----	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
1297 302 084	-----	-----	ZF 41	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 084	-----	-----	ZF 44	38	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 099	-----	-----	ZF 41	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 107	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 108	-----	-----	ZF 37	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 112
1297 302 108	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 109	-----	-----	ZF 41	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 109	-----	-----	ZF 43	33	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 302 109	-----	-----	ZF 44	38	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 111	USE 1297 302 250					
1297 302 112	-----	-----	ZF 44	38	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 117	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 126	-----	-----	ZF 43	32	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 302 127	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 130	-----	-----	ZF 43	33	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 302 134	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 158	-----	-----	ZF 43	33	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 302 160	USE 1297 202 030					
1297 302 167	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 169	-----	-----	ZF 37	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 112
1297 302 169	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 169	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 176	T 09773	000 262 4510	ZF 43	1	CONSTANT GEAR (28-58 T.)	16 K 160
1297 302 176	T 09773	000 262 4510	ZF 44	1	CONSTANT GEAR (28-58 T.)	16 S 160
1297 302 176	T 09773	000 262 4510	ZF 46	1	CONSTANT GEAR (28-58 T.)	16 K 190
1297 302 176	T 09773	000 262 4510	ZF 47	1	CONSTANT GEAR (28-58 T.)	16 S 190
1297 302 177	T 11774	000 262 4610	ZF 43	1	CONSTANT GEAR (30-58 T.)	16 K 160
1297 302 177	T 11774	000 262 4610	ZF 44	1	CONSTANT GEAR (30-58 T.)	16 S 160
1297 302 177	T 11774	000 262 4610	ZF 46	1	CONSTANT GEAR (30-58 T.)	16 K 190
1297 302 177	T 11774	000 262 4610	ZF 47	1	CONSTANT GEAR (30-58 T.)	16 S 190
1297 302 180	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 184	-----	-----	ZF 44	38	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 185	-----	-----	ZF 43	33	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 302 185	-----	-----	ZF 46	34	MAIN DRIVE GEAR BEARING RETAINER	16 K 190
1297 302 235	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 235	-----	-----	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
1297 302 238	-----	-----	ZF 40	31	MAIN DRIVE GEAR BEARING RETAINER	16 K 130
1297 302 238	-----	-----	ZF 43	32	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 302 239	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 239	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1297 302 239	-----	-----	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
1297 302 241	T 19521	-----	ZF 44	1	CONSTANT GEAR (26-58 T.)	16 S 160
1297 302 241	T 19521	-----	ZF 47	1	CONSTANT GEAR (26-58 T.)	16 S 190
1297 302 250	-----	000 262 5810	ZF 43	1	CONSTANT GEAR (29T.)	16 K 160
1297 302 250	-----	000 262 5810	ZF 44	1	CONSTANT GEAR (29 T.)	16 S 160
1297 302 250	-----	000 262 5810	ZF 46	1	CONSTANT GEAR (29 T.)	16 K 190
1297 302 250	-----	000 262 5810	ZF 47	1	CONSTANT GEAR (29 T.)	16 S 190
1297 302 268	-----	-----	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
1297 302 268	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 268	-----	-----	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
1297 302 270	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 272	-----	-----	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
1297 302 272	-----	-----	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
1297 302 289	-----	-----	ZF 43	32	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
1297 303 009	USE 1297 303 067					
1297 303 010	USE 1297 303 073					
1297 303 022	USE 1297 303 077					
1297 303 023	USE 1297 303 081					
1297 303 025	USE 1297 303 072					
1297 303 026	USE 1297 303 065					
1297 303 039	USE 1297 303 066					
1297 303 040	USE 1297 303 074					
1297 303 041	USE 1297 303 123					
1297 303 042	USE 1297 303 132					
1297 303 043	USE 1297 303 086					
1297 303 045	USE 1297 303 140					
1297 303 047	T 11167	000 263 3302	ZF 43	28	COUNTERSHAFT (17-20 T.)	16 K 160
1297 303 048	-----	-----	ZF 43	28	COUNTERSHAFT (19-23 T.)	16 K 160
1297 303 050	USE 1297 303 097					
1297 303 051	USE 1297 303 098					
1297 303 054	USE 1297 303 075					
1297 303 055	USE 1297 203 005					
1297 303 064	USE 1297 303 140					
1297 303 065	T 15026	000 263 6510	ZF 43	26	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 K 160
1297 303 065	T 15026	000 263 6510	ZF 44	31	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 160
1297 303 065	T 15026	000 263 6510	ZF 46	27	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 K 190
1297 303 065	T 15026	000 263 6510	ZF 47	31	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 190
1297 303 066	T 15033	000 263 6610	ZF 43	25	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 K 160
1297 303 066	T 15033	000 263 6610	ZF 44	30	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 160
1297 303 066	T 15033	000 263 6610	ZF 46	26	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 K 190
1297 303 066	T 15033	000 263 6610	ZF 47	30	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 190
1297 303 067	T 09789	000 263 7410	ZF 44	32	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 160
1297 303 067	T 09789	000 263 7410	ZF 47	32	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 190
1297 303 070	-----	-----	ZF 43	28	COUNTERSHAFT (19-23 T.)	16 K 160
1297 303 071	USE 1297 303 114					
1297 303 072	T 15047	000 263 7010	ZF 43	26	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 K 160
1297 303 072	T 15047	000 263 7010	ZF 44	31	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 S 160
1297 303 072	T 15047	000 263 7010	ZF 46	27	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 K 190
1297 303 072	T 15047	000 263 7010	ZF 47	31	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 S 190
1297 303 073	T 15755	000 263 6810	ZF 44	32	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 160
1297 303 073	T 15755	000 263 6810	ZF 47	32	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 190
1297 303 074	T 15040	000 263 6910	ZF 43	25	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 K 160
1297 303 074	T 15040	000 263 6910	ZF 44	30	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 S 160
1297 303 074	T 15040	000 263 6910	ZF 46	26	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 K 190
1297 303 074	T 15040	000 263 6910	ZF 47	30	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 S 190
1297 303 075	T 15751	000 263 4502	ZF 44	33	COUNTERSHAFT (19-23 T.)	16 S 160
1297 303 075	T 15751	000 263 4502	ZF 47	33	COUNTERSHAFT (19-23 T.)	16 S 190
1297 303 076	-----	000 263 4402	ZF 46	29	COUNTERSHAFT (17 T.)	16 K 190
1297 303 077	T 19288	000 263 6710	ZF 43	27	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 K 160
1297 303 077	T 19288	000 263 6710	ZF 46	28	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 K 190
1297 303 080	-----	-----	ZF 46	29	COUNTERSHAFT (19 T.)	16 K 190
1297 303 081	-----	-----	ZF 43	27	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 K 160
1297 303 081	-----	-----	ZF 46	28	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 K 190
1297 303 085	USE 1297 303 132					
1297 303 086	T 19971	-----	ZF 44	30	COUNTERSHAFT CONSTANT GEAR (35 T.)	16 S 160
1297 303 086	T 19971	-----	ZF 47	30	COUNTERSHAFT CONSTANT GEAR (35 T.)	16 S 190
1297 303 097	T 19759	000 263 8010	ZF 44	31	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 160
1297 303 097	T 19759	000 263 8010	ZF 47	31	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 190
1297 303 098	T 19952	001 263 0510	ZF 43	25	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 K 160
1297 303 098	T 19952	001 263 0510	ZF 44	30	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 160
1297 303 098	T 19952	001 263 0510	ZF 46	26	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 K 190
1297 303 098	T 19952	000 263 0510	ZF 47	30	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 190

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1297 303 114	-----	-----	ZF 43	26	COUNTERSHAFT FOURTH SPEED GEAR (39 T.)	16 K 160
1297 303 114	-----	-----	ZF 46	27	COUNTERSHAFT FOURTH SPEED GEAR (39 T.)	16 K 190
1297 303 123	T 19526	-----	ZF 44	31	COUNTERSHAFT FOURTH SPEED GEAR (32 T.)	16 S 160
1297 303 123	T 19526	-----	ZF 47	31	COUNTERSHAFT FOURTH SPEED GEAR (32 T.)	16 S 190
1297 303 132	T 19975	-----	ZF 44	32	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	16 S 160
1297 303 132	T 19975	-----	ZF 47	32	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	16 S 190
1297 303 140	T 18339	000 263 5002	ZF 44	33	COUNTERSHAFT (17-20 T.)	16 S 160
1297 303 140	T 18339	000 263 5002	ZF 47	33	COUNTERSHAFT (17-20 T.)	16 S 190
1297 304 016	USE 1297 304 269					
1297 304 017	USE 1297 304 442					
1297 304 019	USE 1297 304 266					
1297 304 020	USE 1297 304 261					
1297 304 025	USE 1297 304 267					
1297 304 026	USE 1297 304 260					
1297 304 031	T 08892	000 262 3935	ZF 37	15	SYNCHRONIZER HUB	16 S 112
1297 304 031	T 08892	000 262 3935	ZF 37	22	SYNCHRONIZER HUB	16 S 112
1297 304 031	T 08892	000 262 3935	ZF 41	15	SYNCHRONIZER HUB	16 S 130
1297 304 031	T 08892	000 262 3935	ZF 41	22	SYNCHRONIZER HUB	16 S 130
1297 304 031	T 08892	000 262 3935	ZF 44	15	SYNCHRONIZER HUB	16 S 160
1297 304 031	T 08892	000 262 3935	ZF 47	15	SYNCHRONIZER HUB	16 S 190
1297 304 034	T 09755	000 262 2350	ZF 43	22	REVERSE GEAR SLEEVE	16 K 160
1297 304 034	T 09755	000 262 2350	ZF 44	27	REVERSE GEAR SLEEVE	16 S 160
1297 304 034	T 09755	000 262 2350	ZF 46	23	REVERSE GEAR SLEEVE	16 K 190
1297 304 034	T 09755	000 262 2350	ZF 47	27	REVERSE GEAR SLEEVE	16 S 190
1297 304 035	T 09757	000 262 2450	ZF 44	24	FIRST SPEED GEAR SLEEVE	16 S 160
1297 304 035	T 09757	000 262 2450	ZF 47	24	FIRST SPEED GEAR SLEEVE	16 S 190
1297 304 044	USE 1297 304 188					
1297 304 055	T 09765	000 262 3050	ZF 43	19	FIRST SPEED GEAR SLEEVE	16 K 160
1297 304 055	T 09765	000 262 3050	ZF 46	20	FIRST SPEED GEAR SLEEVE	16 K 190
1297 304 112	T 09769	000 262 3912	ZF 43	16	SECOND SPEED GEAR (38-22 T.)	16 K 160
1297 304 113	T 19476	-----	ZF 43	16	SECOND SPEED GEAR (37-22 T.)	16 K 160
1297 304 115	T 09775	000 262 4713	ZF 43	14	THIRD SPEED GEAR (34-23 T.)	16 K 160
1297 304 116	T 19478	-----	ZF 43	14	THIRD SPEED GEAR (32-23 T.)	16 K 160
1297 304 119	T 09777	000 262 4923	ZF 43	18	FIRST AND SECOND SPEED SLIDING COLLAR (22 SPLINES)	16 K 160
1297 304 119	T 09777	000 262 4923	ZF 46	19	FIRST AND SECOND SPEED SLIDING COLLAR (22 SPLINES)	16 K 190
1297 304 120	T 09779	000 262 5023	ZF 43	13	THIRD AND FOURTH SPEED SLIDING COLLAR (23 SPLINES)	16 K 160
1297 304 120	T 09779	000 262 5023	ZF 46	14	THIRD AND FOURTH SPEED SLIDING COLLAR (23 SPLINES)	16 K 190
1297 304 122	USE 1297 304 414					
1297 304 123	USE 1297 304 413					
1297 304 127	T 09767	000 262 3214	ZF 43	11	FOURTH SPEED GEAR (23-30-58 T.)	16 K 160
1297 304 128	T 19481	-----	ZF 43	11	FOURTH SPEED GEAR (23-28-58 T.)	16 K 160
1297 304 148	-----	000 262 5311	ZF 43	23	REVERSE GEAR (38 T.)	16 K 160
1297 304 148	-----	000 262 5311	ZF 44	28	REVERSE GEAR (38 T.)	16 S 160
1297 304 148	-----	000 262 5311	ZF 46	24	REVERSE GEAR (38 T.)	16 K 190
1297 304 148	-----	000 262 5311	ZF 47	28	REVERSE GEAR (38 T.)	16 S 190
1297 304 149	-----	000 262 8611	ZF 43	23	REVERSE GEAR (39 T.)	16 K 160
1297 304 149	-----	000 262 8611	ZF 44	28	REVERSE GEAR (39 T.)	16 S 160
1297 304 149	-----	000 262 8611	ZF 46	24	REVERSE GEAR (39 T.)	16 K 190
1297 304 149	-----	000 262 8611	ZF 47	28	REVERSE GEAR (39 T.)	16 S 190
1297 304 150	T 18326	000 262 6811	ZF 43	20	FIRST SPEED GEAR (47-22 T.)	16 K 160
1297 304 151	T 19293	-----	ZF 43	20	FIRST SPEED GEAR (44-22 T.)	16 K 160
1297 304 152	USE 1297 304 441					
1297 304 153	USE 1297 304 270					
1297 304 154	T 19368	000 262 1640	ZF 43	21	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 K 160
1297 304 154	T 19368	000 262 1640	ZF 44	26	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 160
1297 304 154	T 19368	000 262 1640	ZF 46	22	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 K 190
1297 304 154	T 19368	000 262 1640	ZF 47	26	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 190
1297 304 175	USE 1297 304 318					
1297 304 179	T 19074	000 262 3605	ZF 43	15	MAINSHAFT	16 K 160
1297 304 179	T 19074	000 262 3605	ZF 46	16	MAINSHAFT	16 K 190
1297 304 181	T 18353	000 262 2705	ZF 44	18	MAINSHAFT	16 S 160
1297 304 181	T 18353	000 262 2705	ZF 47	18	MAINSHAFT	16 S 190
1297 304 187	T 15383	000 262 0309	ZF 43	24	PLANETARY REDUCTION SUN GEAR (27 T.)	16 K 160
1297 304 187	T 15383	000 262 0309	ZF 44	29	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 160
1297 304 187	T 15383	000 262 0309	ZF 46	25	PLANETARY REDUCTION SUN GEAR (27 T.)	16 K 190
1297 304 187	T 15383	000 262 0309	ZF 47	29	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 190
1297 304 188	T 16595	000 262 2227	ZF 43	12	THIRD AND FOURTH SPEED CLUTCH GEAR (23 T.)	16 K 160
1297 304 188	T 16595	000 262 2227	ZF 46	13	THIRD AND FOURTH SPEED CLUTCH GEAR (23 T.)	16 K 190
1297 304 193	-----	000 262 4405	ZF 44	18	MAINSHAFT	16 S 160
1297 304 193	-----	000 262 4405	ZF 47	18	MAINSHAFT	16 S 190
1297 304 195	T 08895	000 262 4435	ZF 37	22	SYNCHRONIZER HUB	16 S 112
1297 304 195	T 08895	000 262 4435	ZF 41	22	SYNCHRONIZER HUB	16 S 130

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1297 304 195	T 08895	000 262 4435	ZF 44	22	SYNCHRONIZER HUB	16 S 160
1297 304 195	T 08895	000 262 4435	ZF 47	22	SYNCHRONIZER HUB	16 S 190
1297 304 196	T 09054	000 262 2140	ZF 37	20	SYNCHRONIZER CONE (63 T.)	16 S 112
1297 304 196	T 09054	000 262 2140	ZF 41	20	SYNCHRONIZER CONE (63 T.)	16 S 130
1297 304 196	T 09054	000 262 2140	ZF 44	20	SYNCHRONIZER CONE (63 T.)	16 S 160
1297 304 196	T 09054	000 262 2140	ZF 47	20	SYNCHRONIZER CONE (63 T.)	16 S 190
1297 304 258	-----	-----	ZF 43	11	FOURTH SPEED GEAR (29 T.)	16 K 160
1297 304 260	T 15019	000 262 4414	ZF 44	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 160
1297 304 260	T 15019	000 262 4414	ZF 47	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 190
1297 304 261	T 18328	000 262 6913	ZF 44	17	THIRD SPEED GEAR (34-58 T.)	16 S 160
1297 304 261	T 18328	000 262 6913	ZF 47	17	THIRD SPEED GEAR (34-58 T.)	16 S 190
1297 304 262	USE 1297 304 441					
1297 304 263	USE 1297 304 442					
1297 304 264	-----	-----	ZF 43	15	MAINSHAFT	16 K 160
1297 304 264	-----	-----	ZF 46	16	MAINSHAFT	16 K 190
1297 304 265	-----	-----	ZF 43	24	PLANETARY REDUCTION SUN GEAR (24 T.)	16 K 160
1297 304 265	-----	-----	ZF 46	25	PLANETARY REDUCTION SUN GEAR (24 T.)	16 K 190
1297 304 266	T 15727	000 262 6213	ZF 44	17	THIRD SPEED GEAR (32-58 T.)	16 S 160
1297 304 266	T 15727	000 262 6213	ZF 47	17	THIRD SPEED GEAR (32-58 T.)	16 S 190
1297 304 267	T 15016	000 262 4214	ZF 44	12	FOURTH SPEED GEAR (58-28-58 T.)	16 S 160
1297 304 267	T 15016	000 262 4214	ZF 47	12	FOURTH SPEED GEAR (58-28-58 T.)	16 S 190
1297 304 269	T 15724	000 262 5612	ZF 44	19	SECOND SPEED GEAR (37-58 T.)	16 S 160
1297 304 269	T 15724	000 262 5612	ZF 47	19	SECOND SPEED GEAR (37-58 T.)	16 S 190
1297 304 270	T 15736	000 262 8511	ZF 44	25	FIRST SPEED GEAR (44-58 T.)	16 S 160
1297 304 270	T 15736	000 262 8511	ZF 47	25	FIRST SPEED GEAR (44-58 T.)	16 S 190
1297 304 271	-----	000 262 5412	ZF 46	17	SECOND SPEED GEAR (38 T.)	16 K 190
1297 304 272	-----	000 262 8311	ZF 46	21	FIRST SPEED GEAR (47 T.)	16 K 190
1297 304 273	-----	000 262 6113	ZF 46	15	THIRD SPEED GEAR (34 T.)	16 K 190
1297 304 274	-----	000 262 4114	ZF 46	12	FOURTH SPEED GEAR (30 T.)	16 K 190
1297 304 277	-----	-----	ZF 46	21	FIRST SPEED GEAR (44 T.)	16 K 190
1297 304 278	-----	-----	ZF 46	17	SECOND SPEED GEAR (37 T.)	16 K 190
1297 304 279	-----	-----	ZF 46	15	THIRD SPEED GEAR (32 T.)	16 K 190
1297 304 284	USE 1297 304 414					
1297 304 285	USE 1297 304 413					
1297 304 308	-----	-----	ZF 46	12	FOURTH SPEED GEAR (28 T.)	16 K 190
1297 304 318	T 19483	000 262 6014	ZF 44	12	FOURTH SPEED GEAR (58-26-58 T.)	16 S 160
1297 304 318	T 19483	000 262 6014	ZF 47	12	FOURTH SPEED GEAR (58-26-58 T.)	16 S 190
1297 304 369	T 16723	-----	ZF 41	13	SYNCHRONIZER CONE (57 T.)	16 S 130
1297 304 369	T 16723	-----	ZF 47	13	SYNCHRONIZER CONE (57 T.)	16 S 190
1297 304 371	T 16726	-----	ZF 41	20	SYNCHRONIZER CONE (63 T.)	16 S 130
1297 304 371	T 16726	-----	ZF 47	20	SYNCHRONIZER CONE (63 T.)	16 S 190
1297 304 380	-----	-----	ZF 46	12	FOURTH SPEED GEAR (29 T.)	16 K 190
1297 304 401	T 17880	000 262 4934	ZF 41	21	SYNCHRONIZER BLOCKING RING	16 S 130
1297 304 401	T 17880	000 262 4934	ZF 47	21	SYNCHRONIZER BLOCKING RING	16 S 190
1297 304 401	T 17880	000 262 4934	ZF 50	27	SYNCHRONIZER BLOCKING RING	16 S 150
1297 304 401	T 17880	000 262 4934	ZF 51	27	SYNCHRONIZER BLOCKING RING	16 S 220
1297 304 401	T 17880	000 262 4934	ZF 55	26	SYNCHRONIZER BLOCKING RING	16 S 151
1297 304 401	T 17880	000 262 4934	ZF 56	26	SYNCHRONIZER BLOCKING RING	16 S 181
1297 304 401	T 17880	000 262 4934	ZF 57	26	SYNCHRONIZER BLOCKING RING	16 S 221
1297 304 401	T 17880	000 262 4934	ZF 58	19	SYNCHRONIZER BLOCKING RING	16 S 251
1297 304 402	T 11724	000 262 3834	ZF 50	3	SYNCHRONIZER BLOCKING RING	16 S 150
1297 304 402	T 11724	000 262 3834	ZF 50	13	SYNCHRONIZER BLOCKING RING	16 S 150
1297 304 402	T 11724	000 262 3834	ZF 51	3	SYNCHRONIZER BLOCKING RING	16 S 220
1297 304 402	T 11724	000 262 3834	ZF 51	13	SYNCHRONIZER BLOCKING RING	16 S 220
1297 304 402	T 11724	000 262 3834	ZF 55	3	SYNCHRONIZER BLOCKING RING	16 S 151
1297 304 402	T 11724	000 262 3834	ZF 55	11	SYNCHRONIZER BLOCKING RING	16 S 151
1297 304 402	T 11724	000 262 3834	ZF 56	3	SYNCHRONIZER BLOCKING RING	16 S 181
1297 304 402	T 11724	000 262 3834	ZF 56	11	SYNCHRONIZER BLOCKING RING	16 S 181
1297 304 402	T 11724	000 262 3834	ZF 57	3	SYNCHRONIZER BLOCKING RING	16 S 221
1297 304 402	T 11724	000 262 3834	ZF 57	11	SYNCHRONIZER BLOCKING RING	16 S 221
1297 304 402	T 11724	000 262 3834	ZF 58	3	SYNCHRONIZER BLOCKING RING	16 S 251
1297 304 402	T 11724	000 262 3834	ZF 58	11	SYNCHRONIZER BLOCKING RING	16 S 251
1297 304 413	T 19530	-----	ZF 44	12	FOURTH SPEED GEAR (58-29-58 T.)	16 S 160
1297 304 413	T 19530	-----	ZF 47	12	FOURTH SPEED GEAR (58-29-58 T.)	16 S 190
1297 304 414	T 19980	-----	ZF 44	17	THIRD SPEED GEAR (34-58 T.)	16 S 160
1297 304 414	T 19980	-----	ZF 47	17	THIRD SPEED GEAR (34-58 T.)	16 S 190
1297 304 415	USE 1297 304 450					
1297 304 433	USE 1297 304 402					
1297 304 436	T 15096	000 264 0839	ZF 41	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 130
1297 304 436	T 15096	000 264 0839	ZF 47	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 190
1297 304 436	T 15096	000 264 0839	ZF 50	8	SYNCHRONIZER PRESSURE PLUNGER	16 S 150
1297 304 436	T 15096	000 264 0839	ZF 51	8	SYNCHRONIZER PRESSURE PLUNGER	16 S 220

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1297 304 436	T 15096	000 264 0839	ZF 55	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 151
1297 304 436	T 15096	000 264 0839	ZF 56	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 181
1297 304 436	T 15096	000 264 0839	ZF 57	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 221
1297 304 436	T 15096	000 264 0839	ZF 58	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 251
1297 304 439	-----	000 262 0909	ZF 44	29	PLANETARY REDUCTION SUN GEAR (24 T.)	16 S 160
1297 304 439	-----	000 262 0909	ZF 47	29	PLANETARY REDUCTION SUN GEAR (24 T.)	16 S 190
1297 304 441	T 18889	000 262 9211	ZF 44	25	FIRST SPEED GEAR (47-58 T.)	16 S 160
1297 304 441	T 18889	000 262 9211	ZF 47	25	FIRST SPEED GEAR (47-58 T.)	16 S 190
1297 304 442	T 18313	000 262 6512	ZF 44	19	SECOND SPEED GEAR (38-58 T.)	16 S 160
1297 304 442	T 18313	000 262 6512	ZF 47	19	SECOND SPEED GEAR (38-58 T.)	16 S 190
1297 304 445	-----	-----	ZF 41	22	SYNCHRONIZER HUB	16 S 130
1297 304 445	-----	-----	ZF 47	22	SYNCHRONIZER HUB	16 S 190
1297 304 446	-----	-----	ZF 41	15	SYNCHRONIZER HUB	16 S 130
1297 304 446	-----	-----	ZF 47	15	SYNCHRONIZER HUB	16 S 190
1297 304 448	USE 1310 304 202					
1297 304 450	-----	-----	ZF 41	23	SYNCHRONIZER SLIDING COLLAR	16 S 130
1297 304 450	-----	-----	ZF 47	23	SYNCHRONIZER SLIDING COLLAR	16 S 190
1297 304 484	T 15078	000 262 7034	ZF 41	14	SYNCHRONIZER BLOCKING RING	16 S 130
1297 304 484	T 15078	000 262 7034	ZF 47	14	SYNCHRONIZER BLOCKING RING	16 S 190
1297 304 484	T 15078	000 262 7034	ZF 50	3	SYNCHRONIZER BLOCKING RING	16 S 150
1297 304 484	T 15078	000 262 7034	ZF 50	13	SYNCHRONIZER BLOCKING RING	16 S 150
1297 304 484	T 15078	000 262 7034	ZF 51	3	SYNCHRONIZER BLOCKING RING	16 S 220
1297 304 484	T 15078	000 262 7034	ZF 51	13	SYNCHRONIZER BLOCKING RING	16 S 220
1297 304 484	T 15078	000 262 7034	ZF 55	3	SYNCHRONIZER BLOCKING RING	16 S 151
1297 304 484	T 15078	000 262 7034	ZF 55	11	SYNCHRONIZER BLOCKING RING	16 S 151
1297 304 484	T 15078	000 262 7034	ZF 56	3	SYNCHRONIZER BLOCKING RING	16 S 181
1297 304 484	T 15078	000 262 7034	ZF 56	11	SYNCHRONIZER BLOCKING RING	16 S 181
1297 304 484	T 15078	000 262 7034	ZF 57	3	SYNCHRONIZER BLOCKING RING	16 S 221
1297 304 484	T 15078	000 262 7034	ZF 57	11	SYNCHRONIZER BLOCKING RING	16 S 221
1297 304 484	T 15078	000 262 7034	ZF 58	3	SYNCHRONIZER BLOCKING RING	16 S 251
1297 304 484	T 15078	000 262 7034	ZF 58	11	SYNCHRONIZER BLOCKING RING	16 S 251
1297 304 485	T 18028	-----	ZF 41	21	SYNCHRONIZER BLOCKING RING	16 S 130
1297 304 485	T 18028	-----	ZF 47	21	SYNCHRONIZER BLOCKING RING	16 S 190
1297 304 485	T 18028	-----	ZF 50	27	SYNCHRONIZER BLOCKING RING	16 S 150
1297 304 485	T 18028	-----	ZF 51	27	SYNCHRONIZER BLOCKING RING	16 S 220
1297 304 485	T 18028	-----	ZF 55	26	SYNCHRONIZER BLOCKING RING	16 S 151
1297 304 485	T 18028	-----	ZF 56	26	SYNCHRONIZER BLOCKING RING	16 S 181
1297 304 485	T 18028	-----	ZF 57	26	SYNCHRONIZER BLOCKING RING	16 S 221
1297 304 485	T 18028	-----	ZF 58	19	SYNCHRONIZER BLOCKING RING	16 S 251
1297 305 003	-----	-----	ZF 40	29	REVERSE IDLER GEAR (21 T.)	16 K 130
1297 305 003	-----	-----	ZF 41	34	REVERSE IDLER GEAR (21 T.)	16 S 130
1297 305 011	-----	-----	ZF 51	41	REVERSE IDLER GEAR (24 T.)	16 S 220
1297 305 012	-----	-----	ZF 51	41	REVERSE IDLER GEAR (21 T.)	16 S 220
1297 306 120	T 17901	000 268 1149	ZF 50	90	SLIDING BLOCK (BRONZE)	16 S 150
1297 306 120	T 17901	000 268 1149	ZF 51	90	SLIDING BLOCK (BRONZE)	16 S 220
1297 306 120	T 17901	000 268 1149	ZF 55	90	SLIDING BLOCK (BRONZE)	16 S 151
1297 306 120	T 17901	000 268 1149	ZF 56	90	SLIDING BLOCK (BRONZE)	16 S 181
1297 306 120	T 17901	000 268 1149	ZF 57	90	SLIDING BLOCK (BRONZE)	16 S 221
1297 306 120	T 17901	000 268 1149	ZF 58	90	SLIDING BLOCK (BRONZE)	16 S 251
1297 332 005	USE 1297 332 109					
1297 332 017	T 20043	000 263 0125	ZF 43	70	RING GEAR CARRIER (83 T.)	16 K 160
1297 332 017	T 20043	000 263 0125	ZF 44	70	RING GEAR CARRIER (83 T.)	16 S 160
1297 332 017	T 20043	000 263 0125	ZF 46	70	RING GEAR CARRIER (83 T.)	16 K 190
1297 332 017	T 20043	000 263 0125	ZF 47	70	RING GEAR CARRIER (83 T.)	16 S 190
1297 332 022	USE 1297 232 023					
1297 332 028	USE 1297 232 024					
1297 332 035	-----	000 263 0425	ZF 41	70	RING GEAR CARRIER (86 T.)	16 S 130
1297 332 035	-----	000 263 0425	ZF 43	70	RING GEAR CARRIER (86 T.)	16 K 160
1297 332 035	-----	000 263 0425	ZF 44	70	RING GEAR CARRIER (86 T.)	16 S 160
1297 332 035	-----	000 263 0425	ZF 46	70	RING GEAR CARRIER (86 T.)	16 K 190
1297 332 035	-----	000 263 0425	ZF 47	70	RING GEAR CARRIER (86 T.)	16 S 190
1297 332 080	-----	000 263 6310	ZF 43	69	RING GEAR (83 T.)	16 K 160
1297 332 080	-----	000 263 6310	ZF 44	69	RING GEAR (83 T.)	16 S 160
1297 332 080	-----	000 263 6310	ZF 46	69	RING GEAR (83 T.)	16 K 190
1297 332 080	-----	000 263 6310	ZF 47	69	RING GEAR (83 T.)	16 S 190
1297 332 080	-----	000 263 6310	ZF 51	69	RING GEAR (83 T.)	16 S 220
1297 332 108	-----	-----	ZF 51	70	RING GEAR CARRIER (83 T.)	16 S 220
1297 332 109	T 15739	000 263 0374	ZF 41	61	GEAR SHAFT	16 S 130
1297 332 109	T 15739	000 263 0374	ZF 43	61	GEAR SHAFT	16 K 160
1297 332 109	T 15739	000 263 0374	ZF 44	61	GEAR SHAFT	16 S 160
1297 332 109	T 15739	000 263 0374	ZF 46	61	GEAR SHAFT	16 K 190
1297 332 109	T 15739	000 263 0374	ZF 47	61	GEAR SHAFT	16 S 190

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1297 332 109	T 15739	000 263 0374	ZF 51	61	GEAR SHAFT	16 S 220
1297 332 120	-----	-----	ZF 47	70	RING GEAR CARRIER (86 T.)	16 S 190
1297 332 120	-----	-----	ZF 51	70	RING GEAR CARRIER (86 T.)	16 S 220
1297 332 120	-----	-----	ZF 57	70	RING GEAR CARRIER (86 T.)	16 S 221
1297 333 110	-----	-----	ZF 47	80	CARRIER COUPLING FLANGE	16 S 190
1297 333 110	-----	-----	ZF 51	80	CARRIER COUPLING FLANGE	16 S 220
1297 333 110	-----	-----	ZF 55	85	CARRIER COUPLING FLANGE	16 S 151
1297 333 110	-----	-----	ZF 56	81	CARRIER COUPLING FLANGE	16 S 181
1297 333 110	-----	-----	ZF 57	86	CARRIER COUPLING FLANGE	16 S 221
1297 333 110	-----	-----	ZF 58	80	CARRIER COUPLING FLANGE	16 S 251
1297 333 115	-----	000 263 0935	ZF 47	73	SYNCHRONIZER HUB	16 S 190
1297 333 115	-----	000 263 0935	ZF 51	73	SYNCHRONIZER HUB	16 S 220
1297 333 115	-----	000 263 0935	ZF 57	74	SYNCHRONIZER HUB	16 S 221
1297 333 117	-----	-----	ZF 41	79	SYNCHRONIZER CONE	16 S 130
1297 333 118	-----	-----	ZF 41	79	SYNCHRONIZER CONE	16 S 130
1297 333 118	-----	-----	ZF 47	79	SYNCHRONIZER CONE	16 S 190
1297 333 118	-----	-----	ZF 50	79	SYNCHRONIZER CONE	16 S 150
1297 338 003	-----	-----	ZF 47	80	CARRIER COUPLING FLANGE	16 S 190
1297 338 008	-----	000 264 4945	ZF 46	79	CARRIER COUPLING FLANGE	16 K 190
1297 338 009	-----	-----	ZF 44	79	CARRIER COUPLING FLANGE	16 S 160
1297 338 009	-----	-----	ZF 46	79	CARRIER COUPLING FLANGE	16 K 190
1297 338 010	-----	000 264 2845	ZF 41	80	CARRIER COUPLING FLANGE	16 S 130
1297 338 010	-----	000 264 2845	ZF 43	79	CARRIER COUPLING FLANGE	16 K 160
1297 338 010	-----	000 264 2845	ZF 44	79	CARRIER COUPLING FLANGE	16 S 160
1297 338 010	-----	000 262 2845	ZF 46	79	CARRIER COUPLING FLANGE	16 K 190
1297 338 010	-----	000 264 2845	ZF 47	80	CARRIER COUPLING FLANGE	16 S 190
1297 338 038	T 14812	000 264 4145	ZF 43	79	CARRIER COUPLING FLANGE (38 SPLINES)	16 K 160
1297 338 038	T 14812	000 264 4145	ZF 44	79	CARRIER COUPLING FLANGE (38 SPLINES)	16 S 160
1297 338 038	T 14812	000 264 4145	ZF 46	79	CARRIER COUPLING FLANGE (38 SPLINES)	16 K 190
1297 338 038	T 14812	000 264 4145	ZF 47	80	CARRIER COUPLING FLANGE (38 SPLINES)	16 S 190
1297 338 041	-----	000 264 4245	ZF 41	80	CARRIER COUPLING FLANGE	16 S 130
1297 338 041	-----	000 264 4245	ZF 43	79	CARRIER COUPLING FLANGE	16 K 160
1297 338 041	-----	000 264 4245	ZF 44	79	CARRIER COUPLING FLANGE	16 S 160
1297 338 041	-----	000 264 4245	ZF 47	80	CARRIER COUPLING FLANGE	16 S 190
1297 338 051	-----	-----	ZF 43	79	CARRIER COUPLING FLANGE	16 K 160
1304 304 134	USE 1295 304 004					
1304 304 686	T 15151	000 262 9934	ZF 37	3	SYNCHRONIZER BLOCKING RING	16 S 112
1304 304 686	T 15151	000 262 9934	ZF 37	14	SYNCHRONIZER BLOCKING RING	16 S 112
1304 304 686	T 15151	000 262 9934	ZF 40	3	SYNCHRONIZER BLOCKING RING	16 K 130
1304 304 686	T 15151	000 262 9934	ZF 41	3	SYNCHRONIZER BLOCKING RING	16 S 130
1304 304 686	T 15151	000 262 9934	ZF 41	14	SYNCHRONIZER BLOCKING RING	16 S 130
1304 304 686	T 15151	000 262 9934	ZF 43	3	SYNCHRONIZER BLOCKING RING	16 K 160
1304 304 686	T 15151	000 262 9934	ZF 44	3	SYNCHRONIZER BLOCKING RING	16 S 160
1304 304 686	T 15151	000 262 9934	ZF 44	14	SYNCHRONIZER BLOCKING RING	16 S 160
1304 304 686	T 15151	000 262 9934	ZF 46	3	SYNCHRONIZER BLOCKING RING	16 K 190
1304 304 686	T 15151	000 262 9934	ZF 47	3	SYNCHRONIZER BLOCKING RING	16 S 190
1304 304 686	T 15151	000 262 9934	ZF 47	14	SYNCHRONIZER BLOCKING RING	16 S 190
1310 304 175	T 14989	001 262 1123	ZF 50	25	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
1310 304 175	T 14989	001 262 1123	ZF 51	25	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
1310 304 175	T 14989	001 262 1123	ZF 55	24	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
1310 304 175	T 14989	001 262 1123	ZF 56	24	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
1310 304 175	T 14989	001 262 1123	ZF 57	24	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
1310 304 202	T 14983	001 262 1823	ZF 41	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
1310 304 202	T 14983	001 262 1823	ZF 47	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 190
1310 304 202	T 14983	001 262 1823	ZF 50	9	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 150
1310 304 202	T 14983	001 262 1823	ZF 50	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 150
1310 304 202	T 14983	001 262 1823	ZF 51	9	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 220
1310 304 202	T 14983	001 262 1823	ZF 51	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 220
1310 304 202	T 14983	001 262 1823	ZF 55	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 151
1310 304 202	T 14983	001 262 1823	ZF 55	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 151
1310 304 202	T 14983	001 262 1823	ZF 56	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 181
1310 304 202	T 14983	001 262 1823	ZF 56	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 181
1310 304 202	T 14983	001 262 1823	ZF 57	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 221
1310 304 202	T 14983	001 262 1823	ZF 57	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 221
1310 304 202	T 14983	001 262 1823	ZF 58	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 251
1310 304 202	T 14983	001 262 1823	ZF 58	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 251
1312 202 026	USE 1312 202 037					
1312 202 028	USE 1312 202 039					
1312 202 029	USE 1312 202 038					
1312 202 030	USE 1312 202 036					
1312 202 031	USE 1312 202 041					
1312 202 032	USE 1312 202 035					

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1312 202 035	-----	-----	ZF 51	4	MAIN DRIVE GEAR	16 S 220
1312 202 036	-----	-----	ZF 51	4	MAIN DRIVE GEAR	16 S 220
1312 202 037	-----	-----	ZF 51	4	MAIN DRIVE GEAR	16 S 220
1312 202 038	-----	-----	ZF 51	4	MAIN DRIVE GEAR	16 S 220
1312 202 039	-----	-----	ZF 51	4	MAIN DRIVE GEAR	16 S 220
1312 202 041	-----	-----	ZF 51	5	MAIN DRIVE GEAR	16 S 220
1312 202 054	-----	-----	ZF 50	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 150
1312 204 044	-----	-----	ZF 51	52	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 220
1312 221 002	USE 1312 221 003					
1312 221 003	-----	-----	ZF 51	4	MAIN DRIVE GEAR	16 S 220
1312 232 013	USE 1316 232 005					
1312 232 014	-----	000 260 2397	ZF 47	68	GEAR SET (5 PCS.)	16 S 190
1312 232 014	-----	000 260 2397	ZF 51	68	GEAR SET (5 PCS.)	16 S 220
1312 232 014	-----	000 260 2397	ZF 57	68	GEAR SET (5 PCS.)	16 S 221
1312 232 015	-----	-----	ZF 57	60	CARRIER	16 S 221
1312 232 016	-----	-----	ZF 51	60	CARRIER	16 S 220
1312 232 028	-----	-----	ZF 51	60	CARRIER	16 S 220
1312 298 911	T 18625	-----	ZF 50	52	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 150
1312 298 911	T 18625	-----	ZF 51	52	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 220
1312 298 911	T 18625	-----	ZF 55	54	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 151
1312 298 911	T 18625	-----	ZF 56	49	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 181
1312 298 911	T 18625	-----	ZF 57	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 221
1312 302 036	-----	-----	ZF 50	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 150
1312 302 036	-----	-----	ZF 51	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 220
1312 302 044	-----	-----	ZF 51	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 220
1312 302 047	-----	-----	ZF 50	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 150
1312 302 047	-----	-----	ZF 51	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 220
1312 302 052	-----	-----	ZF 50	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 150
1312 302 055	USE 1310 304 202					
1312 302 061	-----	-----	ZF 51	44	MAIN DRIVE GEAR BEARING RETAINER	16 S 220
1312 302 064	-----	-----	ZF 51	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 220
1312 302 073	-----	-----	ZF 51	1	CONSTANT GEAR (34 T.)	16 S 220
1312 302 074	-----	-----	ZF 51	1	CONSTANT GEAR (30 T.)	16 S 220
1312 302 077	-----	-----	ZF 51	1	CONSTANT GEAR (28 T.)	16 S 220
1312 302 081	-----	-----	ZF 50	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 150
1312 302 096	-----	-----	ZF 50	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 150
1312 302 096	-----	-----	ZF 51	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 220
1312 303 003	-----	-----	ZF 51	35	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 220
1312 303 005	-----	-----	ZF 51	35	COUNTERSHAFT CONSTANT GEAR (39 T.)	16 S 220
1312 303 006	-----	-----	ZF 51	35	COUNTERSHAFT CONSTANT GEAR (37 T.)	16 S 220
1312 303 008	-----	-----	ZF 51	38	COUNTERSHAFT (17-20 T.)	16 S 220
1312 303 009	-----	-----	ZF 51	38	COUNTERSHAFT (19-23 T.)	16 S 220
1312 303 014	-----	-----	ZF 51	36	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 220
1312 303 016	-----	-----	ZF 51	36	COUNTERSHAFT FOURTH SPEED GEAR (37 T.)	16 S 220
1312 303 017	-----	-----	ZF 51	36	COUNTERSHAFT FOURTH SPEED GEAR (39 T.)	16 S 220
1312 303 020	-----	-----	ZF 51	37	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 220
1312 303 021	-----	-----	ZF 51	37	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	16 S 220
1312 303 036	-----	-----	ZF 51	37	COUNTERSHAFT THIRD SPEED GEAR (36 T.)	16 S 220
1312 303 037	-----	-----	ZF 51	38	COUNTERSHAFT (20-24 T.)	16 S 220
1312 303 043	-----	-----	ZF 51	39	COUNTERSHAFT (19-23 T.)	16 S 220
1312 303 055	-----	-----	ZF 51	38	COUNTERSHAFT	16 S 220
1312 304 008	-----	-----	ZF 51	30	FIRST SPEED GEAR SLEEVE	16 S 220
1312 304 011	-----	-----	ZF 51	33	REVERSE SPEED GEAR SLEEVE	16 S 220
1312 304 027	T 11729	000 262 5535	ZF 50	2	SYNCHRONIZER CONE (57 T.)	16 S 150
1312 304 027	T 11729	000 262 5535	ZF 50	12	SYNCHRONIZER CONE (57 T.)	16 S 150
1312 304 027	T 11729	000 262 5535	ZF 51	2	SYNCHRONIZER CONE (57 T.)	16 S 220
1312 304 027	T 11729	000 262 5535	ZF 51	12	SYNCHRONIZER CONE (57 T.)	16 S 220
1312 304 027	T 11729	000 262 5535	ZF 55	2	SYNCHRONIZER CONE (57 T.)	16 S 151
1312 304 027	T 11729	000 262 5535	ZF 55	10	SYNCHRONIZER CONE (57 T.)	16 S 151
1312 304 027	T 11729	000 262 5535	ZF 56	2	SYNCHRONIZER CONE (57 T.)	16 S 181
1312 304 027	T 11729	000 262 5535	ZF 56	10	SYNCHRONIZER CONE (57 T.)	16 S 181
1312 304 027	T 11729	000 262 5535	ZF 57	2	SYNCHRONIZER CONE (57 T.)	16 S 221
1312 304 027	T 11729	000 262 5535	ZF 57	10	SYNCHRONIZER CONE (57 T.)	16 S 221
1312 304 027	T 11729	000 262 5535	ZF 58	2	SYNCHRONIZER CONE (57 T.)	16 S 251
1312 304 027	T 11729	000 262 5535	ZF 58	10	SYNCHRONIZER CONE (57 T.)	16 S 251
1312 304 029	-----	-----	ZF 51	11	FOURTH SPEED GEAR (30 T.)	16 S 220
1312 304 031	-----	-----	ZF 51	11	FOURTH SPEED GEAR (34 T.)	16 S 220
1312 304 032	-----	-----	ZF 51	11	FOURTH SPEED GEAR (30 T.)	16 S 220
1312 304 037	-----	-----	ZF 51	32	FIRST SPEED AND REVERSE GEAR CONE	16 S 220
1312 304 052	T 17886	000 262 5835	ZF 50	14	SYNCHRONIZER HUB (57 T.)	16 S 150
1312 304 052	T 17886	000 262 5835	ZF 51	14	SYNCHRONIZER HUB (57 T.)	16 S 220
1312 304 052	T 17886	000 262 5835	ZF 55	12	SYNCHRONIZER HUB (57 T.)	16 S 151

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1312 304 052	T 17886	000 262 5835	ZF 56	12	SYNCHRONIZER HUB (57 T.)	16 S 181
1312 304 052	T 17886	000 262 5835	ZF 57	12	SYNCHRONIZER HUB (57 T.)	16 S 221
1312 304 052	T 17886	000 262 5835	ZF 58	12	SYNCHRONIZER HUB (57 T.)	16 S 251
1312 304 056	T 15103	-----	ZF 50	10	SYNCHRONIZER CONE (57 T.)	16 S 150
1312 304 056	T 15103	-----	ZF 51	10	SYNCHRONIZER CONE (57 T.)	16 S 220
1312 304 056	T 15103	-----	ZF 55	8	SYNCHRONIZER CONE (57 T.)	16 S 151
1312 304 056	T 15103	-----	ZF 56	8	SYNCHRONIZER CONE (57 T.)	16 S 181
1312 304 056	T 15103	-----	ZF 57	8	SYNCHRONIZER CONE (57 T.)	16 S 221
1312 304 056	T 15103	-----	ZF 58	8	SYNCHRONIZER CONE (57 T.)	16 S 251
1312 304 075	-----	-----	ZF 51	16	THIRD SPEED GEAR (25 T.)	16 S 220
1312 304 077	-----	-----	ZF 51	31	FIRST SPEED GEAR (34 T.)	16 S 220
1312 304 078	-----	-----	ZF 51	34	REVERSE GEAR (39 T.)	16 S 220
1312 304 082	USE 1316 304 133					
1312 304 083	-----	-----	ZF 51	32	FIRST SPEED AND REVERSE GEAR CONE	16 S 220
1312 304 084	-----	-----	ZF 51	30	FIRST SPEED GEAR SLEEVE	16 S 220
1312 304 084	-----	-----	ZF 56	29	FIRST SPEED GEAR SLEEVE	16 S 181
1312 304 084	-----	-----	ZF 57	29	FIRST SPEED GEAR SLEEVE	16 S 221
1312 304 084	-----	-----	ZF 58	22	FIRST SPEED GEAR SLEEVE	16 S 251
1312 304 085	-----	-----	ZF 51	31	FIRST SPEED GEAR (47 T.)	16 S 220
1312 304 086	-----	-----	ZF 51	31	FIRST SPEED GEAR (44 T.)	16 S 220
1312 304 087	-----	-----	ZF 51	34	REVERSE GEAR (38 T.)	16 S 220
1312 304 088	-----	-----	ZF 51	34	REVERSE GEAR (39 T.)	16 S 220
1312 304 092	-----	-----	ZF 51	19	SYNCHRONIZER CLUTCH GEAR	16 S 220
1312 304 097	USE 1312 304 150					
1312 304 106	T 15090	000 263 2120	ZF 50	19	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 150
1312 304 106	T 15090	000 263 2120	ZF 51	19	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 220
1312 304 106	T 15090	000 263 2120	ZF 55	18	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 151
1312 304 106	T 15090	000 263 2120	ZF 56	18	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 181
1312 304 106	T 15090	000 263 2120	ZF 57	18	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 221
1312 304 124	T 18461	-----	ZF 56	31	FIRST SPEED AND REVERSE GEAR CONE (23 T.)	16 S 181
1312 304 124	T 18461	-----	ZF 57	31	FIRST SPEED AND REVERSE GEAR CONE (23 T.)	16 S 221
1312 304 124	T 18461	-----	ZF 58	24	FIRST SPEED AND REVERSE GEAR CONE (23 T.)	16 S 251
1312 304 134	USE 1316 304 130					
1312 304 136	-----	-----	ZF 51	16	THIRD SPEED GEAR (34 T.)	16 S 220
1312 304 137	-----	-----	ZF 51	16	THIRD SPEED GEAR (32 T.)	16 S 220
1312 304 139	-----	000 262 6712	ZF 51	18	SECOND SPEED GEAR (38 T.)	16 S 220
1312 304 141	-----	-----	ZF 51	18	SECOND SPEED GEAR (37 T.)	16 S 220
1312 304 142	-----	-----	ZF 51	18	SECOND SPEED GEAR	16 S 220
1312 304 150	T 19997	000 262 1953	ZF 55	16	MAINSHAFT TUBE	16 S 151
1312 304 150	T 19997	000 262 1953	ZF 56	16	MAINSHAFT TUBE	16 S 181
1312 304 150	T 19997	000 262 1953	ZF 57	16	MAINSHAFT TUBE	16 S 221
1312 304 157	USE 1310 304 175					
1312 304 158	T 18047	-----	ZF 50	24	SYNCHRONIZER HUB (63 T.)	16 S 150
1312 304 158	T 18047	-----	ZF 51	24	SYNCHRONIZER HUB (63 T.)	16 S 220
1312 304 158	T 18047	-----	ZF 55	23	SYNCHRONIZER HUB (63 T.)	16 S 151
1312 304 158	T 18047	-----	ZF 56	23	SYNCHRONIZER HUB (63 T.)	16 S 181
1312 304 158	T 18047	-----	ZF 57	23	SYNCHRONIZER HUB (63 T.)	16 S 221
1312 304 159	T 17222	000 262 4240	ZF 50	23	SYNCHRONIZER SHIFTING PLATE	16 S 150
1312 304 159	T 17222	000 262 4240	ZF 51	23	SYNCHRONIZER SHIFTING PLATE	16 S 220
1312 304 159	T 17222	000 262 4240	ZF 55	22	SYNCHRONIZER SHIFTING PLATE	16 S 151
1312 304 159	T 17222	000 262 4240	ZF 56	22	SYNCHRONIZER SHIFTING PLATE	16 S 181
1312 304 159	T 17222	000 262 4240	ZF 57	22	SYNCHRONIZER SHIFTING PLATE	16 S 221
1312 304 161	-----	-----	ZF 51	17	MAINSHAFT	16 S 220
1312 304 185	-----	-----	ZF 51	32	FIRST SPEED AND REVERSE GEAR CONE	16 S 220
1312 304 187	-----	-----	ZF 51	34	REVERSE GEAR (39 T.)	16 S 220
1312 305 003	-----	-----	ZF 51	41	REVERSE IDLER GEAR (21 T.)	16 S 220
1312 332 026	-----	000 263 0474	ZF 47	61	GEAR SHAFT	16 S 190
1312 332 026	-----	000 263 0474	ZF 51	61	GEAR SHAFT	16 S 220
1312 332 026	-----	000 263 0474	ZF 57	61	GEAR SHAFT	16 S 221
1312 333 014	-----	-----	ZF 51	79	SYNCHRONIZER CONE	16 S 220
1312 333 018	-----	-----	ZF 57	86	CARRIER COUPLING FLANGE	16 S 221
1313 202 013	T 11730	-----	ZF 50	4	MAIN DRIVE GEAR (57 T.)	16 S 150
1313 202 014	-----	-----	ZF 50	4	MAIN DRIVE GEAR	16 S 150
1313 202 015	-----	-----	ZF 50	4	MAIN DRIVE GEAR (57 T.)	16 S 150
1313 202 016	-----	-----	ZF 50	4	MAIN DRIVE GEAR	16 S 150
1313 202 017	-----	-----	ZF 50	4	MAIN DRIVE GEAR (57 T.)	16 S 150
1313 202 018	-----	-----	ZF 50	4	MAIN DRIVE GEAR	16 S 150
1313 202 019	-----	-----	ZF 50	5	MAIN DRIVE GEAR	16 S 150
1313 202 023	-----	-----	ZF 50	4	MAIN DRIVE GEAR	16 S 150
1313 204 003	T 18629	-----	ZF 50	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 150
1313 204 003	T 18629	-----	ZF 51	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 220
1313 204 003	T 18629	-----	ZF 55	55	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 151

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1313 204 003	T 18629	-----	ZF 56	50	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 181
1313 204 003	T 18629	-----	ZF 57	54	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 221
1313 204 003	T 18629	-----	ZF 58	42	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 251
1313 221 004	-----	-----	ZF 50	4	MAIN DRIVE GEAR	16 S 150
1313 221 006	-----	-----	ZF 50	4	MAIN DRIVE GEAR	16 S 150
1313 232 003	-----	-----	ZF 50	68	GEAR SET (5 PCS.)	16 S 150
1313 232 003	-----	-----	ZF 55	67	GEAR SET (5 PCS.)	16 S 151
1313 233 001	T 14809	000 263 2020	ZF 41	78	SYNCHRONIZER CONE (63 T.)	16 S 130
1313 233 001	T 14809	000 263 2020	ZF 43	78	SYNCHRONIZER CONE (63 T.)	16 K 160
1313 233 001	T 14809	000 263 2020	ZF 44	78	SYNCHRONIZER CONE (63 T.)	16 S 160
1313 233 001	T 14809	000 263 2020	ZF 46	78	SYNCHRONIZER CONE (63 T.)	16 K 190
1313 233 001	T 14809	000 263 2020	ZF 47	78	SYNCHRONIZER CONE (63 T.)	16 S 190
1313 233 001	T 14809	000 263 2020	ZF 50	78	SYNCHRONIZER CONE (63 T.)	16 S 150
1313 233 001	T 14809	000 263 2020	ZF 55	77	SYNCHRONIZER CONE (63 T.)	16 S 151
1313 298 909	T 18631	-----	ZF 50	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 150
1313 298 909	T 18631	-----	ZF 51	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 220
1313 298 909	T 18631	-----	ZF 55	55	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 151
1313 298 909	T 18631	-----	ZF 56	50	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 181
1313 298 909	T 18631	-----	ZF 57	54	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 221
1313 298 909	T 18631	-----	ZF 58	42	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 251
1313 302 030	USE 1313 202 013					
1313 302 035	-----	-----	ZF 50	1	CONSTANT GEAR (30 T.)	16 S 150
1313 302 036	T 20005	-----	ZF 50	1	CONSTANT GEAR (34-30 T.)	16 S 150
1313 303 002	-----	-----	ZF 50	37	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 150
1313 303 003	T 20010	-----	ZF 50	36	COUNTERSHAFT FOURTH SPEED GEAR (39 T.)	16 S 150
1313 303 004	T 20016	-----	ZF 50	35	COUNTERSHAFT CONSTANT GEAR (37 T.)	16 S 150
1313 303 010	-----	-----	ZF 50	38	COUNTERSHAFT (19-23 T.)	16 S 150
1313 303 011	-----	-----	ZF 50	38	COUNTERSHAFT (17-20 T.)	16 S 150
1313 303 035	-----	-----	ZF 50	39	COUNTERSHAFT (19-23 T.)	16 S 150
1313 304 005	T 20022	-----	ZF 50	11	FOURTH SPEED GEAR (30-30-30 T.)	16 S 150
1313 304 008	T 18287	-----	ZF 50	28	SYNCHRONIZER HUB (63 T.)	16 S 150
1313 304 008	T 18287	-----	ZF 51	28	SYNCHRONIZER HUB (63 T.)	16 S 220
1313 304 008	T 18287	-----	ZF 55	27	SYNCHRONIZER HUB (63 T.)	16 S 151
1313 304 008	T 18287	-----	ZF 56	27	SYNCHRONIZER HUB (63 T.)	16 S 181
1313 304 008	T 18287	-----	ZF 57	27	SYNCHRONIZER HUB (63 T.)	16 S 221
1313 304 008	T 18287	-----	ZF 58	20	SYNCHRONIZER HUB (63 T.)	16 S 251
1313 304 009	T 18035	-----	ZF 50	26	SYNCHRONIZER CONE (63 T.)	16 S 150
1313 304 009	T 18035	-----	ZF 51	26	SYNCHRONIZER CONE (63 T.)	16 S 220
1313 304 009	T 18035	-----	ZF 55	25	SYNCHRONIZER CONE (63 T.)	16 S 151
1313 304 009	T 18035	-----	ZF 56	25	SYNCHRONIZER CONE (63 T.)	16 S 181
1313 304 009	T 18035	-----	ZF 57	25	SYNCHRONIZER CONE (63 T.)	16 S 221
1313 304 009	T 18035	-----	ZF 58	18	SYNCHRONIZER CONE (63 T.)	16 S 251
1313 304 036	USE 1315 304 132					
1313 304 037	-----	-----	ZF 50	32	FIRST SPEED AND REVERSE GEAR CONE	16 S 150
1313 304 038	T 20028	-----	ZF 50	30	FIRST SPEED GEAR SLEEVE	16 S 150
1313 304 038	T 20028	-----	ZF 55	29	FIRST SPEED GEAR SLEEVE	16 S 151
1313 304 039	-----	-----	ZF 50	31	FIRST SPEED GEAR (44 T.)	16 S 150
1313 304 040	USE 1313 304 070					
1313 304 041	-----	-----	ZF 50	34	REVERSE GEAR (38 T.)	16 S 150
1313 304 042	-----	-----	ZF 50	34	REVERSE GEAR (39 T.)	16 S 150
1313 304 070	-----	-----	ZF 50	31	FIRST SPEED GEAR	16 S 150
1313 304 072	USE 1315 304 130					
1313 304 077	-----	-----	ZF 50	18	SECOND SPEED GEAR (38 T.)	16 S 150
1313 304 078	-----	-----	ZF 50	18	SECOND SPEED GEAR (37 T.)	16 S 150
1313 304 080	-----	-----	ZF 50	16	THIRD SPEED GEAR (32 T.)	16 S 150
1313 304 081	-----	-----	ZF 50	16	THIRD SPEED GEAR (34 T.)	16 S 150
1313 305 001	-----	-----	ZF 50	41	REVERSE IDLER GEAR (24 T.)	16 S 150
1313 305 002	-----	-----	ZF 50	41	REVERSE IDLER GEAR (21 T.)	16 S 150
1313 332 020	-----	-----	ZF 50	70	RING GEAR CARRIER (86 T.)	16 S 150
1313 332 020	-----	-----	ZF 55	69	RING GEAR CARRIER (86 T.)	16 S 151
1313 333 001	T 18052	-----	ZF 50	73	SYNCHRONIZER HUB (63 T.)	16 S 150
1313 333 001	T 18052	-----	ZF 55	73	SYNCHRONIZER HUB (63 T.)	16 S 151
1313 333 001	T 18052	-----	ZF 56	73	SYNCHRONIZER HUB (63 T.)	16 S 181
1313 333 001	T 18052	-----	ZF 57	81	SYNCHRONIZER HUB (63 T.)	16 S 221
1313 333 001	T 18052	-----	ZF 58	74	SYNCHRONIZER HUB (63 T.)	16 S 251
1313 338 002	-----	-----	ZF 50	80	CARRIER COUPLING FLANGE	16 S 150
1313 338 002	-----	-----	ZF 55	85	CARRIER COUPLING FLANGE	16 S 151
1313 338 011	-----	-----	ZF 50	80	CARRIER COUPLING FLANGE	16 S 150
1313 338 011	-----	-----	ZF 55	85	CARRIER COUPLING FLANGE	16 S 151
1314 202 039	T 20132	-----	ZF 55	49	OIL PUMP DRIVE GEAR AND SHAFT (6 T.)	16 S 151
1314 202 039	T 20132	-----	ZF 56	44	OIL PUMP DRIVE GEAR AND SHAFT (6 T.)	16 S 181
1314 202 039	T 20132	-----	ZF 57	48	OIL PUMP DRIVE GEAR AND SHAFT (6 T.)	16 S 221

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1314 202 039	T 20132	-----	ZF 58	38	OIL PUMP DRIVE GEAR AND SHAFT (6 T.)	16 S 251
1315 201 053	-----	-----	ZF 55	39	REVERSE IDLER GEAR SHAFT	16 S 151
1315 201 054	-----	-----	ZF 55	39	REVERSE IDLER GEAR SHAFT	16 S 151
1315 202 011	USE 1315 202 022					
1315 202 014	-----	-----	ZF 55	45	OIL PUMP DRIVE GEAR AND SHAFT	16 S 151
1315 202 014	-----	-----	ZF 57	45	OIL PUMP DRIVE GEAR AND SHAFT	16 S 221
1315 202 018	USE 1314 202 039					
1315 202 022	T 17603	-----	ZF 55	4	MAIN DRIVE GEAR (57 T.)	16 S 151
1315 202 037	T 17692	-----	ZF 55	4	MAIN DRIVE GEAR (57 T.)	16 S 151
1315 202 038	-----	-----	ZF 55	4	MAIN DRIVE GEAR	16 S 151
1315 202 039	-----	-----	ZF 55	4	MAIN DRIVE GEAR (48 T.)	16 S 151
1315 202 040	T 20227	-----	ZF 55	4	MAIN DRIVE GEAR (57 T.)	16 S 151
1315 202 041	-----	-----	ZF 55	4	MAIN DRIVE GEAR	16 S 151
1315 202 042	-----	-----	ZF 55	4	MAIN DRIVE GEAR	16 S 151
1315 202 043	-----	-----	ZF 55	4	MAIN DRIVE GEAR	16 S 151
1315 202 044	-----	-----	ZF 55	4	MAIN DRIVE GEAR	16 S 151
1315 202 045	-----	-----	ZF 55	4	MAIN DRIVE GEAR	16 S 151
1315 202 046	-----	-----	ZF 55	4	MAIN DRIVE GEAR	16 S 151
1315 202 047	-----	-----	ZF 55	4	MAIN DRIVE GEAR	16 S 151
1315 202 048	-----	-----	ZF 55	4	MAIN DRIVE GEAR	16 S 151
1315 202 050	-----	-----	ZF 55	4	MAIN DRIVE GEAR	16 S 151
1315 202 055	-----	-----	ZF 55	47	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 202 058	USE 1315 302 106					
1315 202 059	USE 1315 302 124					
1315 202 060	-----	-----	ZF 58	32	MAIN DRIVE GEAR BEARING RETAINER	16 S 251
1315 202 061	-----	-----	ZF 58	32	MAIN DRIVE GEAR BEARING RETAINER	16 S 251
1315 202 063	USE 1315 302 141					
1315 202 065	-----	-----	ZF 55	47	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 202 065	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 202 065	-----	-----	ZF 58	32	MAIN DRIVE GEAR BEARING RETAINER	16 S 251
1315 202 066	-----	-----	ZF 58	32	MAIN DRIVE GEAR BEARING RETAINER	16 S 251
1315 202 068	USE 1315 302 193					
1315 203 001	USE 1315 202 014					
1315 232 001	-----	-----	ZF 55	67	GEAR SET (5 PCS.)	16 S 151
1315 232 010	T 20230	-----	ZF 55	67	GEAR SET (28 T.) (5 PCS.)	16 S 151
1315 232 010	T 20230	-----	ZF 56	67	GEAR SET (28 T.) (5 PCS.)	16 S 181
1315 232 013	USE 1315 232 016					
1315 232 016	T 20235	-----	ZF 55	60	CARRIER	16 S 151
1315 232 016	T 20235	-----	ZF 56	60	CARRIER	16 S 181
1315 232 017	USE 1315 232 016					
1315 232 023	-----	-----	ZF 50	60	CARRIER	16 S 150
1315 233 006	T 11732	-----	ZF 55	70	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 151
1315 233 006	T 11732	-----	ZF 57	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 221
1315 233 023	-----	-----	ZF 55	83	SYNCHRONIZER CONE (59 T.)	16 S 151
1315 238 001	-----	-----	ZF 55	85	CARRIER COUPLING FLANGE	16 S 151
1315 298 001	T 19441	-----	ZF 55	-----	GASKET KIT	16 S 151
1315 298 001	T 19441	-----	ZF 56	-----	GASKET KIT	16 S 181
1315 298 001	T 19441	-----	ZF 57	-----	GASKET KIT	16 S 221
1315 298 001	T 19441	-----	ZF 58	-----	GASKET KIT	16 S 251
1315 298 002	T 19427	-----	ZF 55	-----	OIL SEAL KIT	16 S 151
1315 298 002	T 19427	-----	ZF 56	-----	OIL SEAL KIT	16 S 181
1315 298 002	T 19427	-----	ZF 57	-----	OIL SEAL KIT	16 S 221
1315 298 002	T 19427	-----	ZF 58	-----	OIL SEAL KIT	16 S 251
1315 298 003	T 19433	-----	ZF 55	-----	OIL SEAL KIT	16 S 151
1315 298 003	T 19433	-----	ZF 56	-----	OIL SEAL KIT	16 S 181
1315 298 003	T 19433	-----	ZF 57	-----	OIL SEAL KIT	16 S 221
1315 298 003	T 19433	-----	ZF 58	-----	OIL SEAL KIT	16 S 251
1315 298 009	USE 1315 302 045					
1315 298 018	T 18632	-----	ZF 50	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 150
1315 298 018	T 18632	-----	ZF 51	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 220
1315 298 018	T 18632	-----	ZF 55	53	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 151
1315 298 018	T 18632	-----	ZF 56	48	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 181
1315 298 018	T 18632	-----	ZF 57	52	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 221
1315 298 018	T 18632	-----	ZF 58	41	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 251
1315 298 034	T 18078	-----	ZF 55	82	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 151
1315 298 034	T 18078	-----	ZF 56	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 181
1315 298 034	T 18078	-----	ZF 57	83	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 221
1315 298 047	T 16175	-----	ZF 55	78	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 151
1315 298 054	T 18060	-----	ZF 50	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 150
1315 298 054	T 18060	-----	ZF 51	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 220
1315 298 054	T 18060	-----	ZF 55	55	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 151
1315 298 054	T 18060	-----	ZF 56	50	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 181

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1315 298 054	T 18060	-----	ZF 57	54	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 221
1315 298 054	T 18060	-----	ZF 58	42	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 251
1315 298 055	T 18061	-----	ZF 50	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 150
1315 298 055	T 18061	-----	ZF 51	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 220
1315 298 055	T 18061	-----	ZF 55	53	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 151
1315 298 055	T 18061	-----	ZF 56	48	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 181
1315 298 055	T 18061	-----	ZF 57	52	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 221
1315 298 055	T 18061	-----	ZF 58	41	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 251
1315 298 060	T 17864	-----	ZF 50	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 150
1315 298 060	T 17864	-----	ZF 51	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 220
1315 298 060	T 17864	-----	ZF 55	55	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 151
1315 298 060	T 17864	-----	ZF 56	50	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 181
1315 298 060	T 17864	-----	ZF 57	54	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 221
1315 298 060	T 17864	-----	ZF 58	42	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 251
1315 298 061	T 17865	-----	ZF 50	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 150
1315 298 061	T 17865	-----	ZF 51	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 220
1315 298 061	T 17865	-----	ZF 55	53	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 151
1315 298 061	T 17865	-----	ZF 56	48	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 181
1315 298 061	T 17865	-----	ZF 57	52	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 221
1315 298 061	T 17865	-----	ZF 58	41	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 251
1315 302 007	-----	-----	ZF 55	1	CONSTANT GEAR (30 T.)	16 S 151
1315 302 008	T 18554	-----	ZF 55	1	CONSTANT GEAR (34-40 T.)	16 S 151
1315 302 013	-----	-----	ZF 55	46	OIL PUMP COVER	16 S 151
1315 302 013	-----	-----	ZF 57	46	OIL PUMP COVER	16 S 221
1315 302 043	USE 1315 202 022					
1315 302 045	-----	-----	ZF 55	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 302 045	-----	-----	ZF 57	39	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 047	-----	-----	ZF 55	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 302 047	-----	-----	ZF 57	39	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 056	USE 1315 202 022					
1315 302 057	-----	-----	ZF 55	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 302 057	-----	-----	ZF 57	39	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 072	-----	-----	ZF 56	39	MAIN DRIVE GEAR BEARING RETAINER	16 S 181
1315 302 072	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 075	-----	-----	ZF 55	47	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 302 075	-----	-----	ZF 56	39	MAIN DRIVE GEAR BEARING RETAINER	16 S 181
1315 302 075	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 075	-----	-----	ZF 58	32	MAIN DRIVE GEAR BEARING RETAINER	16 S 251
1315 302 084	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 106	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 113	-----	-----	ZF 55	43	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 302 113	-----	-----	ZF 57	39	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 116	USE 1315 302 120					
1315 302 117	USE 1315 302 121					
1315 302 120	T 20138	-----	ZF 55	51	OIL PUMP COVER	16 S 151
1315 302 120	T 20138	-----	ZF 56	46	OIL PUMP COVER	16 S 181
1315 302 120	T 20138	-----	ZF 57	50	OIL PUMP COVER	16 S 221
1315 302 120	T 20138	-----	ZF 58	40	OIL PUMP COVER	16 S 251
1315 302 121	T 20143	-----	ZF 55	48	OIL PUMP BODY	16 S 151
1315 302 121	T 20143	-----	ZF 56	43	OIL PUMP BODY	16 S 181
1315 302 121	T 20143	-----	ZF 57	47	OIL PUMP BODY	16 S 221
1315 302 121	T 20143	-----	ZF 58	37	OIL PUMP BODY	16 S 251
1315 302 124	-----	-----	ZF 55	47	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 302 124	-----	-----	ZF 56	39	MAIN DRIVE GEAR BEARING RETAINER	16 S 181
1315 302 124	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 134	-----	-----	ZF 55	47	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 302 134	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 134	-----	-----	ZF 58	32	MAIN DRIVE GEAR BEARING RETAINER	16 S 251
1315 302 136	-----	-----	ZF 55	47	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 302 136	-----	-----	ZF 56	39	MAIN DRIVE GEAR BEARING RETAINER	16 S 181
1315 302 136	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 141	-----	-----	ZF 55	47	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 302 141	-----	-----	ZF 56	39	MAIN DRIVE GEAR BEARING RETAINER	16 S 181
1315 302 141	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 157	-----	-----	ZF 55	1	CONSTANT GEAR (30 T.)	16 S 151
1315 302 158	T 19174	-----	ZF 55	1	CONSTANT GEAR (30-35 T.)	16 S 151
1315 302 161	-----	-----	ZF 58	32	MAIN DRIVE GEAR BEARING RETAINER	16 S 251
1315 302 162	USE 1315 202 040					
1315 302 173	T 17790	-----	ZF 55	1	CONSTANT GEAR (30-34 T.)	16 S 151
1315 302 174	USE 1315 302 181					
1315 302 181	-----	-----	ZF 55	47	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 302 181	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1315 302 184	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 193	-----	-----	ZF 55	47	MAIN DRIVE GEAR BEARING RETAINER	16 S 151
1315 302 193	-----	-----	ZF 57	40	MAIN DRIVE GEAR BEARING RETAINER	16 S 221
1315 302 196	T 18533	-----	ZF 50	47	MAIN DRIVE GEAR OIL TUBE	16 S 150
1315 302 196	T 18533	-----	ZF 51	47	MAIN DRIVE GEAR OIL TUBE	16 S 220
1315 302 196	T 18533	-----	ZF 55	40	MAIN DRIVE GEAR OIL TUBE	16 S 151
1315 302 196	T 18533	-----	ZF 56	40	MAIN DRIVE GEAR OIL TUBE	16 S 181
1315 302 196	T 18533	-----	ZF 57	41	MAIN DRIVE GEAR OIL TUBE	16 S 221
1315 302 196	T 18533	-----	ZF 58	33	MAIN DRIVE GEAR OIL TUBE	16 S 251
1315 303 004	T 19178	-----	ZF 55	35	COUNTERSHAFT THIRD SPEED GEAR (26T.)	16 S 151
1315 303 008	-----	-----	ZF 55	33	COUNTERSHAFT CONSTANT GEAR (39 T.)	16 S 151
1315 303 010	-----	-----	ZF 55	35	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 151
1315 303 011	USE 1315 303 046					
1315 303 012	USE 1315 303 052					
1315 303 027	T 20148	-----	ZF 55	44	OIL PUMP DRIVEN GEAR (7 T.)	16 S 151
1315 303 027	T 20148	-----	ZF 55	50	OIL PUMP DRIVEN GEAR (7 T.)	16 S 151
1315 303 027	T 20148	-----	ZF 56	45	OIL PUMP DRIVEN GEAR (7 T.)	16 S 181
1315 303 027	T 20148	-----	ZF 57	44	OIL PUMP DRIVEN GEAR (7 T.)	16 S 221
1315 303 027	T 20148	-----	ZF 57	49	OIL PUMP DRIVEN GEAR (7 T.)	16 S 221
1315 303 027	T 20148	-----	ZF 58	39	OIL PUMP DRIVEN GEAR (7 T.)	16 S 251
1315 303 030	-----	-----	ZF 55	37	COUNTERSHAFT	16 S 151
1315 303 041	-----	-----	ZF 55	36	COUNTERSHAFT (19-23 T.)	16 S 151
1315 303 042	-----	-----	ZF 55	36	COUNTERSHAFT (17-20 T.)	16 S 151
1315 303 046	T 17794	-----	ZF 55	34	COUNTERSHAFT FOURTH SPEED GEAR (39 T.)	16 S 151
1315 303 048	-----	-----	ZF 55	36	COUNTERSHAFT (19-23 T.)	16 S 151
1315 303 049	-----	-----	ZF 55	36	COUNTERSHAFT (17-20 T.)	16 S 151
1315 303 050	T 18466	-----	ZF 55	34	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 151
1315 303 051	T 18559	-----	ZF 55	33	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 151
1315 303 052	T 17800	-----	ZF 55	33	COUNTERSHAFT CONSTANT GEAR (37 T.)	16 S 151
1315 304 004	T 19536	-----	ZF 55	30	FIRST SPEED GEAR (47-30 T.)	16 S 151
1315 304 006	T 19542	-----	ZF 55	32	REVERSE GEAR (44-23 T.)	16 S 151
1315 304 013	-----	-----	ZF 55	32	REVERSE GEAR (42 T.)	16 S 151
1315 304 014	-----	-----	ZF 55	30	FIRST SPEED GEAR (44 T.)	16 S 151
1315 304 017	T 17807	-----	ZF 55	9	FOURTH SPEED GEAR (30-30-30 T.)	16 S 151
1315 304 018	T 18563	-----	ZF 55	31	FIRST SPEED AND REVERSE GEAR CONE (23 T.)	16 S 151
1315 304 025	T 19184	-----	ZF 55	17	SECOND SPEED GEAR (38-30 T.)	16 S 151
1315 304 026	-----	-----	ZF 55	17	SECOND SPEED GEAR (37 T.)	16 S 151
1315 304 027	T 18062	-----	ZF 55	14	THIRD SPEED GEAR (34-30 T.)	16 S 151
1315 304 028	T 18264	-----	ZF 55	14	THIRD SPEED GEAR (32-30 T.)	16 S 151
1315 304 029	T 18269	-----	ZF 55	15	MAINSHAFT	16 S 151
1315 304 084	USE 1315 304 131					
1315 304 089	T 17696	-----	ZF 55	9	FOURTH SPEED GEAR (30-32-30 T.)	16 S 151
1315 304 130	T 17834	-----	ZF 50	17	MAINSHAFT	16 S 150
1315 304 130	T 17834	-----	ZF 55	15	MAINSHAFT	16 S 151
1315 304 131	T 17608	-----	ZF 55	15	MAINSHAFT	16 S 151
1315 304 132	T 19190	-----	ZF 50	33	REVERSE SPEED GEAR SLEEVE	16 S 150
1315 304 135	T 18068	-----	ZF 50	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 150
1315 304 135	T 18068	-----	ZF 51	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 220
1315 304 135	T 18068	-----	ZF 55	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 151
1315 304 135	T 18068	-----	ZF 56	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 181
1315 304 135	T 18068	-----	ZF 57	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 221
1315 304 135	T 18068	-----	ZF 58	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 251
1315 304 136	T 18070	-----	ZF 50	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
1315 304 136	T 18070	-----	ZF 51	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
1315 304 136	T 18070	-----	ZF 55	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
1315 304 136	T 18070	-----	ZF 56	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
1315 304 136	T 18070	-----	ZF 57	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
1315 304 136	T 18070	-----	ZF 58	21	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 251
1315 305 002	-----	-----	ZF 55	38	REVERSE IDLER GEAR (22 T.)	16 S 151
1315 305 005	-----	-----	ZF 55	38	REVERSE IDLER GEAR (20 T.)	16 S 151
1315 305 009	-----	-----	ZF 55	39	REVERSE IDLER GEAR SHAFT	16 S 151
1315 305 009	-----	-----	ZF 56	38	REVERSE IDLER GEAR SHAFT	16 S 181
1315 305 009	-----	-----	ZF 57	38	REVERSE IDLER GEAR SHAFT	16 S 221
1315 305 009	-----	-----	ZF 58	31	REVERSE IDLER GEAR SHAFT	16 S 251
1315 306 079	-----	-----	ZF 58	90	SLIDING BLOCK	16 S 251
1315 332 002	-----	-----	ZF 55	69	RING GEAR CARRIER (90 T.)	16 S 151
1315 332 003	-----	-----	ZF 55	68	RING GEAR (90 T.)	16 S 151
1315 332 041	T 20250	-----	ZF 55	68	RING GEAR (82 T.)	16 S 151
1315 332 041	T 20250	-----	ZF 56	68	RING GEAR (82 T.)	16 S 181
1315 332 041	T 20250	-----	ZF 57	69	RING GEAR (82 T.)	16 S 221
1315 332 044	USE 1315 332 053					
1315 332 053	T 20259	-----	ZF 55	61	GEAR SHAFT	16 S 151

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1315 332 053	T 20259	-----	ZF 56	61	GEAR SHAFT	16 S 181
1315 338 002	-----	-----	ZF 55	85	CARRIER COUPLING FLANGE	16 S 151
1316 201 029	-----	-----	ZF 56	38	REVERSE IDLER GEAR SHAFT	16 S 181
1316 201 029	-----	-----	ZF 57	38	REVERSE IDLER GEAR SHAFT	16 S 221
1316 201 030	-----	-----	ZF 57	38	REVERSE IDLER GEAR SHAFT	16 S 221
1316 202 025	T 17909	-----	ZF 56	4	MAIN DRIVE GEAR (57 T.)	16 S 181
1316 202 025	T 17909	-----	ZF 57	4	MAIN DRIVE GEAR (57 T.)	16 S 221
1316 202 025	T 17909	-----	ZF 58	4	MAIN DRIVE GEAR (57 T.)	16 S 251
1316 202 026	-----	-----	ZF 56	4	MAIN DRIVE GEAR (57 T.)	16 S 181
1316 202 026	-----	-----	ZF 57	4	MAIN DRIVE GEAR (57 T.)	16 S 221
1316 202 027	-----	-----	ZF 56	4	MAIN DRIVE GEAR	16 S 181
1316 202 027	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 202 029	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 202 030	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 202 031	-----	-----	ZF 56	4	MAIN DRIVE GEAR	16 S 181
1316 202 031	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 202 032	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 202 033	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 202 033	-----	-----	ZF 58	4	MAIN DRIVE GEAR	16 S 251
1316 202 036	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 202 037	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 202 037	-----	-----	ZF 58	4	MAIN DRIVE GEAR	16 S 251
1316 202 038	-----	-----	ZF 56	4	MAIN DRIVE GEAR	16 S 181
1316 202 038	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 202 039	-----	-----	ZF 56	4	MAIN DRIVE GEAR	16 S 181
1316 202 039	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 204 011	USE 1315 298 055					
1316 221 017	-----	-----	ZF 56	4	MAIN DRIVE GEAR	16 S 181
1316 221 017	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 221 018	-----	-----	ZF 57	4	MAIN DRIVE GEAR	16 S 221
1316 232 005	-----	-----	ZF 47	60	CARRIER	16 S 190
1316 232 006	-----	-----	ZF 51	60	CARRIER	16 S 220
1316 232 006	-----	-----	ZF 57	60	CARRIER	16 S 221
1316 232 011	-----	-----	ZF 56	67	GEAR SET (28 T.) (5 PCS.)	16 S 181
1316 232 011	-----	-----	ZF 57	68	GEAR SET (28 T.) (5 PCS.)	16 S 221
1316 232 017	-----	-----	ZF 58	67	GEAR SET (5 PCS.)	16 S 251
1316 232 019	-----	-----	ZF 56	60	CARRIER	16 S 181
1316 232 019	-----	-----	ZF 57	60	CARRIER	16 S 221
1316 232 021	-----	-----	ZF 58	60	CARRIER	16 S 251
1316 232 028	-----	-----	ZF 55	85	CARRIER COUPLING FLANGE	16 S 151
1316 233 010	T 19375	-----	ZF 57	84	SYNCHRONIZER CONE (59-63 T.)	16 S 221
1316 233 014	T 18292	-----	ZF 55	84	SYNCHRONIZER CONE (59-63 T.)	16 S 151
1316 233 014	T 18292	-----	ZF 56	79	SYNCHRONIZER CONE (59-63 T.)	16 S 181
1316 233 014	T 18292	-----	ZF 57	85	SYNCHRONIZER CONE (59-63 T.)	16 S 221
1316 233 015	T 15940	-----	ZF 55	81	SYNCHRONIZER CONE (63 T.)	16 S 151
1316 233 015	T 15940	-----	ZF 56	78	SYNCHRONIZER CONE (63 T.)	16 S 181
1316 233 015	T 15940	-----	ZF 57	82	SYNCHRONIZER CONE (63 T.)	16 S 221
1316 233 015	T 15940	-----	ZF 58	79	SYNCHRONIZER CONE (63 T.)	16 S 251
1316 302 057	T 19379	-----	ZF 56	1	CONSTANT GEAR (35-30 T.)	16 S 181
1316 302 065	T 19384	-----	ZF 57	1	CONSTANT GEAR (34-30 T.)	16 S 221
1316 302 066	T 19140	-----	ZF 56	1	CONSTANT GEAR (30-30 T.)	16 S 181
1316 302 066	T 19140	-----	ZF 57	1	CONSTANT GEAR (30-30 T.)	16 S 221
1316 302 067	T 19388	-----	ZF 57	1	CONSTANT GEAR (35-30 T.)	16 S 221
1316 302 067	T 19388	-----	ZF 58	1	CONSTANT GEAR (35-30 T.)	16 S 251
1316 302 077	USE 1316 202 032					
1316 302 085	USE 1316 202 025					
1316 303 001	-----	-----	ZF 57	33	COUNTERSHAFT CONSTANT GEAR (39 T.)	16 S 221
1316 303 002	-----	-----	ZF 57	33	COUNTERSHAFT CONSTANT GEAR (37 T.)	16 S 221
1316 303 004	T 19548	-----	ZF 57	34	COUNTERSHAFT FOURTH SPEED GEAR (39 T.)	16 S 221
1316 303 005	T 19041	-----	ZF 57	35	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	16 S 221
1316 303 006	T 19393	-----	ZF 57	35	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 221
1316 303 007	-----	-----	ZF 57	36	COUNTERSHAFT (17-20 T.)	16 S 221
1316 303 008	-----	-----	ZF 57	36	COUNTERSHAFT (19-23 T.)	16 S 221
1316 303 030	-----	-----	ZF 57	33	COUNTERSHAFT CONSTANT GEAR (39 T.)	16 S 221
1316 303 031	-----	-----	ZF 57	33	COUNTERSHAFT CONSTANT GEAR (37 T.)	16 S 221
1316 303 033	T 19046	-----	ZF 56	36	COUNTERSHAFT (17-20 T.)	16 S 181
1316 303 033	T 19046	-----	ZF 57	36	COUNTERSHAFT (17-20 T.)	16 S 221
1316 303 034	-----	-----	ZF 57	36	COUNTERSHAFT (19-23 T.)	16 S 221
1316 303 038	-----	-----	ZF 58	29	COUNTERSHAFT (17-20 T.)	16 S 251
1316 303 040	-----	-----	ZF 58	28	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	16 S 251
1316 303 052	-----	-----	ZF 57	36	COUNTERSHAFT (17-20 T.)	16 S 221
1316 303 053	-----	-----	ZF 57	36	COUNTERSHAFT (19-23 T.)	16 S 221

ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1316 303 055	-----	-----	ZF 56	33	COUNTERSHAFT CONSTANT GEAR (39 T.)	16 S 181
1316 303 056	T 19145	-----	ZF 56	33	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 181
1316 303 058	T 19150	-----	ZF 56	35	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	16 S 181
1316 303 063	T 19155	-----	ZF 56	34	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 181
1316 303 064	T 19051	-----	ZF 57	33	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 221
1316 303 064	T 19051	-----	ZF 58	26	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 251
1316 303 065	T 19056	-----	ZF 57	34	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 221
1316 303 065	T 19056	-----	ZF 58	27	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 251
1316 304 001	-----	-----	ZF 57	15	MAINSHAFT	16 S 221
1316 304 002	T 19160	-----	ZF 56	17	SECOND SPEED GEAR (38-30 T.)	16 S 181
1316 304 002	T 19160	-----	ZF 57	17	SECOND SPEED GEAR (38-30 T.)	16 S 221
1316 304 002	T 19160	-----	ZF 58	17	SECOND SPEED GEAR (38-30 T.)	16 S 251
1316 304 003	-----	-----	ZF 57	17	SECOND SPEED GEAR (37 T.)	16 S 221
1316 304 007	T 19397	-----	ZF 57	9	FOURTH SPEED GEAR (30-30-30 T.)	16 S 221
1316 304 008	T 19061	-----	ZF 57	14	THIRD SPEED GEAR (34-30 T.)	16 S 221
1316 304 009	-----	-----	ZF 57	14	THIRD SPEED GEAR (32 T.)	16 S 221
1316 304 010	T 19401	-----	ZF 56	30	FIRST SPEED GEAR (47-30 T.)	16 S 181
1316 304 010	T 19401	-----	ZF 57	30	FIRST SPEED GEAR (47-30 T.)	16 S 221
1316 304 010	T 19401	-----	ZF 58	23	FIRST SPEED GEAR (47-30 T.)	16 S 251
1316 304 012	T 19407	-----	ZF 56	32	REVERSE GEAR (44-23 T.)	16 S 181
1316 304 012	T 19407	-----	ZF 57	32	REVERSE GEAR (44-23 T.)	16 S 221
1316 304 012	T 19407	-----	ZF 58	25	REVERSE GEAR (44-23 T.)	16 S 251
1316 304 013	-----	-----	ZF 57	30	FIRST SPEED GEAR (44 T.)	16 S 221
1316 304 015	-----	-----	ZF 57	32	REVERSE GEAR (42 T.)	16 S 221
1316 304 066	-----	-----	ZF 58	14	THIRD SPEED GEAR (34 T.)	16 S 251
1316 304 067	USE 1316 304 078					
1316 304 078	T 18297	000 262 7623	ZF 50	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
1316 304 078	T 18297	000 262 7623	ZF 51	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
1316 304 078	T 18297	000 262 7623	ZF 55	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
1316 304 078	T 18297	000 262 7623	ZF 56	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
1316 304 078	T 18297	000 262 7623	ZF 57	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
1316 304 078	T 18297	000 262 7623	ZF 58	21	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 251
1316 304 091	USE 1316 304 131					
1316 304 093	-----	-----	ZF 58	16	MAINSHAFT TUBE	16 S 251
1316 304 094	T 19166	-----	ZF 56	14	THIRD SPEED GEAR (34-30 T.)	16 S 181
1316 304 103	T 17914	-----	ZF 56	9	FOURTH SPEED GEAR (30-32-30 T.)	16 S 181
1316 304 103	T 17914	-----	ZF 57	9	FOURTH SPEED GEAR (30-32-30 T.)	16 S 221
1316 304 103	T 17914	-----	ZF 58	9	FOURTH SPEED GEAR (30-32-30 T.)	16 S 251
1316 304 130	T 17825	000 262 7805	ZF 51	17	MAINSHAFT	16 S 220
1316 304 130	T 17825	000 262 7805	ZF 57	15	MAINSHAFT	16 S 221
1316 304 131	-----	-----	ZF 58	15	MAINSHAFT	16 S 251
1316 304 132	T 17839	-----	ZF 56	15	MAINSHAFT	16 S 181
1316 304 132	T 17839	-----	ZF 57	15	MAINSHAFT	16 S 221
1316 304 133	-----	000 262 7150	ZF 51	33	REVERSE SPEED GEAR SLEEVE	16 S 220
1316 304 139	USE 1316 304 132					
1316 304 145	T 18071	-----	ZF 50	12	SYNCHRONIZER CONE (57 T.)	16 S 150
1316 304 145	T 18071	-----	ZF 51	12	SYNCHRONIZER CONE (57 T.)	16 S 220
1316 304 145	T 18071	-----	ZF 55	10	SYNCHRONIZER CONE (57 T.)	16 S 151
1316 304 145	T 18071	-----	ZF 56	10	SYNCHRONIZER CONE (57 T.)	16 S 181
1316 304 145	T 18071	-----	ZF 57	10	SYNCHRONIZER CONE (57 T.)	16 S 221
1316 304 145	T 18071	-----	ZF 58	10	SYNCHRONIZER CONE (57 T.)	16 S 251
1316 304 146	T 18072	-----	ZF 50	26	SYNCHRONIZER CONE (63 T.)	16 S 150
1316 304 146	T 18072	-----	ZF 51	26	SYNCHRONIZER CONE (63 T.)	16 S 220
1316 304 146	T 18072	-----	ZF 55	25	SYNCHRONIZER CONE (63 T.)	16 S 151
1316 304 146	T 18072	-----	ZF 56	25	SYNCHRONIZER CONE (63 T.)	16 S 181
1316 304 146	T 18072	-----	ZF 57	25	SYNCHRONIZER CONE (63 T.)	16 S 221
1316 304 146	T 18072	-----	ZF 58	18	SYNCHRONIZER CONE (63 T.)	16 S 251
1316 304 147	T 18073	-----	ZF 50	14	SYNCHRONIZER HUB (57 T.)	16 S 150
1316 304 147	T 18073	-----	ZF 51	14	SYNCHRONIZER HUB (57 T.)	16 S 220
1316 304 147	T 18073	-----	ZF 55	12	SYNCHRONIZER HUB (57 T.)	16 S 151
1316 304 147	T 18073	-----	ZF 56	12	SYNCHRONIZER HUB (57 T.)	16 S 181
1316 304 147	T 18073	-----	ZF 57	12	SYNCHRONIZER HUB (57 T.)	16 S 221
1316 304 147	T 18073	-----	ZF 58	12	SYNCHRONIZER HUB (57 T.)	16 S 251
1316 304 148	T 18074	-----	ZF 50	28	SYNCHRONIZER HUB (63 T.)	16 S 150
1316 304 148	T 18074	-----	ZF 51	28	SYNCHRONIZER HUB (63 T.)	16 S 220
1316 304 148	T 18074	-----	ZF 55	27	SYNCHRONIZER HUB (63 T.)	16 S 151
1316 304 148	T 18074	-----	ZF 56	27	SYNCHRONIZER HUB (63 T.)	16 S 181
1316 304 148	T 18074	-----	ZF 57	27	SYNCHRONIZER HUB (63 T.)	16 S 221
1316 304 148	T 18074	-----	ZF 58	20	SYNCHRONIZER HUB (63 T.)	16 S 251
1316 304 149	T 18075	-----	ZF 50	13	SYNCHRONIZER BLOCKING RING	16 S 150
1316 304 149	T 18075	-----	ZF 51	13	SYNCHRONIZER BLOCKING RING	16 S 220
1316 304 149	T 18075	-----	ZF 55	11	SYNCHRONIZER BLOCKING RING	16 S 151

PROGRESSIVE ZF REFERENCES



ZF No.	TAS No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
1316 304 149	T 18075	-----	ZF 56	11	SYNCHRONIZER BLOCKING RING	16 S 181
1316 304 149	T 18075	-----	ZF 57	11	SYNCHRONIZER BLOCKING RING	16 S 221
1316 304 149	T 18075	-----	ZF 58	11	SYNCHRONIZER BLOCKING RING	16 S 251
1316 304 150	T 18077	001 262 1034	ZF 50	27	SYNCHRONIZER BLOCKING RING	16 S 150
1316 304 150	T 17877	001 262 1034	ZF 51	27	SYNCHRONIZER BLOCKING RING	16 S 220
1316 304 150	T 18077	001 262 1034	ZF 55	26	SYNCHRONIZER BLOCKING RING	16 S 151
1316 304 150	T 18077	001 262 1034	ZF 56	26	SYNCHRONIZER BLOCKING RING	16 S 181
1316 304 150	T 18077	001 262 1034	ZF 57	26	SYNCHRONIZER BLOCKING RING	16 S 221
1316 304 150	T 18077	001 262 1034	ZF 58	19	SYNCHRONIZER BLOCKING RING	16 S 251
1316 304 156	T 17866	-----	ZF 50	26	SYNCHRONIZER CONE (63 T.)	16 S 150
1316 304 156	T 17866	-----	ZF 51	26	SYNCHRONIZER CONE (63 T.)	16 S 220
1316 304 156	T 17866	-----	ZF 55	25	SYNCHRONIZER CONE (63 T.)	16 S 151
1316 304 156	T 17866	-----	ZF 56	25	SYNCHRONIZER CONE (63 T.)	16 S 181
1316 304 156	T 17866	-----	ZF 57	25	SYNCHRONIZER CONE (63 T.)	16 S 221
1316 304 156	T 17866	-----	ZF 58	18	SYNCHRONIZER CONE (63 T.)	16 S 251
1316 304 159	T 17867	-----	ZF 50	12	SYNCHRONIZER CONE (57 T.)	16 S 150
1316 304 159	T 17867	-----	ZF 51	12	SYNCHRONIZER CONE (57 T.)	16 S 220
1316 304 159	T 17867	-----	ZF 55	10	SYNCHRONIZER CONE (57 T.)	16 S 151
1316 304 159	T 17867	-----	ZF 56	10	SYNCHRONIZER CONE (57 T.)	16 S 181
1316 304 159	T 17867	-----	ZF 57	10	SYNCHRONIZER CONE (57 T.)	16 S 221
1316 304 159	T 17867	-----	ZF 58	10	SYNCHRONIZER CONE (57 T.)	16 S 251
1316 304 162	T 17868	-----	ZF 50	14	SYNCHRONIZER HUB (57 T.)	16 S 150
1316 304 162	T 17868	-----	ZF 51	14	SYNCHRONIZER HUB (57 T.)	16 S 220
1316 304 162	T 17868	-----	ZF 55	12	SYNCHRONIZER HUB (57 T.)	16 S 151
1316 304 162	T 17868	-----	ZF 56	12	SYNCHRONIZER HUB (57 T.)	16 S 181
1316 304 162	T 17868	-----	ZF 57	12	SYNCHRONIZER HUB (57 T.)	16 S 221
1316 304 162	T 17868	-----	ZF 58	12	SYNCHRONIZER HUB (57 T.)	16 S 251
1316 304 163	T 17869	-----	ZF 50	28	SYNCHRONIZER HUB (63 T.)	16 S 150
1316 304 163	T 17869	-----	ZF 51	28	SYNCHRONIZER HUB (63 T.)	16 S 220
1316 304 163	T 17869	-----	ZF 55	27	SYNCHRONIZER HUB (63 T.)	16 S 151
1316 304 163	T 17869	-----	ZF 56	27	SYNCHRONIZER HUB (63 T.)	16 S 181
1316 304 163	T 17869	-----	ZF 57	27	SYNCHRONIZER HUB (63 T.)	16 S 221
1316 304 163	T 17869	-----	ZF 58	20	SYNCHRONIZER HUB (63 T.)	16 S 251
1316 304 167	T 17870	-----	ZF 50	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 150
1316 304 167	T 17870	-----	ZF 51	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 220
1316 304 167	T 17870	-----	ZF 55	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 151
1316 304 167	T 17870	-----	ZF 56	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 181
1316 304 167	T 17870	-----	ZF 57	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 221
1316 304 167	T 17870	-----	ZF 58	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 251
1316 304 168	T 17871	-----	ZF 50	13	SYNCHRONIZER BLOCKING RING	16 S 150
1316 304 168	T 17871	-----	ZF 51	13	SYNCHRONIZER BLOCKING RING	16 S 220
1316 304 168	T 17871	-----	ZF 55	11	SYNCHRONIZER BLOCKING RING	16 S 151
1316 304 168	T 17871	-----	ZF 56	11	SYNCHRONIZER BLOCKING RING	16 S 181
1316 304 168	T 17871	-----	ZF 57	11	SYNCHRONIZER BLOCKING RING	16 S 221
1316 304 168	T 17871	-----	ZF 58	11	SYNCHRONIZER BLOCKING RING	16 S 251
1316 304 169	T 17872	-----	ZF 50	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
1316 304 169	T 17872	-----	ZF 51	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
1316 304 169	T 17872	-----	ZF 55	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
1316 304 169	T 17872	-----	ZF 56	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
1316 304 169	T 17872	-----	ZF 57	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
1316 304 169	T 17872	-----	ZF 58	21	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 251
1316 304 170	T 17873	-----	ZF 50	27	SYNCHRONIZER BLOCKING RING	16 S 150
1316 304 170	T 17873	-----	ZF 51	27	SYNCHRONIZER BLOCKING RING	16 S 220
1316 304 170	T 17873	-----	ZF 55	26	SYNCHRONIZER BLOCKING RING	16 S 151
1316 304 170	T 17873	-----	ZF 56	26	SYNCHRONIZER BLOCKING RING	16 S 181
1316 304 170	T 17873	-----	ZF 57	26	SYNCHRONIZER BLOCKING RING	16 S 221
1316 304 170	T 17873	-----	ZF 58	19	SYNCHRONIZER BLOCKING RING	16 S 251
1316 305 001	-----	-----	ZF 56	37	REVERSE IDLER GEAR (22 T.)	16 S 181
1316 305 001	-----	-----	ZF 57	37	REVERSE IDLER GEAR (22 T.)	16 S 221
1316 305 001	-----	-----	ZF 58	30	REVERSE IDLER GEAR (22 T.)	16 S 251
1316 305 002	-----	-----	ZF 57	37	REVERSE IDLER GEAR (20 T.)	16 S 221
1316 306 015	T 19201	-----	ZF 57	92	SLIDING BLOCK	16 S 221
1316 306 015	T 19201	-----	ZF 58	90	SLIDING BLOCK	16 S 251
1316 332 004	-----	-----	ZF 57	69	RING GEAR (90 T.)	16 S 221
1316 332 006	-----	-----	ZF 57	70	RING GEAR CARRIER (90 T.)	16 S 221
1316 332 038	USE 1316 332 096					
1316 332 042	-----	-----	ZF 58	68	RING GEAR	16 S 251
1316 332 044	-----	-----	ZF 58	69	RING GEAR THRUST RING	16 S 251
1316 332 054	USE 1315 332 041					
1316 332 070	USE 1316 332 097					
1316 332 073	-----	-----	ZF 58	70	RING GEAR CARRIER	16 S 251
1316 332 096	-----	-----	ZF 56	61	GEAR SHAFT	16 S 181

36

PROGRESSIVE TAS REFERENCES



TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 08795	1295 304 004	000 262 2034	ZF 37	3	SYNCHRONIZER BLOCKING RING	16 S 112
T 08795	1295 304 004	000 262 2034	ZF 37	14	SYNCHRONIZER BLOCKING RING	16 S 112
T 08795	1295 304 004	000 262 2034	ZF 37	21	SYNCHRONIZER BLOCKING RING	16 S 112
T 08795	1295 304 004	000 262 2034	ZF 41	3	SYNCHRONIZER BLOCKING RING	16 S 130
T 08795	1295 304 004	000 262 2034	ZF 41	14	SYNCHRONIZER BLOCKING RING	16 S 130
T 08795	1295 304 004	000 262 2034	ZF 41	21	SYNCHRONIZER BLOCKING RING	16 S 130
T 08795	1295 304 004	000 262 2034	ZF 43	3	SYNCHRONIZER BLOCKING RING	16 K 160
T 08795	1295 304 004	000 262 2034	ZF 44	3	SYNCHRONIZER BLOCKING RING	16 S 160
T 08795	1295 304 004	000 262 2034	ZF 44	14	SYNCHRONIZER BLOCKING RING	16 S 160
T 08795	1295 304 004	000 262 2034	ZF 46	3	SYNCHRONIZER BLOCKING RING	16 K 190
T 08795	1295 304 004	000 262 2034	ZF 47	3	SYNCHRONIZER BLOCKING RING	16 S 190
T 08795	1295 304 004	000 262 2034	ZF 47	14	SYNCHRONIZER BLOCKING RING	16 S 190
T 08858	1295 304 165	000 262 1440	ZF 37	2	SYNCHRONIZER CONE (57 T.)	16 S 112
T 08858	1295 304 165	000 262 1440	ZF 41	2	SYNCHRONIZER CONE (57 T.)	16 S 130
T 08858	1295 304 165	000 262 1440	ZF 44	2	SYNCHRONIZER CONE (57 T.)	16 S 160
T 08871	1295 304 278	000 262 1940	ZF 37	2	SYNCHRONIZER CONE (57 T.)	16 S 112
T 08871	1295 304 278	000 262 1940	ZF 37	13	SYNCHRONIZER CONE (57 T.)	16 S 112
T 08871	1295 304 278	000 262 1940	ZF 37	20	SYNCHRONIZER CONE (57 T.)	16 S 112
T 08871	1295 304 278	000 262 1940	ZF 40	2	SYNCHRONIZER CONE (57 T.)	16 K 130
T 08871	1295 304 278	000 262 1940	ZF 41	2	SYNCHRONIZER CONE (57 T.)	16 S 130
T 08871	1295 304 278	000 262 1940	ZF 41	13	SYNCHRONIZER CONE (57 T.)	16 S 130
T 08871	1295 304 278	000 262 1940	ZF 43	2	SYNCHRONIZER CONE (57 T.)	16 K 160
T 08871	1295 304 278	000 262 1940	ZF 44	2	SYNCHRONIZER CONE (57 T.)	16 S 160
T 08871	1295 304 278	000 262 1940	ZF 44	13	SYNCHRONIZER CONE (57 T.)	16 S 160
T 08871	1295 304 278	000 262 1940	ZF 46	2	SYNCHRONIZER CONE (57 T.)	16 K 190
T 08871	1295 304 278	000 262 1940	ZF 47	2	SYNCHRONIZER CONE (57 T.)	16 S 190
T 08871	1295 304 278	000 262 1940	ZF 47	13	SYNCHRONIZER CONE (57 T.)	16 S 190
T 08874	1246 304 278	000 262 2434	ZF 37	21	SYNCHRONIZER BLOCKING RING	16 S 112
T 08874	1246 304 278	000 262 2434	ZF 41	21	SYNCHRONIZER BLOCKING RING	16 S 130
T 08874	1246 304 278	000 262 2434	ZF 44	21	SYNCHRONIZER BLOCKING RING	16 S 160
T 08874	1246 304 278	000 262 2434	ZF 47	21	SYNCHRONIZER BLOCKING RING	16 S 190
T 08892	1297 304 031	000 262 3935	ZF 37	15	SYNCHRONIZER HUB	16 S 112
T 08892	1297 304 031	000 262 3935	ZF 37	22	SYNCHRONIZER HUB	16 S 112
T 08892	1297 304 031	000 262 3935	ZF 41	15	SYNCHRONIZER HUB	16 S 130
T 08892	1297 304 031	000 262 3935	ZF 41	22	SYNCHRONIZER HUB	16 S 130
T 08892	1297 304 031	000 262 3935	ZF 44	15	SYNCHRONIZER HUB	16 S 160
T 08892	1297 304 031	000 262 3935	ZF 47	15	SYNCHRONIZER HUB	16 S 190
T 08895	1297 304 195	000 262 4435	ZF 37	22	SYNCHRONIZER HUB	16 S 112
T 08895	1297 304 195	000 262 4435	ZF 41	22	SYNCHRONIZER HUB	16 S 130
T 08895	1297 304 195	000 262 4435	ZF 44	22	SYNCHRONIZER HUB	16 S 160
T 08895	1297 304 195	000 262 4435	ZF 47	22	SYNCHRONIZER HUB	16 S 190
T 08899	1296 333 002	000 263 0735	ZF 37	73	SYNCHRONIZER HUB	16 S 112
T 08899	1296 333 002	000 263 0735	ZF 40	73	SYNCHRONIZER HUB	16 K 130
T 08899	1296 333 002	000 263 0735	ZF 41	73	SYNCHRONIZER HUB	16 S 130
T 08899	1296 333 002	000 263 0735	ZF 43	73	SYNCHRONIZER HUB	16 K 160
T 08899	1296 333 002	000 263 0735	ZF 44	73	SYNCHRONIZER HUB	16 S 160
T 08899	1296 333 002	000 263 0735	ZF 46	73	SYNCHRONIZER HUB	16 K 190
T 08899	1296 333 002	000 263 0735	ZF 47	73	SYNCHRONIZER HUB	16 S 190
T 08908	1296 233 006	000 263 1720	ZF 37	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 112
T 08908	1296 233 006	000 263 1720	ZF 40	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 K 130
T 08908	1296 233 006	000 263 1720	ZF 41	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 130
T 08908	1296 233 006	000 263 1720	ZF 43	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 K 160
T 08908	1296 233 006	000 263 1720	ZF 44	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 160
T 08908	1296 233 006	000 263 1720	ZF 46	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 K 190
T 08908	1296 233 006	000 263 1720	ZF 47	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 190
T 08908	1296 233 006	000 263 1720	ZF 50	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 150
T 08908	1296 233 006	000 263 1720	ZF 51	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 220
T 08917	1240 317 075	000 264 1423	ZF 37	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 112
T 08917	1240 317 075	000 264 1423	ZF 40	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 K 130
T 08917	1240 317 075	000 264 1423	ZF 41	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 130
T 08917	1240 317 075	000 264 1423	ZF 43	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 K 160
T 08917	1240 317 075	000 264 1423	ZF 44	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 160
T 08917	1240 317 075	000 264 1423	ZF 46	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 K 190
T 08917	1240 317 075	000 264 1423	ZF 47	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 190
T 08917	1240 317 075	000 264 1423	ZF 55	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 151
T 08917	1240 317 075	000 264 1423	ZF 56	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 181
T 08917	1240 317 075	000 264 1423	ZF 57	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 221
T 08917	1240 317 075	000 264 1423	ZF 58	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 251
T 08919	1269 332 036	000 264 1618	ZF 37	61	GEAR SHAFT	16 S 112
T 08919	1269 332 036	000 264 1618	ZF 40	61	GEAR SHAFT	16 K 130
T 08919	1269 332 036	000 264 1618	ZF 41	61	GEAR SHAFT	16 S 130
T 08933	1295 306 132	000 268 0849	ZF 37	90	SLIDING BLOCK (BRONZE)	16 S 112

TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 08933	1295 306 132	000 268 0849	ZF 40	90	SLIDING BLOCK (BRONZE)	16 K 130
T 08933	1295 306 132	000 268 0849	ZF 41	90	SLIDING BLOCK (BRONZE)	16 S 130
T 08933	1295 306 132	000 268 0849	ZF 43	90	SLIDING BLOCK (BRONZE)	16 K 160
T 08933	1295 306 132	000 268 0849	ZF 44	90	SLIDING BLOCK (BRONZE)	16 S 160
T 08933	1295 306 132	000 268 0849	ZF 46	90	SLIDING BLOCK (BRONZE)	16 K 190
T 08933	1295 306 132	000 268 0849	ZF 47	90	SLIDING BLOCK (BRONZE)	16 S 190
T 08936	0735 470 057	001 981 1187	ZF 37	66	GEAR NEEDLE ROLLER	16 S 112
T 08936	0735 470 057	001 981 1187	ZF 40	66	GEAR NEEDLE ROLLER	16 K 130
T 08936	0735 470 057	001 981 1187	ZF 41	66	GEAR NEEDLE ROLLER	16 S 130
T 08939	0730 103 846	003 264 2052	ZF 37	65	GEAR SPACER RING	16 S 112
T 08939	0730 103 846	003 264 2052	ZF 40	65	GEAR SPACER RING	16 K 130
T 08939	0730 103 846	003 264 2052	ZF 41	65	GEAR SPACER RING	16 S 130
T 08939	0730 103 846	003 264 2052	ZF 43	65	GEAR SPACER RING	16 K 160
T 08939	0730 103 846	003 264 2052	ZF 44	65	GEAR SPACER RING	16 S 160
T 08939	0730 103 846	003 264 2052	ZF 46	65	GEAR SPACER RING	16 K 190
T 08939	0730 103 846	003 264 2052	ZF 47	65	GEAR SPACER RING	16 S 190
T 08939	0730 103 846	003 264 2052	ZF 51	65	GEAR SPACER RING	16 S 220
T 08940	0501 305 887	003 264 2252	ZF 37	64	GEAR THRUST WASHER	16 S 112
T 08940	0501 305 887	003 264 2252	ZF 40	64	GEAR THRUST WASHER	16 K 130
T 08940	0501 305 887	003 264 2252	ZF 41	64	GEAR THRUST WASHER	16 S 130
T 08946	1257 304 020	336 262 0023	ZF 37	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 112
T 08946	1257 304 020	336 262 0023	ZF 41	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 130
T 08946	1257 304 020	336 262 0023	ZF 44	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 160
T 08946	1257 304 020	336 262 0023	ZF 47	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 190
T 08949	1240 304 278	336 264 0239	ZF 37	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 112
T 08949	1240 304 278	336 264 0239	ZF 37	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 112
T 08949	1240 304 278	336 264 0239	ZF 40	8	SYNCHRONIZER PRESSURE PLUNGER	16 K 130
T 08949	1240 304 278	336 264 0239	ZF 40	76	SYNCHRONIZER PRESSURE PLUNGER	16 K 130
T 08949	1240 304 278	336 264 0239	ZF 41	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 130
T 08949	1240 304 278	336 264 0239	ZF 41	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 130
T 08949	1240 304 278	336 264 0239	ZF 43	8	SYNCHRONIZER PRESSURE PLUNGER	16 K 160
T 08949	1240 304 278	336 264 0239	ZF 43	76	SYNCHRONIZER PRESSURE PLUNGER	16 K 160
T 08949	1240 304 278	336 264 0239	ZF 44	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 160
T 08949	1240 304 278	336 264 0239	ZF 44	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 160
T 08949	1240 304 278	336 264 0239	ZF 46	9	SYNCHRONIZER PRESSURE PLUNGER	16 K 190
T 08949	1240 304 278	336 264 0239	ZF 46	76	SYNCHRONIZER PRESSURE PLUNGER	16 K 190
T 08949	1240 304 278	336 264 0239	ZF 47	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 190
T 08949	1240 304 278	336 264 0239	ZF 47	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 190
T 08949	1240 304 278	336 264 0239	ZF 50	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 150
T 08949	1240 304 278	336 264 0239	ZF 51	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 220
T 08949	1240 304 278	336 264 0239	ZF 55	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 151
T 08949	1240 304 278	336 264 0239	ZF 56	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 181
T 08949	1240 304 278	336 264 0239	ZF 57	77	SYNCHRONIZER PRESSURE PLUNGER	16 S 221
T 08949	1240 304 278	336 264 0239	ZF 58	77	SYNCHRONIZER PRESSURE PLUNGER	16 S 251
T 08950	0732 040 385	336 264 0693	ZF 37	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 112
T 08950	0732 040 385	336 264 0693	ZF 37	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 112
T 08950	0732 040 385	336 264 0693	ZF 40	6	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 130
T 08950	0732 040 385	336 264 0693	ZF 40	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 130
T 08950	0732 040 385	336 264 0693	ZF 41	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 130
T 08950	0732 040 385	336 264 0693	ZF 41	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 130
T 08950	0732 040 385	336 264 0693	ZF 43	6	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 160
T 08950	0732 040 385	336 264 0693	ZF 43	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 160
T 08950	0732 040 385	336 264 0693	ZF 44	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 160
T 08950	0732 040 385	336 264 0693	ZF 44	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 160
T 08950	0732 040 385	336 264 0693	ZF 46	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 190
T 08950	0732 040 385	336 264 0693	ZF 46	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 190
T 08950	0732 040 385	336 264 0693	ZF 47	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 190
T 08950	0732 040 385	336 264 0693	ZF 47	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 190
T 08950	0732 040 385	336 264 0693	ZF 50	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 150
T 08950	0732 040 385	336 264 0693	ZF 51	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 220
T 08950	0732 040 385	336 264 0693	ZF 55	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 151
T 08950	0732 040 385	336 264 0693	ZF 56	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 181
T 08950	0732 040 385	336 264 0693	ZF 57	75	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 221
T 08950	0732 040 385	336 264 0693	ZF 58	75	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 251
T 08951	0732 040 386	336 264 0793	ZF 37	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 112
T 08951	0732 040 386	336 264 0793	ZF 37	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 112
T 08951	0732 040 386	336 264 0793	ZF 40	7	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 130
T 08951	0732 040 386	336 264 0793	ZF 40	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 130
T 08951	0732 040 386	336 264 0793	ZF 41	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 130
T 08951	0732 040 386	336 264 0793	ZF 41	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 130
T 08951	0732 040 386	336 264 0793	ZF 43	7	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 160
T 08951	0732 040 386	336 264 0793	ZF 43	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 160

PROGRESSIVE TAS REFERENCES



TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 08951	0732 040 386	336 264 0793	ZF 44	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 160
T 08951	0732 040 386	336 264 0793	ZF 44	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 160
T 08951	0732 040 386	336 264 0793	ZF 46	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 190
T 08951	0732 040 386	336 264 0793	ZF 46	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 190
T 08951	0732 040 386	336 264 0793	ZF 47	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 190
T 08951	0732 040 386	336 264 0793	ZF 47	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 190
T 08951	0732 040 386	336 264 0793	ZF 50	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 150
T 08951	0732 040 386	336 264 0793	ZF 51	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 220
T 08951	0732 040 386	336 264 0793	ZF 55	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 151
T 08951	0732 040 386	336 264 0793	ZF 56	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 181
T 08951	0732 040 386	336 264 0793	ZF 57	76	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 221
T 08951	0732 040 386	336 264 0793	ZF 58	76	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 251
T 09054	1297 304 196	000 262 2140	ZF 37	20	SYNCHRONIZER CONE (63 T.)	16 S 112
T 09054	1297 304 196	000 262 2140	ZF 41	20	SYNCHRONIZER CONE (63 T.)	16 S 130
T 09054	1297 304 196	000 262 2140	ZF 44	20	SYNCHRONIZER CONE (63 T.)	16 S 160
T 09054	1297 304 196	000 262 2140	ZF 47	20	SYNCHRONIZER CONE (63 T.)	16 S 190
T 09056	1295 304 002	000 262 3623	ZF 37	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 112
T 09056	1295 304 002	000 262 3623	ZF 37	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 112
T 09056	1295 304 002	000 262 3623	ZF 37	23	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 112
T 09056	1295 304 002	000 262 3623	ZF 40	10	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 K 130
T 09056	1295 304 002	000 262 3623	ZF 41	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
T 09056	1295 304 002	000 262 3623	ZF 41	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
T 09056	1295 304 002	000 262 3623	ZF 41	23	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
T 09056	1295 304 002	000 262 3623	ZF 43	10	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 K 160
T 09056	1295 304 002	000 262 3623	ZF 44	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 160
T 09056	1295 304 002	000 262 3623	ZF 44	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 160
T 09056	1295 304 002	000 262 3623	ZF 46	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 K 190
T 09056	1295 304 002	000 262 3623	ZF 47	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 190
T 09056	1295 304 002	000 262 3623	ZF 47	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 190
T 09061	1296 333 022	000 263 0234	ZF 37	72	SYNCHRONIZER BLOCKING RING	16 S 112
T 09061	1296 333 022	000 263 0234	ZF 40	72	SYNCHRONIZER BLOCKING RING	16 K 130
T 09061	1296 333 022	000 263 0234	ZF 41	72	SYNCHRONIZER BLOCKING RING	16 S 130
T 09061	1296 333 022	000 263 0234	ZF 43	72	SYNCHRONIZER BLOCKING RING	16 K 160
T 09061	1296 333 022	000 263 0234	ZF 44	72	SYNCHRONIZER BLOCKING RING	16 S 160
T 09061	1296 333 022	000 263 0234	ZF 46	72	SYNCHRONIZER BLOCKING RING	16 K 190
T 09061	1296 333 022	000 263 0234	ZF 47	72	SYNCHRONIZER BLOCKING RING	16 S 190
T 09061	1296 333 022	000 263 0234	ZF 50	72	SYNCHRONIZER BLOCKING RING	16 S 150
T 09061	1296 333 022	000 263 0234	ZF 51	72	SYNCHRONIZER BLOCKING RING	16 S 220
T 09061	1296 333 022	000 263 0234	ZF 55	71	SYNCHRONIZER BLOCKING RING	16 S 151
T 09061	1296 333 022	000 263 0234	ZF 56	72	SYNCHRONIZER BLOCKING RING	16 S 181
T 09061	1296 333 022	000 263 0234	ZF 57	72	SYNCHRONIZER BLOCKING RING	16 S 221
T 09061	1296 333 022	000 263 0234	ZF 58	73	SYNCHRONIZER BLOCKING RING	16 S 251
T 09062	1296 333 023	000 263 0523	ZF 37	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 112
T 09062	1296 333 023	000 263 0523	ZF 40	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 K 130
T 09062	1296 333 023	000 263 0523	ZF 41	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 130
T 09062	1296 333 023	000 263 0523	ZF 43	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 K 160
T 09062	1296 333 023	000 263 0523	ZF 44	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 160
T 09062	1296 333 023	000 263 0523	ZF 46	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 K 190
T 09062	1296 333 023	000 263 0523	ZF 47	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 190
T 09062	1296 333 023	000 263 0523	ZF 50	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
T 09062	1296 333 023	000 263 0523	ZF 51	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
T 09062	1296 333 023	000 263 0523	ZF 55	72	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
T 09062	1296 333 023	000 263 0523	ZF 56	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
T 09062	1296 333 023	000 263 0523	ZF 57	73	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
T 09062	1296 333 023	000 263 0523	ZF 58	78	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 251
T 09063	1295 233 025	000 263 1920	ZF 37	78	SYNCHRONIZER CONE (63 T.)	16 S 112
T 09063	1295 233 025	000 263 1920	ZF 40	78	SYNCHRONIZER CONE (63 T.)	16 K 130
T 09063	1295 233 025	000 263 1920	ZF 41	78	SYNCHRONIZER CONE (63 T.)	16 S 130
T 09068	0732 040 736	002 993 7501	ZF 37	-----	PRESSURE SPRING	16 S 112
T 09068	0732 040 736	002 993 7501	ZF 40	-----	PRESSURE SPRING	16 K 130
T 09068	0732 040 736	002 993 7501	ZF 41	-----	PRESSURE SPRING	16 S 130
T 09068	0732 040 736	002 993 7501	ZF 43	-----	PRESSURE SPRING	16 K 160
T 09068	0732 040 736	002 993 7501	ZF 44	-----	PRESSURE SPRING	16 S 160
T 09068	0732 040 736	002 993 7501	ZF 46	-----	PRESSURE SPRING	16 K 190
T 09068	0732 040 736	002 993 7501	ZF 47	-----	PRESSURE SPRING	16 S 190
T 09068	0732 040 736	002 993 7501	ZF 50	-----	PRESSURE SPRING	16 S 150
T 09068	0732 040 736	002 993 7501	ZF 51	-----	PRESSURE SPRING	16 S 220
T 09503	0630 501 024	000471 030000	ZF 37	40	MAINSHAFT BEARING CIRCLIP	16 S 112
T 09503	0630 501 024	000471 030000	ZF 40	34	MAINSHAFT BEARING CIRCLIP	16 K 130
T 09503	0630 501 024	000471 030000	ZF 41	40	MAINSHAFT BEARING CIRCLIP	16 S 130
T 09751	1295 202 041	000 260 1290	ZF 37	38	MAIN DRIVE GEAR OIL PUMP	16 S 112
T 09751	1295 202 041	000 260 1290	ZF 40	32	MAIN DRIVE GEAR OIL PUMP	16 K 130

TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 09751	1295 202 041	000 260 1290	ZF 41	38	MAIN DRIVE GEAR OIL PUMP	16 S 130
T 09751	1295 202 041	000 260 1290	ZF 43	34	MAIN DRIVE GEAR OIL PUMP	16 K 160
T 09751	1295 202 041	000 260 1290	ZF 44	39	MAIN DRIVE GEAR OIL PUMP	16 S 160
T 09751	1295 202 041	000 260 1290	ZF 46	35	MAIN DRIVE GEAR OIL PUMP	16 K 190
T 09751	1295 202 041	000 260 1290	ZF 47	39	MAIN DRIVE GEAR OIL PUMP	16 S 190
T 09751	1295 202 041	000 260 1290	ZF 50	45	MAIN DRIVE GEAR OIL PUMP	16 S 150
T 09751	1295 202 041	000 260 1290	ZF 51	45	MAIN DRIVE GEAR OIL PUMP	16 S 220
T 09753	1295 304 235	000 262 2127	ZF 40	17	FIRST AND SECOND SPEED CLUTCH GEAR (22 T.)	16 K 130
T 09753	1295 304 235	000 262 2127	ZF 43	17	FIRST AND SECOND SPEED CLUTCH GEAR (22 T.)	16 K 160
T 09753	1295 304 235	000 262 2127	ZF 46	18	FIRST AND SECOND SPEED CLUTCH GEAR (22 T.)	16 K 190
T 09755	1297 304 034	000 262 2350	ZF 43	22	REVERSE GEAR SLEEVE	16 K 160
T 09755	1297 304 034	000 262 2350	ZF 44	27	REVERSE GEAR SLEEVE	16 S 160
T 09755	1297 304 034	000 262 2350	ZF 46	23	REVERSE GEAR SLEEVE	16 K 190
T 09755	1297 304 034	000 262 2350	ZF 47	27	REVERSE GEAR SLEEVE	16 S 190
T 09757	1297 304 035	000 262 2450	ZF 44	24	FIRST SPEED GEAR SLEEVE	16 S 160
T 09757	1297 304 035	000 262 2450	ZF 47	24	FIRST SPEED GEAR SLEEVE	16 S 190
T 09759	1295 304 135	000 262 2514	ZF 41	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 130
T 09763	1295 304 245	000 262 2605	ZF 41	18	MAINSHAFT	16 S 130
T 09765	1297 304 055	000 262 3050	ZF 43	19	FIRST SPEED GEAR SLEEVE	16 K 160
T 09765	1297 304 055	000 262 3050	ZF 46	20	FIRST SPEED GEAR SLEEVE	16 K 190
T 09767	1297 304 127	000 262 3214	ZF 43	11	FOURTH SPEED GEAR (23-30-58 T.)	16 K 160
T 09769	1297 304 112	000 262 3912	ZF 43	16	SECOND SPEED GEAR (38-22 T.)	16 K 160
T 09771	1295 302 071	000 262 4010	ZF 40	1	CONSTANT GEAR (28-58 T.)	16 K 130
T 09771	1295 302 071	000 262 4010	ZF 41	1	CONSTANT GEAR (28-58 T.)	16 S 130
T 09773	1297 302 176	000 262 4510	ZF 43	1	CONSTANT GEAR (28-58 T.)	16 K 160
T 09773	1297 302 176	000 262 4510	ZF 44	1	CONSTANT GEAR (28-58 T.)	16 S 160
T 09773	1297 302 176	000 262 4510	ZF 46	1	CONSTANT GEAR (28-58 T.)	16 K 190
T 09773	1297 302 176	000 262 4510	ZF 47	1	CONSTANT GEAR (28-58 T.)	16 S 190
T 09775	1297 304 115	000 262 4713	ZF 43	14	THIRD SPEED GEAR (34-23 T.)	16 K 160
T 09777	1297 304 119	000 262 4923	ZF 43	18	FIRST AND SECOND SPEED SLIDING COLLAR (22 SPLINES)	16 K 160
T 09777	1297 304 119	000 262 4923	ZF 46	19	FIRST AND SECOND SPEED SLIDING COLLAR (22 SPLINES)	16 K 190
T 09779	1297 304 120	000 262 5023	ZF 43	13	THIRD AND FOURTH SPEED SLIDING COLLAR (23 SPLINES)	16 K 160
T 09779	1297 304 120	000 262 5023	ZF 46	14	THIRD AND FOURTH SPEED SLIDING COLLAR (23 SPLINES)	16 K 190
T 09781	1295 303 066	000 263 3402	ZF 41	32	COUNTERSHAFT (17-20 T.)	16 S 130
T 09783	1295 303 026	000 263 3510	ZF 41	31	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 130
T 09785	1295 303 027	000 263 3610	ZF 40	25	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 K 130
T 09785	1295 303 027	000 263 3610	ZF 41	30	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 130
T 09787	1295 303 037	000 263 3710	ZF 40	24	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 K 130
T 09787	1295 303 037	000 263 3710	ZF 41	29	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 130
T 09789	1297 303 067	000 263 7410	ZF 44	32	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 160
T 09789	1297 303 067	000 263 7410	ZF 47	32	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 190
T 09791	1297 202 030	001 262 0302	ZF 44	4	MAIN DRIVE GEAR (57 T.)	16 S 160
T 09793	1295 202 004	001 262 1802	ZF 40	4	MAIN DRIVE GEAR (57 T.)	16 K 130
T 09793	1295 202 004	001 262 1802	ZF 41	4	MAIN DRIVE GEAR (57 T.)	16 S 130
T 09799	1295 303 036	000 263 8410	ZF 40	24	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 K 130
T 09799	1295 303 036	000 263 8410	ZF 41	29	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 S 130
T 10131	1297 232 023	000 260 1597	ZF 43	68	GEAR SET (26 T.) (5 PCS.)	16 K 160
T 10131	1297 232 023	000 262 1597	ZF 44	68	GEAR SET (26 T.) (5 PCS.)	16 S 160
T 10131	1297 232 023	000 260 1597	ZF 46	68	GEAR SET (26 T.) (5 PCS.)	16 K 190
T 10131	1297 232 023	000 260 1597	ZF 47	68	GEAR SET (26 T.) (5 PCS.)	16 S 190
T 10131	1297 232 023	000 260 1597	ZF 51	68	GEAR SET (26 T.) (5 PCS.)	16 S 220
T 11154	1296 304 090	000 262 2414	ZF 37	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 112
T 11156	1296 304 087	000 262 3113	ZF 37	17	THIRD SPEED GEAR (34-58 T.)	16 S 112
T 11158	1295 304 128	000 262 3213	ZF 41	17	THIRD SPEED GEAR (34-58 T.)	16 S 130
T 11161	1296 302 003	000 262 3910	ZF 37	1	CONSTANT GEAR (28-58 T.)	16 S 112
T 11163	1296 303 009	000 263 3110	ZF 37	31	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 112
T 11165	1296 303 014	000 263 3210	ZF 37	29	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 112
T 11167	1297 303 047	000 263 3302	ZF 43	28	COUNTERSHAFT (17-20 T.)	16 K 160
T 11169	1296 303 002	000 263 3310	ZF 37	30	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 112
T 11171	1295 202 028	001 262 1902	ZF 41	4	MAIN DRIVE GEAR (57 T.)	16 S 130
T 11173	1296 202 001	001 262 2002	ZF 37	4	MAIN DRIVE GEAR (57 T.)	16 S 112
T 11210	1295 202 007	-----	ZF 40	4	MAIN DRIVE GEAR (57 T.)	16 K 130
T 11210	1295 202 007	-----	ZF 41	4	MAIN DRIVE GEAR (57 T.)	16 S 130
T 11447	1295 305 056	000 263 1430	ZF 37	33	REVERSE IDLER GEAR SHAFT	16 S 112
T 11447	1295 305 056	000 263 1430	ZF 40	28	REVERSE IDLER GEAR SHAFT	16 K 130
T 11447	1295 305 056	000 263 1430	ZF 41	33	REVERSE IDLER GEAR SHAFT	16 S 130
T 11447	1295 305 056	000 263 1430	ZF 43	29	REVERSE IDLER GEAR SHAFT	16 K 160
T 11447	1295 305 056	000 263 1430	ZF 44	34	REVERSE IDLER GEAR SHAFT	16 S 160
T 11447	1295 305 056	000 263 1430	ZF 46	30	REVERSE IDLER GEAR SHAFT	16 K 190
T 11447	1295 305 056	000 263 1430	ZF 47	34	REVERSE IDLER GEAR SHAFT	16 S 190
T 11447	1295 305 056	000 263 1430	ZF 50	40	REVERSE IDLER GEAR SHAFT	16 S 150
T 11447	1295 305 056	000 263 1430	ZF 51	40	REVERSE IDLER GEAR SHAFT	16 S 220

PROGRESSIVE TAS REFERENCES



TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 11462	1296 213 028	000 264 4206	ZF 40	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 K 130
T 11462	1296 213 028	000 264 4206	ZF 43	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 K 160
T 11462	1296 213 028	000 264 4206	ZF 44	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 160
T 11462	1296 213 028	000 264 4206	ZF 46	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 K 190
T 11462	1296 213 028	000 264 4206	ZF 47	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 190
T 11462	1296 213 028	000 264 4206	ZF 50	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 150
T 11462	1296 213 028	000 264 4206	ZF 51	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 220
T 11462	1296 213 028	000 264 4206	ZF 55	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 151
T 11462	1296 213 028	000 264 4206	ZF 56	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 181
T 11462	1296 213 028	000 264 4206	ZF 57	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 221
T 11462	1296 213 028	000 264 4206	ZF 58	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 251
T 11724	1297 304 402	000 262 3834	ZF 50	3	SYNCHRONIZER BLOCKING RING	16 S 150
T 11724	1297 304 402	000 262 3834	ZF 50	13	SYNCHRONIZER BLOCKING RING	16 S 150
T 11724	1297 304 402	000 262 3834	ZF 51	3	SYNCHRONIZER BLOCKING RING	16 S 220
T 11724	1297 304 402	000 262 3834	ZF 51	13	SYNCHRONIZER BLOCKING RING	16 S 220
T 11724	1297 304 402	000 262 3834	ZF 55	3	SYNCHRONIZER BLOCKING RING	16 S 151
T 11724	1297 304 402	000 262 3834	ZF 55	11	SYNCHRONIZER BLOCKING RING	16 S 151
T 11724	1297 304 402	000 262 3834	ZF 56	3	SYNCHRONIZER BLOCKING RING	16 S 181
T 11724	1297 304 402	000 262 3834	ZF 56	11	SYNCHRONIZER BLOCKING RING	16 S 181
T 11724	1297 304 402	000 262 3834	ZF 57	3	SYNCHRONIZER BLOCKING RING	16 S 221
T 11724	1297 304 402	000 262 3834	ZF 57	11	SYNCHRONIZER BLOCKING RING	16 S 221
T 11724	1297 304 402	000 262 3834	ZF 58	3	SYNCHRONIZER BLOCKING RING	16 S 251
T 11724	1297 304 402	000 262 3834	ZF 58	11	SYNCHRONIZER BLOCKING RING	16 S 251
T 11729	1312 304 027	000 262 5535	ZF 50	2	SYNCHRONIZER CONE (57 T.)	16 S 150
T 11729	1312 304 027	000 262 5535	ZF 50	12	SYNCHRONIZER CONE (57 T.)	16 S 150
T 11729	1312 304 027	000 262 5535	ZF 51	2	SYNCHRONIZER CONE (57 T.)	16 S 220
T 11729	1312 304 027	000 262 5535	ZF 51	12	SYNCHRONIZER CONE (57 T.)	16 S 220
T 11729	1312 304 027	000 262 5535	ZF 55	2	SYNCHRONIZER CONE (57 T.)	16 S 151
T 11729	1312 304 027	000 262 5535	ZF 55	10	SYNCHRONIZER CONE (57 T.)	16 S 151
T 11729	1312 304 027	000 262 5535	ZF 56	2	SYNCHRONIZER CONE (57 T.)	16 S 181
T 11729	1312 304 027	000 262 5535	ZF 56	10	SYNCHRONIZER CONE (57 T.)	16 S 181
T 11729	1312 304 027	000 262 5535	ZF 57	2	SYNCHRONIZER CONE (57 T.)	16 S 221
T 11729	1312 304 027	000 262 5535	ZF 57	10	SYNCHRONIZER CONE (57 T.)	16 S 221
T 11729	1312 304 027	000 262 5535	ZF 58	2	SYNCHRONIZER CONE (57 T.)	16 S 251
T 11729	1312 304 027	000 262 5535	ZF 58	10	SYNCHRONIZER CONE (57 T.)	16 S 251
T 11730	1313 202 013	-----	ZF 50	4	MAIN DRIVE GEAR (57 T.)	16 S 150
T 11732	1315 233 006	-----	ZF 55	70	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 151
T 11732	1315 233 006	-----	ZF 57	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 221
T 11774	1297 302 177	000 262 4610	ZF 43	1	CONSTANT GEAR (30-58 T.)	16 K 160
T 11774	1297 302 177	000 262 4610	ZF 44	1	CONSTANT GEAR (30-58 T.)	16 S 160
T 11774	1297 302 177	000 262 4610	ZF 46	1	CONSTANT GEAR (30-58 T.)	16 K 190
T 11774	1297 302 177	000 262 4610	ZF 47	1	CONSTANT GEAR (30-58 T.)	16 S 190
T 13440	0732 040 409	005 993 6101	ZF 41	7	SYNCHRONIZER PRESSURE SPRING	16 S 130
T 13440	0732 040 409	005 993 6101	ZF 47	7	SYNCHRONIZER PRESSURE SPRING	16 S 190
T 13440	0732 040 409	005 993 6101	ZF 50	7	SYNCHRONIZER PRESSURE SPRING	16 S 150
T 13440	0732 040 409	005 993 6101	ZF 51	7	SYNCHRONIZER PRESSURE SPRING	16 S 220
T 13440	0732 040 409	005 993 6101	ZF 55	5	SYNCHRONIZER PRESSURE SPRING	16 S 151
T 13440	0732 040 409	005 993 6101	ZF 56	5	SYNCHRONIZER PRESSURE SPRING	16 S 181
T 13440	0732 040 409	005 993 6101	ZF 57	5	SYNCHRONIZER PRESSURE SPRING	16 S 221
T 13440	0732 040 409	005 993 6101	ZF 58	5	SYNCHRONIZER PRESSURE SPRING	16 S 251
T 14283	0730 150 064	343 263 0062	ZF 37	35	REVERSE IDLER GEAR THRUST WASHER	16 S 112
T 14283	0730 150 064	343 263 0062	ZF 40	30	REVERSE IDLER GEAR THRUST WASHER	16 K 130
T 14283	0730 150 064	343 263 0062	ZF 41	35	REVERSE IDLER GEAR THRUST WASHER	16 S 130
T 14283	0730 150 064	343 263 0062	ZF 43	31	REVERSE IDLER GEAR THRUST WASHER	16 K 160
T 14283	0730 150 064	343 263 0062	ZF 44	36	REVERSE IDLER GEAR THRUST WASHER	16 S 160
T 14283	0730 150 064	343 263 0062	ZF 46	32	REVERSE IDLER GEAR THRUST WASHER	16 K 190
T 14283	0730 150 064	343 263 0062	ZF 47	36	REVERSE IDLER GEAR THRUST WASHER	16 S 190
T 14283	0730 150 064	343 263 0062	ZF 50	42	REVERSE IDLER GEAR THRUST WASHER	16 S 150
T 14283	0730 150 064	343 263 0062	ZF 51	42	REVERSE IDLER GEAR THRUST WASHER	16 S 220
T 14807	1296 302 023	000 262 3010	ZF 37	1	CONSTANT GEAR (28-61 T.)	16 S 112
T 14809	1313 233 001	000 263 2020	ZF 41	78	SYNCHRONIZER CONE (63 T.)	16 S 130
T 14809	1313 233 001	000 263 2020	ZF 43	78	SYNCHRONIZER CONE (63 T.)	16 K 160
T 14809	1313 233 001	000 263 2020	ZF 44	78	SYNCHRONIZER CONE (63 T.)	16 S 160
T 14809	1313 233 001	000 263 2020	ZF 46	78	SYNCHRONIZER CONE (63 T.)	16 K 190
T 14809	1313 233 001	000 263 2020	ZF 47	78	SYNCHRONIZER CONE (63 T.)	16 S 190
T 14809	1313 233 001	000 263 2020	ZF 50	78	SYNCHRONIZER CONE (63 T.)	16 S 150
T 14809	1313 233 001	000 263 2020	ZF 55	77	SYNCHRONIZER CONE (63 T.)	16 S 151
T 14811	1295 338 059	000 264 3745	ZF 37	79	CARRIER COUPLING FLANGE (36 SPLINES)	16 S 112
T 14811	1295 338 059	000 264 3745	ZF 41	80	CARRIER COUPLING FLANGE (36 SPLINES)	16 S 130
T 14812	1297 338 038	000 264 4145	ZF 43	79	CARRIER COUPLING FLANGE (38 SPLINES)	16 K 160
T 14812	1297 338 038	000 264 4145	ZF 44	79	CARRIER COUPLING FLANGE (38 SPLINES)	16 S 160
T 14812	1297 338 038	000 264 4145	ZF 46	79	CARRIER COUPLING FLANGE (38 SPLINES)	16 K 190

43

I riferimenti originali sono riportati solo come indicazione di particolari originali corrispondenti.
 I particolari inseriti nel presente catalogo non sono originali, ma con essi perfettamente intercambiabili.
 All manufacturers names, numbers, symbols and descriptions are used for reference purposes only, and it is not implied that any part listed is the product of these manufacturers.

CHART II
ZF 4-510

TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 14812	1297 338 038	000 264 4145	ZF 47	80	CARRIER COUPLING FLANGE (38 SPLINES)	16 S 190
T 14983	1310 304 202	001 262 1823	ZF 41	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
T 14983	1310 304 202	001 262 1823	ZF 47	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 190
T 14983	1310 304 202	001 262 1823	ZF 50	9	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 150
T 14983	1310 304 202	001 262 1823	ZF 50	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 150
T 14983	1310 304 202	001 262 1823	ZF 51	9	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 220
T 14983	1310 304 202	001 262 1823	ZF 51	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 220
T 14983	1310 304 202	001 262 1823	ZF 55	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 151
T 14983	1310 304 202	001 262 1823	ZF 55	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 151
T 14983	1310 304 202	001 262 1823	ZF 56	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 181
T 14983	1310 304 202	001 262 1823	ZF 56	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 181
T 14983	1310 304 202	001 262 1823	ZF 57	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 221
T 14983	1310 304 202	001 262 1823	ZF 57	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 221
T 14983	1310 304 202	001 262 1823	ZF 58	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 251
T 14983	1310 304 202	001 262 1823	ZF 58	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 251
T 14989	1310 304 175	001 262 1123	ZF 50	25	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
T 14989	1310 304 175	001 262 1123	ZF 51	25	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
T 14989	1310 304 175	001 262 1123	ZF 55	24	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
T 14989	1310 304 175	001 262 1123	ZF 56	24	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
T 14989	1310 304 175	001 262 1123	ZF 57	24	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
T 15014	1297 302 074	000 262 3210	ZF 44	1	CONSTANT GEAR (28-61 T.)	16 S 160
T 15016	1297 304 267	000 262 4214	ZF 44	12	FOURTH SPEED GEAR (58-28-58 T.)	16 S 160
T 15016	1297 304 267	000 262 4214	ZF 47	12	FOURTH SPEED GEAR (58-28-58 T.)	16 S 190
T 15019	1297 304 260	000 262 4414	ZF 44	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 160
T 15019	1297 304 260	000 262 4414	ZF 47	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 190
T 15026	1297 303 065	000 263 6510	ZF 43	26	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 K 160
T 15026	1297 303 065	000 263 6510	ZF 44	31	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 160
T 15026	1297 303 065	000 263 6510	ZF 46	27	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 K 190
T 15026	1297 303 065	000 263 6510	ZF 47	31	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 190
T 15033	1297 303 066	000 263 6610	ZF 43	25	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 K 160
T 15033	1297 303 066	000 263 6610	ZF 44	30	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 160
T 15033	1297 303 066	000 263 6610	ZF 46	26	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 K 190
T 15033	1297 303 066	000 263 6610	ZF 47	30	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 190
T 15040	1297 303 074	000 263 6910	ZF 43	25	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 K 160
T 15040	1297 303 074	000 263 6910	ZF 44	30	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 S 160
T 15040	1297 303 074	000 263 6910	ZF 46	26	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 K 190
T 15040	1297 303 074	000 263 6910	ZF 47	30	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 S 190
T 15047	1297 303 072	000 263 7010	ZF 43	26	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 K 160
T 15047	1297 303 072	000 263 7010	ZF 44	31	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 S 160
T 15047	1297 303 072	000 263 7010	ZF 46	27	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 K 190
T 15047	1297 303 072	000 263 7010	ZF 47	31	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 S 190
T 15053	1297 202 053	001 262 2802	ZF 43	4	MAIN DRIVE GEAR (57 T.)	16 K 160
T 15053	1297 202 053	001 262 2802	ZF 44	4	MAIN DRIVE GEAR (57 T.)	16 S 160
T 15053	1297 202 053	001 262 2802	ZF 46	4	MAIN DRIVE GEAR (57 T.)	16 K 190
T 15053	1297 202 053	001 262 2802	ZF 47	4	MAIN DRIVE GEAR (57 T.)	16 S 190
T 15059	1268 304 424	000 262 2636	ZF 50	20	SYNCHRONIZER INTERNAL RING	16 S 150
T 15059	1268 304 424	000 262 2636	ZF 51	20	SYNCHRONIZER INTERNAL RING	16 S 220
T 15059	1268 304 424	000 262 2636	ZF 55	19	SYNCHRONIZER INTERNAL RING	16 S 151
T 15059	1268 304 424	000 262 2636	ZF 56	19	SYNCHRONIZER INTERNAL RING	16 S 181
T 15059	1268 304 424	000 262 2636	ZF 57	19	SYNCHRONIZER INTERNAL RING	16 S 221
T 15065	1268 304 494	000 262 3436	ZF 50	21	SYNCHRONIZER INTERMEDIATE RING	16 S 150
T 15065	1268 304 494	000 262 3436	ZF 51	21	SYNCHRONIZER INTERMEDIATE RING	16 S 220
T 15065	1268 304 494	000 262 3436	ZF 55	20	SYNCHRONIZER INTERMEDIATE RING	16 S 151
T 15065	1268 304 494	000 262 3436	ZF 56	20	SYNCHRONIZER INTERMEDIATE RING	16 S 181
T 15065	1268 304 494	000 262 3436	ZF 57	20	SYNCHRONIZER INTERMEDIATE RING	16 S 221
T 15072	1268 304 525	000 262 3934	ZF 50	22	SYNCHRONIZER BLOCKING RING	16 S 150
T 15072	1268 304 525	000 262 3934	ZF 51	22	SYNCHRONIZER BLOCKING RING	16 S 220
T 15072	1268 304 525	000 262 3934	ZF 55	21	SYNCHRONIZER BLOCKING RING	16 S 151
T 15072	1268 304 525	000 262 3934	ZF 56	21	SYNCHRONIZER BLOCKING RING	16 S 181
T 15072	1268 304 525	000 262 3934	ZF 57	21	SYNCHRONIZER BLOCKING RING	16 S 221
T 15078	1297 304 484	000 262 7034	ZF 41	14	SYNCHRONIZER BLOCKING RING	16 S 130
T 15078	1297 304 484	000 262 7034	ZF 47	14	SYNCHRONIZER BLOCKING RING	16 S 190
T 15078	1297 304 484	000 262 7034	ZF 50	3	SYNCHRONIZER BLOCKING RING	16 S 150
T 15078	1297 304 484	000 262 7034	ZF 50	13	SYNCHRONIZER BLOCKING RING	16 S 150
T 15078	1297 304 484	000 262 7034	ZF 51	3	SYNCHRONIZER BLOCKING RING	16 S 220
T 15078	1297 304 484	000 262 7034	ZF 51	13	SYNCHRONIZER BLOCKING RING	16 S 220
T 15078	1297 304 484	000 262 7034	ZF 55	3	SYNCHRONIZER BLOCKING RING	16 S 151
T 15078	1297 304 484	000 262 7034	ZF 55	11	SYNCHRONIZER BLOCKING RING	16 S 151
T 15078	1297 304 484	000 262 7034	ZF 56	3	SYNCHRONIZER BLOCKING RING	16 S 181
T 15078	1297 304 484	000 262 7034	ZF 56	11	SYNCHRONIZER BLOCKING RING	16 S 181
T 15078	1297 304 484	000 262 7034	ZF 57	3	SYNCHRONIZER BLOCKING RING	16 S 221
T 15078	1297 304 484	000 262 7034	ZF 57	11	SYNCHRONIZER BLOCKING RING	16 S 221

PROGRESSIVE TAS REFERENCES



TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 15078	1297 304 484	000 262 7034	ZF 58	3	SYNCHRONIZER BLOCKING RING	16 S 251
T 15078	1297 304 484	000 262 7034	ZF 58	11	SYNCHRONIZER BLOCKING RING	16 S 251
T 15084	1296 333 045	000 263 0534	ZF 37	72	SYNCHRONIZER BLOCKING RING	16 S 112
T 15084	1296 333 045	000 263 0534	ZF 40	72	SYNCHRONIZER BLOCKING RING	16 K 130
T 15084	1296 333 045	000 263 0534	ZF 41	72	SYNCHRONIZER BLOCKING RING	16 S 130
T 15084	1296 333 045	000 263 0534	ZF 43	72	SYNCHRONIZER BLOCKING RING	16 K 160
T 15084	1296 333 045	000 263 0534	ZF 44	72	SYNCHRONIZER BLOCKING RING	16 S 160
T 15084	1296 333 045	000 263 0534	ZF 46	72	SYNCHRONIZER BLOCKING RING	16 K 190
T 15084	1296 333 045	000 263 0534	ZF 47	72	SYNCHRONIZER BLOCKING RING	16 S 190
T 15084	1296 333 045	000 263 0534	ZF 50	72	SYNCHRONIZER BLOCKING RING	16 S 150
T 15084	1296 333 045	000 263 0534	ZF 51	72	SYNCHRONIZER BLOCKING RING	16 S 220
T 15084	1296 333 045	000 263 0534	ZF 55	71	SYNCHRONIZER BLOCKING RING	16 S 151
T 15084	1296 333 045	000 263 0534	ZF 56	72	SYNCHRONIZER BLOCKING RING	16 S 181
T 15084	1296 333 045	000 263 0534	ZF 57	72	SYNCHRONIZER BLOCKING RING	16 S 221
T 15084	1296 333 045	000 263 0534	ZF 58	73	SYNCHRONIZER BLOCKING RING	16 S 251
T 15090	1312 304 106	000 263 2120	ZF 50	19	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 150
T 15090	1312 304 106	000 263 2120	ZF 51	19	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 220
T 15090	1312 304 106	000 263 2120	ZF 55	18	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 151
T 15090	1312 304 106	000 263 2120	ZF 56	18	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 181
T 15090	1312 304 106	000 263 2120	ZF 57	18	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 221
T 15096	1297 304 436	000 264 0839	ZF 41	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 130
T 15096	1297 304 436	000 264 0839	ZF 47	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 190
T 15096	1297 304 436	000 264 0839	ZF 50	8	SYNCHRONIZER PRESSURE PLUNGER	16 S 150
T 15096	1297 304 436	000 264 0839	ZF 51	8	SYNCHRONIZER PRESSURE PLUNGER	16 S 220
T 15096	1297 304 436	000 264 0839	ZF 55	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 151
T 15096	1297 304 436	000 264 0839	ZF 56	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 181
T 15096	1297 304 436	000 264 0839	ZF 57	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 221
T 15096	1297 304 436	000 264 0839	ZF 58	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 251
T 15103	1312 304 056	-----	ZF 50	10	SYNCHRONIZER CONE (57 T.)	16 S 150
T 15103	1312 304 056	-----	ZF 51	10	SYNCHRONIZER CONE (57 T.)	16 S 220
T 15103	1312 304 056	-----	ZF 55	8	SYNCHRONIZER CONE (57 T.)	16 S 151
T 15103	1312 304 056	-----	ZF 56	8	SYNCHRONIZER CONE (57 T.)	16 S 181
T 15103	1312 304 056	-----	ZF 57	8	SYNCHRONIZER CONE (57 T.)	16 S 221
T 15103	1312 304 056	-----	ZF 58	8	SYNCHRONIZER CONE (57 T.)	16 S 251
T 15119	1296 202 004	000 262 9402	ZF 37	4	MAIN DRIVE GEAR (57 T.)	16 S 112
T 15151	1304 304 686	000 262 9934	ZF 37	3	SYNCHRONIZER BLOCKING RING	16 S 112
T 15151	1304 304 686	000 262 9934	ZF 37	14	SYNCHRONIZER BLOCKING RING	16 S 112
T 15151	1304 304 686	000 262 9934	ZF 40	3	SYNCHRONIZER BLOCKING RING	16 K 130
T 15151	1304 304 686	000 262 9934	ZF 41	3	SYNCHRONIZER BLOCKING RING	16 S 130
T 15151	1304 304 686	000 262 9934	ZF 41	14	SYNCHRONIZER BLOCKING RING	16 S 130
T 15151	1304 304 686	000 262 9934	ZF 43	3	SYNCHRONIZER BLOCKING RING	16 K 160
T 15151	1304 304 686	000 262 9934	ZF 44	3	SYNCHRONIZER BLOCKING RING	16 S 160
T 15151	1304 304 686	000 262 9934	ZF 44	14	SYNCHRONIZER BLOCKING RING	16 S 160
T 15151	1304 304 686	000 262 9934	ZF 46	3	SYNCHRONIZER BLOCKING RING	16 K 190
T 15151	1304 304 686	000 262 9934	ZF 47	3	SYNCHRONIZER BLOCKING RING	16 S 190
T 15151	1304 304 686	000 262 9934	ZF 47	14	SYNCHRONIZER BLOCKING RING	16 S 190
T 15289	0730 061 816	000 262 0673	ZF 37	39	SPACER RING	16 S 112
T 15289	0730 061 816	000 262 0673	ZF 40	33	SPACER RING	16 K 130
T 15289	0730 061 816	000 262 0673	ZF 41	39	SPACER RING	16 S 130
T 15289	0730 061 816	000 262 0673	ZF 43	35	SPACER RING	16 K 160
T 15289	0730 061 816	000 262 0673	ZF 44	40	SPACER RING	16 S 160
T 15289	0730 061 816	000 262 0673	ZF 46	36	SPACER RING	16 K 190
T 15289	0730 061 816	000 262 0673	ZF 47	40	SPACER RING	16 S 190
T 15289	0730 061 816	000 262 0673	ZF 50	46	SPACER RING	16 S 150
T 15289	0730 061 816	000 262 0673	ZF 51	46	SPACER RING	16 S 220
T 15359	1295 304 247	000 262 0109	ZF 37	28	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 112
T 15359	1295 304 247	000 262 0109	ZF 40	23	PLANETARY REDUCTION SUN GEAR (27 T.)	16 K 130
T 15362	1295 302 074	000 262 3110	ZF 41	1	CONSTANT GEAR (28-61 T.)	16 S 130
T 15364	1296 303 025	000 263 3502	ZF 37	32	COUNTERSHAFT (17-20 T.)	16 S 112
T 15366	0737 502 092	000 990 2360	ZF 37	41	MAINSHAFT NUT	16 S 112
T 15366	0737 502 092	000 990 2360	ZF 41	41	MAINSHAFT NUT	16 S 130
T 15366	0737 502 092	000 990 2360	ZF 43	36	MAINSHAFT NUT	16 K 160
T 15366	0737 502 092	000 990 2360	ZF 44	41	MAINSHAFT NUT	16 S 160
T 15366	0737 502 092	000 990 2360	ZF 46	37	MAINSHAFT NUT	16 K 190
T 15366	0737 502 092	000 990 2360	ZF 47	41	MAINSHAFT NUT	16 S 190
T 15377	1295 304 248	000 262 0209	ZF 41	28	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 130
T 15383	1297 304 187	000 262 0309	ZF 43	24	PLANETARY REDUCTION SUN GEAR (27 T.)	16 K 160
T 15383	1297 304 187	000 262 0309	ZF 44	29	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 160
T 15383	1297 304 187	000 262 0309	ZF 46	25	PLANETARY REDUCTION SUN GEAR (27 T.)	16 K 190
T 15383	1297 304 187	000 262 0309	ZF 47	29	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 190
T 15567	1297 302 012	000 262 3329	ZF 37	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 112
T 15567	1297 302 012	000 262 3329	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130

TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 15569	1297 302 042	000 262 3429	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
T 15569	1297 302 042	000 262 3429	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
T 15569	1297 302 042	000 262 3429	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
T 15659	1297 298 912	000 262 0406	ZF 43	67	GEAR REPAIR KIT (26 T.)	16 K 160
T 15659	1297 298 912	000 262 0406	ZF 44	67	GEAR REPAIR KIT (26 T.)	16 S 160
T 15659	1297 298 912	000 262 0406	ZF 46	67	GEAR REPAIR KIT (26 T.)	16 K 190
T 15659	1297 298 912	000 262 0406	ZF 47	67	GEAR REPAIR KIT (26 T.)	16 S 190
T 15708	1295 304 121	000 262 2612	ZF 41	19	SECOND SPEED GEAR (38-58 T.)	16 S 130
T 15713	1295 304 136	000 262 4814	ZF 41	12	FOURTH SPEED GEAR (58-28-58 T.)	16 S 130
T 15719	1295 304 202	000 262 5011	ZF 41	24	FIRST SPEED GEAR (47-58 T.)	16 S 130
T 15724	1297 304 269	000 262 5612	ZF 44	19	SECOND SPEED GEAR (37-58 T.)	16 S 160
T 15724	1297 304 269	000 262 5612	ZF 47	19	SECOND SPEED GEAR (37-58 T.)	16 S 190
T 15727	1297 304 266	000 262 6213	ZF 44	17	THIRD SPEED GEAR (32-58 T.)	16 S 160
T 15727	1297 304 266	000 262 6213	ZF 47	17	THIRD SPEED GEAR (32-58 T.)	16 S 190
T 15731	1295 304 127	000 262 7113	ZF 41	17	THIRD SPEED GEAR (32-58 T.)	16 S 130
T 15736	1297 304 270	000 262 8511	ZF 44	25	FIRST SPEED GEAR (44-58 T.)	16 S 160
T 15736	1297 304 270	000 262 8511	ZF 47	25	FIRST SPEED GEAR (44-58 T.)	16 S 190
T 15739	1297 332 109	000 263 0374	ZF 41	61	GEAR SHAFT	16 S 130
T 15739	1297 332 109	000 263 0374	ZF 43	61	GEAR SHAFT	16 K 160
T 15739	1297 332 109	000 263 0374	ZF 44	61	GEAR SHAFT	16 S 160
T 15739	1297 332 109	000 263 0374	ZF 46	61	GEAR SHAFT	16 K 190
T 15739	1297 332 109	000 263 0374	ZF 47	61	GEAR SHAFT	16 S 190
T 15739	1297 332 109	000 263 0374	ZF 51	61	GEAR SHAFT	16 S 220
T 15745	0501 306 212	000 263 0562	ZF 41	64	GEAR THRUST WASHER	16 S 130
T 15745	0501 306 212	000 263 0562	ZF 43	64	GEAR THRUST WASHER	16 K 160
T 15745	0501 306 212	000 263 0562	ZF 44	64	GEAR THRUST WASHER	16 S 160
T 15745	0501 306 212	000 263 0562	ZF 46	64	GEAR THRUST WASHER	16 K 190
T 15745	0501 306 212	000 263 0562	ZF 47	64	GEAR THRUST WASHER	16 S 190
T 15745	0501 306 212	000 263 0562	ZF 51	64	GEAR THRUST WASHER	16 S 220
T 15751	1297 303 075	000 263 4502	ZF 44	33	COUNTERSHAFT (19-23 T.)	16 S 160
T 15751	1297 303 075	000 263 4502	ZF 47	33	COUNTERSHAFT (19-23 T.)	16 S 190
T 15755	1297 303 073	000 263 6810	ZF 44	32	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 160
T 15755	1297 303 073	000 263 6810	ZF 47	32	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 190
T 15760	0750 119 109	001 981 5487	ZF 41	66	GEAR NEEDLE ROLLER	16 S 130
T 15760	0750 119 109	001 981 5487	ZF 43	66	GEAR NEEDLE ROLLER	16 K 160
T 15760	0750 119 109	001 981 5487	ZF 44	66	GEAR NEEDLE ROLLER	16 S 160
T 15760	0750 119 109	001 981 5487	ZF 46	66	GEAR NEEDLE ROLLER	16 K 190
T 15760	0750 119 109	001 981 5487	ZF 47	66	GEAR NEEDLE ROLLER	16 S 190
T 15771	0631 329 017	001481 003028	ZF 37	63	GEAR SHAFT ELASTIC PIN	16 S 112
T 15771	0631 329 017	001481 003028	ZF 40	63	GEAR SHAFT ELASTIC PIN	16 K 130
T 15771	0631 329 017	001481 003028	ZF 41	63	GEAR SHAFT ELASTIC PIN	16 S 130
T 15771	0631 329 017	001481 003028	ZF 43	63	GEAR SHAFT ELASTIC PIN	16 K 160
T 15771	0631 329 017	001481 003028	ZF 44	63	GEAR SHAFT ELASTIC PIN	16 S 160
T 15771	0631 329 017	001481 003028	ZF 46	63	GEAR SHAFT ELASTIC PIN	16 K 190
T 15771	0631 329 017	001481 003028	ZF 47	63	GEAR SHAFT ELASTIC PIN	16 S 190
T 15775	0631 329 050	001481 005036	ZF 37	62	GEAR SHAFT ELASTIC PIN	16 S 112
T 15775	0631 329 050	001481 005036	ZF 40	62	GEAR SHAFT ELASTIC PIN	16 K 130
T 15775	0631 329 050	001481 005036	ZF 41	62	GEAR SHAFT ELASTIC PIN	16 S 130
T 15775	0631 329 050	001481 005036	ZF 43	62	GEAR SHAFT ELASTIC PIN	16 K 160
T 15775	0631 329 050	001481 005036	ZF 44	62	GEAR SHAFT ELASTIC PIN	16 S 160
T 15775	0631 329 050	001481 005036	ZF 46	62	GEAR SHAFT ELASTIC PIN	16 K 190
T 15775	0631 329 050	001481 005036	ZF 47	62	GEAR SHAFT ELASTIC PIN	16 S 190
T 15934	1297 233 056	000 263 2220	ZF 47	78	SYNCHRONIZER CONE (63 T.)	16 S 190
T 15934	1297 233 056	000 263 2220	ZF 51	78	SYNCHRONIZER CONE (63 T.)	16 S 220
T 15934	1297 233 056	000 263 2220	ZF 57	78	SYNCHRONIZER CONE (63 T.)	16 S 221
T 15940	1316 233 015	-----	ZF 55	81	SYNCHRONIZER CONE (63 T.)	16 S 151
T 15940	1316 233 015	-----	ZF 56	78	SYNCHRONIZER CONE (63 T.)	16 S 181
T 15940	1316 233 015	-----	ZF 57	82	SYNCHRONIZER CONE (63 T.)	16 S 221
T 15940	1316 233 015	-----	ZF 58	79	SYNCHRONIZER CONE (63 T.)	16 S 251
T 16154	1295 298 936	-----	ZF 37	42	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 S 112
T 16154	1295 298 936	-----	ZF 40	35	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 K 130
T 16154	1295 298 936	-----	ZF 41	42	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 S 130
T 16154	1295 298 936	-----	ZF 43	37	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 K 160
T 16154	1295 298 936	-----	ZF 44	42	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 S 160
T 16154	1295 298 936	-----	ZF 46	38	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 K 190
T 16154	1295 298 936	-----	ZF 47	42	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	16 S 190
T 16155	1295 298 937	-----	ZF 37	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
T 16155	1295 298 937	-----	ZF 40	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
T 16155	1295 298 937	-----	ZF 41	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 130
T 16156	1295 298 938	-----	ZF 37	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
T 16156	1295 298 938	-----	ZF 40	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
T 16156	1295 298 938	-----	ZF 41	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 130

PROGRESSIVE TAS REFERENCES



TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 16157	1295 298 939	-----	ZF 41	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 130
T 16157	1295 298 939	-----	ZF 43	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 K 160
T 16157	1295 298 939	-----	ZF 44	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 160
T 16157	1295 298 939	-----	ZF 46	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 K 190
T 16157	1295 298 939	-----	ZF 47	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 190
T 16159	1295 298 950	-----	ZF 41	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 130
T 16159	1295 298 950	-----	ZF 43	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 K 160
T 16159	1295 298 950	-----	ZF 44	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 160
T 16159	1295 298 950	-----	ZF 46	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 K 190
T 16159	1295 298 950	-----	ZF 47	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 190
T 16160	1297 204 019	-----	ZF 37	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 112
T 16160	1297 204 019	-----	ZF 41	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 130
T 16160	1297 204 019	-----	ZF 44	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 160
T 16160	1297 204 019	-----	ZF 47	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 190
T 16161	1297 204 059	-----	ZF 37	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 112
T 16161	1297 204 059	-----	ZF 41	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 130
T 16161	1297 204 059	-----	ZF 44	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 160
T 16161	1297 204 059	-----	ZF 47	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 190
T 16167	1295 298 959	-----	ZF 37	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
T 16167	1295 298 959	-----	ZF 40	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 112
T 16167	1295 298 959	-----	ZF 41	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 130
T 16168	1295 298 962	-----	ZF 47	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 190
T 16168	1295 298 962	-----	ZF 51	81	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 220
T 16173	1297 298 955	-----	ZF 50	50	SYNCHRONIZER REPAIR KIT	16 S 150
T 16173	1297 298 955	-----	ZF 51	50	SYNCHRONIZER REPAIR KIT	16 S 220
T 16173	1297 298 955	-----	ZF 55	52	SYNCHRONIZER REPAIR KIT	16 S 151
T 16173	1297 298 955	-----	ZF 56	47	SYNCHRONIZER REPAIR KIT	16 S 181
T 16173	1297 298 955	-----	ZF 57	51	SYNCHRONIZER REPAIR KIT	16 S 221
T 16173	1297 298 955	-----	ZF 58	36	SYNCHRONIZER REPAIR KIT	16 S 251
T 16175	1315 298 047	-----	ZF 55	78	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 151
T 16568	0730 260 330	000 268 2150	ZF 43	-----	SELECTOR SHAFT BUSHING	16 K 160
T 16568	0730 260 330	000 268 2150	ZF 44	-----	SELECTOR SHAFT BUSHING	16 S 160
T 16568	0730 260 330	000 268 2150	ZF 47	-----	T/M SELECTOR SHAFT BUSHING	16 S 190
T 16568	0730 260 330	000 268 2150	ZF 50	-----	T/M SELECTOR SHAFT BUSHING	16 S 150
T 16568	0730 260 330	000 268 2150	ZF 51	-----	T/M SELECTOR SHAFT BUSHING	16 S 220
T 16568	0730 260 330	000 268 2150	ZF 55	-----	T/M SELECTOR SHAFT BUSHING	16 S 151
T 16568	0730 260 330	000 268 2150	ZF 56	-----	T/M SELECTOR SHAFT BUSHING	16 S 181
T 16568	0730 260 330	000 268 2150	ZF 57	-----	T/M SELECTOR SHAFT BUSHING	16 S 221
T 16568	0730 260 330	000 268 2150	ZF 58	-----	T/M SELECTOR SHAFT BUSHING	16 S 251
T 16595	1297 304 188	000 262 2227	ZF 43	12	THIRD AND FOURTH SPEED CLUTCH GEAR (23 T.)	16 K 160
T 16595	1297 304 188	000 262 2227	ZF 46	13	THIRD AND FOURTH SPEED CLUTCH GEAR (23 T.)	16 K 190
T 16700	1296 298 904	000 262 0306	ZF 37	67	GEAR REPAIR KIT (26 T.)	16 S 112
T 16700	1296 298 904	000 262 0306	ZF 40	67	GEAR REPAIR KIT (26 T.)	16 K 130
T 16700	1296 298 904	000 262 0306	ZF 41	67	GEAR REPAIR KIT (26 T.)	16 S 130
T 16702	1295 232 027	000 260 1497	ZF 37	68	GEAR SET (26 T.) (5 PCS.)	16 S 112
T 16702	1295 232 027	000 260 1497	ZF 40	68	GEAR SET (26 T.) (5 PCS.)	16 K 130
T 16702	1295 232 027	000 260 1497	ZF 41	68	GEAR SET (26 T.) (5 PCS.)	16 S 130
T 16712	1296 312 042	000 267 0519	ZF 37	92	SELECTOR ROD CYLINDER	16 S 112
T 16712	1296 312 042	000 267 0519	ZF 40	92	SELECTOR ROD CYLINDER	16 K 130
T 16712	1296 312 042	000 267 0519	ZF 41	92	SELECTOR ROD CYLINDER	16 S 130
T 16712	1296 312 042	000 267 0519	ZF 43	92	SELECTOR ROD CYLINDER	16 K 160
T 16712	1296 312 042	000 267 0519	ZF 44	92	SELECTOR ROD CYLINDER	16 S 160
T 16712	1296 312 042	000 267 0519	ZF 46	92	SELECTOR ROD CYLINDER	16 K 190
T 16712	1296 312 042	000 267 0519	ZF 47	92	SELECTOR ROD CYLINDER	16 S 190
T 16712	1296 312 042	000 267 0519	ZF 50	92	SELECTOR ROD CYLINDER	16 S 150
T 16712	1296 312 042	000 267 0519	ZF 51	92	SELECTOR ROD CYLINDER	16 S 220
T 16723	1297 304 369	-----	ZF 41	13	SYNCHRONIZER CONE (57 T.)	16 S 130
T 16723	1297 304 369	-----	ZF 47	13	SYNCHRONIZER CONE (57 T.)	16 S 190
T 16726	1297 304 371	-----	ZF 41	20	SYNCHRONIZER CONE (63 T.)	16 S 130
T 16726	1297 304 371	-----	ZF 47	20	SYNCHRONIZER CONE (63 T.)	16 S 190
T 17222	1312 304 159	000 262 4240	ZF 50	23	SYNCHRONIZER SHIFTING PLATE	16 S 150
T 17222	1312 304 159	000 262 4240	ZF 51	23	SYNCHRONIZER SHIFTING PLATE	16 S 220
T 17222	1312 304 159	000 262 4240	ZF 55	22	SYNCHRONIZER SHIFTING PLATE	16 S 151
T 17222	1312 304 159	000 262 4240	ZF 56	22	SYNCHRONIZER SHIFTING PLATE	16 S 181
T 17222	1312 304 159	000 262 4240	ZF 57	22	SYNCHRONIZER SHIFTING PLATE	16 S 221
T 17603	1315 202 022	-----	ZF 55	4	MAIN DRIVE GEAR (57 T.)	16 S 151
T 17608	1315 304 131	-----	ZF 55	15	MAINSHAFT	16 S 151
T 17692	1315 202 037	-----	ZF 55	4	MAIN DRIVE GEAR (57 T.)	16 S 151
T 17696	1315 304 089	-----	ZF 55	9	FOURTH SPEED GEAR (30-32-30 T.)	16 S 151
T 17790	1315 302 173	-----	ZF 55	1	CONSTANT GEAR (30-34 T.)	16 S 151
T 17794	1315 303 046	-----	ZF 55	34	COUNTERSHAFT FOURTH SPEED GEAR (39 T.)	16 S 151
T 17800	1315 303 052	-----	ZF 55	33	COUNTERSHAFT CONSTANT GEAR (37 T.)	16 S 151

TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 17807	1315 304 017	-----	ZF 55	9	FOURTH SPEED GEAR (30-30-30 T.)	16 S 151
T 17825	1316 304 130	000 262 7805	ZF 51	17	MAINSHAFT	16 S 220
T 17825	1316 304 130	000 262 7805	ZF 57	15	MAINSHAFT	16 S 221
T 17834	1315 304 130	-----	ZF 50	17	MAINSHAFT	16 S 150
T 17834	1315 304 130	-----	ZF 55	15	MAINSHAFT	16 S 151
T 17839	1316 304 132	-----	ZF 56	15	MAINSHAFT	16 S 181
T 17839	1316 304 132	-----	ZF 57	15	MAINSHAFT	16 S 221
T 17864	1315 298 060	-----	ZF 50	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 150
T 17864	1315 298 060	-----	ZF 51	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 220
T 17864	1315 298 060	-----	ZF 55	55	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 151
T 17864	1315 298 060	-----	ZF 56	50	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 181
T 17864	1315 298 060	-----	ZF 57	54	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 221
T 17864	1315 298 060	-----	ZF 58	42	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 251
T 17865	1315 298 061	-----	ZF 50	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 150
T 17865	1315 298 061	-----	ZF 51	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 220
T 17865	1315 298 061	-----	ZF 55	53	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 151
T 17865	1315 298 061	-----	ZF 56	48	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 181
T 17865	1315 298 061	-----	ZF 57	52	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 221
T 17865	1315 298 061	-----	ZF 58	41	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 251
T 17866	1316 304 156	-----	ZF 50	26	SYNCHRONIZER CONE (63 T.)	16 S 150
T 17866	1316 304 156	-----	ZF 51	26	SYNCHRONIZER CONE (63 T.)	16 S 220
T 17866	1316 304 156	-----	ZF 55	25	SYNCHRONIZER CONE (63 T.)	16 S 151
T 17866	1316 304 156	-----	ZF 56	25	SYNCHRONIZER CONE (63 T.)	16 S 181
T 17866	1316 304 156	-----	ZF 57	25	SYNCHRONIZER CONE (63 T.)	16 S 221
T 17866	1316 304 156	-----	ZF 58	18	SYNCHRONIZER CONE (63 T.)	16 S 251
T 17867	1316 304 159	-----	ZF 50	12	SYNCHRONIZER CONE (57 T.)	16 S 150
T 17867	1316 304 159	-----	ZF 51	12	SYNCHRONIZER CONE (57 T.)	16 S 220
T 17867	1316 304 159	-----	ZF 55	10	SYNCHRONIZER CONE (57 T.)	16 S 151
T 17867	1316 304 159	-----	ZF 56	10	SYNCHRONIZER CONE (57 T.)	16 S 181
T 17867	1316 304 159	-----	ZF 57	10	SYNCHRONIZER CONE (57 T.)	16 S 221
T 17867	1316 304 159	-----	ZF 58	10	SYNCHRONIZER CONE (57 T.)	16 S 251
T 17868	1316 304 162	-----	ZF 50	14	SYNCHRONIZER HUB (57 T.)	16 S 150
T 17868	1316 304 162	-----	ZF 51	14	SYNCHRONIZER HUB (57 T.)	16 S 220
T 17868	1316 304 162	-----	ZF 55	12	SYNCHRONIZER HUB (57 T.)	16 S 151
T 17868	1316 304 162	-----	ZF 56	12	SYNCHRONIZER HUB (57 T.)	16 S 181
T 17868	1316 304 162	-----	ZF 57	12	SYNCHRONIZER HUB (57 T.)	16 S 221
T 17868	1316 304 162	-----	ZF 58	12	SYNCHRONIZER HUB (57 T.)	16 S 251
T 17869	1316 304 163	-----	ZF 50	28	SYNCHRONIZER HUB (63 T.)	16 S 150
T 17869	1316 304 163	-----	ZF 51	28	SYNCHRONIZER HUB (63 T.)	16 S 220
T 17869	1316 304 163	-----	ZF 55	27	SYNCHRONIZER HUB (63 T.)	16 S 151
T 17869	1316 304 163	-----	ZF 56	27	SYNCHRONIZER HUB (63 T.)	16 S 181
T 17869	1316 304 163	-----	ZF 57	27	SYNCHRONIZER HUB (63 T.)	16 S 221
T 17869	1316 304 163	-----	ZF 58	20	SYNCHRONIZER HUB (63 T.)	16 S 251
T 17870	1316 304 167	-----	ZF 50	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 150
T 17870	1316 304 167	-----	ZF 51	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 220
T 17870	1316 304 167	-----	ZF 55	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 151
T 17870	1316 304 167	-----	ZF 56	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 181
T 17870	1316 304 167	-----	ZF 57	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 221
T 17870	1316 304 167	-----	ZF 58	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 251
T 17871	1316 304 168	-----	ZF 50	13	SYNCHRONIZER BLOCKING RING	16 S 150
T 17871	1316 304 168	-----	ZF 51	13	SYNCHRONIZER BLOCKING RING	16 S 220
T 17871	1316 304 168	-----	ZF 55	11	SYNCHRONIZER BLOCKING RING	16 S 151
T 17871	1316 304 168	-----	ZF 56	11	SYNCHRONIZER BLOCKING RING	16 S 181
T 17871	1316 304 168	-----	ZF 57	11	SYNCHRONIZER BLOCKING RING	16 S 221
T 17871	1316 304 168	-----	ZF 58	11	SYNCHRONIZER BLOCKING RING	16 S 251
T 17872	1316 304 169	-----	ZF 50	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
T 17872	1316 304 169	-----	ZF 51	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
T 17872	1316 304 169	-----	ZF 55	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
T 17872	1316 304 169	-----	ZF 56	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
T 17872	1316 304 169	-----	ZF 57	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
T 17872	1316 304 169	-----	ZF 58	21	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 251
T 17873	1316 304 170	-----	ZF 50	27	SYNCHRONIZER BLOCKING RING	16 S 150
T 17873	1316 304 170	-----	ZF 51	27	SYNCHRONIZER BLOCKING RING	16 S 220
T 17873	1316 304 170	-----	ZF 55	26	SYNCHRONIZER BLOCKING RING	16 S 151
T 17873	1316 304 170	-----	ZF 56	26	SYNCHRONIZER BLOCKING RING	16 S 181
T 17873	1316 304 170	-----	ZF 57	26	SYNCHRONIZER BLOCKING RING	16 S 221
T 17873	1316 304 170	-----	ZF 58	19	SYNCHRONIZER BLOCKING RING	16 S 251
T 17877	1316 304 150	001 262 1034	ZF 51	27	SYNCHRONIZER BLOCKING RING	16 S 220
T 17880	1297 304 401	000 262 4934	ZF 41	21	SYNCHRONIZER BLOCKING RING	16 S 130
T 17880	1297 304 401	000 262 4934	ZF 47	21	SYNCHRONIZER BLOCKING RING	16 S 190
T 17880	1297 304 401	000 262 4934	ZF 50	27	SYNCHRONIZER BLOCKING RING	16 S 150
T 17880	1297 304 401	000 262 4934	ZF 51	27	SYNCHRONIZER BLOCKING RING	16 S 220

PROGRESSIVE TAS REFERENCES



TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 17880	1297 304 401	000 262 4934	ZF 55	26	SYNCHRONIZER BLOCKING RING	16 S 151
T 17880	1297 304 401	000 262 4934	ZF 56	26	SYNCHRONIZER BLOCKING RING	16 S 181
T 17880	1297 304 401	000 262 4934	ZF 57	26	SYNCHRONIZER BLOCKING RING	16 S 221
T 17880	1297 304 401	000 262 4934	ZF 58	19	SYNCHRONIZER BLOCKING RING	16 S 251
T 17886	1312 304 052	000 262 5835	ZF 50	14	SYNCHRONIZER HUB (57 T.)	16 S 150
T 17886	1312 304 052	000 262 5835	ZF 51	14	SYNCHRONIZER HUB (57 T.)	16 S 220
T 17886	1312 304 052	000 262 5835	ZF 55	12	SYNCHRONIZER HUB (57 T.)	16 S 151
T 17886	1312 304 052	000 262 5835	ZF 56	12	SYNCHRONIZER HUB (57 T.)	16 S 181
T 17886	1312 304 052	000 262 5835	ZF 57	12	SYNCHRONIZER HUB (57 T.)	16 S 221
T 17886	1312 304 052	000 262 5835	ZF 58	12	SYNCHRONIZER HUB (57 T.)	16 S 251
T 17892	1296 334 004	000 265 0649	ZF 37	91	SLIDING BLOCK (BRONZE)	16 S 112
T 17892	1296 334 004	000 265 0649	ZF 40	91	SLIDING BLOCK (BRONZE)	16 K 130
T 17892	1296 334 004	000 265 0649	ZF 41	91	SLIDING BLOCK (BRONZE)	16 S 130
T 17892	1296 334 004	000 265 0649	ZF 43	91	SLIDING BLOCK (BRONZE)	16 K 160
T 17892	1296 334 004	000 265 0649	ZF 44	91	SLIDING BLOCK (BRONZE)	16 S 160
T 17892	1296 334 004	000 265 0649	ZF 46	91	SLIDING BLOCK (BRONZE)	16 K 190
T 17892	1296 334 004	000 265 0649	ZF 47	91	SLIDING BLOCK (BRONZE)	16 S 190
T 17892	1296 334 004	000 265 0649	ZF 50	91	SLIDING BLOCK (BRONZE)	16 S 150
T 17892	1296 334 004	000 265 0649	ZF 51	91	SLIDING BLOCK (BRONZE)	16 S 220
T 17892	1296 334 004	000 265 0649	ZF 55	91	SLIDING BLOCK (BRONZE)	16 S 151
T 17892	1296 334 004	000 265 0649	ZF 56	91	SLIDING BLOCK (BRONZE)	16 S 181
T 17892	1296 334 004	000 265 0649	ZF 57	91	SLIDING BLOCK (BRONZE)	16 S 221
T 17892	1296 334 004	000 265 0649	ZF 58	91	SLIDING BLOCK (BRONZE)	16 S 251
T 17901	1297 306 120	000 268 1149	ZF 50	90	SLIDING BLOCK (BRONZE)	16 S 150
T 17901	1297 306 120	000 268 1149	ZF 51	90	SLIDING BLOCK (BRONZE)	16 S 220
T 17901	1297 306 120	000 268 1149	ZF 55	90	SLIDING BLOCK (BRONZE)	16 S 151
T 17901	1297 306 120	000 268 1149	ZF 56	90	SLIDING BLOCK (BRONZE)	16 S 181
T 17901	1297 306 120	000 268 1149	ZF 57	90	SLIDING BLOCK (BRONZE)	16 S 221
T 17901	1297 306 120	000 268 1149	ZF 58	90	SLIDING BLOCK (BRONZE)	16 S 251
T 17909	1316 202 025	-----	ZF 56	4	MAIN DRIVE GEAR (57 T.)	16 S 181
T 17909	1316 202 025	-----	ZF 57	4	MAIN DRIVE GEAR (57 T.)	16 S 221
T 17909	1316 202 025	-----	ZF 58	4	MAIN DRIVE GEAR (57 T.)	16 S 251
T 17914	1316 304 103	-----	ZF 56	9	FOURTH SPEED GEAR (30-32-30 T.)	16 S 181
T 17914	1316 304 103	-----	ZF 57	9	FOURTH SPEED GEAR (30-32-30 T.)	16 S 221
T 17914	1316 304 103	-----	ZF 58	9	FOURTH SPEED GEAR (30-32-30 T.)	16 S 251
T 18028	1297 304 485	-----	ZF 41	21	SYNCHRONIZER BLOCKING RING	16 S 130
T 18028	1297 304 485	-----	ZF 47	21	SYNCHRONIZER BLOCKING RING	16 S 190
T 18028	1297 304 485	-----	ZF 50	27	SYNCHRONIZER BLOCKING RING	16 S 150
T 18028	1297 304 485	-----	ZF 51	27	SYNCHRONIZER BLOCKING RING	16 S 220
T 18028	1297 304 485	-----	ZF 55	26	SYNCHRONIZER BLOCKING RING	16 S 151
T 18028	1297 304 485	-----	ZF 56	26	SYNCHRONIZER BLOCKING RING	16 S 181
T 18028	1297 304 485	-----	ZF 57	26	SYNCHRONIZER BLOCKING RING	16 S 221
T 18028	1297 304 485	-----	ZF 58	19	SYNCHRONIZER BLOCKING RING	16 S 251
T 18035	1313 304 009	-----	ZF 50	26	SYNCHRONIZER CONE (63 T.)	16 S 150
T 18035	1313 304 009	-----	ZF 51	26	SYNCHRONIZER CONE (63 T.)	16 S 220
T 18035	1313 304 009	-----	ZF 55	25	SYNCHRONIZER CONE (63 T.)	16 S 151
T 18035	1313 304 009	-----	ZF 56	25	SYNCHRONIZER CONE (63 T.)	16 S 181
T 18035	1313 304 009	-----	ZF 57	25	SYNCHRONIZER CONE (63 T.)	16 S 221
T 18035	1313 304 009	-----	ZF 58	18	SYNCHRONIZER CONE (63 T.)	16 S 251
T 18042	1296 333 050	-----	ZF 55	80	SYNCHRONIZER CONE (63-58 T.)	16 S 151
T 18042	1296 333 050	-----	ZF 56	71	SYNCHRONIZER CONE (63-58 T.)	16 S 181
T 18042	1296 333 050	-----	ZF 57	80	SYNCHRONIZER CONE (63-58 T.)	16 S 221
T 18042	1296 333 050	-----	ZF 58	72	SYNCHRONIZER CONE (63-58 T.)	16 S 251
T 18047	1312 304 158	-----	ZF 50	24	SYNCHRONIZER HUB (63 T.)	16 S 150
T 18047	1312 304 158	-----	ZF 51	24	SYNCHRONIZER HUB (63 T.)	16 S 220
T 18047	1312 304 158	-----	ZF 55	23	SYNCHRONIZER HUB (63 T.)	16 S 151
T 18047	1312 304 158	-----	ZF 56	23	SYNCHRONIZER HUB (63 T.)	16 S 181
T 18047	1312 304 158	-----	ZF 57	23	SYNCHRONIZER HUB (63 T.)	16 S 221
T 18052	1313 333 001	-----	ZF 50	73	SYNCHRONIZER HUB (63 T.)	16 S 150
T 18052	1313 333 001	-----	ZF 55	73	SYNCHRONIZER HUB (63 T.)	16 S 151
T 18052	1313 333 001	-----	ZF 56	73	SYNCHRONIZER HUB (63 T.)	16 S 181
T 18052	1313 333 001	-----	ZF 57	81	SYNCHRONIZER HUB (63 T.)	16 S 221
T 18052	1313 333 001	-----	ZF 58	74	SYNCHRONIZER HUB (63 T.)	16 S 251
T 18060	1315 298 054	-----	ZF 50	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 150
T 18060	1315 298 054	-----	ZF 51	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 220
T 18060	1315 298 054	-----	ZF 55	55	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 151
T 18060	1315 298 054	-----	ZF 56	50	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 181
T 18060	1315 298 054	-----	ZF 57	54	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 221
T 18060	1315 298 054	-----	ZF 58	42	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 251
T 18061	1315 298 055	-----	ZF 50	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 150
T 18061	1315 298 055	-----	ZF 51	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 220
T 18061	1315 298 055	-----	ZF 55	53	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 151

TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 18061	1315 298 055	-----	ZF 56	48	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 181
T 18061	1315 298 055	-----	ZF 57	52	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 221
T 18061	1315 298 055	-----	ZF 58	41	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 251
T 18062	1315 304 027	-----	ZF 55	14	THIRD SPEED GEAR (34-30 T.)	16 S 151
T 18068	1315 304 135	-----	ZF 50	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 150
T 18068	1315 304 135	-----	ZF 51	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 220
T 18068	1315 304 135	-----	ZF 55	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 151
T 18068	1315 304 135	-----	ZF 56	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 181
T 18068	1315 304 135	-----	ZF 57	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 221
T 18068	1315 304 135	-----	ZF 58	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 251
T 18070	1315 304 136	-----	ZF 50	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
T 18070	1315 304 136	-----	ZF 51	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
T 18070	1315 304 136	-----	ZF 55	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
T 18070	1315 304 136	-----	ZF 56	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
T 18070	1315 304 136	-----	ZF 57	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
T 18070	1315 304 136	-----	ZF 58	21	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 251
T 18071	1316 304 145	-----	ZF 50	12	SYNCHRONIZER CONE (57 T.)	16 S 150
T 18071	1316 304 145	-----	ZF 51	12	SYNCHRONIZER CONE (57 T.)	16 S 220
T 18071	1316 304 145	-----	ZF 55	10	SYNCHRONIZER CONE (57 T.)	16 S 151
T 18071	1316 304 145	-----	ZF 56	10	SYNCHRONIZER CONE (57 T.)	16 S 181
T 18071	1316 304 145	-----	ZF 57	10	SYNCHRONIZER CONE (57 T.)	16 S 221
T 18071	1316 304 145	-----	ZF 58	10	SYNCHRONIZER CONE (57 T.)	16 S 251
T 18072	1316 304 146	-----	ZF 50	26	SYNCHRONIZER CONE (63 T.)	16 S 150
T 18072	1316 304 146	-----	ZF 51	26	SYNCHRONIZER CONE (63 T.)	16 S 220
T 18072	1316 304 146	-----	ZF 55	25	SYNCHRONIZER CONE (63 T.)	16 S 151
T 18072	1316 304 146	-----	ZF 56	25	SYNCHRONIZER CONE (63 T.)	16 S 181
T 18072	1316 304 146	-----	ZF 57	25	SYNCHRONIZER CONE (63 T.)	16 S 221
T 18072	1316 304 146	-----	ZF 58	18	SYNCHRONIZER CONE (63 T.)	16 S 251
T 18073	1316 304 147	-----	ZF 50	14	SYNCHRONIZER HUB (57 T.)	16 S 150
T 18073	1316 304 147	-----	ZF 51	14	SYNCHRONIZER HUB (57 T.)	16 S 220
T 18073	1316 304 147	-----	ZF 55	12	SYNCHRONIZER HUB (57 T.)	16 S 151
T 18073	1316 304 147	-----	ZF 56	12	SYNCHRONIZER HUB (57 T.)	16 S 181
T 18073	1316 304 147	-----	ZF 57	12	SYNCHRONIZER HUB (57 T.)	16 S 221
T 18073	1316 304 147	-----	ZF 58	12	SYNCHRONIZER HUB (57 T.)	16 S 251
T 18074	1316 304 148	-----	ZF 50	28	SYNCHRONIZER HUB (63 T.)	16 S 150
T 18074	1316 304 148	-----	ZF 51	28	SYNCHRONIZER HUB (63 T.)	16 S 220
T 18074	1316 304 148	-----	ZF 55	27	SYNCHRONIZER HUB (63 T.)	16 S 151
T 18074	1316 304 148	-----	ZF 56	27	SYNCHRONIZER HUB (63 T.)	16 S 181
T 18074	1316 304 148	-----	ZF 57	27	SYNCHRONIZER HUB (63 T.)	16 S 221
T 18074	1316 304 148	-----	ZF 58	20	SYNCHRONIZER HUB (63 T.)	16 S 251
T 18075	1316 304 149	-----	ZF 50	13	SYNCHRONIZER BLOCKING RING	16 S 150
T 18075	1316 304 149	-----	ZF 51	13	SYNCHRONIZER BLOCKING RING	16 S 220
T 18075	1316 304 149	-----	ZF 55	11	SYNCHRONIZER BLOCKING RING	16 S 151
T 18075	1316 304 149	-----	ZF 56	11	SYNCHRONIZER BLOCKING RING	16 S 181
T 18075	1316 304 149	-----	ZF 57	11	SYNCHRONIZER BLOCKING RING	16 S 221
T 18075	1316 304 149	-----	ZF 58	11	SYNCHRONIZER BLOCKING RING	16 S 251
T 18077	1316 304 150	001 262 1034	ZF 50	27	SYNCHRONIZER BLOCKING RING	16 S 150
T 18077	1316 304 150	001 262 1034	ZF 55	26	SYNCHRONIZER BLOCKING RING	16 S 151
T 18077	1316 304 150	001 262 1034	ZF 56	26	SYNCHRONIZER BLOCKING RING	16 S 181
T 18077	1316 304 150	001 262 1034	ZF 57	26	SYNCHRONIZER BLOCKING RING	16 S 221
T 18077	1316 304 150	001 262 1034	ZF 58	19	SYNCHRONIZER BLOCKING RING	16 S 251
T 18078	1315 298 034	-----	ZF 55	82	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 151
T 18078	1315 298 034	-----	ZF 56	80	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 181
T 18078	1315 298 034	-----	ZF 57	83	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 221
T 18264	1315 304 028	-----	ZF 55	14	THIRD SPEED GEAR (32-30 T.)	16 S 151
T 18269	1315 304 029	-----	ZF 55	15	MAINSHAFT	16 S 151
T 18287	1313 304 008	-----	ZF 50	28	SYNCHRONIZER HUB (63 T.)	16 S 150
T 18287	1313 304 008	-----	ZF 51	28	SYNCHRONIZER HUB (63 T.)	16 S 220
T 18287	1313 304 008	-----	ZF 55	27	SYNCHRONIZER HUB (63 T.)	16 S 151
T 18287	1313 304 008	-----	ZF 56	27	SYNCHRONIZER HUB (63 T.)	16 S 181
T 18287	1313 304 008	-----	ZF 57	27	SYNCHRONIZER HUB (63 T.)	16 S 221
T 18287	1313 304 008	-----	ZF 58	20	SYNCHRONIZER HUB (63 T.)	16 S 251
T 18292	1316 233 014	-----	ZF 55	84	SYNCHRONIZER CONE (59-63 T.)	16 S 151
T 18292	1316 233 014	-----	ZF 56	79	SYNCHRONIZER CONE (59-63 T.)	16 S 181
T 18292	1316 233 014	-----	ZF 57	85	SYNCHRONIZER CONE (59-63 T.)	16 S 221
T 18297	1316 304 078	000 262 7623	ZF 50	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
T 18297	1316 304 078	000 262 7623	ZF 51	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
T 18297	1316 304 078	000 262 7623	ZF 55	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
T 18297	1316 304 078	000 262 7623	ZF 56	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
T 18297	1316 304 078	000 262 7623	ZF 57	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
T 18297	1316 304 078	000 262 7623	ZF 58	21	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 251
T 18313	1297 304 442	000 262 6512	ZF 44	19	SECOND SPEED GEAR (38-58 T.)	16 S 160

PROGRESSIVE TAS REFERENCES



TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 18313	1297 304 442	000 262 6512	ZF 47	19	SECOND SPEED GEAR (38-58 T.)	16 S 190
T 18326	1297 304 150	000 262 6811	ZF 43	20	FIRST SPEED GEAR (47-22 T.)	16 K 160
T 18328	1297 304 261	000 262 6913	ZF 44	17	THIRD SPEED GEAR (34-58 T.)	16 S 160
T 18328	1297 304 261	000 262 6913	ZF 47	17	THIRD SPEED GEAR (34-58 T.)	16 S 190
T 18339	1297 303 140	000 263 5002	ZF 44	33	COUNTERSHAFT (17-20 T.)	16 S 160
T 18339	1297 303 140	000 263 5002	ZF 47	33	COUNTERSHAFT (17-20 T.)	16 S 190
T 18353	1297 304 181	000 262 2705	ZF 44	18	MAINSHAFT	16 S 160
T 18353	1297 304 181	000 262 2705	ZF 47	18	MAINSHAFT	16 S 190
T 18461	1312 304 124	-----	ZF 56	31	FIRST SPEED AND REVERSE GEAR CONE (23 T.)	16 S 181
T 18461	1312 304 124	-----	ZF 57	31	FIRST SPEED AND REVERSE GEAR CONE (23 T.)	16 S 221
T 18461	1312 304 124	-----	ZF 58	24	FIRST SPEED AND REVERSE GEAR CONE (23 T.)	16 S 251
T 18466	1315 303 050	-----	ZF 55	34	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 151
T 18524	0501 314 060	-----	ZF 50	49	MAIN DRIVE GEAR DIAPHRAGM	16 S 150
T 18524	0501 314 060	-----	ZF 51	49	MAIN DRIVE GEAR DIAPHRAGM	16 S 220
T 18524	0501 314 060	-----	ZF 55	42	MAIN DRIVE GEAR DIAPHRAGM	16 S 151
T 18524	0501 314 060	-----	ZF 56	42	MAIN DRIVE GEAR DIAPHRAGM	16 S 181
T 18524	0501 314 060	-----	ZF 57	43	MAIN DRIVE GEAR DIAPHRAGM	16 S 221
T 18524	0501 314 060	-----	ZF 58	35	MAIN DRIVE GEAR DIAPHRAGM	16 S 251
T 18530	0630 502 027	-----	ZF 50	48	MAIN DRIVE GEAR SEEGER RING	16 S 150
T 18530	0630 502 027	-----	ZF 51	48	MAIN DRIVE GEAR SEEGER RING	16 S 220
T 18530	0630 502 027	-----	ZF 55	41	MAIN DRIVE GEAR SEEGER RING	16 S 151
T 18530	0630 502 027	-----	ZF 56	41	MAIN DRIVE GEAR SEEGER RING	16 S 181
T 18530	0630 502 027	-----	ZF 57	42	MAIN DRIVE GEAR SEEGER RING	16 S 221
T 18530	0630 502 027	-----	ZF 58	34	MAIN DRIVE GEAR SEEGER RING	16 S 251
T 18533	1315 302 196	-----	ZF 50	47	MAIN DRIVE GEAR OIL TUBE	16 S 150
T 18533	1315 302 196	-----	ZF 51	47	MAIN DRIVE GEAR OIL TUBE	16 S 220
T 18533	1315 302 196	-----	ZF 55	40	MAIN DRIVE GEAR OIL TUBE	16 S 151
T 18533	1315 302 196	-----	ZF 56	40	MAIN DRIVE GEAR OIL TUBE	16 S 181
T 18533	1315 302 196	-----	ZF 57	41	MAIN DRIVE GEAR OIL TUBE	16 S 221
T 18533	1315 302 196	-----	ZF 58	33	MAIN DRIVE GEAR OIL TUBE	16 S 251
T 18554	1315 302 008	-----	ZF 55	1	CONSTANT GEAR (34-40 T.)	16 S 151
T 18559	1315 303 051	-----	ZF 55	33	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 151
T 18563	1315 304 018	-----	ZF 55	31	FIRST SPEED AND REVERSE GEAR CONE (23 T.)	16 S 151
T 18581	1295 307 274	000 267 0503	ZF 37	-----	GEAR SHIFT FORK SHAFT	16 S 112
T 18581	1295 307 274	000 267 0503	ZF 40	-----	GEAR SHIFT FORK SHAFT	16 K 130
T 18581	1295 307 274	000 267 0503	ZF 41	-----	GEAR SHIFT FORK SHAFT	16 S 130
T 18581	1295 307 274	000 267 0503	ZF 43	-----	GEAR SHIFT FORK SHAFT	16 K 160
T 18581	1295 307 274	000 267 0503	ZF 44	-----	GEAR SHIFT FORK SHAFT	16 S 160
T 18581	1295 307 274	000 267 0503	ZF 47	-----	GEAR SHIFT FORK SHAFT	16 S 190
T 18581	1295 307 274	000 267 0503	ZF 50	-----	GEAR SHIFT FORK SHAFT	16 S 150
T 18581	1295 307 274	000 267 0503	ZF 51	-----	GEAR SHIFT FORK SHAFT	16 S 220
T 18619	1297 298 956	-----	ZF 37	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 112
T 18619	1297 298 956	-----	ZF 41	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 130
T 18619	1297 298 956	-----	ZF 44	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 160
T 18619	1297 298 956	-----	ZF 47	44	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 190
T 18620	1297 298 958	-----	ZF 37	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 112
T 18620	1297 298 958	-----	ZF 41	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 130
T 18620	1297 298 958	-----	ZF 44	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 160
T 18620	1297 298 958	-----	ZF 47	43	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 190
T 18625	1312 298 911	-----	ZF 50	52	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 150
T 18625	1312 298 911	-----	ZF 51	52	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 220
T 18625	1312 298 911	-----	ZF 55	54	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 151
T 18625	1312 298 911	-----	ZF 56	49	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 181
T 18625	1312 298 911	-----	ZF 57	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 221
T 18629	1313 204 003	-----	ZF 50	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 150
T 18629	1313 204 003	-----	ZF 51	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 220
T 18629	1313 204 003	-----	ZF 55	55	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 151
T 18629	1313 204 003	-----	ZF 56	50	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 181
T 18629	1313 204 003	-----	ZF 57	54	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 221
T 18629	1313 204 003	-----	ZF 58	42	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 251
T 18631	1313 298 909	-----	ZF 50	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 150
T 18631	1313 298 909	-----	ZF 51	53	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 220
T 18631	1313 298 909	-----	ZF 55	55	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 151
T 18631	1313 298 909	-----	ZF 56	50	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 181
T 18631	1313 298 909	-----	ZF 57	54	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 221
T 18631	1313 298 909	-----	ZF 58	42	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 251
T 18632	1315 298 018	-----	ZF 50	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 150
T 18632	1315 298 018	-----	ZF 51	51	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 220
T 18632	1315 298 018	-----	ZF 55	53	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 151
T 18632	1315 298 018	-----	ZF 56	48	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 181
T 18632	1315 298 018	-----	ZF 57	52	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 221
T 18632	1315 298 018	-----	ZF 58	41	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	16 S 251

TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 18869	1295 307 479	000 267 2622	ZF 37	-----	FRONT CASE SIDE COVER	16 S 112
T 18869	1295 307 479	000 267 2622	ZF 40	-----	FRONT CASE SIDE COVER	16 K 130
T 18869	1295 307 479	000 267 2622	ZF 41	-----	FRONT CASE SIDE COVER	16 S 130
T 18869	1295 307 479	000 267 2622	ZF 43	-----	FRONT CASE SIDE COVER	16 K 160
T 18869	1295 307 479	000 267 2622	ZF 44	-----	FRONT CASE SIDE COVER	16 S 160
T 18869	1295 307 479	000 267 2622	ZF 46	-----	FRONT CASE SIDE COVER	16 K 190
T 18869	1295 307 479	000 267 2622	ZF 47	-----	FRONT CASE SIDE COVER	16 S 190
T 18869	1295 307 479	000 267 2622	ZF 50	-----	FRONT CASE SIDE COVER	16 S 150
T 18869	1295 307 479	000 267 2622	ZF 51	-----	FRONT CASE SIDE COVER	16 S 220
T 18886	1295 307 275	000 267 0803	ZF 37	-----	GEAR SHIFT FORK SHAFT	16 S 112
T 18886	1295 307 275	000 267 0803	ZF 41	-----	GEAR SHIFT FORK SHAFT	16 S 130
T 18886	1295 307 275	000 267 0803	ZF 44	-----	GEAR SHIFT FORK SHAFT	16 S 160
T 18886	1295 307 275	000 267 0803	ZF 46	-----	GEAR SHIFT FORK SHAFT	16 K 190
T 18886	1295 307 275	000 267 0803	ZF 47	-----	GEAR SHIFT FORK SHAFT	16 S 190
T 18886	1295 307 275	000 267 0803	ZF 50	-----	GEAR SHIFT FORK SHAFT	16 S 150
T 18886	1295 307 275	000 267 0803	ZF 51	-----	GEAR SHIFT FORK SHAFT	16 S 220
T 18889	1297 304 441	000 262 9211	ZF 44	25	FIRST SPEED GEAR (47-58 T.)	16 S 160
T 18889	1297 304 441	000 262 9211	ZF 47	25	FIRST SPEED GEAR (47-58 T.)	16 S 190
T 19041	1316 303 005	-----	ZF 57	35	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	16 S 221
T 19046	1316 303 033	-----	ZF 56	36	COUNTERSHAFT (17-20 T.)	16 S 181
T 19046	1316 303 033	-----	ZF 57	36	COUNTERSHAFT (17-20 T.)	16 S 221
T 19051	1316 303 064	-----	ZF 57	33	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 221
T 19051	1316 303 064	-----	ZF 58	26	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 251
T 19056	1316 303 065	-----	ZF 57	34	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 221
T 19056	1316 303 065	-----	ZF 58	27	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 251
T 19061	1316 304 008	-----	ZF 57	14	THIRD SPEED GEAR (34-30 T.)	16 S 221
T 19074	1297 304 179	000 262 3605	ZF 43	15	MAINSHAFT	16 K 160
T 19074	1297 304 179	000 262 3605	ZF 46	16	MAINSHAFT	16 K 190
T 19096	1295 302 019	001 262 0202	ZF 41	4	MAIN DRIVE GEAR (57 T.)	16 S 130
T 19100	1295 304 012	000 262 2050	ZF 37	26	REVERSE GEAR SLEEVE	16 S 112
T 19100	1295 304 012	000 262 2050	ZF 40	21	REVERSE GEAR SLEEVE	16 K 130
T 19100	1295 304 012	000 262 2050	ZF 41	26	REVERSE GEAR SLEEVE	16 S 130
T 19109	1295 304 178	-----	ZF 40	18	FIRST AND SECOND SPEED SLIDING COLLAR (22 T.)	16 K 130
T 19111	1295 304 236	-----	ZF 41	12	FOURTH SPEED GEAR (58-26-58 T.)	16 S 130
T 19116	1295 307 243	000 267 0474	ZF 37	-----	GEAR SHIFT CONTROL ROD PIN	16 S 112
T 19116	1295 307 243	000 267 0474	ZF 40	-----	GEAR SHIFT CONTROL ROD PIN	16 K 130
T 19116	1295 307 243	000 267 0474	ZF 41	-----	GEAR SHIFT CONTROL ROD PIN	16 S 130
T 19116	1295 307 243	000 267 0474	ZF 43	-----	GEAR SHIFT CONTROL ROD PIN	16 K 160
T 19116	1295 307 243	000 267 0474	ZF 44	-----	GEAR SHIFT CONTROL ROD PIN	16 S 160
T 19116	1295 307 243	000 267 0474	ZF 46	-----	GEAR SHIFT CONTROL ROD PIN	16 K 190
T 19116	1295 307 243	000 267 0474	ZF 47	-----	GEAR SHIFT CONTROL ROD PIN	16 S 190
T 19116	1295 307 243	000 267 0474	ZF 50	-----	GEAR SHIFT CONTROL ROD PIN	16 S 150
T 19116	1295 307 243	000 267 0474	ZF 51	-----	GEAR SHIFT CONTROL ROD PIN	16 S 220
T 19124	1295 307 294	000 267 0820	ZF 37	-----	GEAR SHIFT CONTROL ROD COVER	16 S 112
T 19124	1295 307 294	000 267 0820	ZF 40	-----	GEAR SHIFT CONTROL ROD COVER	16 K 130
T 19124	1295 307 294	000 267 0820	ZF 41	-----	GEAR SHIFT CONTROL ROD COVER	16 S 130
T 19124	1295 307 294	000 267 0820	ZF 43	-----	GEAR SHIFT CONTROL ROD COVER	16 K 160
T 19124	1295 307 294	000 267 0820	ZF 44	-----	GEAR SHIFT CONTROL ROD COVER	16 S 160
T 19124	1295 307 294	000 267 0820	ZF 47	-----	GEAR SHIFT CONTROL ROD COVER	16 S 190
T 19124	1295 307 294	000 267 0820	ZF 50	-----	GEAR SHIFT CONTROL ROD COVER	16 S 150
T 19124	1295 307 294	000 267 0820	ZF 51	-----	GEAR SHIFT CONTROL ROD COVER	16 S 220
T 19130	1295 307 533	000 265 2031	ZF 37	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 112
T 19130	1295 307 533	000 265 2031	ZF 40	-----	GEAR SHIFT CONTROL ROD LEVER	16 K 130
T 19130	1295 307 533	000 265 2031	ZF 41	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 130
T 19130	1295 307 533	000 265 2031	ZF 43	-----	GEAR SHIFT CONTROL ROD LEVER	16 K 160
T 19130	1295 307 533	000 265 2031	ZF 44	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 160
T 19130	1295 307 533	000 265 2031	ZF 51	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 220
T 19132	1296 304 070	000 262 2512	ZF 37	19	SECOND SPEED GEAR (38-58 T.)	16 S 112
T 19135	1296 304 119	000 262 2505	ZF 37	18	MAINSHAFT	16 S 112
T 19140	1316 302 066	-----	ZF 56	1	CONSTANT GEAR (30-30 T.)	16 S 181
T 19140	1316 302 066	-----	ZF 57	1	CONSTANT GEAR (30-30 T.)	16 S 221
T 19145	1316 303 056	-----	ZF 56	33	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 181
T 19150	1316 303 058	-----	ZF 56	35	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	16 S 181
T 19155	1316 303 063	-----	ZF 56	34	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 181
T 19160	1316 304 002	-----	ZF 56	17	SECOND SPEED GEAR (38-30 T.)	16 S 181
T 19160	1316 304 002	-----	ZF 57	17	SECOND SPEED GEAR (38-30 T.)	16 S 221
T 19160	1316 304 002	-----	ZF 58	17	SECOND SPEED GEAR (38-30 T.)	16 S 251
T 19166	1316 304 094	-----	ZF 56	14	THIRD SPEED GEAR (34-30 T.)	16 S 181
T 19174	1315 302 158	-----	ZF 55	1	CONSTANT GEAR (30-35 T.)	16 S 151
T 19178	1315 303 004	-----	ZF 55	35	COUNTERSHAFT THIRD SPEED GEAR (26T.)	16 S 151
T 19184	1315 304 025	-----	ZF 55	17	SECOND SPEED GEAR (38-30 T.)	16 S 151
T 19190	1315 304 132	-----	ZF 50	33	REVERSE SPEED GEAR SLEEVE	16 S 150

PROGRESSIVE TAS REFERENCES



TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 19201	1316 306 015	-----	ZF 57	92	SLIDING BLOCK	16 S 221
T 19201	1316 306 015	-----	ZF 58	90	SLIDING BLOCK	16 S 251
T 19288	1297 303 077	000 263 6710	ZF 43	27	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 K 160
T 19288	1297 303 077	000 263 6710	ZF 46	28	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 K 190
T 19293	1297 304 151	-----	ZF 43	20	FIRST SPEED GEAR (44-22 T.)	16 K 160
T 19360	1295 304 206	000 262 1540	ZF 37	25	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 112
T 19360	1295 304 206	000 262 1540	ZF 40	20	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 K 130
T 19360	1295 304 206	000 262 1540	ZF 41	25	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 130
T 19368	1297 304 154	000 262 1640	ZF 43	21	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 K 160
T 19368	1297 304 154	000 262 1640	ZF 44	26	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 160
T 19368	1297 304 154	000 262 1640	ZF 46	22	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 K 190
T 19368	1297 304 154	000 262 1640	ZF 47	26	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 190
T 19375	1316 233 010	-----	ZF 57	84	SYNCHRONIZER CONE (59-63 T.)	16 S 221
T 19379	1316 302 057	-----	ZF 56	1	CONSTANT GEAR (35-30 T.)	16 S 181
T 19384	1316 302 065	-----	ZF 57	1	CONSTANT GEAR (34-30 T.)	16 S 221
T 19388	1316 302 067	-----	ZF 57	1	CONSTANT GEAR (35-30 T.)	16 S 221
T 19388	1316 302 067	-----	ZF 58	1	CONSTANT GEAR (35-30 T.)	16 S 251
T 19393	1316 303 006	-----	ZF 57	35	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 221
T 19397	1316 304 007	-----	ZF 57	9	FOURTH SPEED GEAR (30-30-30 T.)	16 S 221
T 19401	1316 304 010	-----	ZF 56	30	FIRST SPEED GEAR (47-30 T.)	16 S 181
T 19401	1316 304 010	-----	ZF 57	30	FIRST SPEED GEAR (47-30 T.)	16 S 221
T 19401	1316 304 010	-----	ZF 58	23	FIRST SPEED GEAR (47-30 T.)	16 S 251
T 19407	1316 304 012	-----	ZF 56	32	REVERSE GEAR (44-23 T.)	16 S 181
T 19407	1316 304 012	-----	ZF 57	32	REVERSE GEAR (44-23 T.)	16 S 221
T 19407	1316 304 012	-----	ZF 58	25	REVERSE GEAR (44-23 T.)	16 S 251
T 19427	1315 298 002	-----	ZF 55	-----	OIL SEAL KIT	16 S 151
T 19427	1315 298 002	-----	ZF 56	-----	OIL SEAL KIT	16 S 181
T 19427	1315 298 002	-----	ZF 57	-----	OIL SEAL KIT	16 S 221
T 19427	1315 298 002	-----	ZF 58	-----	OIL SEAL KIT	16 S 251
T 19433	1315 298 003	-----	ZF 55	-----	OIL SEAL KIT	16 S 151
T 19433	1315 298 003	-----	ZF 56	-----	OIL SEAL KIT	16 S 181
T 19433	1315 298 003	-----	ZF 57	-----	OIL SEAL KIT	16 S 221
T 19433	1315 298 003	-----	ZF 58	-----	OIL SEAL KIT	16 S 251
T 19441	1315 298 001	-----	ZF 55	-----	GASKET KIT	16 S 151
T 19441	1315 298 001	-----	ZF 56	-----	GASKET KIT	16 S 181
T 19441	1315 298 001	-----	ZF 57	-----	GASKET KIT	16 S 221
T 19441	1315 298 001	-----	ZF 58	-----	GASKET KIT	16 S 251
T 19448	1295 302 070	000 262 5210	ZF 40	1	CONSTANT GEAR (30-58 T.)	16 K 130
T 19448	1295 302 070	000 262 5210	ZF 41	1	CONSTANT GEAR (30-58 T.)	16 S 130
T 19455	1295 303 028	000 263 8510	ZF 40	25	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 K 130
T 19455	1295 303 028	000 263 8510	ZF 41	30	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 S 130
T 19464	1295 303 067	000 263 4902	ZF 41	32	COUNTERSHAFT (19-23 T.)	16 S 130
T 19476	1297 304 113	-----	ZF 43	16	SECOND SPEED GEAR (37-22 T.)	16 K 160
T 19478	1297 304 116	-----	ZF 43	14	THIRD SPEED GEAR (32-23 T.)	16 K 160
T 19481	1297 304 128	-----	ZF 43	11	FOURTH SPEED GEAR (23-28-58 T.)	16 K 160
T 19483	1297 304 318	000 262 6014	ZF 44	12	FOURTH SPEED GEAR (58-26-58 T.)	16 S 160
T 19483	1297 304 318	000 262 6014	ZF 47	12	FOURTH SPEED GEAR (58-26-58 T.)	16 S 190
T 19500	1295 302 122	-----	ZF 40	1	CONSTANT GEAR (29-58 T.)	16 K 130
T 19500	1295 302 122	-----	ZF 41	1	CONSTANT GEAR (29-58 T.)	16 S 130
T 19512	1295 303 094	-----	ZF 40	25	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 K 130
T 19512	1295 303 094	-----	ZF 41	30	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 130
T 19521	1297 302 241	-----	ZF 44	1	CONSTANT GEAR (26-58 T.)	16 S 160
T 19521	1297 302 241	-----	ZF 47	1	CONSTANT GEAR (26-58 T.)	16 S 190
T 19526	1297 303 123	-----	ZF 44	31	COUNTERSHAFT FOURTH SPEED GEAR (32 T.)	16 S 160
T 19526	1297 303 123	-----	ZF 47	31	COUNTERSHAFT FOURTH SPEED GEAR (32 T.)	16 S 190
T 19530	1297 304 413	-----	ZF 44	12	FOURTH SPEED GEAR (58-29-58 T.)	16 S 160
T 19530	1297 304 413	-----	ZF 47	12	FOURTH SPEED GEAR (58-29-58 T.)	16 S 190
T 19536	1315 304 004	-----	ZF 55	30	FIRST SPEED GEAR (47-30 T.)	16 S 151
T 19542	1315 304 006	-----	ZF 55	32	REVERSE GEAR (44-23 T.)	16 S 151
T 19548	1316 303 004	-----	ZF 57	34	COUNTERSHAFT FOURTH SPEED GEAR (39 T.)	16 S 221
T 19759	1297 303 097	000 263 8010	ZF 44	31	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 160
T 19759	1297 303 097	000 263 8010	ZF 47	31	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 190
T 19902	1295 142 011	000 260 4605	ZF 40	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 K 130
T 19902	1295 142 011	000 260 4605	ZF 43	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 K 160
T 19902	1295 142 011	000 260 4605	ZF 44	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 160
T 19902	1295 142 011	000 260 4605	ZF 46	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 K 190
T 19902	1295 142 011	000 260 4605	ZF 47	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 190
T 19902	1295 142 011	000 260 4605	ZF 55	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 151
T 19902	1295 142 011	000 260 4605	ZF 56	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 181
T 19902	1295 142 011	000 260 4605	ZF 57	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 221
T 19902	1295 142 011	000 260 4605	ZF 58	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 251
T 19907	0630 531 055	003 994 3841	ZF 37	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 112

TAS No.	ZF No.	MERCEDES No.	TAB	KEY	DESCRIPTION	MODEL
T 19907	0630 531 055	003 994 3841	ZF 40	-----	POWER TAKE OFF SHAFT LOCK RING	16 K 130
T 19907	0630 531 055	003 994 3841	ZF 41	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 130
T 19907	0630 531 055	003 994 3841	ZF 43	-----	POWER TAKE OFF SHAFT LOCK RING	16 K 160
T 19907	0630 531 055	003 994 3841	ZF 44	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 160
T 19907	0630 531 055	003 994 3841	ZF 46	-----	POWER TAKE OFF SHAFT LOCK RING	16 K 190
T 19907	0630 531 055	003 994 3841	ZF 47	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 190
T 19907	0630 531 055	003 994 3841	ZF 55	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 151
T 19907	0630 531 055	003 994 3841	ZF 56	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 181
T 19907	0630 531 055	003 994 3841	ZF 57	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 221
T 19907	0630 531 055	003 994 3841	ZF 58	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 251
T 19914	0635 331 390	004 981 8625	ZF 37	-----	BALL BEARING 45X75X16 MM	16 S 112
T 19914	0635 331 390	004 981 8625	ZF 40	-----	BALL BEARING 45X75X16 MM	16 K 130
T 19914	0635 331 390	004 981 8625	ZF 41	-----	BALL BEARING 45X75X16 MM	16 S 130
T 19914	0635 331 390	004 981 8625	ZF 43	-----	BALL BEARING 45X75X16 MM	16 K 160
T 19914	0635 331 390	004 981 8625	ZF 44	-----	BALL BEARING 45X75X16 MM	16 S 160
T 19914	0635 331 390	004 981 8625	ZF 46	-----	BALL BEARING 45X75X16 MM	16 K 190
T 19914	0635 331 390	004 981 8625	ZF 47	-----	BALL BEARING 45X75X16 MM	16 S 190
T 19914	0635 331 390	004 981 8625	ZF 55	-----	BALL BEARING 45X75X16 MM	16 S 151
T 19914	0635 331 390	004 981 8625	ZF 56	-----	BALL BEARING 45X75X16 MM	16 S 181
T 19914	0635 331 390	004 981 8625	ZF 57	-----	BALL BEARING 45X75X16 MM	16 S 221
T 19914	0635 331 390	004 981 8625	ZF 58	-----	BALL BEARING 45X75X16 MM	16 S 251
T 19927	1295 338 083	000 264 5150	ZF 37	-----	POWER TAKE OFF SHAFT BUSHING	16 S 112
T 19927	1295 338 083	000 264 5150	ZF 40	-----	POWER TAKE OFF SHAFT BUSHING	16 K 130
T 19927	1295 338 083	000 264 5150	ZF 41	-----	POWER TAKE OFF SHAFT BUSHING	16 S 130
T 19927	1295 338 083	000 264 5150	ZF 43	-----	POWER TAKE OFF SHAFT BUSHING	16 K 160
T 19927	1295 338 083	000 264 5150	ZF 44	-----	POWER TAKE OFF SHAFT BUSHING	16 S 160
T 19927	1295 338 083	000 264 5150	ZF 46	-----	POWER TAKE OFF SHAFT BUSHING	16 K 190
T 19927	1295 338 083	000 264 5150	ZF 47	-----	POWER TAKE OFF SHAFT BUSHING	16 S 190
T 19927	1295 338 083	000 264 5150	ZF 55	-----	POWER TAKE OFF SHAFT BUSHING	16 S 151
T 19927	1295 338 083	000 264 5150	ZF 56	-----	POWER TAKE OFF SHAFT BUSHING	16 S 181
T 19927	1295 338 083	000 264 5150	ZF 57	-----	POWER TAKE OFF SHAFT BUSHING	16 S 221
T 19927	1295 338 083	000 264 5150	ZF 58	-----	POWER TAKE OFF SHAFT BUSHING	16 S 251
T 19936	1297 203 005	000 264 4218	ZF 40	-----	POWER TAKE OFF SHAFT (12 T.)	16 K 130
T 19936	1297 203 005	000 264 4218	ZF 43	-----	POWER TAKE OFF SHAFT (12 T.)	16 K 160
T 19936	1297 203 005	000 264 4218	ZF 44	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 160
T 19936	1297 203 005	000 264 4218	ZF 46	-----	POWER TAKE OFF SHAFT (12 T.)	16 K 190
T 19936	1297 203 005	000 264 4218	ZF 47	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 190
T 19936	1297 203 005	000 264 4218	ZF 55	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 151
T 19936	1297 203 005	000 264 4218	ZF 56	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 181
T 19936	1297 203 005	000 264 4218	ZF 57	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 221
T 19936	1297 203 005	000 264 4218	ZF 58	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 251
T 19945	1295 307 158	000 267 0046	ZF 37	-----	GEAR SHIFT SELECTOR PLATE	16 S 112
T 19945	1295 307 158	000 267 0046	ZF 41	-----	GEAR SHIFT SELECTOR PLATE	16 S 130
T 19945	1295 307 158	000 267 0046	ZF 44	-----	GEAR SHIFT SELECTOR PLATE	16 S 160
T 19945	1295 307 158	000 267 0046	ZF 47	-----	GEAR SHIFT SELECTOR PLATE	16 S 190
T 19952	1297 303 098	001 263 0510	ZF 43	25	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 K 160
T 19952	1297 303 098	001 263 0510	ZF 44	30	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 160
T 19952	1297 303 098	001 263 0510	ZF 46	26	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 K 190
T 19952	1297 303 098	001 263 0510	ZF 47	30	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 190
T 19961	1297 232 039	000 260 3561	ZF 43	60	CARRIER	16 K 160
T 19961	1297 232 039	000 260 3561	ZF 44	60	CARRIER	16 S 160
T 19961	1297 232 039	000 260 3561	ZF 46	60	CARRIER	16 K 190
T 19961	1297 232 039	000 260 3561	ZF 47	60	CARRIER	16 S 190
T 19971	1297 303 086	-----	ZF 44	30	COUNTERSHAFT CONSTANT GEAR (35 T.)	16 S 160
T 19971	1297 303 086	-----	ZF 47	30	COUNTERSHAFT CONSTANT GEAR (35 T.)	16 S 190
T 19975	1297 303 132	-----	ZF 44	32	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	16 S 160
T 19975	1297 303 132	-----	ZF 47	32	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	16 S 190
T 19980	1297 304 414	-----	ZF 44	17	THIRD SPEED GEAR (34-58 T.)	16 S 160
T 19980	1297 304 414	-----	ZF 47	17	THIRD SPEED GEAR (34-58 T.)	16 S 190
T 19986	1295 303 025	000 263 8310	ZF 41	31	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 130
T 19994	1295 307 330	000 267 1303	ZF 37	-----	GEAR SHIFT FORK SHAFT	16 S 112
T 19994	1295 307 330	000 267 1303	ZF 41	-----	GEAR SHIFT FORK SHAFT	16 S 130
T 19994	1295 307 330	000 267 1303	ZF 43	-----	GEAR SHIFT FORK SHAFT	16 K 160
T 19994	1295 307 330	000 267 1303	ZF 44	-----	GEAR SHIFT FORK SHAFT	16 S 160
T 19994	1295 307 330	000 267 1303	ZF 47	-----	GEAR SHIFT FORK SHAFT	16 S 190
T 19994	1295 307 330	000 267 1303	ZF 51	-----	GEAR SHIFT FORK SHAFT	16 S 220
T 19997	1312 304 150	000 262 1953	ZF 55	16	MAINSHAFT TUBE	16 S 151
T 19997	1312 304 150	000 262 1953	ZF 56	16	MAINSHAFT TUBE	16 S 181
T 19997	1312 304 150	000 262 1953	ZF 57	16	MAINSHAFT TUBE	16 S 221
T 20005	1313 302 036	-----	ZF 50	1	CONSTANT GEAR (34-30 T.)	16 S 150
T 20010	1313 303 003	-----	ZF 50	36	COUNTERSHAFT FOURTH SPEED GEAR (39 T.)	16 S 150
T 20016	1313 303 004	-----	ZF 50	35	COUNTERSHAFT CONSTANT GEAR (37 T.)	16 S 150

55

CHART II
ZF 4-510

PROGRESSIVE MERCEDES REFERENCES



MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
000 260 1290	T 09751	1295 202 041	ZF 37	38	MAIN DRIVE GEAR OIL PUMP	16 S 112
000 260 1290	T 09751	1295 202 041	ZF 40	32	MAIN DRIVE GEAR OIL PUMP	16 K 130
000 260 1290	T 09751	1295 202 041	ZF 41	38	MAIN DRIVE GEAR OIL PUMP	16 S 130
000 260 1290	T 09751	1295 202 041	ZF 43	34	MAIN DRIVE GEAR OIL PUMP	16 K 160
000 260 1290	T 09751	1295 202 041	ZF 44	39	MAIN DRIVE GEAR OIL PUMP	16 S 160
000 260 1290	T 09751	1295 202 041	ZF 46	35	MAIN DRIVE GEAR OIL PUMP	16 K 190
000 260 1290	T 09751	1295 202 041	ZF 47	39	MAIN DRIVE GEAR OIL PUMP	16 S 190
000 260 1290	T 09751	1295 202 041	ZF 50	45	MAIN DRIVE GEAR OIL PUMP	16 S 150
000 260 1290	T 09751	1295 202 041	ZF 51	45	MAIN DRIVE GEAR OIL PUMP	16 S 220
000 260 1497	T 16702	1295 232 027	ZF 37	68	GEAR SET (26 T.) (5 PCS.)	16 S 112
000 260 1497	T 16702	1295 232 027	ZF 40	68	GEAR SET (26 T.) (5 PCS.)	16 K 130
000 260 1497	T 16702	1295 232 027	ZF 41	68	GEAR SET (26 T.) (5 PCS.)	16 S 130
000 260 1597	T 10131	1297 232 023	ZF 43	68	GEAR SET (26 T.) (5 PCS.)	16 K 160
000 260 1597	T 10131	1297 232 023	ZF 46	68	GEAR SET (26 T.) (5 PCS.)	16 K 190
000 260 1597	T 10131	1297 232 023	ZF 47	68	GEAR SET (26 T.) (5 PCS.)	16 S 190
000 260 1597	T 10131	1297 232 023	ZF 51	68	GEAR SET (26 T.) (5 PCS.)	16 S 220
000 260 2297	-----	1297 298 919	ZF 47	67	GEAR REPAIR KIT (26 T.)	16 S 190
000 260 2397	-----	1312 232 014	ZF 47	68	GEAR SET (5 PCS.)	16 S 190
000 260 2397	-----	1312 232 014	ZF 51	68	GEAR SET (5 PCS.)	16 S 220
000 260 2397	-----	1312 232 014	ZF 57	68	GEAR SET (5 PCS.)	16 S 221
000 260 3561	T 19961	1297 232 039	ZF 43	60	CARRIER	16 K 160
000 260 3561	T 19961	1297 232 039	ZF 44	60	CARRIER	16 S 160
000 260 3561	T 19961	1297 232 039	ZF 46	60	CARRIER	16 K 190
000 260 3561	T 19961	1297 232 039	ZF 47	60	CARRIER	16 S 190
000 260 4061	-----	1297 232 045	ZF 41	60	CARRIER	16 S 130
000 260 4061	-----	1297 232 045	ZF 43	60	CARRIER	16 K 160
000 260 4061	-----	1297 232 045	ZF 44	60	CARRIER	16 S 160
000 260 4061	-----	1297 232 045	ZF 46	60	CARRIER	16 K 190
000 260 4061	-----	1297 232 045	ZF 47	60	CARRIER	16 S 190
000 260 4361	-----	1295 232 048	ZF 37	60	CARRIER	16 S 112
000 260 4361	-----	1295 232 048	ZF 40	60	CARRIER	16 K 130
000 260 4361	-----	1295 232 048	ZF 41	60	CARRIER	16 S 130
000 260 4605	T 19902	1295 142 011	ZF 40	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 K 130
000 260 4605	T 19902	1295 142 011	ZF 43	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 K 160
000 260 4605	T 19902	1295 142 011	ZF 44	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 160
000 260 4605	T 19902	1295 142 011	ZF 46	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 K 190
000 260 4605	T 19902	1295 142 011	ZF 47	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 190
000 260 4605	T 19902	1295 142 011	ZF 55	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 151
000 260 4605	T 19902	1295 142 011	ZF 56	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 181
000 260 4605	T 19902	1295 142 011	ZF 57	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 221
000 260 4605	T 19902	1295 142 011	ZF 58	-----	POWER TAKE OFF SHAFT ASSEMBLY (12 T.)	16 S 251
000 261 0766	-----	0730 062 323	ZF 37	10	MAIN DRIVE GEAR TUBE	16 S 112
000 261 0766	-----	0730 062 323	ZF 40	9	MAIN DRIVE GEAR TUBE	16 K 130
000 261 0766	-----	0730 062 323	ZF 41	10	MAIN DRIVE GEAR TUBE	16 S 130
000 261 0766	-----	0730 062 323	ZF 43	9	MAIN DRIVE GEAR TUBE	16 K 160
000 261 0766	-----	0730 062 323	ZF 44	10	MAIN DRIVE GEAR TUBE	16 S 160
000 261 0766	-----	0730 062 323	ZF 46	10	MAIN DRIVE GEAR TUBE	16 K 190
000 261 0766	-----	0730 062 323	ZF 47	10	MAIN DRIVE GEAR TUBE	16 S 190
000 262 0109	T 15359	1295 304 247	ZF 37	28	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 112
000 262 0109	T 15359	1295 304 247	ZF 40	23	PLANETARY REDUCTION SUN GEAR (27 T.)	16 K 130
000 262 0209	T 15377	1295 304 248	ZF 41	28	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 130
000 262 0306	T 16700	1296 298 904	ZF 37	67	GEAR REPAIR KIT (26 T.)	16 S 112
000 262 0306	T 16700	1296 298 904	ZF 40	67	GEAR REPAIR KIT (26 T.)	16 K 130
000 262 0306	T 16700	1296 298 904	ZF 41	67	GEAR REPAIR KIT (26 T.)	16 S 130
000 262 0309	T 15383	1297 304 187	ZF 43	24	PLANETARY REDUCTION SUN GEAR (27 T.)	16 K 160
000 262 0309	T 15383	1297 304 187	ZF 44	29	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 160
000 262 0309	T 15383	1297 304 187	ZF 46	25	PLANETARY REDUCTION SUN GEAR (27 T.)	16 K 190
000 262 0309	T 15383	1297 304 187	ZF 47	29	PLANETARY REDUCTION SUN GEAR (27 T.)	16 S 190
000 262 0406	T 15659	1297 298 912	ZF 43	67	GEAR REPAIR KIT (26 T.)	16 K 160
000 262 0406	T 15659	1297 298 912	ZF 44	67	GEAR REPAIR KIT (26 T.)	16 S 160
000 262 0406	T 15659	1297 298 912	ZF 46	67	GEAR REPAIR KIT (26 T.)	16 K 190
000 262 0406	T 15659	1297 298 912	ZF 47	67	GEAR REPAIR KIT (26 T.)	16 S 190
000 262 0673	T 15289	0730 061 816	ZF 37	39	SPACER RING	16 S 112
000 262 0673	T 15289	0730 061 816	ZF 40	33	SPACER RING	16 K 130
000 262 0673	T 15289	0730 061 816	ZF 41	39	SPACER RING	16 S 130
000 262 0673	T 15289	0730 061 816	ZF 43	35	SPACER RING	16 K 160
000 262 0673	T 15289	0730 061 816	ZF 44	40	SPACER RING	16 S 160
000 262 0673	T 15289	0730 061 816	ZF 46	36	SPACER RING	16 K 190
000 262 0673	T 15289	0730 061 816	ZF 47	40	SPACER RING	16 S 190
000 262 0673	T 15289	0730 061 816	ZF 50	46	SPACER RING	16 S 150
000 262 0673	T 15289	0730 061 816	ZF 51	46	SPACER RING	16 S 220
000 262 0909	-----	1297 304 439	ZF 44	29	PLANETARY REDUCTION SUN GEAR (24 T.)	16 S 160

57

I riferimenti originali sono riportati solo come indicazione di particolari originali corrispondenti.
 I particolari inseriti nel presente catalogo non sono originali, ma con essi perfettamente intercambiabili.
 All manufacturers names, numbers, symbols and descriptions are used for reference purposes only, and it is not implied that any part listed is the product of these manufacturers.

CHART III
ZF 4-510

MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
000 262 0909	-----	1297 304 439	ZF 47	29	PLANETARY REDUCTION SUN GEAR (24 T.)	16 S 190
000 262 1440	T 08858	1295 304 165	ZF 37	2	SYNCHRONIZER CONE (57 T.)	16 S 112
000 262 1440	T 08858	1295 304 165	ZF 41	2	SYNCHRONIZER CONE (57 T.)	16 S 130
000 262 1440	T 08858	1295 304 165	ZF 44	2	SYNCHRONIZER CONE (57 T.)	16 S 160
000 262 1540	T 19360	1295 304 206	ZF 37	25	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 112
000 262 1540	T 19360	1295 304 206	ZF 40	20	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 K 130
000 262 1540	T 19360	1295 304 206	ZF 41	25	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 130
000 262 1597	T 10131	1297 232 023	ZF 44	68	GEAR SET (26 T.) (5 PCS.)	16 S 160
000 262 1640	T 19368	1297 304 154	ZF 43	21	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 K 160
000 262 1640	T 19368	1297 304 154	ZF 44	26	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 160
000 262 1640	T 19368	1297 304 154	ZF 46	22	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 K 190
000 262 1640	T 19368	1297 304 154	ZF 47	26	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	16 S 190
000 262 1940	T 08871	1295 304 278	ZF 37	2	SYNCHRONIZER CONE (57 T.)	16 S 112
000 262 1940	T 08871	1295 304 278	ZF 37	13	SYNCHRONIZER CONE (57 T.)	16 S 112
000 262 1940	T 08871	1295 304 278	ZF 37	20	SYNCHRONIZER CONE (57 T.)	16 S 112
000 262 1940	T 08871	1295 304 278	ZF 40	2	SYNCHRONIZER CONE (57 T.)	16 K 130
000 262 1940	T 08871	1295 304 278	ZF 41	2	SYNCHRONIZER CONE (57 T.)	16 S 130
000 262 1940	T 08871	1295 304 278	ZF 41	13	SYNCHRONIZER CONE (57 T.)	16 S 130
000 262 1940	T 08871	1295 304 278	ZF 43	2	SYNCHRONIZER CONE (57 T.)	16 K 160
000 262 1940	T 08871	1295 304 278	ZF 44	2	SYNCHRONIZER CONE (57 T.)	16 S 160
000 262 1940	T 08871	1295 304 278	ZF 44	13	SYNCHRONIZER CONE (57 T.)	16 S 160
000 262 1940	T 08871	1295 304 278	ZF 46	2	SYNCHRONIZER CONE (57 T.)	16 K 190
000 262 1940	T 08871	1295 304 278	ZF 47	2	SYNCHRONIZER CONE (57 T.)	16 S 190
000 262 1940	T 08871	1295 304 278	ZF 47	13	SYNCHRONIZER CONE (57 T.)	16 S 190
000 262 1953	T 19997	1312 304 150	ZF 55	16	MAINSHAFT TUBE	16 S 151
000 262 1953	T 19997	1312 304 150	ZF 56	16	MAINSHAFT TUBE	16 S 181
000 262 1953	T 19997	1312 304 150	ZF 57	16	MAINSHAFT TUBE	16 S 221
000 262 2034	T 08795	1295 304 004	ZF 37	3	SYNCHRONIZER BLOCKING RING	16 S 112
000 262 2034	T 08795	1295 304 004	ZF 37	14	SYNCHRONIZER BLOCKING RING	16 S 112
000 262 2034	T 08795	1295 304 004	ZF 37	21	SYNCHRONIZER BLOCKING RING	16 S 112
000 262 2034	T 08795	1295 304 004	ZF 41	3	SYNCHRONIZER BLOCKING RING	16 S 130
000 262 2034	T 08795	1295 304 004	ZF 41	14	SYNCHRONIZER BLOCKING RING	16 S 130
000 262 2034	T 08795	1295 304 004	ZF 41	21	SYNCHRONIZER BLOCKING RING	16 S 130
000 262 2034	T 08795	1295 304 004	ZF 43	3	SYNCHRONIZER BLOCKING RING	16 K 160
000 262 2034	T 08795	1295 304 004	ZF 44	3	SYNCHRONIZER BLOCKING RING	16 S 160
000 262 2034	T 08795	1295 304 004	ZF 44	14	SYNCHRONIZER BLOCKING RING	16 S 160
000 262 2034	T 08795	1295 304 004	ZF 46	3	SYNCHRONIZER BLOCKING RING	16 K 190
000 262 2034	T 08795	1295 304 004	ZF 47	3	SYNCHRONIZER BLOCKING RING	16 S 190
000 262 2034	T 08795	1295 304 004	ZF 47	14	SYNCHRONIZER BLOCKING RING	16 S 190
000 262 2050	T 19100	1295 304 012	ZF 37	26	REVERSE GEAR SLEEVE	16 S 112
000 262 2050	T 19100	1295 304 012	ZF 40	21	REVERSE GEAR SLEEVE	16 K 130
000 262 2050	T 19100	1295 304 012	ZF 41	26	REVERSE GEAR SLEEVE	16 S 130
000 262 2127	T 09753	1295 304 235	ZF 40	17	FIRST AND SECOND SPEED CLUTCH GEAR (22 T.)	16 K 130
000 262 2127	T 09753	1295 304 235	ZF 43	17	FIRST AND SECOND SPEED CLUTCH GEAR (22 T.)	16 K 160
000 262 2127	T 09753	1295 304 235	ZF 46	18	FIRST AND SECOND SPEED CLUTCH GEAR (22 T.)	16 K 190
000 262 2140	T 09054	1297 304 196	ZF 37	20	SYNCHRONIZER CONE (63 T.)	16 S 112
000 262 2140	T 09054	1297 304 196	ZF 41	20	SYNCHRONIZER CONE (63 T.)	16 S 130
000 262 2140	T 09054	1297 304 196	ZF 44	20	SYNCHRONIZER CONE (63 T.)	16 S 160
000 262 2140	T 09054	1297 304 196	ZF 47	20	SYNCHRONIZER CONE (63 T.)	16 S 190
000 262 2227	T 16595	1297 304 188	ZF 43	12	THIRD AND FOURTH SPEED CLUTCH GEAR (23 T.)	16 K 160
000 262 2227	T 16595	1297 304 188	ZF 46	13	THIRD AND FOURTH SPEED CLUTCH GEAR (23 T.)	16 K 190
000 262 2297	-----	1297 298 919	ZF 46	67	GEAR REPAIR KIT (26 T.)	16 K 190
000 262 2350	T 09755	1297 304 034	ZF 43	22	REVERSE GEAR SLEEVE	16 K 160
000 262 2350	T 09755	1297 304 034	ZF 44	27	REVERSE GEAR SLEEVE	16 S 160
000 262 2350	T 09755	1297 304 034	ZF 46	23	REVERSE GEAR SLEEVE	16 K 190
000 262 2350	T 09755	1297 304 034	ZF 47	27	REVERSE GEAR SLEEVE	16 S 190
000 262 2414	T 11154	1296 304 090	ZF 37	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 112
000 262 2434	T 08874	1246 304 278	ZF 37	21	SYNCHRONIZER BLOCKING RING	16 S 112
000 262 2434	T 08874	1246 304 278	ZF 41	21	SYNCHRONIZER BLOCKING RING	16 S 130
000 262 2434	T 08874	1246 304 278	ZF 44	21	SYNCHRONIZER BLOCKING RING	16 S 160
000 262 2434	T 08874	1246 304 278	ZF 47	21	SYNCHRONIZER BLOCKING RING	16 S 190
000 262 2450	T 09757	1297 304 035	ZF 44	24	FIRST SPEED GEAR SLEEVE	16 S 160
000 262 2450	T 09757	1297 304 035	ZF 47	24	FIRST SPEED GEAR SLEEVE	16 S 190
000 262 2505	T 19135	1296 304 119	ZF 37	18	MAINSHAFT	16 S 112
000 262 2512	T 19132	1296 304 070	ZF 37	19	SECOND SPEED GEAR (38-58 T.)	16 S 112
000 262 2514	T 09759	1295 304 135	ZF 41	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 130
000 262 2605	T 09763	1295 304 245	ZF 41	18	MAINSHAFT	16 S 130
000 262 2612	T 15708	1295 304 121	ZF 41	19	SECOND SPEED GEAR (38-58 T.)	16 S 130
000 262 2636	T 15059	1268 304 424	ZF 50	20	SYNCHRONIZER INTERNAL RING	16 S 150
000 262 2636	T 15059	1268 304 424	ZF 51	20	SYNCHRONIZER INTERNAL RING	16 S 220
000 262 2636	T 15059	1268 304 424	ZF 55	19	SYNCHRONIZER INTERNAL RING	16 S 151
000 262 2636	T 15059	1268 304 424	ZF 56	19	SYNCHRONIZER INTERNAL RING	16 S 181

PROGRESSIVE MERCEDES REFERENCES



MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
000 262 2636	T 15059	1268 304 424	ZF 57	19	SYNCHRONIZER INTERNAL RING	16 S 221
000 262 2705	T 18353	1297 304 181	ZF 44	18	MAINSHAFT	16 S 160
000 262 2705	T 18353	1297 304 181	ZF 47	18	MAINSHAFT	16 S 190
000 262 2845	-----	1297 338 010	ZF 46	79	CARRIER COUPLING FLANGE	16 K 190
000 262 3010	T 14807	1296 302 023	ZF 37	1	CONSTANT GEAR (28-61 T.)	16 S 112
000 262 3050	T 09765	1297 304 055	ZF 43	19	FIRST SPEED GEAR SLEEVE	16 K 160
000 262 3050	T 09765	1297 304 055	ZF 46	20	FIRST SPEED GEAR SLEEVE	16 K 190
000 262 3110	T 15362	1295 302 074	ZF 41	1	CONSTANT GEAR (28-61 T.)	16 S 130
000 262 3113	T 11156	1296 304 087	ZF 37	17	THIRD SPEED GEAR (34-58 T.)	16 S 112
000 262 3210	T 15014	1297 302 074	ZF 44	1	CONSTANT GEAR (28-61 T.)	16 S 160
000 262 3213	T 11158	1295 304 128	ZF 41	17	THIRD SPEED GEAR (34-58 T.)	16 S 130
000 262 3214	T 09767	1297 304 127	ZF 43	11	FOURTH SPEED GEAR (23-30-58 T.)	16 K 160
000 262 3329	T 15567	1297 302 012	ZF 37	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 112
000 262 3329	T 15567	1297 302 012	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
000 262 3429	T 15569	1297 302 042	ZF 41	36	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
000 262 3429	T 15569	1297 302 042	ZF 44	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
000 262 3429	T 15569	1297 302 042	ZF 47	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
000 262 3436	T 15065	1268 304 494	ZF 50	21	SYNCHRONIZER INTERMEDIATE RING	16 S 150
000 262 3436	T 15065	1268 304 494	ZF 51	21	SYNCHRONIZER INTERMEDIATE RING	16 S 220
000 262 3436	T 15065	1268 304 494	ZF 55	20	SYNCHRONIZER INTERMEDIATE RING	16 S 151
000 262 3436	T 15065	1268 304 494	ZF 56	20	SYNCHRONIZER INTERMEDIATE RING	16 S 181
000 262 3436	T 15065	1268 304 494	ZF 57	20	SYNCHRONIZER INTERMEDIATE RING	16 S 221
000 262 3605	T 19074	1297 304 179	ZF 43	15	MAINSHAFT	16 K 160
000 262 3605	T 19074	1297 304 179	ZF 46	16	MAINSHAFT	16 K 190
000 262 3623	T 09056	1295 304 002	ZF 37	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 112
000 262 3623	T 09056	1295 304 002	ZF 37	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 112
000 262 3623	T 09056	1295 304 002	ZF 37	23	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 112
000 262 3623	T 09056	1295 304 002	ZF 40	10	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 K 130
000 262 3623	T 09056	1295 304 002	ZF 41	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
000 262 3623	T 09056	1295 304 002	ZF 41	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
000 262 3623	T 09056	1295 304 002	ZF 41	23	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
000 262 3623	T 09056	1295 304 002	ZF 43	10	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 K 160
000 262 3623	T 09056	1295 304 002	ZF 44	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 160
000 262 3623	T 09056	1295 304 002	ZF 44	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 160
000 262 3623	T 09056	1295 304 002	ZF 46	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 K 190
000 262 3623	T 09056	1295 304 002	ZF 47	11	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 190
000 262 3623	T 09056	1295 304 002	ZF 47	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 190
000 262 3834	T 11724	1297 304 402	ZF 50	3	SYNCHRONIZER BLOCKING RING	16 S 150
000 262 3834	T 11724	1297 304 402	ZF 50	13	SYNCHRONIZER BLOCKING RING	16 S 150
000 262 3834	T 11724	1297 304 402	ZF 51	3	SYNCHRONIZER BLOCKING RING	16 S 220
000 262 3834	T 11724	1297 304 402	ZF 51	13	SYNCHRONIZER BLOCKING RING	16 S 220
000 262 3834	T 11724	1297 304 402	ZF 55	3	SYNCHRONIZER BLOCKING RING	16 S 151
000 262 3834	T 11724	1297 304 402	ZF 55	11	SYNCHRONIZER BLOCKING RING	16 S 151
000 262 3834	T 11724	1297 304 402	ZF 56	3	SYNCHRONIZER BLOCKING RING	16 S 181
000 262 3834	T 11724	1297 304 402	ZF 56	11	SYNCHRONIZER BLOCKING RING	16 S 181
000 262 3834	T 11724	1297 304 402	ZF 57	3	SYNCHRONIZER BLOCKING RING	16 S 221
000 262 3834	T 11724	1297 304 402	ZF 57	11	SYNCHRONIZER BLOCKING RING	16 S 221
000 262 3834	T 11724	1297 304 402	ZF 58	3	SYNCHRONIZER BLOCKING RING	16 S 251
000 262 3834	T 11724	1297 304 402	ZF 58	11	SYNCHRONIZER BLOCKING RING	16 S 251
000 262 3910	T 11161	1296 302 003	ZF 37	1	CONSTANT GEAR (28-58 T.)	16 S 112
000 262 3912	T 09769	1297 304 112	ZF 43	16	SECOND SPEED GEAR (38-22 T.)	16 K 160
000 262 3934	T 15072	1268 304 525	ZF 50	22	SYNCHRONIZER BLOCKING RING	16 S 150
000 262 3934	T 15072	1268 304 525	ZF 51	22	SYNCHRONIZER BLOCKING RING	16 S 220
000 262 3934	T 15072	1268 304 525	ZF 55	21	SYNCHRONIZER BLOCKING RING	16 S 151
000 262 3934	T 15072	1268 304 525	ZF 56	21	SYNCHRONIZER BLOCKING RING	16 S 181
000 262 3934	T 15072	1268 304 525	ZF 57	21	SYNCHRONIZER BLOCKING RING	16 S 221
000 262 3935	T 08892	1297 304 031	ZF 37	15	SYNCHRONIZER HUB	16 S 112
000 262 3935	T 08892	1297 304 031	ZF 37	22	SYNCHRONIZER HUB	16 S 112
000 262 3935	T 08892	1297 304 031	ZF 41	15	SYNCHRONIZER HUB	16 S 130
000 262 3935	T 08892	1297 304 031	ZF 41	22	SYNCHRONIZER HUB	16 S 130
000 262 3935	T 08892	1297 304 031	ZF 44	15	SYNCHRONIZER HUB	16 S 160
000 262 3935	T 08892	1297 304 031	ZF 47	15	SYNCHRONIZER HUB	16 S 190
000 262 4010	T 09771	1295 302 071	ZF 40	1	CONSTANT GEAR (28-58 T.)	16 K 130
000 262 4010	T 09771	1295 302 071	ZF 41	1	CONSTANT GEAR (28-58 T.)	16 S 130
000 262 4114	-----	1297 304 274	ZF 46	12	FOURTH SPEED GEAR (30 T.)	16 K 190
000 262 4214	T 15016	1297 304 267	ZF 44	12	FOURTH SPEED GEAR (58-28-58 T.)	16 S 160
000 262 4214	T 15016	1297 304 267	ZF 47	12	FOURTH SPEED GEAR (58-28-58 T.)	16 S 190
000 262 4240	T 17222	1312 304 159	ZF 50	23	SYNCHRONIZER SHIFTING PLATE	16 S 150
000 262 4240	T 17222	1312 304 159	ZF 51	23	SYNCHRONIZER SHIFTING PLATE	16 S 220
000 262 4240	T 17222	1312 304 159	ZF 55	22	SYNCHRONIZER SHIFTING PLATE	16 S 151
000 262 4240	T 17222	1312 304 159	ZF 56	22	SYNCHRONIZER SHIFTING PLATE	16 S 181
000 262 4240	T 17222	1312 304 159	ZF 57	22	SYNCHRONIZER SHIFTING PLATE	16 S 221

59

I riferimenti originali sono riportati solo come indicazione di particolari originali corrispondenti.
 I particolari inseriti nel presente catalogo non sono originali, ma con essi perfettamente intercambiabili.
 All manufacturers names, numbers, symbols and descriptions are used for reference purposes only, and it is not implied that any part listed is the product of these manufacturers.

CHART III
ZF 4-510

MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
000 262 4329	-----	1297 302 053	ZF 40	31	MAIN DRIVE GEAR BEARING RETAINER	16 K 130
000 262 4329	-----	1297 302 053	ZF 43	32	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
000 262 4329	-----	1297 302 053	ZF 46	33	MAIN DRIVE GEAR BEARING RETAINER	16 K 190
000 262 4405	-----	1297 304 193	ZF 44	18	MAINSHAFT	16 S 160
000 262 4405	-----	1297 304 193	ZF 47	18	MAINSHAFT	16 S 190
000 262 4414	T 15019	1297 304 260	ZF 44	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 160
000 262 4414	T 15019	1297 304 260	ZF 47	12	FOURTH SPEED GEAR (58-30-58 T.)	16 S 190
000 262 4435	T 08895	1297 304 195	ZF 37	22	SYNCHRONIZER HUB	16 S 112
000 262 4435	T 08895	1297 304 195	ZF 41	22	SYNCHRONIZER HUB	16 S 130
000 262 4435	T 08895	1297 304 195	ZF 44	22	SYNCHRONIZER HUB	16 S 160
000 262 4435	T 08895	1297 304 195	ZF 47	22	SYNCHRONIZER HUB	16 S 190
000 262 4510	T 09773	1297 302 176	ZF 43	1	CONSTANT GEAR (28-58 T.)	16 K 160
000 262 4510	T 09773	1297 302 176	ZF 44	1	CONSTANT GEAR (28-58 T.)	16 S 160
000 262 4510	T 09773	1297 302 176	ZF 46	1	CONSTANT GEAR (28-58 T.)	16 K 190
000 262 4510	T 09773	1297 302 176	ZF 47	1	CONSTANT GEAR (28-58 T.)	16 S 190
000 262 4529	-----	1295 302 100	ZF 37	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 112
000 262 4529	-----	1295 302 100	ZF 41	37	MAIN DRIVE GEAR BEARING RETAINER	16 S 130
000 262 4529	-----	1295 302 100	ZF 44	38	MAIN DRIVE GEAR BEARING RETAINER	16 S 160
000 262 4529	-----	1295 302 100	ZF 47	38	MAIN DRIVE GEAR BEARING RETAINER	16 S 190
000 262 4529	-----	1295 302 100	ZF 50	44	MAIN DRIVE GEAR BEARING RETAINER	16 S 150
000 262 4610	T 11774	1297 302 177	ZF 43	1	CONSTANT GEAR (30-58 T.)	16 K 160
000 262 4610	T 11774	1297 302 177	ZF 44	1	CONSTANT GEAR (30-58 T.)	16 S 160
000 262 4610	T 11774	1297 302 177	ZF 46	1	CONSTANT GEAR (30-58 T.)	16 K 190
000 262 4610	T 11774	1297 302 177	ZF 47	1	CONSTANT GEAR (30-58 T.)	16 S 190
000 262 4629	-----	1297 302 018	ZF 40	31	MAIN DRIVE GEAR BEARING RETAINER	16 K 130
000 262 4629	-----	1297 302 018	ZF 43	32	MAIN DRIVE GEAR BEARING RETAINER	16 K 160
000 262 4713	T 09775	1297 304 115	ZF 43	14	THIRD SPEED GEAR (34-23 T.)	16 K 160
000 262 4811	-----	1296 304 099	ZF 37	24	FIRST SPEED GEAR (47 T.)	16 S 112
000 262 4814	T 15713	1295 304 136	ZF 41	12	FOURTH SPEED GEAR (58-28-58 T.)	16 S 130
000 262 4911	-----	1296 304 097	ZF 37	27	REVERSE GEAR (38 T.)	16 S 112
000 262 4923	T 09777	1297 304 119	ZF 43	18	FIRST AND SECOND SPEED SLIDING COLLAR (22 SPLINES)	16 K 160
000 262 4923	T 09777	1297 304 119	ZF 46	19	FIRST AND SECOND SPEED SLIDING COLLAR (22 SPLINES)	16 K 190
000 262 4934	T 17880	1297 304 401	ZF 41	21	SYNCHRONIZER BLOCKING RING	16 S 130
000 262 4934	T 17880	1297 304 401	ZF 47	21	SYNCHRONIZER BLOCKING RING	16 S 190
000 262 4934	T 17880	1297 304 401	ZF 50	27	SYNCHRONIZER BLOCKING RING	16 S 150
000 262 4934	T 17880	1297 304 401	ZF 51	27	SYNCHRONIZER BLOCKING RING	16 S 220
000 262 4934	T 17880	1297 304 401	ZF 55	26	SYNCHRONIZER BLOCKING RING	16 S 151
000 262 4934	T 17880	1297 304 401	ZF 56	26	SYNCHRONIZER BLOCKING RING	16 S 181
000 262 4934	T 17880	1297 304 401	ZF 57	26	SYNCHRONIZER BLOCKING RING	16 S 221
000 262 4934	T 17880	1297 304 401	ZF 58	19	SYNCHRONIZER BLOCKING RING	16 S 251
000 262 5011	T 15719	1295 304 202	ZF 41	24	FIRST SPEED GEAR (47-58 T.)	16 S 130
000 262 5023	T 09779	1297 304 120	ZF 43	13	THIRD AND FOURTH SPEED SLIDING COLLAR (23 SPLINES)	16 K 160
000 262 5023	T 09779	1297 304 120	ZF 46	14	THIRD AND FOURTH SPEED SLIDING COLLAR (23 SPLINES)	16 K 190
000 262 5111	-----	1295 304 200	ZF 40	22	REVERSE GEAR (38 T.)	16 K 130
000 262 5111	-----	1295 304 200	ZF 41	27	REVERSE GEAR (38 T.)	16 S 130
000 262 5210	T 19448	1295 302 070	ZF 40	1	CONSTANT GEAR (30-58 T.)	16 K 130
000 262 5210	T 19448	1295 302 070	ZF 41	1	CONSTANT GEAR (30-58 T.)	16 S 130
000 262 5311	-----	1297 304 148	ZF 43	23	REVERSE GEAR (38 T.)	16 K 160
000 262 5311	-----	1297 304 148	ZF 44	28	REVERSE GEAR (38 T.)	16 S 160
000 262 5311	-----	1297 304 148	ZF 46	24	REVERSE GEAR (38 T.)	16 K 190
000 262 5311	-----	1297 304 148	ZF 47	28	REVERSE GEAR (38 T.)	16 S 190
000 262 5412	-----	1297 304 271	ZF 46	17	SECOND SPEED GEAR (38 T.)	16 K 190
000 262 5535	T 11729	1312 304 027	ZF 50	2	SYNCHRONIZER CONE (57 T.)	16 S 150
000 262 5535	T 11729	1312 304 027	ZF 50	12	SYNCHRONIZER CONE (57 T.)	16 S 150
000 262 5535	T 11729	1312 304 027	ZF 51	2	SYNCHRONIZER CONE (57 T.)	16 S 220
000 262 5535	T 11729	1312 304 027	ZF 51	12	SYNCHRONIZER CONE (57 T.)	16 S 220
000 262 5535	T 11729	1312 304 027	ZF 55	2	SYNCHRONIZER CONE (57 T.)	16 S 151
000 262 5535	T 11729	1312 304 027	ZF 55	10	SYNCHRONIZER CONE (57 T.)	16 S 151
000 262 5535	T 11729	1312 304 027	ZF 56	2	SYNCHRONIZER CONE (57 T.)	16 S 181
000 262 5535	T 11729	1312 304 027	ZF 56	10	SYNCHRONIZER CONE (57 T.)	16 S 181
000 262 5535	T 11729	1312 304 027	ZF 57	2	SYNCHRONIZER CONE (57 T.)	16 S 221
000 262 5535	T 11729	1312 304 027	ZF 57	10	SYNCHRONIZER CONE (57 T.)	16 S 221
000 262 5535	T 11729	1312 304 027	ZF 58	2	SYNCHRONIZER CONE (57 T.)	16 S 251
000 262 5535	T 11729	1312 304 027	ZF 58	10	SYNCHRONIZER CONE (57 T.)	16 S 251
000 262 5612	T 15724	1297 304 269	ZF 44	19	SECOND SPEED GEAR (37-58 T.)	16 S 160
000 262 5612	T 15724	1297 304 269	ZF 47	19	SECOND SPEED GEAR (37-58 T.)	16 S 190
000 262 5810	-----	1297 302 250	ZF 43	1	CONSTANT GEAR (29T.)	16 K 160
000 262 5810	-----	1297 302 250	ZF 44	1	CONSTANT GEAR (29 T.)	16 S 160
000 262 5810	-----	1297 302 250	ZF 46	1	CONSTANT GEAR (29 T.)	16 K 190
000 262 5810	-----	1297 302 250	ZF 47	1	CONSTANT GEAR (29 T.)	16 S 190
000 262 5835	T 17886	1312 304 052	ZF 50	14	SYNCHRONIZER HUB (57 T.)	16 S 150
000 262 5835	T 17886	1312 304 052	ZF 51	14	SYNCHRONIZER HUB (57 T.)	16 S 220

PROGRESSIVE MERCEDES REFERENCES



MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
000 262 5835	T 17886	1312 304 052	ZF 55	12	SYNCHRONIZER HUB (57 T.)	16 S 151
000 262 5835	T 17886	1312 304 052	ZF 56	12	SYNCHRONIZER HUB (57 T.)	16 S 181
000 262 5835	T 17886	1312 304 052	ZF 57	12	SYNCHRONIZER HUB (57 T.)	16 S 221
000 262 5835	T 17886	1312 304 052	ZF 58	12	SYNCHRONIZER HUB (57 T.)	16 S 251
000 262 6014	T 19483	1297 304 318	ZF 44	12	FOURTH SPEED GEAR (58-26-58 T.)	16 S 160
000 262 6014	T 19483	1297 304 318	ZF 47	12	FOURTH SPEED GEAR (58-26-58 T.)	16 S 190
000 262 6113	-----	1297 304 273	ZF 46	15	THIRD SPEED GEAR (34 T.)	16 K 190
000 262 6213	T 15727	1297 304 266	ZF 44	17	THIRD SPEED GEAR (32-58 T.)	16 S 160
000 262 6213	T 15727	1297 304 266	ZF 47	17	THIRD SPEED GEAR (32-58 T.)	16 S 190
000 262 6312	-----	1295 304 120	ZF 41	19	SECOND SPEED GEAR (37 T.)	16 S 130
000 262 6512	T 18313	1297 304 442	ZF 44	19	SECOND SPEED GEAR (38-58 T.)	16 S 160
000 262 6512	T 18313	1297 304 442	ZF 47	19	SECOND SPEED GEAR (38-58 T.)	16 S 190
000 262 6712	-----	1312 304 139	ZF 51	18	SECOND SPEED GEAR (38 T.)	16 S 220
000 262 6811	T 18326	1297 304 150	ZF 43	20	FIRST SPEED GEAR (47-22 T.)	16 K 160
000 262 6913	T 18328	1297 304 261	ZF 44	17	THIRD SPEED GEAR (34-58 T.)	16 S 160
000 262 6913	T 18328	1297 304 261	ZF 47	17	THIRD SPEED GEAR (34-58 T.)	16 S 190
000 262 7034	T 15078	1297 304 484	ZF 41	14	SYNCHRONIZER BLOCKING RING	16 S 130
000 262 7034	T 15078	1297 304 484	ZF 47	14	SYNCHRONIZER BLOCKING RING	16 S 190
000 262 7034	T 15078	1297 304 484	ZF 50	3	SYNCHRONIZER BLOCKING RING	16 S 150
000 262 7034	T 15078	1297 304 484	ZF 50	13	SYNCHRONIZER BLOCKING RING	16 S 150
000 262 7034	T 15078	1297 304 484	ZF 51	3	SYNCHRONIZER BLOCKING RING	16 S 220
000 262 7034	T 15078	1297 304 484	ZF 51	13	SYNCHRONIZER BLOCKING RING	16 S 220
000 262 7034	T 15078	1297 304 484	ZF 55	3	SYNCHRONIZER BLOCKING RING	16 S 151
000 262 7034	T 15078	1297 304 484	ZF 55	11	SYNCHRONIZER BLOCKING RING	16 S 151
000 262 7034	T 15078	1297 304 484	ZF 56	3	SYNCHRONIZER BLOCKING RING	16 S 181
000 262 7034	T 15078	1297 304 484	ZF 56	11	SYNCHRONIZER BLOCKING RING	16 S 181
000 262 7034	T 15078	1297 304 484	ZF 57	3	SYNCHRONIZER BLOCKING RING	16 S 221
000 262 7034	T 15078	1297 304 484	ZF 57	11	SYNCHRONIZER BLOCKING RING	16 S 221
000 262 7034	T 15078	1297 304 484	ZF 58	3	SYNCHRONIZER BLOCKING RING	16 S 251
000 262 7034	T 15078	1297 304 484	ZF 58	11	SYNCHRONIZER BLOCKING RING	16 S 251
000 262 7113	T 15731	1295 304 127	ZF 41	17	THIRD SPEED GEAR (32-58 T.)	16 S 130
000 262 7150	-----	1316 304 133	ZF 51	33	REVERSE SPEED GEAR SLEEVE	16 S 220
000 262 7623	T 18297	1316 304 078	ZF 50	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
000 262 7623	T 18297	1316 304 078	ZF 51	29	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
000 262 7623	T 18297	1316 304 078	ZF 55	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
000 262 7623	T 18297	1316 304 078	ZF 56	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
000 262 7623	T 18297	1316 304 078	ZF 57	28	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
000 262 7623	T 18297	1316 304 078	ZF 58	21	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 251
000 262 7805	T 17825	1316 304 130	ZF 51	17	MAINSHAFT	16 S 220
000 262 7805	T 17825	1316 304 130	ZF 57	15	MAINSHAFT	16 S 221
000 262 8311	-----	1297 304 272	ZF 46	21	FIRST SPEED GEAR (47 T.)	16 K 190
000 262 8511	T 15736	1297 304 270	ZF 44	25	FIRST SPEED GEAR (44-58 T.)	16 S 160
000 262 8511	T 15736	1297 304 270	ZF 47	25	FIRST SPEED GEAR (44-58 T.)	16 S 190
000 262 8611	-----	1297 304 149	ZF 43	23	REVERSE GEAR (39 T.)	16 K 160
000 262 8611	-----	1297 304 149	ZF 44	28	REVERSE GEAR (39 T.)	16 S 160
000 262 8611	-----	1297 304 149	ZF 46	24	REVERSE GEAR (39 T.)	16 K 190
000 262 8611	-----	1297 304 149	ZF 47	28	REVERSE GEAR (39 T.)	16 S 190
000 262 9011	-----	1295 304 203	ZF 41	24	FIRST SPEED GEAR (44 T.)	16 S 130
000 262 9111	-----	1295 304 201	ZF 40	22	REVERSE GEAR (39 T.)	16 K 130
000 262 9111	-----	1295 304 201	ZF 41	27	REVERSE GEAR (39 T.)	16 S 130
000 262 9211	T 18889	1297 304 441	ZF 44	25	FIRST SPEED GEAR (47-58 T.)	16 S 160
000 262 9211	T 18889	1297 304 441	ZF 47	25	FIRST SPEED GEAR (47-58 T.)	16 S 190
000 262 9402	T 15119	1296 202 004	ZF 37	4	MAIN DRIVE GEAR (57 T.)	16 S 112
000 262 9934	T 15151	1304 304 686	ZF 37	3	SYNCHRONIZER BLOCKING RING	16 S 112
000 262 9934	T 15151	1304 304 686	ZF 37	14	SYNCHRONIZER BLOCKING RING	16 S 112
000 262 9934	T 15151	1304 304 686	ZF 40	3	SYNCHRONIZER BLOCKING RING	16 K 130
000 262 9934	T 15151	1304 304 686	ZF 41	3	SYNCHRONIZER BLOCKING RING	16 S 130
000 262 9934	T 15151	1304 304 686	ZF 41	14	SYNCHRONIZER BLOCKING RING	16 S 130
000 262 9934	T 15151	1304 304 686	ZF 43	3	SYNCHRONIZER BLOCKING RING	16 K 160
000 262 9934	T 15151	1304 304 686	ZF 44	3	SYNCHRONIZER BLOCKING RING	16 S 160
000 262 9934	T 15151	1304 304 686	ZF 44	14	SYNCHRONIZER BLOCKING RING	16 S 160
000 262 9934	T 15151	1304 304 686	ZF 46	3	SYNCHRONIZER BLOCKING RING	16 K 190
000 262 9934	T 15151	1304 304 686	ZF 47	3	SYNCHRONIZER BLOCKING RING	16 S 190
000 262 9934	T 15151	1304 304 686	ZF 47	14	SYNCHRONIZER BLOCKING RING	16 S 190
000 263 0025	-----	1295 332 021	ZF 37	70	RING GEAR CARRIER (83 T.)	16 S 112
000 263 0025	-----	1295 332 021	ZF 40	70	RING GEAR CARRIER (83 T.)	16 K 130
000 263 0025	-----	1295 332 021	ZF 41	70	RING GEAR CARRIER (83 T.)	16 S 130
000 263 0032	-----	1295 305 052	ZF 37	34	REVERSE IDLER GEAR (24 T.)	16 S 112
000 263 0032	-----	1295 305 052	ZF 40	29	REVERSE IDLER GEAR (24 T.)	16 K 130
000 263 0032	-----	1295 305 052	ZF 41	34	REVERSE IDLER GEAR (24 T.)	16 S 130
000 263 0032	-----	1295 305 052	ZF 43	30	REVERSE IDLER GEAR (24 T.)	16 K 160
000 263 0032	-----	1295 305 052	ZF 44	35	REVERSE IDLER GEAR (24 T.)	16 S 160

MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
000 263 0032	-----	1295 305 052	ZF 46	31	REVERSE IDLER GEAR (24 T.)	16 K 190
000 263 0032	-----	1295 305 052	ZF 47	35	REVERSE IDLER GEAR (24 T.)	16 S 190
000 263 0125	T 20043	1297 332 017	ZF 43	70	RING GEAR CARRIER (83 T.)	16 K 160
000 263 0125	T 20043	1297 332 017	ZF 44	70	RING GEAR CARRIER (83 T.)	16 S 160
000 263 0125	T 20043	1297 332 017	ZF 46	70	RING GEAR CARRIER (83 T.)	16 K 190
000 263 0125	T 20043	1297 332 017	ZF 47	70	RING GEAR CARRIER (83 T.)	16 S 190
000 263 0232	-----	1295 305 051	ZF 37	34	REVERSE IDLER GEAR (21 T.)	16 S 112
000 263 0232	-----	1295 305 051	ZF 40	29	REVERSE IDLER GEAR (21 T.)	16 K 130
000 263 0232	-----	1295 305 051	ZF 41	34	REVERSE IDLER GEAR (21 T.)	16 S 130
000 263 0232	-----	1295 305 051	ZF 43	30	REVERSE IDLER GEAR (21 T.)	16 K 160
000 263 0232	-----	1295 305 051	ZF 44	35	REVERSE IDLER GEAR (21 T.)	16 S 160
000 263 0232	-----	1295 305 051	ZF 46	31	REVERSE IDLER GEAR (21 T.)	16 K 190
000 263 0232	-----	1295 305 051	ZF 47	35	REVERSE IDLER GEAR (21 T.)	16 S 190
000 263 0234	T 09061	1296 333 022	ZF 37	72	SYNCHRONIZER BLOCKING RING	16 S 112
000 263 0234	T 09061	1296 333 022	ZF 40	72	SYNCHRONIZER BLOCKING RING	16 K 130
000 263 0234	T 09061	1296 333 022	ZF 41	72	SYNCHRONIZER BLOCKING RING	16 S 130
000 263 0234	T 09061	1296 333 022	ZF 43	72	SYNCHRONIZER BLOCKING RING	16 K 160
000 263 0234	T 09061	1296 333 022	ZF 44	72	SYNCHRONIZER BLOCKING RING	16 S 160
000 263 0234	T 09061	1296 333 022	ZF 46	72	SYNCHRONIZER BLOCKING RING	16 K 190
000 263 0234	T 09061	1296 333 022	ZF 47	72	SYNCHRONIZER BLOCKING RING	16 S 190
000 263 0234	T 09061	1296 333 022	ZF 50	72	SYNCHRONIZER BLOCKING RING	16 S 150
000 263 0234	T 09061	1296 333 022	ZF 51	72	SYNCHRONIZER BLOCKING RING	16 S 220
000 263 0234	T 09061	1296 333 022	ZF 55	71	SYNCHRONIZER BLOCKING RING	16 S 151
000 263 0234	T 09061	1296 333 022	ZF 56	72	SYNCHRONIZER BLOCKING RING	16 S 181
000 263 0234	T 09061	1296 333 022	ZF 57	72	SYNCHRONIZER BLOCKING RING	16 S 221
000 263 0234	T 09061	1296 333 022	ZF 58	73	SYNCHRONIZER BLOCKING RING	16 S 251
000 263 0374	T 15739	1297 332 109	ZF 41	61	GEAR SHAFT	16 S 130
000 263 0374	T 15739	1297 332 109	ZF 43	61	GEAR SHAFT	16 K 160
000 263 0374	T 15739	1297 332 109	ZF 44	61	GEAR SHAFT	16 S 160
000 263 0374	T 15739	1297 332 109	ZF 46	61	GEAR SHAFT	16 K 190
000 263 0374	T 15739	1297 332 109	ZF 47	61	GEAR SHAFT	16 S 190
000 263 0374	T 15739	1297 332 109	ZF 51	61	GEAR SHAFT	16 S 220
000 263 0425	-----	1297 332 035	ZF 41	70	RING GEAR CARRIER (86 T.)	16 S 130
000 263 0425	-----	1297 332 035	ZF 43	70	RING GEAR CARRIER (86 T.)	16 K 160
000 263 0425	-----	1297 332 035	ZF 44	70	RING GEAR CARRIER (86 T.)	16 S 160
000 263 0425	-----	1297 332 035	ZF 46	70	RING GEAR CARRIER (86 T.)	16 K 190
000 263 0425	-----	1297 332 035	ZF 47	70	RING GEAR CARRIER (86 T.)	16 S 190
000 263 0474	-----	1312 332 026	ZF 47	61	GEAR SHAFT	16 S 190
000 263 0474	-----	1312 332 026	ZF 51	61	GEAR SHAFT	16 S 220
000 263 0474	-----	1312 332 026	ZF 57	61	GEAR SHAFT	16 S 221
000 263 0510	T 19952	1297 303 098	ZF 47	30	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 190
000 263 0523	T 09062	1296 333 023	ZF 37	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 112
000 263 0523	T 09062	1296 333 023	ZF 40	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 K 130
000 263 0523	T 09062	1296 333 023	ZF 41	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 130
000 263 0523	T 09062	1296 333 023	ZF 43	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 K 160
000 263 0523	T 09062	1296 333 023	ZF 44	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 160
000 263 0523	T 09062	1296 333 023	ZF 46	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 K 190
000 263 0523	T 09062	1296 333 023	ZF 47	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 190
000 263 0523	T 09062	1296 333 023	ZF 50	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
000 263 0523	T 09062	1296 333 023	ZF 51	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
000 263 0523	T 09062	1296 333 023	ZF 55	72	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
000 263 0523	T 09062	1296 333 023	ZF 56	77	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
000 263 0523	T 09062	1296 333 023	ZF 57	73	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
000 263 0523	T 09062	1296 333 023	ZF 58	78	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 251
000 263 0534	T 15084	1296 333 045	ZF 37	72	SYNCHRONIZER BLOCKING RING	16 S 112
000 263 0534	T 15084	1296 333 045	ZF 40	72	SYNCHRONIZER BLOCKING RING	16 K 130
000 263 0534	T 15084	1296 333 045	ZF 41	72	SYNCHRONIZER BLOCKING RING	16 S 130
000 263 0534	T 15084	1296 333 045	ZF 43	72	SYNCHRONIZER BLOCKING RING	16 K 160
000 263 0534	T 15084	1296 333 045	ZF 44	72	SYNCHRONIZER BLOCKING RING	16 S 160
000 263 0534	T 15084	1296 333 045	ZF 46	72	SYNCHRONIZER BLOCKING RING	16 K 190
000 263 0534	T 15084	1296 333 045	ZF 47	72	SYNCHRONIZER BLOCKING RING	16 S 190
000 263 0534	T 15084	1296 333 045	ZF 50	72	SYNCHRONIZER BLOCKING RING	16 S 150
000 263 0534	T 15084	1296 333 045	ZF 51	72	SYNCHRONIZER BLOCKING RING	16 S 220
000 263 0534	T 15084	1296 333 045	ZF 55	71	SYNCHRONIZER BLOCKING RING	16 S 151
000 263 0534	T 15084	1296 333 045	ZF 56	72	SYNCHRONIZER BLOCKING RING	16 S 181
000 263 0534	T 15084	1296 333 045	ZF 57	72	SYNCHRONIZER BLOCKING RING	16 S 221
000 263 0534	T 15084	1296 333 045	ZF 58	73	SYNCHRONIZER BLOCKING RING	16 S 251
000 263 0562	T 15745	0501 306 212	ZF 41	64	GEAR THRUST WASHER	16 S 130
000 263 0562	T 15745	0501 306 212	ZF 43	64	GEAR THRUST WASHER	16 K 160
000 263 0562	T 15745	0501 306 212	ZF 44	64	GEAR THRUST WASHER	16 S 160
000 263 0562	T 15745	0501 306 212	ZF 46	64	GEAR THRUST WASHER	16 K 190
000 263 0562	T 15745	0501 306 212	ZF 47	64	GEAR THRUST WASHER	16 S 190

MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
000 263 0562	T 15745	0501 306 212	ZF 51	64	GEAR THRUST WASHER	16 S 220
000 263 0735	T 08899	1296 333 002	ZF 37	73	SYNCHRONIZER HUB	16 S 112
000 263 0735	T 08899	1296 333 002	ZF 40	73	SYNCHRONIZER HUB	16 K 130
000 263 0735	T 08899	1296 333 002	ZF 41	73	SYNCHRONIZER HUB	16 S 130
000 263 0735	T 08899	1296 333 002	ZF 43	73	SYNCHRONIZER HUB	16 K 160
000 263 0735	T 08899	1296 333 002	ZF 44	73	SYNCHRONIZER HUB	16 S 160
000 263 0735	T 08899	1296 333 002	ZF 46	73	SYNCHRONIZER HUB	16 K 190
000 263 0735	T 08899	1296 333 002	ZF 47	73	SYNCHRONIZER HUB	16 S 190
000 263 0762	-----	0501 308 981	ZF 47	64	GEAR THRUST WASHER	16 S 190
000 263 0762	-----	0501 308 981	ZF 50	64	GEAR THRUST WASHER	16 S 150
000 263 0762	-----	0501 308 981	ZF 51	64	GEAR THRUST WASHER	16 S 220
000 263 0762	-----	0501 308 981	ZF 55	64	GEAR THRUST WASHER	16 S 151
000 263 0762	-----	0501 308 981	ZF 57	64	GEAR THRUST WASHER	16 S 221
000 263 0935	-----	1297 333 115	ZF 47	73	SYNCHRONIZER HUB	16 S 190
000 263 0935	-----	1297 333 115	ZF 51	73	SYNCHRONIZER HUB	16 S 220
000 263 0935	-----	1297 333 115	ZF 57	74	SYNCHRONIZER HUB	16 S 221
000 263 1430	T 11447	1295 305 056	ZF 37	33	REVERSE IDLER GEAR SHAFT	16 S 112
000 263 1430	T 11447	1295 305 056	ZF 40	28	REVERSE IDLER GEAR SHAFT	16 K 130
000 263 1430	T 11447	1295 305 056	ZF 41	33	REVERSE IDLER GEAR SHAFT	16 S 130
000 263 1430	T 11447	1295 305 056	ZF 43	29	REVERSE IDLER GEAR SHAFT	16 K 160
000 263 1430	T 11447	1295 305 056	ZF 44	34	REVERSE IDLER GEAR SHAFT	16 S 160
000 263 1430	T 11447	1295 305 056	ZF 46	30	REVERSE IDLER GEAR SHAFT	16 K 190
000 263 1430	T 11447	1295 305 056	ZF 47	34	REVERSE IDLER GEAR SHAFT	16 S 190
000 263 1430	T 11447	1295 305 056	ZF 50	40	REVERSE IDLER GEAR SHAFT	16 S 150
000 263 1430	T 11447	1295 305 056	ZF 51	40	REVERSE IDLER GEAR SHAFT	16 S 220
000 263 1720	T 08908	1296 233 006	ZF 37	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 112
000 263 1720	T 08908	1296 233 006	ZF 40	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 K 130
000 263 1720	T 08908	1296 233 006	ZF 41	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 130
000 263 1720	T 08908	1296 233 006	ZF 43	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 K 160
000 263 1720	T 08908	1296 233 006	ZF 44	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 160
000 263 1720	T 08908	1296 233 006	ZF 46	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 K 190
000 263 1720	T 08908	1296 233 006	ZF 47	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 190
000 263 1720	T 08908	1296 233 006	ZF 50	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 150
000 263 1720	T 08908	1296 233 006	ZF 51	71	SYNCHRONIZER FLANGE WITH CONE (63 T.)	16 S 220
000 263 1920	T 09063	1295 233 025	ZF 37	78	SYNCHRONIZER CONE (63 T.)	16 S 112
000 263 1920	T 09063	1295 233 025	ZF 40	78	SYNCHRONIZER CONE (63 T.)	16 K 130
000 263 1920	T 09063	1295 233 025	ZF 41	78	SYNCHRONIZER CONE (63 T.)	16 S 130
000 263 2020	T 14809	1313 233 001	ZF 41	78	SYNCHRONIZER CONE (63 T.)	16 S 130
000 263 2020	T 14809	1313 233 001	ZF 43	78	SYNCHRONIZER CONE (63 T.)	16 K 160
000 263 2020	T 14809	1313 233 001	ZF 44	78	SYNCHRONIZER CONE (63 T.)	16 S 160
000 263 2020	T 14809	1313 233 001	ZF 46	78	SYNCHRONIZER CONE (63 T.)	16 K 190
000 263 2020	T 14809	1313 233 001	ZF 47	78	SYNCHRONIZER CONE (63 T.)	16 S 190
000 263 2020	T 14809	1313 233 001	ZF 50	78	SYNCHRONIZER CONE (63 T.)	16 S 150
000 263 2020	T 14809	1313 233 001	ZF 55	77	SYNCHRONIZER CONE (63 T.)	16 S 151
000 263 2120	T 15090	1312 304 106	ZF 50	19	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 150
000 263 2120	T 15090	1312 304 106	ZF 51	19	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 220
000 263 2120	T 15090	1312 304 106	ZF 55	18	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 151
000 263 2120	T 15090	1312 304 106	ZF 56	18	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 181
000 263 2120	T 15090	1312 304 106	ZF 57	18	SYNCHRONIZER CLUTCH GEAR (63 T.)	16 S 221
000 263 2220	T 15934	1297 233 056	ZF 47	78	SYNCHRONIZER CONE (63 T.)	16 S 190
000 263 2220	T 15934	1297 233 056	ZF 51	78	SYNCHRONIZER CONE (63 T.)	16 S 220
000 263 2220	T 15934	1297 233 056	ZF 57	78	SYNCHRONIZER CONE (63 T.)	16 S 221
000 263 3110	T 11163	1296 303 009	ZF 37	31	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 112
000 263 3210	T 11165	1296 303 014	ZF 37	29	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 112
000 263 3302	T 11167	1297 303 047	ZF 43	28	COUNTERSHAFT (17-20 T.)	16 K 160
000 263 3310	T 11169	1296 303 002	ZF 37	30	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 112
000 263 3402	T 09781	1295 303 066	ZF 41	32	COUNTERSHAFT (17-20 T.)	16 S 130
000 263 3502	T 15364	1296 303 025	ZF 37	32	COUNTERSHAFT (17-20 T.)	16 S 112
000 263 3510	T 09783	1295 303 026	ZF 41	31	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 130
000 263 3610	T 09785	1295 303 027	ZF 40	25	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 K 130
000 263 3610	T 09785	1295 303 027	ZF 41	30	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 130
000 263 3710	T 09787	1295 303 037	ZF 40	24	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 K 130
000 263 3710	T 09787	1295 303 037	ZF 41	29	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 130
000 263 4402	-----	1297 303 076	ZF 46	29	COUNTERSHAFT (17 T.)	16 K 190
000 263 4502	T 15751	1297 303 075	ZF 44	33	COUNTERSHAFT (19-23 T.)	16 S 160
000 263 4502	T 15751	1297 303 075	ZF 47	33	COUNTERSHAFT (19-23 T.)	16 S 190
000 263 4902	T 19464	1295 303 067	ZF 41	32	COUNTERSHAFT (19-23 T.)	16 S 130
000 263 5002	T 18339	1297 303 140	ZF 44	33	COUNTERSHAFT (17-20 T.)	16 S 160
000 263 5002	T 18339	1297 303 140	ZF 47	33	COUNTERSHAFT (17-20 T.)	16 S 190
000 263 6310	-----	1297 332 080	ZF 43	69	RING GEAR (83 T.)	16 K 160
000 263 6310	-----	1297 332 080	ZF 44	69	RING GEAR (83 T.)	16 S 160
000 263 6310	-----	1297 332 080	ZF 46	69	RING GEAR (83 T.)	16 K 190

MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
000 263 6310	-----	1297 332 080	ZF 47	69	RING GEAR (83 T.)	16 S 190
000 263 6310	-----	1297 332 080	ZF 51	69	RING GEAR (83 T.)	16 S 220
000 263 6410	-----	1295 332 053	ZF 37	69	RING GEAR (83 T.)	16 S 112
000 263 6410	-----	1295 332 053	ZF 40	69	RING GEAR (83 T.)	16 K 130
000 263 6410	-----	1295 332 053	ZF 41	69	RING GEAR (83 T.)	16 S 130
000 263 6510	T 15026	1297 303 065	ZF 43	26	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 K 160
000 263 6510	T 15026	1297 303 065	ZF 44	31	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 160
000 263 6510	T 15026	1297 303 065	ZF 46	27	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 K 190
000 263 6510	T 15026	1297 303 065	ZF 47	31	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	16 S 190
000 263 6610	T 15033	1297 303 066	ZF 43	25	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 K 160
000 263 6610	T 15033	1297 303 066	ZF 44	30	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 160
000 263 6610	T 15033	1297 303 066	ZF 46	26	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 K 190
000 263 6610	T 15033	1297 303 066	ZF 47	30	COUNTERSHAFT CONSTANT GEAR (34 T.)	16 S 190
000 263 6710	T 19288	1297 303 077	ZF 43	27	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 K 160
000 263 6710	T 19288	1297 303 077	ZF 46	28	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 K 190
000 263 6810	T 15755	1297 303 073	ZF 44	32	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 160
000 263 6810	T 15755	1297 303 073	ZF 47	32	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 190
000 263 6910	T 15040	1297 303 074	ZF 43	25	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 K 160
000 263 6910	T 15040	1297 303 074	ZF 44	30	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 S 160
000 263 6910	T 15040	1297 303 074	ZF 46	26	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 K 190
000 263 6910	T 15040	1297 303 074	ZF 47	30	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 S 190
000 263 7010	T 15047	1297 303 072	ZF 43	26	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 K 160
000 263 7010	T 15047	1297 303 072	ZF 44	31	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 S 160
000 263 7010	T 15047	1297 303 072	ZF 46	27	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 K 190
000 263 7010	T 15047	1297 303 072	ZF 47	31	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 S 190
000 263 7410	T 09789	1297 303 067	ZF 44	32	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 160
000 263 7410	T 09789	1297 303 067	ZF 47	32	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	16 S 190
000 263 8010	T 19759	1297 303 097	ZF 44	31	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 160
000 263 8010	T 19759	1297 303 097	ZF 47	31	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	16 S 190
000 263 8310	T 19986	1295 303 025	ZF 41	31	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	16 S 130
000 263 8410	T 09799	1295 303 036	ZF 40	24	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 K 130
000 263 8410	T 09799	1295 303 036	ZF 41	29	COUNTERSHAFT CONSTANT GEAR (31 T.)	16 S 130
000 263 8510	T 19455	1295 303 028	ZF 40	25	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 K 130
000 263 8510	T 19455	1295 303 028	ZF 41	30	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	16 S 130
000 264 0839	T 15096	1297 304 436	ZF 41	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 130
000 264 0839	T 15096	1297 304 436	ZF 47	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 190
000 264 0839	T 15096	1297 304 436	ZF 50	8	SYNCHRONIZER PRESSURE PLUNGER	16 S 150
000 264 0839	T 15096	1297 304 436	ZF 51	8	SYNCHRONIZER PRESSURE PLUNGER	16 S 220
000 264 0839	T 15096	1297 304 436	ZF 55	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 151
000 264 0839	T 15096	1297 304 436	ZF 56	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 181
000 264 0839	T 15096	1297 304 436	ZF 57	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 221
000 264 0839	T 15096	1297 304 436	ZF 58	6	SYNCHRONIZER PRESSURE PLUNGER	16 S 251
000 264 0947	-----	0730 107 168	ZF 47	65	GEAR SPACER RING	16 S 190
000 264 0947	-----	0730 107 168	ZF 50	65	GEAR SPACER RING	16 S 150
000 264 0947	-----	0730 107 168	ZF 51	65	GEAR SPACER RING	16 S 220
000 264 0947	-----	0730 107 168	ZF 55	65	GEAR SPACER RING	16 S 151
000 264 0947	-----	0730 107 168	ZF 56	66	GEAR SPACER RING	16 S 181
000 264 0947	-----	0730 107 168	ZF 57	65	GEAR SPACER RING	16 S 221
000 264 0947	-----	0730 107 168	ZF 57	67	GEAR SPACER RING	16 S 221
000 264 1423	T 08917	1240 317 075	ZF 37	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 112
000 264 1423	T 08917	1240 317 075	ZF 40	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 K 130
000 264 1423	T 08917	1240 317 075	ZF 41	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 130
000 264 1423	T 08917	1240 317 075	ZF 43	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 K 160
000 264 1423	T 08917	1240 317 075	ZF 44	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 160
000 264 1423	T 08917	1240 317 075	ZF 46	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 K 190
000 264 1423	T 08917	1240 317 075	ZF 47	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 190
000 264 1423	T 08917	1240 317 075	ZF 55	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 151
000 264 1423	T 08917	1240 317 075	ZF 56	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 181
000 264 1423	T 08917	1240 317 075	ZF 57	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 221
000 264 1423	T 08917	1240 317 075	ZF 58	-----	POWER TAKE OFF SLIDING SLEEVE (12 T.)	16 S 251
000 264 1618	T 08919	1269 332 036	ZF 37	61	GEAR SHAFT	16 S 112
000 264 1618	T 08919	1269 332 036	ZF 40	61	GEAR SHAFT	16 K 130
000 264 1618	T 08919	1269 332 036	ZF 41	61	GEAR SHAFT	16 S 130
000 264 2745	-----	1295 338 014	ZF 37	79	CARRIER COUPLING FLANGE	16 S 112
000 264 2745	-----	1295 338 014	ZF 40	79	CARRIER COUPLING FLANGE	16 K 130
000 264 2745	-----	1295 338 014	ZF 41	80	CARRIER COUPLING FLANGE	16 S 130
000 264 2845	-----	1297 338 010	ZF 41	80	CARRIER COUPLING FLANGE	16 S 130
000 264 2845	-----	1297 338 010	ZF 43	79	CARRIER COUPLING FLANGE	16 K 160
000 264 2845	-----	1297 338 010	ZF 44	79	CARRIER COUPLING FLANGE	16 S 160
000 264 2845	-----	1297 338 010	ZF 47	80	CARRIER COUPLING FLANGE	16 S 190
000 264 3645	-----	1295 338 061	ZF 37	79	CARRIER COUPLING FLANGE	16 S 112
000 264 3645	-----	1295 338 061	ZF 40	79	CARRIER COUPLING FLANGE	16 K 130

PROGRESSIVE MERCEDES REFERENCES



MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
000 264 3645	-----	1295 338 061	ZF 41	80	CARRIER COUPLING FLANGE	16 S 130
000 264 3745	T 14811	1295 338 059	ZF 37	79	CARRIER COUPLING FLANGE (36 SPLINES)	16 S 112
000 264 3745	T 14811	1295 338 059	ZF 41	80	CARRIER COUPLING FLANGE (36 SPLINES)	16 S 130
000 264 4145	T 14812	1297 338 038	ZF 43	79	CARRIER COUPLING FLANGE (38 SPLINES)	16 K 160
000 264 4145	T 14812	1297 338 038	ZF 44	79	CARRIER COUPLING FLANGE (38 SPLINES)	16 S 160
000 264 4145	T 14812	1297 338 038	ZF 46	79	CARRIER COUPLING FLANGE (38 SPLINES)	16 K 190
000 264 4145	T 14812	1297 338 038	ZF 47	80	CARRIER COUPLING FLANGE (38 SPLINES)	16 S 190
000 264 4206	T 11462	1296 213 028	ZF 40	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 K 130
000 264 4206	T 11462	1296 213 028	ZF 43	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 K 160
000 264 4206	T 11462	1296 213 028	ZF 44	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 160
000 264 4206	T 11462	1296 213 028	ZF 46	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 K 190
000 264 4206	T 11462	1296 213 028	ZF 47	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 190
000 264 4206	T 11462	1296 213 028	ZF 50	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 150
000 264 4206	T 11462	1296 213 028	ZF 51	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 220
000 264 4206	T 11462	1296 213 028	ZF 55	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 151
000 264 4206	T 11462	1296 213 028	ZF 56	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 181
000 264 4206	T 11462	1296 213 028	ZF 57	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 221
000 264 4206	T 11462	1296 213 028	ZF 58	-----	OVERDRIVE MAIN DRIVE GEAR (12 T.)	16 S 251
000 264 4218	T 19936	1297 203 005	ZF 40	-----	POWER TAKE OFF SHAFT (12 T.)	16 K 130
000 264 4218	T 19936	1297 203 005	ZF 43	-----	POWER TAKE OFF SHAFT (12 T.)	16 K 160
000 264 4218	T 19936	1297 203 005	ZF 44	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 160
000 264 4218	T 19936	1297 203 005	ZF 46	-----	POWER TAKE OFF SHAFT (12 T.)	16 K 190
000 264 4218	T 19936	1297 203 005	ZF 47	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 190
000 264 4218	T 19936	1297 203 005	ZF 55	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 151
000 264 4218	T 19936	1297 203 005	ZF 56	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 181
000 264 4218	T 19936	1297 203 005	ZF 57	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 221
000 264 4218	T 19936	1297 203 005	ZF 58	-----	POWER TAKE OFF SHAFT (12 T.)	16 S 251
000 264 4245	-----	1297 338 041	ZF 41	80	CARRIER COUPLING FLANGE	16 S 130
000 264 4245	-----	1297 338 041	ZF 43	79	CARRIER COUPLING FLANGE	16 K 160
000 264 4245	-----	1297 338 041	ZF 44	79	CARRIER COUPLING FLANGE	16 S 160
000 264 4245	-----	1297 338 041	ZF 47	80	CARRIER COUPLING FLANGE	16 S 190
000 264 4945	-----	1297 338 008	ZF 46	79	CARRIER COUPLING FLANGE	16 K 190
000 264 5150	T 19927	1295 338 083	ZF 37	-----	POWER TAKE OFF SHAFT BUSHING	16 S 112
000 264 5150	T 19927	1295 338 083	ZF 40	-----	POWER TAKE OFF SHAFT BUSHING	16 K 130
000 264 5150	T 19927	1295 338 083	ZF 41	-----	POWER TAKE OFF SHAFT BUSHING	16 S 130
000 264 5150	T 19927	1295 338 083	ZF 43	-----	POWER TAKE OFF SHAFT BUSHING	16 K 160
000 264 5150	T 19927	1295 338 083	ZF 44	-----	POWER TAKE OFF SHAFT BUSHING	16 S 160
000 264 5150	T 19927	1295 338 083	ZF 46	-----	POWER TAKE OFF SHAFT BUSHING	16 K 190
000 264 5150	T 19927	1295 338 083	ZF 47	-----	POWER TAKE OFF SHAFT BUSHING	16 S 190
000 264 5150	T 19927	1295 338 083	ZF 55	-----	POWER TAKE OFF SHAFT BUSHING	16 S 151
000 264 5150	T 19927	1295 338 083	ZF 56	-----	POWER TAKE OFF SHAFT BUSHING	16 S 181
000 264 5150	T 19927	1295 338 083	ZF 57	-----	POWER TAKE OFF SHAFT BUSHING	16 S 221
000 264 5150	T 19927	1295 338 083	ZF 58	-----	POWER TAKE OFF SHAFT BUSHING	16 S 251
000 265 0649	T 17892	1296 334 004	ZF 37	91	SLIDING BLOCK (BRONZE)	16 S 112
000 265 0649	T 17892	1296 334 004	ZF 40	91	SLIDING BLOCK (BRONZE)	16 K 130
000 265 0649	T 17892	1296 334 004	ZF 41	91	SLIDING BLOCK (BRONZE)	16 S 130
000 265 0649	T 17892	1296 334 004	ZF 43	91	SLIDING BLOCK (BRONZE)	16 K 160
000 265 0649	T 17892	1296 334 004	ZF 44	91	SLIDING BLOCK (BRONZE)	16 S 160
000 265 0649	T 17892	1296 334 004	ZF 46	91	SLIDING BLOCK (BRONZE)	16 K 190
000 265 0649	T 17892	1296 334 004	ZF 47	91	SLIDING BLOCK (BRONZE)	16 S 190
000 265 0649	T 17892	1296 334 004	ZF 50	91	SLIDING BLOCK (BRONZE)	16 S 150
000 265 0649	T 17892	1296 334 004	ZF 51	91	SLIDING BLOCK (BRONZE)	16 S 220
000 265 0649	T 17892	1296 334 004	ZF 55	91	SLIDING BLOCK (BRONZE)	16 S 151
000 265 0649	T 17892	1296 334 004	ZF 56	91	SLIDING BLOCK (BRONZE)	16 S 181
000 265 0649	T 17892	1296 334 004	ZF 57	91	SLIDING BLOCK (BRONZE)	16 S 221
000 265 0649	T 17892	1296 334 004	ZF 58	91	SLIDING BLOCK (BRONZE)	16 S 251
000 265 2031	T 19130	1295 307 533	ZF 37	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 112
000 265 2031	T 19130	1295 307 533	ZF 40	-----	GEAR SHIFT CONTROL ROD LEVER	16 K 130
000 265 2031	T 19130	1295 307 533	ZF 41	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 130
000 265 2031	T 19130	1295 307 533	ZF 43	-----	GEAR SHIFT CONTROL ROD LEVER	16 K 160
000 265 2031	T 19130	1295 307 533	ZF 44	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 160
000 265 2031	T 19130	1295 307 533	ZF 51	-----	GEAR SHIFT CONTROL ROD LEVER	16 S 220
000 267 0046	T 19945	1295 307 158	ZF 37	-----	GEAR SHIFT SELECTOR PLATE	16 S 112
000 267 0046	T 19945	1295 307 158	ZF 41	-----	GEAR SHIFT SELECTOR PLATE	16 S 130
000 267 0046	T 19945	1295 307 158	ZF 44	-----	GEAR SHIFT SELECTOR PLATE	16 S 160
000 267 0046	T 19945	1295 307 158	ZF 47	-----	GEAR SHIFT SELECTOR PLATE	16 S 190
000 267 0474	T 19116	1295 307 243	ZF 37	-----	GEAR SHIFT CONTROL ROD PIN	16 S 112
000 267 0474	T 19116	1295 307 243	ZF 40	-----	GEAR SHIFT CONTROL ROD PIN	16 K 130
000 267 0474	T 19116	1295 307 243	ZF 41	-----	GEAR SHIFT CONTROL ROD PIN	16 S 130
000 267 0474	T 19116	1295 307 243	ZF 43	-----	GEAR SHIFT CONTROL ROD PIN	16 K 160
000 267 0474	T 19116	1295 307 243	ZF 44	-----	GEAR SHIFT CONTROL ROD PIN	16 S 160
000 267 0474	T 19116	1295 307 243	ZF 46	-----	GEAR SHIFT CONTROL ROD PIN	16 K 190

MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
000 267 0474	T 19116	1295 307 243	ZF 47	-----	GEAR SHIFT CONTROL ROD PIN	16 S 190
000 267 0474	T 19116	1295 307 243	ZF 50	-----	GEAR SHIFT CONTROL ROD PIN	16 S 150
000 267 0474	T 19116	1295 307 243	ZF 51	-----	GEAR SHIFT CONTROL ROD PIN	16 S 220
000 267 0503	T 18581	1295 307 274	ZF 37	-----	GEAR SHIFT FORK SHAFT	16 S 112
000 267 0503	T 18581	1295 307 274	ZF 40	-----	GEAR SHIFT FORK SHAFT	16 K 130
000 267 0503	T 18581	1295 307 274	ZF 41	-----	GEAR SHIFT FORK SHAFT	16 S 130
000 267 0503	T 18581	1295 307 274	ZF 43	-----	GEAR SHIFT FORK SHAFT	16 K 160
000 267 0503	T 18581	1295 307 274	ZF 44	-----	GEAR SHIFT FORK SHAFT	16 S 160
000 267 0503	T 18581	1295 307 274	ZF 47	-----	GEAR SHIFT FORK SHAFT	16 S 190
000 267 0503	T 18581	1295 307 274	ZF 50	-----	GEAR SHIFT FORK SHAFT	16 S 150
000 267 0503	T 18581	1295 307 274	ZF 51	-----	GEAR SHIFT FORK SHAFT	16 S 220
000 267 0519	T 16712	1296 312 042	ZF 37	92	SELECTOR ROD CYLINDER	16 S 112
000 267 0519	T 16712	1296 312 042	ZF 40	92	SELECTOR ROD CYLINDER	16 K 130
000 267 0519	T 16712	1296 312 042	ZF 41	92	SELECTOR ROD CYLINDER	16 S 130
000 267 0519	T 16712	1296 312 042	ZF 43	92	SELECTOR ROD CYLINDER	16 K 160
000 267 0519	T 16712	1296 312 042	ZF 44	92	SELECTOR ROD CYLINDER	16 S 160
000 267 0519	T 16712	1296 312 042	ZF 46	92	SELECTOR ROD CYLINDER	16 K 190
000 267 0519	T 16712	1296 312 042	ZF 47	92	SELECTOR ROD CYLINDER	16 S 190
000 267 0519	T 16712	1296 312 042	ZF 50	92	SELECTOR ROD CYLINDER	16 S 150
000 267 0519	T 16712	1296 312 042	ZF 51	92	SELECTOR ROD CYLINDER	16 S 220
000 267 0803	T 18886	1295 307 275	ZF 37	-----	GEAR SHIFT FORK SHAFT	16 S 112
000 267 0803	T 18886	1295 307 275	ZF 41	-----	GEAR SHIFT FORK SHAFT	16 S 130
000 267 0803	T 18886	1295 307 275	ZF 44	-----	GEAR SHIFT FORK SHAFT	16 S 160
000 267 0803	T 18886	1295 307 275	ZF 46	-----	GEAR SHIFT FORK SHAFT	16 K 190
000 267 0803	T 18886	1295 307 275	ZF 47	-----	GEAR SHIFT FORK SHAFT	16 S 190
000 267 0803	T 18886	1295 307 275	ZF 50	-----	GEAR SHIFT FORK SHAFT	16 S 150
000 267 0803	T 18886	1295 307 275	ZF 51	-----	GEAR SHIFT FORK SHAFT	16 S 220
000 267 0820	T 19124	1295 307 294	ZF 37	-----	GEAR SHIFT CONTROL ROD COVER	16 S 112
000 267 0820	T 19124	1295 307 294	ZF 40	-----	GEAR SHIFT CONTROL ROD COVER	16 K 130
000 267 0820	T 19124	1295 307 294	ZF 41	-----	GEAR SHIFT CONTROL ROD COVER	16 S 130
000 267 0820	T 19124	1295 307 294	ZF 43	-----	GEAR SHIFT CONTROL ROD COVER	16 K 160
000 267 0820	T 19124	1295 307 294	ZF 44	-----	GEAR SHIFT CONTROL ROD COVER	16 S 160
000 267 0820	T 19124	1295 307 294	ZF 47	-----	GEAR SHIFT CONTROL ROD COVER	16 S 190
000 267 0820	T 19124	1295 307 294	ZF 50	-----	GEAR SHIFT CONTROL ROD COVER	16 S 150
000 267 0820	T 19124	1295 307 294	ZF 51	-----	GEAR SHIFT CONTROL ROD COVER	16 S 220
000 267 1303	T 19994	1295 307 330	ZF 37	-----	GEAR SHIFT FORK SHAFT	16 S 112
000 267 1303	T 19994	1295 307 330	ZF 41	-----	GEAR SHIFT FORK SHAFT	16 S 130
000 267 1303	T 19994	1295 307 330	ZF 43	-----	GEAR SHIFT FORK SHAFT	16 K 160
000 267 1303	T 19994	1295 307 330	ZF 44	-----	GEAR SHIFT FORK SHAFT	16 S 160
000 267 1303	T 19994	1295 307 330	ZF 47	-----	GEAR SHIFT FORK SHAFT	16 S 190
000 267 1303	T 19994	1295 307 330	ZF 51	-----	GEAR SHIFT FORK SHAFT	16 S 220
000 267 2622	T 18869	1295 307 479	ZF 37	-----	FRONT CASE SIDE COVER	16 S 112
000 267 2622	T 18869	1295 307 479	ZF 40	-----	FRONT CASE SIDE COVER	16 K 130
000 267 2622	T 18869	1295 307 479	ZF 41	-----	FRONT CASE SIDE COVER	16 S 130
000 267 2622	T 18869	1295 307 479	ZF 43	-----	FRONT CASE SIDE COVER	16 K 160
000 267 2622	T 18869	1295 307 479	ZF 44	-----	FRONT CASE SIDE COVER	16 S 160
000 267 2622	T 18869	1295 307 479	ZF 46	-----	FRONT CASE SIDE COVER	16 K 190
000 267 2622	T 18869	1295 307 479	ZF 47	-----	FRONT CASE SIDE COVER	16 S 190
000 267 2622	T 18869	1295 307 479	ZF 50	-----	FRONT CASE SIDE COVER	16 S 150
000 267 2622	T 18869	1295 307 479	ZF 51	-----	FRONT CASE SIDE COVER	16 S 220
000 268 0849	T 08933	1295 306 132	ZF 37	90	SLIDING BLOCK (BRONZE)	16 S 112
000 268 0849	T 08933	1295 306 132	ZF 40	90	SLIDING BLOCK (BRONZE)	16 K 130
000 268 0849	T 08933	1295 306 132	ZF 41	90	SLIDING BLOCK (BRONZE)	16 S 130
000 268 0849	T 08933	1295 306 132	ZF 43	90	SLIDING BLOCK (BRONZE)	16 K 160
000 268 0849	T 08933	1295 306 132	ZF 44	90	SLIDING BLOCK (BRONZE)	16 S 160
000 268 0849	T 08933	1295 306 132	ZF 46	90	SLIDING BLOCK (BRONZE)	16 K 190
000 268 0849	T 08933	1295 306 132	ZF 47	90	SLIDING BLOCK (BRONZE)	16 S 190
000 268 1149	T 17901	1297 306 120	ZF 50	90	SLIDING BLOCK (BRONZE)	16 S 150
000 268 1149	T 17901	1297 306 120	ZF 51	90	SLIDING BLOCK (BRONZE)	16 S 220
000 268 1149	T 17901	1297 306 120	ZF 55	90	SLIDING BLOCK (BRONZE)	16 S 151
000 268 1149	T 17901	1297 306 120	ZF 56	90	SLIDING BLOCK (BRONZE)	16 S 181
000 268 1149	T 17901	1297 306 120	ZF 57	90	SLIDING BLOCK (BRONZE)	16 S 221
000 268 1149	T 17901	1297 306 120	ZF 58	90	SLIDING BLOCK (BRONZE)	16 S 251
000 268 2150	T 16568	0730 260 330	ZF 43	-----	SELECTOR SHAFT BUSHING	16 K 160
000 268 2150	T 16568	0730 260 330	ZF 44	-----	SELECTOR SHAFT BUSHING	16 S 160
000 268 2150	T 16568	0730 260 330	ZF 47	-----	T/M SELECTOR SHAFT BUSHING	16 S 190
000 268 2150	T 16568	0730 260 330	ZF 50	-----	T/M SELECTOR SHAFT BUSHING	16 S 150
000 268 2150	T 16568	0730 260 330	ZF 51	-----	T/M SELECTOR SHAFT BUSHING	16 S 220
000 268 2150	T 16568	0730 260 330	ZF 55	-----	T/M SELECTOR SHAFT BUSHING	16 S 151
000 268 2150	T 16568	0730 260 330	ZF 56	-----	T/M SELECTOR SHAFT BUSHING	16 S 181
000 268 2150	T 16568	0730 260 330	ZF 57	-----	T/M SELECTOR SHAFT BUSHING	16 S 221
000 268 2150	T 16568	0730 260 330	ZF 58	-----	T/M SELECTOR SHAFT BUSHING	16 S 251

PROGRESSIVE MERCEDES REFERENCES



MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
000 981 4686	-----	0750 119 116	ZF 47	66	GEAR NEEDLE ROLLER	16 S 190
000 981 4686	-----	0750 119 116	ZF 51	66	GEAR NEEDLE ROLLER	16 S 220
000 981 4686	-----	0750 119 116	ZF 56	65	GEAR NEEDLE ROLLER	16 S 181
000 981 4686	-----	0750 119 116	ZF 57	66	GEAR NEEDLE ROLLER	16 S 221
000 981 4686	-----	0750 119 116	ZF 58	65	GEAR NEEDLE ROLLER	16 S 251
000 990 2360	T 15366	0737 502 092	ZF 37	41	MAINSHAFT NUT	16 S 112
000 990 2360	T 15366	0737 502 092	ZF 41	41	MAINSHAFT NUT	16 S 130
000 990 2360	T 15366	0737 502 092	ZF 43	36	MAINSHAFT NUT	16 K 160
000 990 2360	T 15366	0737 502 092	ZF 44	41	MAINSHAFT NUT	16 S 160
000 990 2360	T 15366	0737 502 092	ZF 46	37	MAINSHAFT NUT	16 K 190
000 990 2360	T 15366	0737 502 092	ZF 47	41	MAINSHAFT NUT	16 S 190
001 262 0202	T 19096	1295 202 019	ZF 41	4	MAIN DRIVE GEAR (57 T.)	16 S 130
001 262 0302	T 09791	1297 202 030	ZF 44	4	MAIN DRIVE GEAR (57 T.)	16 S 160
001 262 0902	-----	1296 221 001	ZF 37	4	MAIN DRIVE GEAR	16 S 112
001 262 1034	T 18077	1316 304 150	ZF 50	27	SYNCHRONIZER BLOCKING RING	16 S 150
001 262 1034	T 17877	1316 304 150	ZF 51	27	SYNCHRONIZER BLOCKING RING	16 S 220
001 262 1034	T 18077	1316 304 150	ZF 55	26	SYNCHRONIZER BLOCKING RING	16 S 151
001 262 1034	T 18077	1316 304 150	ZF 56	26	SYNCHRONIZER BLOCKING RING	16 S 181
001 262 1034	T 18077	1316 304 150	ZF 57	26	SYNCHRONIZER BLOCKING RING	16 S 221
001 262 1034	T 18077	1316 304 150	ZF 58	19	SYNCHRONIZER BLOCKING RING	16 S 251
001 262 1123	T 14989	1310 304 175	ZF 50	25	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 150
001 262 1123	T 14989	1310 304 175	ZF 51	25	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 220
001 262 1123	T 14989	1310 304 175	ZF 55	24	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 151
001 262 1123	T 14989	1310 304 175	ZF 56	24	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 181
001 262 1123	T 14989	1310 304 175	ZF 57	24	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 221
001 262 1302	-----	1295 221 001	ZF 40	4	MAIN DRIVE GEAR	16 K 130
001 262 1302	-----	1295 221 001	ZF 41	4	MAIN DRIVE GEAR	16 S 130
001 262 1802	T 09793	1295 202 004	ZF 40	4	MAIN DRIVE GEAR (57 T.)	16 K 130
001 262 1802	T 09793	1295 202 004	ZF 41	4	MAIN DRIVE GEAR (57 T.)	16 S 130
001 262 1823	T 14983	1310 304 202	ZF 41	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 130
001 262 1823	T 14983	1310 304 202	ZF 47	16	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 190
001 262 1823	T 14983	1310 304 202	ZF 50	9	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 150
001 262 1823	T 14983	1310 304 202	ZF 50	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 150
001 262 1823	T 14983	1310 304 202	ZF 51	9	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 220
001 262 1823	T 14983	1310 304 202	ZF 51	15	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 220
001 262 1823	T 14983	1310 304 202	ZF 55	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 151
001 262 1823	T 14983	1310 304 202	ZF 55	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 151
001 262 1823	T 14983	1310 304 202	ZF 56	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 181
001 262 1823	T 14983	1310 304 202	ZF 56	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 181
001 262 1823	T 14983	1310 304 202	ZF 57	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 221
001 262 1823	T 14983	1310 304 202	ZF 57	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 221
001 262 1823	T 14983	1310 304 202	ZF 58	7	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 251
001 262 1823	T 14983	1310 304 202	ZF 58	13	SYNCHRONIZER SLIDING COLLAR (57 T.)	16 S 251
001 262 1902	T 11171	1295 202 028	ZF 41	4	MAIN DRIVE GEAR (57 T.)	16 S 130
001 262 2002	T 11173	1296 202 001	ZF 37	4	MAIN DRIVE GEAR (57 T.)	16 S 112
001 262 2802	T 15053	1297 202 053	ZF 43	4	MAIN DRIVE GEAR (57 T.)	16 K 160
001 262 2802	T 15053	1297 202 053	ZF 44	4	MAIN DRIVE GEAR (57 T.)	16 S 160
001 262 2802	T 15053	1297 202 053	ZF 46	4	MAIN DRIVE GEAR (57 T.)	16 K 190
001 262 2802	T 15053	1297 202 053	ZF 47	4	MAIN DRIVE GEAR (57 T.)	16 S 190
001 262 3002	-----	1297 202 044	ZF 44	5	MAIN DRIVE GEAR	16 S 160
001 262 3002	-----	1297 202 044	ZF 46	5	MAIN DRIVE GEAR	16 K 190
001 262 3002	-----	1297 202 044	ZF 47	5	MAIN DRIVE GEAR	16 S 190
001 262 3202	-----	1297 202 061	ZF 44	4	MAIN DRIVE GEAR	16 S 160
001 262 3202	-----	1297 202 061	ZF 47	4	MAIN DRIVE GEAR	16 S 190
001 262 3302	-----	1296 221 002	ZF 37	4	MAIN DRIVE GEAR	16 S 112
001 262 3802	-----	1295 221 003	ZF 41	4	MAIN DRIVE GEAR	16 S 130
001 263 0510	T 19952	1297 303 098	ZF 43	25	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 K 160
001 263 0510	T 19952	1297 303 098	ZF 44	30	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 S 160
001 263 0510	T 19952	1297 303 098	ZF 46	26	COUNTERSHAFT CONSTANT GEAR (32 T.)	16 K 190
001 263 2110	-----	1295 332 086	ZF 40	69	RING GEAR (86 T.)	16 K 130
001 263 2110	-----	1295 332 086	ZF 41	69	RING GEAR (86 T.)	16 S 130
001 263 2110	-----	1295 332 086	ZF 43	69	RING GEAR (86 T.)	16 K 160
001 263 2110	-----	1295 332 086	ZF 44	69	RING GEAR (86 T.)	16 S 160
001 263 2110	-----	1295 332 086	ZF 46	69	RING GEAR (86 T.)	16 K 190
001 263 2110	-----	1295 332 086	ZF 47	69	RING GEAR (86 T.)	16 S 190
001 263 2110	-----	1295 332 086	ZF 50	69	RING GEAR (86 T.)	16 S 150
001 263 2110	-----	1295 332 086	ZF 51	69	RING GEAR (86 T.)	16 S 220
001 263 2110	-----	1295 332 086	ZF 55	68	RING GEAR (86 T.)	16 S 151
001 263 2110	-----	1295 332 086	ZF 57	69	RING GEAR (86 T.)	16 S 221
001 981 1187	T 08936	0735 470 057	ZF 37	66	GEAR NEEDLE ROLLER	16 S 112
001 981 1187	T 08936	0735 470 057	ZF 40	66	GEAR NEEDLE ROLLER	16 K 130
001 981 1187	T 08936	0735 470 057	ZF 41	66	GEAR NEEDLE ROLLER	16 S 130

MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
001 981 5487	T 15760	0750 119 109	ZF 41	66	GEAR NEEDLE ROLLER	16 S 130
001 981 5487	T 15760	0750 119 109	ZF 43	66	GEAR NEEDLE ROLLER	16 K 160
001 981 5487	T 15760	0750 119 109	ZF 44	66	GEAR NEEDLE ROLLER	16 S 160
001 981 5487	T 15760	0750 119 109	ZF 46	66	GEAR NEEDLE ROLLER	16 K 190
001 981 5487	T 15760	0750 119 109	ZF 47	66	GEAR NEEDLE ROLLER	16 S 190
002 993 7501	T 09068	0732 040 736	ZF 37	-----	PRESSURE SPRING	16 S 112
002 993 7501	T 09068	0732 040 736	ZF 40	-----	PRESSURE SPRING	16 K 130
002 993 7501	T 09068	0732 040 736	ZF 41	-----	PRESSURE SPRING	16 S 130
002 993 7501	T 09068	0732 040 736	ZF 43	-----	PRESSURE SPRING	16 K 160
002 993 7501	T 09068	0732 040 736	ZF 44	-----	PRESSURE SPRING	16 S 160
002 993 7501	T 09068	0732 040 736	ZF 46	-----	PRESSURE SPRING	16 K 190
002 993 7501	T 09068	0732 040 736	ZF 47	-----	PRESSURE SPRING	16 S 190
002 993 7501	T 09068	0732 040 736	ZF 50	-----	PRESSURE SPRING	16 S 150
002 993 7501	T 09068	0732 040 736	ZF 51	-----	PRESSURE SPRING	16 S 220
003 264 2052	T 08939	0730 103 846	ZF 37	65	GEAR SPACER RING	16 S 112
003 264 2052	T 08939	0730 103 846	ZF 40	65	GEAR SPACER RING	16 K 130
003 264 2052	T 08939	0730 103 846	ZF 41	65	GEAR SPACER RING	16 S 130
003 264 2052	T 08939	0730 103 846	ZF 43	65	GEAR SPACER RING	16 K 160
003 264 2052	T 08939	0730 103 846	ZF 44	65	GEAR SPACER RING	16 S 160
003 264 2052	T 08939	0730 103 846	ZF 46	65	GEAR SPACER RING	16 K 190
003 264 2052	T 08939	0730 103 846	ZF 47	65	GEAR SPACER RING	16 S 190
003 264 2052	T 08939	0730 103 846	ZF 51	65	GEAR SPACER RING	16 S 220
003 264 2252	T 08940	0501 305 887	ZF 37	64	GEAR THRUST WASHER	16 S 112
003 264 2252	T 08940	0501 305 887	ZF 40	64	GEAR THRUST WASHER	16 K 130
003 264 2252	T 08940	0501 305 887	ZF 41	64	GEAR THRUST WASHER	16 S 130
003 994 3841	T 19907	0630 531 055	ZF 37	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 112
003 994 3841	T 19907	0630 531 055	ZF 40	-----	POWER TAKE OFF SHAFT LOCK RING	16 K 130
003 994 3841	T 19907	0630 531 055	ZF 41	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 130
003 994 3841	T 19907	0630 531 055	ZF 43	-----	POWER TAKE OFF SHAFT LOCK RING	16 K 160
003 994 3841	T 19907	0630 531 055	ZF 44	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 160
003 994 3841	T 19907	0630 531 055	ZF 46	-----	POWER TAKE OFF SHAFT LOCK RING	16 K 190
003 994 3841	T 19907	0630 531 055	ZF 47	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 190
003 994 3841	T 19907	0630 531 055	ZF 55	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 151
003 994 3841	T 19907	0630 531 055	ZF 56	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 181
003 994 3841	T 19907	0630 531 055	ZF 57	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 221
003 994 3841	T 19907	0630 531 055	ZF 58	-----	POWER TAKE OFF SHAFT LOCK RING	16 S 251
004 981 8625	T 19914	0635 331 390	ZF 37	-----	BALL BEARING 45X75X16 MM	16 S 112
004 981 8625	T 19914	0635 331 390	ZF 40	-----	BALL BEARING 45X75X16 MM	16 K 130
004 981 8625	T 19914	0635 331 390	ZF 41	-----	BALL BEARING 45X75X16 MM	16 S 130
004 981 8625	T 19914	0635 331 390	ZF 43	-----	BALL BEARING 45X75X16 MM	16 K 160
004 981 8625	T 19914	0635 331 390	ZF 44	-----	BALL BEARING 45X75X16 MM	16 S 160
004 981 8625	T 19914	0635 331 390	ZF 46	-----	BALL BEARING 45X75X16 MM	16 K 190
004 981 8625	T 19914	0635 331 390	ZF 47	-----	BALL BEARING 45X75X16 MM	16 S 190
004 981 8625	T 19914	0635 331 390	ZF 55	-----	BALL BEARING 45X75X16 MM	16 S 151
004 981 8625	T 19914	0635 331 390	ZF 56	-----	BALL BEARING 45X75X16 MM	16 S 181
004 981 8625	T 19914	0635 331 390	ZF 57	-----	BALL BEARING 45X75X16 MM	16 S 221
004 981 8625	T 19914	0635 331 390	ZF 58	-----	BALL BEARING 45X75X16 MM	16 S 251
005 993 6101	T 13440	0732 040 409	ZF 41	7	SYNCHRONIZER PRESSURE SPRING	16 S 130
005 993 6101	T 13440	0732 040 409	ZF 47	7	SYNCHRONIZER PRESSURE SPRING	16 S 190
005 993 6101	T 13440	0732 040 409	ZF 50	7	SYNCHRONIZER PRESSURE SPRING	16 S 150
005 993 6101	T 13440	0732 040 409	ZF 51	7	SYNCHRONIZER PRESSURE SPRING	16 S 220
005 993 6101	T 13440	0732 040 409	ZF 55	5	SYNCHRONIZER PRESSURE SPRING	16 S 151
005 993 6101	T 13440	0732 040 409	ZF 56	5	SYNCHRONIZER PRESSURE SPRING	16 S 181
005 993 6101	T 13440	0732 040 409	ZF 57	5	SYNCHRONIZER PRESSURE SPRING	16 S 221
005 993 6101	T 13440	0732 040 409	ZF 58	5	SYNCHRONIZER PRESSURE SPRING	16 S 251
336 262 0023	T 08946	1257 304 020	ZF 37	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 112
336 262 0023	T 08946	1257 304 020	ZF 41	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 130
336 262 0023	T 08946	1257 304 020	ZF 44	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 160
336 262 0023	T 08946	1257 304 020	ZF 47	23	SYNCHRONIZER SLIDING COLLAR (63 T.)	16 S 190
336 264 0239	T 08949	1240 304 278	ZF 37	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 112
336 264 0239	T 08949	1240 304 278	ZF 37	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 112
336 264 0239	T 08949	1240 304 278	ZF 40	8	SYNCHRONIZER PRESSURE PLUNGER	16 K 130
336 264 0239	T 08949	1240 304 278	ZF 40	76	SYNCHRONIZER PRESSURE PLUNGER	16 K 130
336 264 0239	T 08949	1240 304 278	ZF 41	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 130
336 264 0239	T 08949	1240 304 278	ZF 41	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 130
336 264 0239	T 08949	1240 304 278	ZF 43	8	SYNCHRONIZER PRESSURE PLUNGER	16 K 160
336 264 0239	T 08949	1240 304 278	ZF 43	76	SYNCHRONIZER PRESSURE PLUNGER	16 K 160
336 264 0239	T 08949	1240 304 278	ZF 44	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 160
336 264 0239	T 08949	1240 304 278	ZF 44	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 160
336 264 0239	T 08949	1240 304 278	ZF 46	9	SYNCHRONIZER PRESSURE PLUNGER	16 K 190
336 264 0239	T 08949	1240 304 278	ZF 46	76	SYNCHRONIZER PRESSURE PLUNGER	16 K 190
336 264 0239	T 08949	1240 304 278	ZF 47	9	SYNCHRONIZER PRESSURE PLUNGER	16 S 190

PROGRESSIVE MERCEDES REFERENCES



MERCEDES No.	TAS No.	ZF No.	TAB	KEY	DESCRIPTION	MODEL
336 264 0239	T 08949	1240 304 278	ZF 47	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 190
336 264 0239	T 08949	1240 304 278	ZF 50	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 150
336 264 0239	T 08949	1240 304 278	ZF 51	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 220
336 264 0239	T 08949	1240 304 278	ZF 55	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 151
336 264 0239	T 08949	1240 304 278	ZF 56	76	SYNCHRONIZER PRESSURE PLUNGER	16 S 181
336 264 0239	T 08949	1240 304 278	ZF 57	77	SYNCHRONIZER PRESSURE PLUNGER	16 S 221
336 264 0239	T 08949	1240 304 278	ZF 58	77	SYNCHRONIZER PRESSURE PLUNGER	16 S 251
336 264 0693	T 08950	0732 040 385	ZF 37	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 112
336 264 0693	T 08950	0732 040 385	ZF 37	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 112
336 264 0693	T 08950	0732 040 385	ZF 40	6	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 130
336 264 0693	T 08950	0732 040 385	ZF 40	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 130
336 264 0693	T 08950	0732 040 385	ZF 41	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 130
336 264 0693	T 08950	0732 040 385	ZF 41	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 130
336 264 0693	T 08950	0732 040 385	ZF 43	6	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 160
336 264 0693	T 08950	0732 040 385	ZF 43	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 160
336 264 0693	T 08950	0732 040 385	ZF 44	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 160
336 264 0693	T 08950	0732 040 385	ZF 44	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 160
336 264 0693	T 08950	0732 040 385	ZF 46	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 190
336 264 0693	T 08950	0732 040 385	ZF 46	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 K 190
336 264 0693	T 08950	0732 040 385	ZF 47	7	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 190
336 264 0693	T 08950	0732 040 385	ZF 47	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 190
336 264 0693	T 08950	0732 040 385	ZF 50	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 150
336 264 0693	T 08950	0732 040 385	ZF 51	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 220
336 264 0693	T 08950	0732 040 385	ZF 55	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 151
336 264 0693	T 08950	0732 040 385	ZF 56	74	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 181
336 264 0693	T 08950	0732 040 385	ZF 57	75	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 221
336 264 0693	T 08950	0732 040 385	ZF 58	75	SYNCHRONIZER PRESSURE SPRING, OUTER	16 S 251
336 264 0793	T 08951	0732 040 386	ZF 37	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 112
336 264 0793	T 08951	0732 040 386	ZF 37	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 112
336 264 0793	T 08951	0732 040 386	ZF 40	7	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 130
336 264 0793	T 08951	0732 040 386	ZF 40	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 130
336 264 0793	T 08951	0732 040 386	ZF 41	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 130
336 264 0793	T 08951	0732 040 386	ZF 41	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 130
336 264 0793	T 08951	0732 040 386	ZF 43	7	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 160
336 264 0793	T 08951	0732 040 386	ZF 43	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 160
336 264 0793	T 08951	0732 040 386	ZF 44	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 160
336 264 0793	T 08951	0732 040 386	ZF 44	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 160
336 264 0793	T 08951	0732 040 386	ZF 46	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 190
336 264 0793	T 08951	0732 040 386	ZF 46	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 K 190
336 264 0793	T 08951	0732 040 386	ZF 47	8	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 190
336 264 0793	T 08951	0732 040 386	ZF 47	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 190
336 264 0793	T 08951	0732 040 386	ZF 50	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 150
336 264 0793	T 08951	0732 040 386	ZF 51	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 220
336 264 0793	T 08951	0732 040 386	ZF 55	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 151
336 264 0793	T 08951	0732 040 386	ZF 56	75	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 181
336 264 0793	T 08951	0732 040 386	ZF 57	76	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 221
336 264 0793	T 08951	0732 040 386	ZF 58	76	SYNCHRONIZER PRESSURE SPRING, INNER	16 S 251
343 263 0062	T 14283	0730 150 064	ZF 37	35	REVERSE IDLER GEAR THRUST WASHER	16 S 112
343 263 0062	T 14283	0730 150 064	ZF 40	30	REVERSE IDLER GEAR THRUST WASHER	16 K 130
343 263 0062	T 14283	0730 150 064	ZF 41	35	REVERSE IDLER GEAR THRUST WASHER	16 S 130
343 263 0062	T 14283	0730 150 064	ZF 43	31	REVERSE IDLER GEAR THRUST WASHER	16 K 160
343 263 0062	T 14283	0730 150 064	ZF 44	36	REVERSE IDLER GEAR THRUST WASHER	16 S 160
343 263 0062	T 14283	0730 150 064	ZF 46	32	REVERSE IDLER GEAR THRUST WASHER	16 K 190
343 263 0062	T 14283	0730 150 064	ZF 47	36	REVERSE IDLER GEAR THRUST WASHER	16 S 190
343 263 0062	T 14283	0730 150 064	ZF 50	42	REVERSE IDLER GEAR THRUST WASHER	16 S 150
343 263 0062	T 14283	0730 150 064	ZF 51	42	REVERSE IDLER GEAR THRUST WASHER	16 S 220
000471 030000	T 09503	0630 501 024	ZF 37	40	MAINSHAFT BEARING CIRCLIP	16 S 112
000471 030000	T 09503	0630 501 024	ZF 40	34	MAINSHAFT BEARING CIRCLIP	16 K 130
000471 030000	T 09503	0630 501 024	ZF 41	40	MAINSHAFT BEARING CIRCLIP	16 S 130
001481 003028	T 15771	0631 329 017	ZF 37	63	GEAR SHAFT ELASTIC PIN	16 S 112
001481 003028	T 15771	0631 329 017	ZF 40	63	GEAR SHAFT ELASTIC PIN	16 K 130
001481 003028	T 15771	0631 329 017	ZF 41	63	GEAR SHAFT ELASTIC PIN	16 S 130
001481 003028	T 15771	0631 329 017	ZF 43	63	GEAR SHAFT ELASTIC PIN	16 K 160
001481 003028	T 15771	0631 329 017	ZF 44	63	GEAR SHAFT ELASTIC PIN	16 S 160
001481 003028	T 15771	0631 329 017	ZF 46	63	GEAR SHAFT ELASTIC PIN	16 K 190
001481 003028	T 15771	0631 329 017	ZF 47	63	GEAR SHAFT ELASTIC PIN	16 S 190
001481 005036	T 15775	0631 329 050	ZF 37	62	GEAR SHAFT ELASTIC PIN	16 S 112
001481 005036	T 15775	0631 329 050	ZF 40	62	GEAR SHAFT ELASTIC PIN	16 K 130
001481 005036	T 15775	0631 329 050	ZF 41	62	GEAR SHAFT ELASTIC PIN	16 S 130
001481 005036	T 15775	0631 329 050	ZF 43	62	GEAR SHAFT ELASTIC PIN	16 K 160
001481 005036	T 15775	0631 329 050	ZF 44	62	GEAR SHAFT ELASTIC PIN	16 S 160
001481 005036	T 15775	0631 329 050	ZF 46	62	GEAR SHAFT ELASTIC PIN	16 K 190

[illegible]



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16S112


73

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 37
4-510

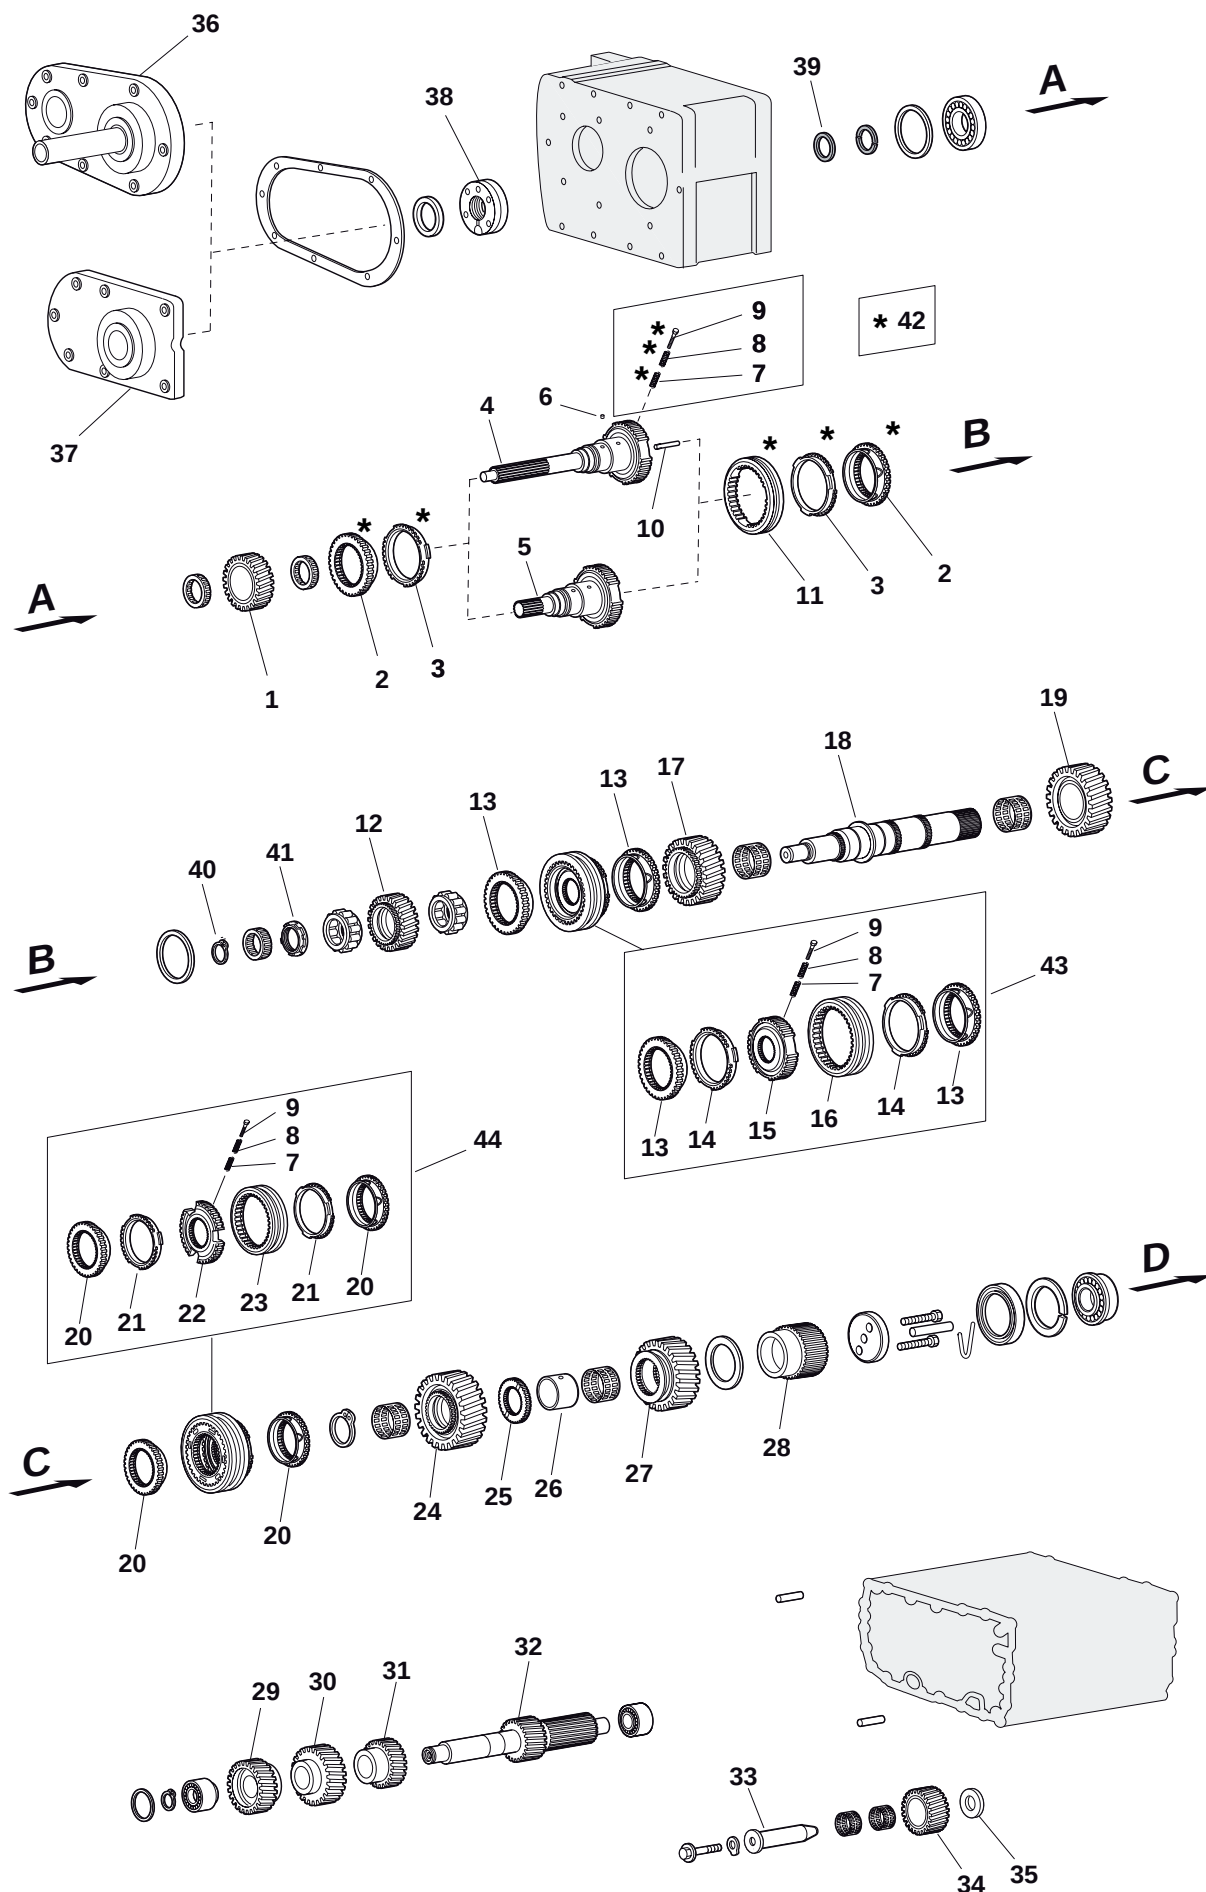

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	-----	1296 302 002	-----	CONSTANT GEAR (30 T.)	
1	T 11161	1296 302 003	000 262 3910	CONSTANT GEAR (28-58 T.)	
1	T 14807	1296 302 023	000 262 3010	CONSTANT GEAR (28-61 T.)	
2	T 08858	1295 304 165	000 262 1440	SYNCHRONIZER CONE (57 T.)	
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	1
3	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	1
4	T 11173	1296 202 001	001 262 2002	MAIN DRIVE GEAR (57 T.)	A
4	T 15119	1296 202 004	000 262 9402	MAIN DRIVE GEAR (57 T.)	
4	-----	1296 202 006	-----	MAIN DRIVE GEAR	B
4	-----	1296 202 010	-----	MAIN DRIVE GEAR	C
4	-----	1296 221 001	001 262 0902	MAIN DRIVE GEAR	
4	-----	1296 221 002	001 262 3302	MAIN DRIVE GEAR	
5	-----	1296 202 011	-----	MAIN DRIVE GEAR	D
6	-----	0635 470 012	005402 007200	SYNCHRONIZER CYLINDER ROLLER	
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	1-2-3-4-5
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	1-2-3-4-5
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	1-2-3-4-5
10	-----	0730 062 323	000 261 0766	MAIN DRIVE GEAR TUBE	
11	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
12	T 11154	1296 304 090	000 262 2414	FOURTH SPEED GEAR (58-30-58 T.)	
12	-----	1296 304 091	-----	FOURTH SPEED GEAR (28 T.)	
13	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	3
14	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	2
14	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	3
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	2-3
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	2-3
17	T 11156	1296 304 087	000 262 3113	THIRD SPEED GEAR (34-58 T.)	
17	-----	1296 304 088	-----	THIRD SPEED GEAR (32 T.)	
18	T 19135	1296 304 119	000 262 2505	MAINSHAFT	
19	T 19132	1296 304 070	000 262 2512	SECOND SPEED GEAR (38-58 T.)	
19	-----	1296 304 071	-----	SECOND SPEED GEAR (37 T.)	
20	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	
20	T 09054	1297 304 196	000 262 2140	SYNCHRONIZER CONE (63 T.)	5
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	4-5
21	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	
22	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	4-5
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	4-5
23	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	
24	-----	1296 304 099	000 262 4811	FIRST SPEED GEAR (47 T.)	
24	-----	1296 304 100	-----	FIRST SPEED GEAR (44 T.)	
25	T 19360	1295 304 206	000 262 1540	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	
26	T 19100	1295 304 012	000 262 2050	REVERSE GEAR SLEEVE	
27	-----	1296 304 097	000 262 4911	REVERSE GEAR (38 T.)	
27	-----	1296 304 098	-----	REVERSE GEAR (39 T.)	
28	T 15359	1295 304 247	000 262 0109	PLANETARY REDUCTION SUN GEAR (27 T.)	
29	-----	1296 303 013	-----	COUNTERSHAFT CONSTANT GEAR (31 T.)	
29	T 11165	1296 303 014	000 263 3210	COUNTERSHAFT CONSTANT GEAR (34 T.)	
30	T 11169	1296 303 002	000 263 3310	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	
30	-----	1296 303 003	-----	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	
31	-----	1296 303 008	-----	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	
31	T 11163	1296 303 009	000 263 3110	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	
32	T 15364	1296 303 025	000 263 3502	COUNTERSHAFT (17-20 T.)	
32	-----	1296 303 026	-----	COUNTERSHAFT (19-23 T.)	
33	T 11447	1295 305 056	000 263 1430	REVERSE IDLER GEAR SHAFT	
34	-----	1295 305 051	000 263 0232	REVERSE IDLER GEAR (21 T.)	
34	-----	1295 305 052	000 263 0032	REVERSE IDLER GEAR (24 T.)	
35	T 14283	0730 150 064	343 263 0062	REVERSE IDLER GEAR THRUST WASHER	
36	-----	1297 302 011	-----	MAIN DRIVE GEAR BEARING RETAINER	B
36	T 15567	1297 302 012	000 262 3329	MAIN DRIVE GEAR BEARING RETAINER	A
36	-----	1297 302 013	-----	MAIN DRIVE GEAR BEARING RETAINER	A
36	-----	1297 302 108	-----	MAIN DRIVE GEAR BEARING RETAINER	C
36	-----	1297 302 169	-----	MAIN DRIVE GEAR BEARING RETAINER	C
37	-----	1295 302 100	000 262 4529	MAIN DRIVE GEAR BEARING RETAINER	D
38	T 09751	1295 202 041	000 260 1290	MAIN DRIVE GEAR OIL PUMP	
39	T 15289	0730 061 816	000 262 0673	SPACER RING	
40	T 09503	0630 501 024	000471 030000	MAINSHAFT BEARING CIRCLIP	
41	T 15366	0737 502 092	000 990 2360	MAINSHAFT NUT	
42	T 16154	1295 298 936	-----	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	1 (*)
43	T 16161	1297 204 059	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	2 (*)
43	T 18620	1297 298 958	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	3 (*)

75

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme


Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 81

(*) For the composition of the kits please see page 81

16 S 112

ZF 37
4-510

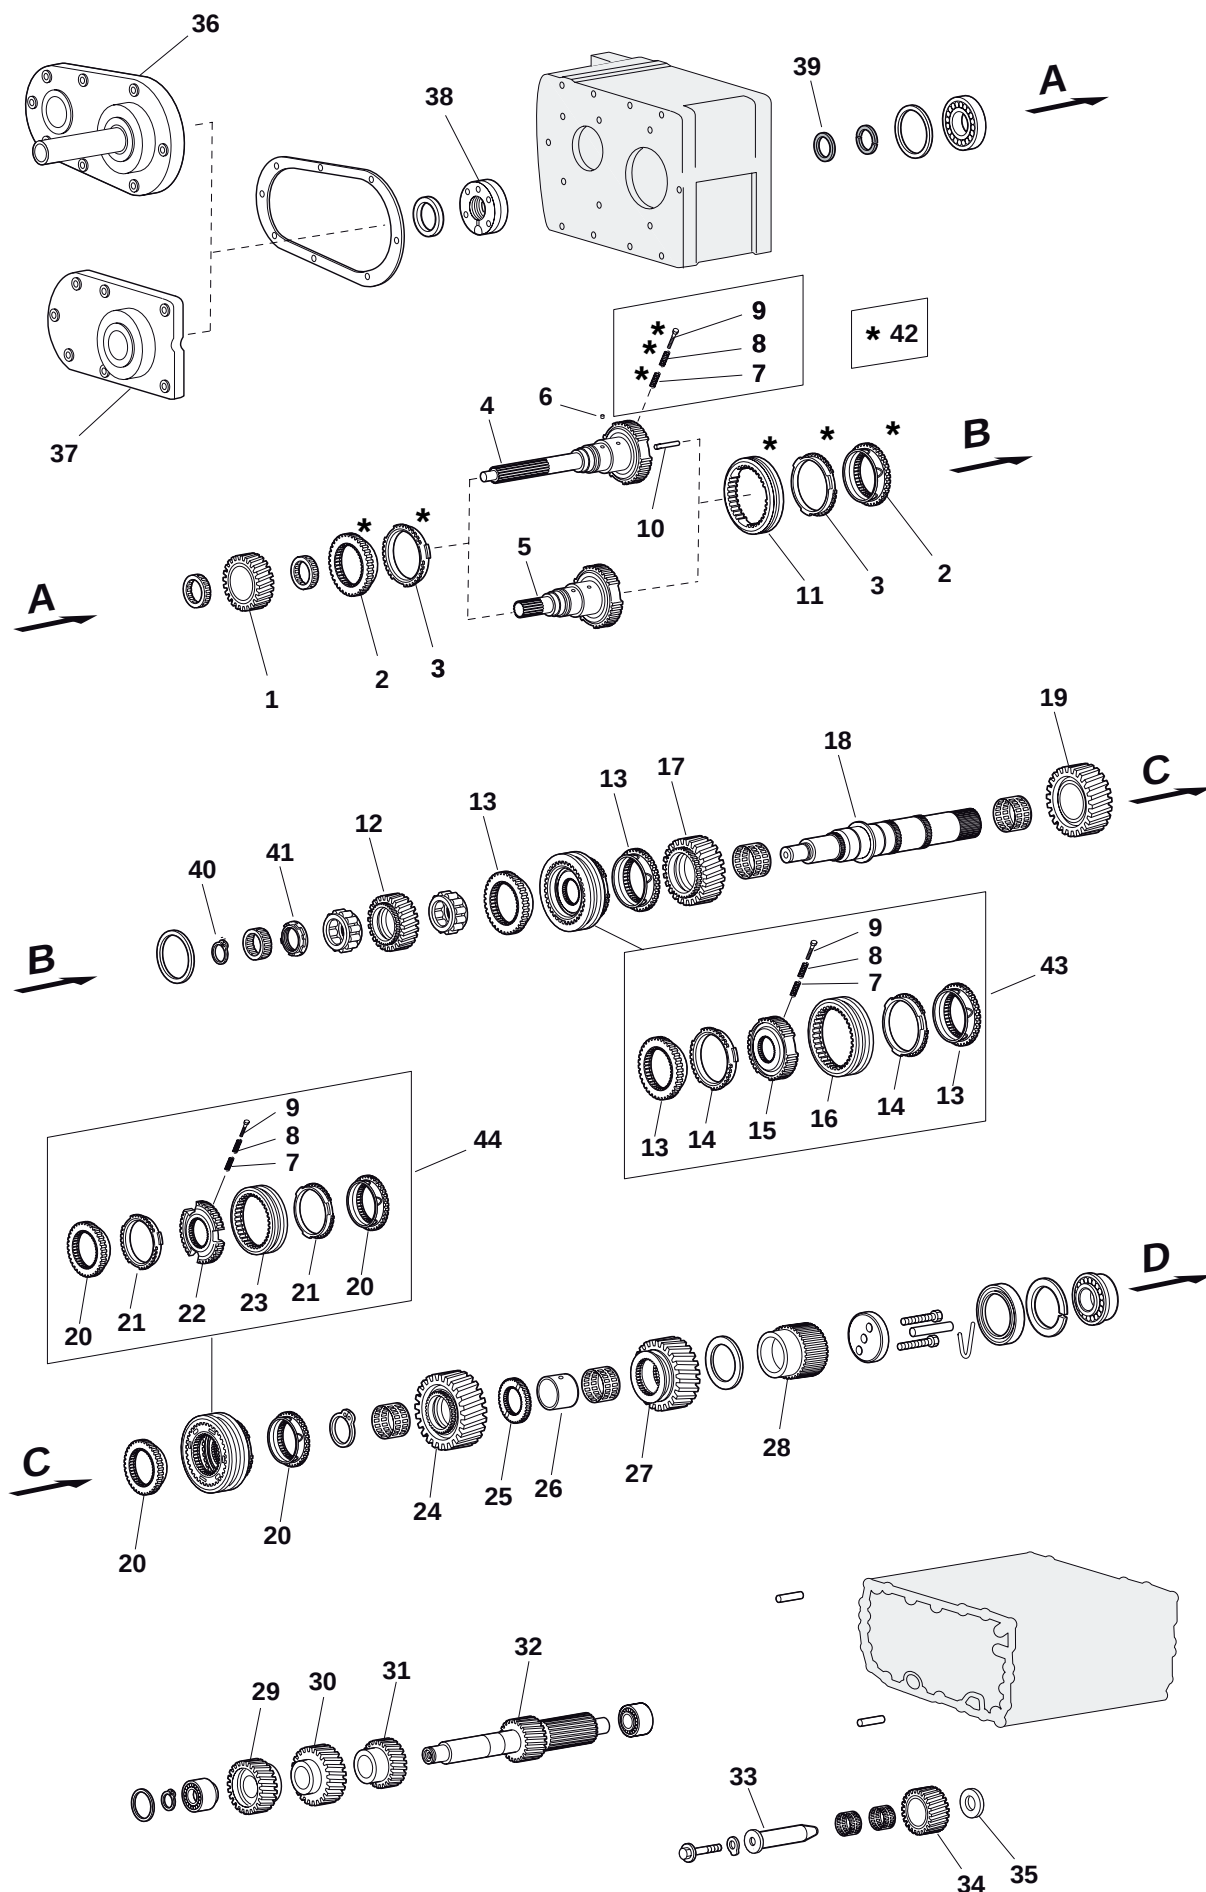

[illegible]

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme





Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 81

(*) For the composition of the kits please see page 81

16 S 112

ZF 37
4-510

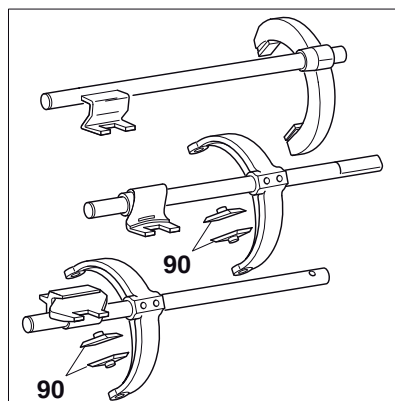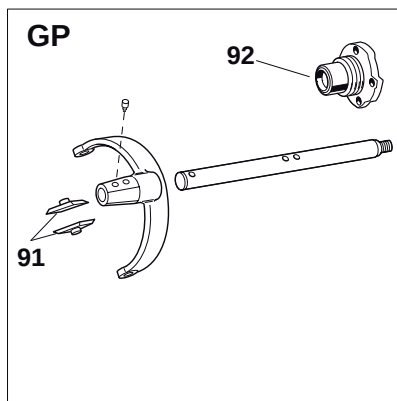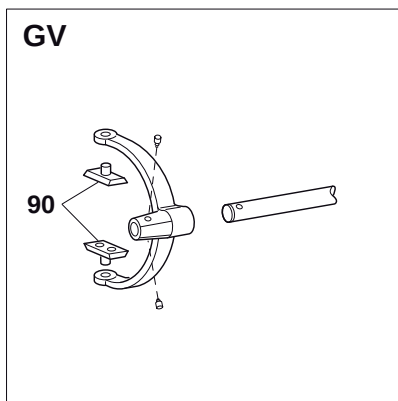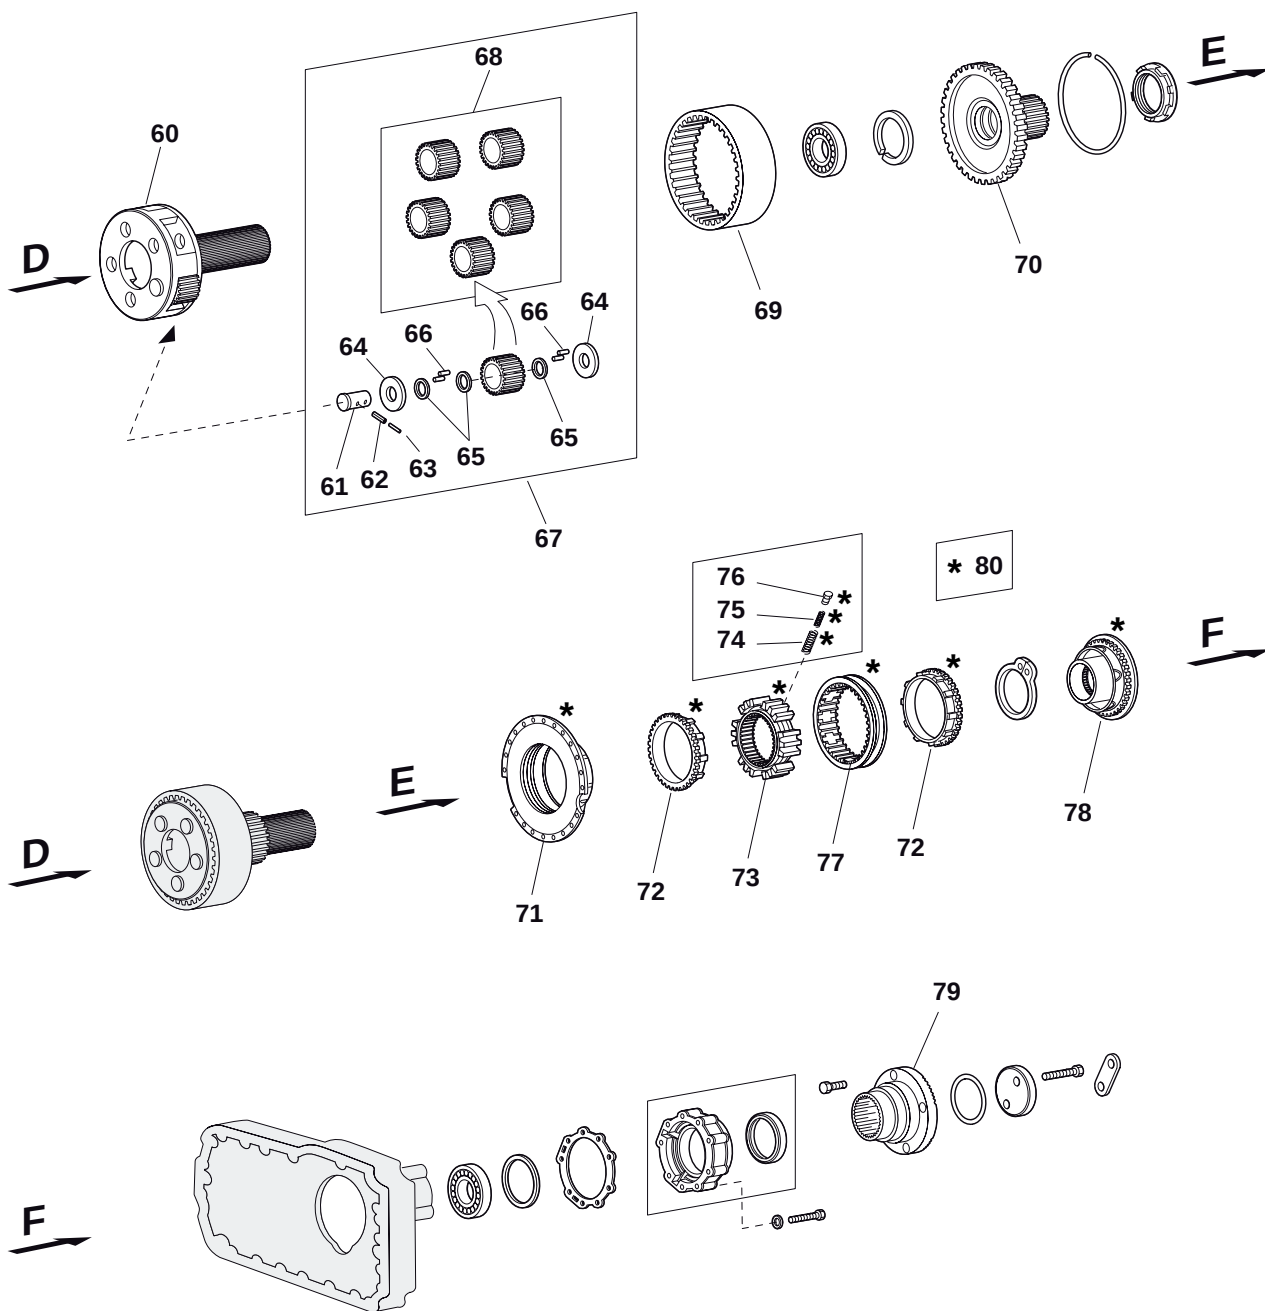

79

ZF 37
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 305 887	T 08940	003 264 2252	ZF 37	64	1296 221 001	-----	001 262 0902	ZF 37	4
0630 501 024	T 09503	000471 030000	ZF 37	40	1296 221 002	-----	001 262 3302	ZF 37	4
0630 531 055	T 19907	003 994 3841	ZF 37	-----	1296 233 006	T 08908	000 263 1720	ZF 37	71
0631 329 017	T 15771	001481 003028	ZF 37	63	1296 298 904	T 16700	000 262 0306	ZF 37	67
0631 329 050	T 15775	001481 005036	ZF 37	62	1296 302 002	-----	-----	ZF 37	1
0635 331 390	T 19914	004 981 8625	ZF 37	-----	1296 302 003	T 11161	000 262 3910	ZF 37	1
0635 470 012	-----	005402 007200	ZF 37	6	1296 302 023	T 14807	000 262 3010	ZF 37	1
0730 061 816	T 15289	000 262 0673	ZF 37	39	1296 303 002	T 11169	000 263 3310	ZF 37	30
0730 062 323	-----	000 261 0766	ZF 37	10	1296 303 003	-----	-----	ZF 37	30
0730 103 846	T 08939	003 264 2052	ZF 37	65	1296 303 008	-----	-----	ZF 37	31
0730 150 064	T 14283	343 263 0062	ZF 37	35	1296 303 009	T 11163	000 263 3110	ZF 37	31
0732 040 385	T 08950	336 264 0693	ZF 37	7	1296 303 013	-----	-----	ZF 37	29
0732 040 385	T 08950	336 264 0693	ZF 37	74	1296 303 014	T 11165	000 263 3210	ZF 37	29
0732 040 386	T 08951	336 264 0793	ZF 37	8	1296 303 025	T 15364	000 263 3502	ZF 37	32
0732 040 386	T 08951	336 264 0793	ZF 37	75	1296 303 026	-----	-----	ZF 37	32
0732 040 736	T 09068	002 993 7501	ZF 37	-----	1296 304 070	T 19132	000 262 2512	ZF 37	19
0735 470 057	T 08936	001 981 1187	ZF 37	66	1296 304 071	-----	-----	ZF 37	19
0737 502 092	T 15366	000 990 2360	ZF 37	41	1296 304 087	T 11156	000 262 3113	ZF 37	17
1240 304 278	T 08949	336 264 0239	ZF 37	9	1296 304 088	-----	-----	ZF 37	17
1240 304 278	T 08949	336 264 0239	ZF 37	76	1296 304 090	T 11154	000 262 2414	ZF 37	12
1240 317 075	T 08917	000 264 1423	ZF 37	-----	1296 304 091	-----	-----	ZF 37	12
1246 304 278	T 08874	000 262 2434	ZF 37	21	1296 304 097	-----	000 262 4911	ZF 37	27
1257 304 020	T 08946	336 262 0023	ZF 37	23	1296 304 098	-----	-----	ZF 37	27
1269 332 036	T 08919	000 264 1618	ZF 37	61	1296 304 099	-----	000 262 4811	ZF 37	24
1295 202 041	T 09751	000 260 1290	ZF 37	38	1296 304 100	-----	-----	ZF 37	24
1295 203 005	T 20125	-----	ZF 37	-----	1296 304 119	T 19135	000 262 2505	ZF 37	18
1295 232 027	T 16702	000 260 1497	ZF 37	68	1296 312 042	T 16712	000 267 0519	ZF 37	92
1295 232 048	-----	000 260 4361	ZF 37	60	1296 333 002	T 08899	000 263 0735	ZF 37	73
1295 233 025	T 09063	000 263 1920	ZF 37	78	1296 333 022	T 09061	000 263 0234	ZF 37	72
1295 238 003	-----	-----	ZF 37	79	1296 333 023	T 09062	000 263 0523	ZF 37	77
1295 298 915	T 20194	-----	ZF 37	-----	1296 333 045	T 15084	000 263 0534	ZF 37	72
1295 298 936	T 16154	-----	ZF 37	42	1296 334 004	T 17892	000 265 0649	ZF 37	91
1295 298 937	T 16155	-----	ZF 37	80	1297 204 019	T 16160	-----	ZF 37	44
1295 298 937	T 16155	-----	ZF 40	80	1297 204 059	T 16161	-----	ZF 37	43
1295 298 938	T 16156	-----	ZF 37	80	1297 298 956	T 18619	-----	ZF 37	44
1295 298 938	T 16156	-----	ZF 40	80	1297 298 958	T 18620	-----	ZF 37	43
1295 298 959	T 16167	-----	ZF 37	80	1297 302 011	-----	-----	ZF 37	36
1295 298 959	T 16167	-----	ZF 40	80	1297 302 012	T 15567	000 262 3329	ZF 37	36
1295 298 960	T 20200	-----	ZF 37	-----	1297 302 013	-----	-----	ZF 37	36
1295 302 100	-----	000 262 4529	ZF 37	37	1297 302 108	-----	-----	ZF 37	36
1295 304 002	T 09056	000 262 3623	ZF 37	11	1297 302 169	-----	-----	ZF 37	36
1295 304 002	T 09056	000 262 3623	ZF 37	16	1297 304 031	T 08892	000 262 3935	ZF 37	15
1295 304 002	T 09056	000 262 3623	ZF 37	23	1297 304 031	T 08892	000 262 3935	ZF 37	22
1295 304 004	T 08795	000 262 2034	ZF 37	3	1297 304 195	T 08895	000 262 4435	ZF 37	22
1295 304 004	T 08795	000 262 2034	ZF 37	14	1297 304 196	T 09054	000 262 2140	ZF 37	20
1295 304 004	T 08795	000 262 2034	ZF 37	21	1304 304 686	T 15151	000 262 9934	ZF 37	3
1295 304 012	T 19100	000 262 2050	ZF 37	26	1304 304 686	T 15151	000 262 9934	ZF 37	14
1295 304 165	T 08858	000 262 1440	ZF 37	2					
1295 304 206	T 19360	000 262 1540	ZF 37	25					
1295 304 247	T 15359	000 262 0109	ZF 37	28					
1295 304 278	T 08871	000 262 1940	ZF 37	2					
1295 304 278	T 08871	000 262 1940	ZF 37	13					
1295 304 278	T 08871	000 262 1940	ZF 37	20					
1295 305 051	-----	000 263 0232	ZF 37	34					
1295 305 052	-----	000 263 0032	ZF 37	34					
1295 305 056	T 11447	000 263 1430	ZF 37	33					
1295 306 132	T 08933	000 268 0849	ZF 37	90					
1295 307 158	T 19945	000 267 0046	ZF 37	-----					
1295 307 243	T 19116	000 267 0474	ZF 37	-----					
1295 307 274	T 18581	000 267 0503	ZF 37	-----					
1295 307 275	T 18886	000 267 0803	ZF 37	-----					
1295 307 294	T 19124	000 267 0820	ZF 37	-----					
1295 307 330	T 19994	000 267 1303	ZF 37	-----					
1295 307 479	T 18869	000 267 2622	ZF 37	-----					
1295 307 533	T 19130	000 265 2031	ZF 37	-----					
1295 332 021	-----	000 263 0025	ZF 37	70					
1295 332 053	-----	000 263 6410	ZF 37	69					
1295 338 014	-----	000 264 2745	ZF 37	79					
1295 338 059	T 14811	000 264 3745	ZF 37	79					
1295 338 061	-----	000 264 3645	ZF 37	79					
1295 338 083	T 19927	000 264 5150	ZF 37	-----					
1296 202 001	T 11173	001 262 2002	ZF 37	4					
1296 202 004	T 15119	000 262 9402	ZF 37	4					
1296 202 006	-----	-----	ZF 37	4					
1296 202 010	-----	-----	ZF 37	4					
1296 202 011	-----	-----	ZF 37	5					

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
42	T 16154	1295 298 936	-----	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT		16 S 112	ZF 37
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	2	16 S 112	ZF 37
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	2	16 S 112	ZF 37
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 112	ZF 37
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 112	ZF 37
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 112	ZF 37
11	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 112	ZF 37
43	T 16161	1297 204 059	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 112	ZF 37
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 112	ZF 37
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 112	ZF 37
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 112	ZF 37
14	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	2	16 S 112	ZF 37
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	1	16 S 112	ZF 37
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 112	ZF 37
43	T 18620	1297 298 958	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 112	ZF 37
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 112	ZF 37
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 112	ZF 37
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 112	ZF 37
13	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	2	16 S 112	ZF 37
14	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	2	16 S 112	ZF 37
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	1	16 S 112	ZF 37
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 112	ZF 37
44	T 16160	1297 204 019	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 112	ZF 37
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 112	ZF 37
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 112	ZF 37
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 112	ZF 37
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	2	16 S 112	ZF 37
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	1	16 S 112	ZF 37
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 112	ZF 37
44	T 18619	1297 298 956	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 112	ZF 37
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 112	ZF 37
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 112	ZF 37
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 112	ZF 37
20	T 09054	1297 304 196	000 262 2140	SYNCHRONIZER CONE (63 T.)	2	16 S 112	ZF 37
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	2	16 S 112	ZF 37
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	1	16 S 112	ZF 37
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 112	ZF 37
80	T 16155	1295 298 937	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 112	ZF 37
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 112	ZF 37
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 112	ZF 37
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	6	16 S 112	ZF 37
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	6	16 S 112	ZF 37
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	6	16 S 112	ZF 37
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 112	ZF 37
78	T 09063	1295 233 025	000 263 1920	SYNCHRONIZER CONE (63 T.)	1	16 S 112	ZF 37

KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
-----	-----	----	----------	-------------	------	-------	-------

80	T 16156	1295 298 938	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 112	ZF 37
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 112	ZF 37
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 112	ZF 37
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	6	16 S 112	ZF 37
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	6	16 S 112	ZF 37
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	6	16 S 112	ZF 37
78	T 09063	1295 233 025	000 263 1920	SYNCHRONIZER CONE (63 T.)	1	16 S 112	ZF 37

80	T 16167	1295 298 959	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 112	ZF 37
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 112	ZF 37
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 112	ZF 37
73	T 08899	1296 333 002	000 263 0735	SYNCHRONIZER HUB	1	16 S 112	ZF 37
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	9	16 S 112	ZF 37
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	9	16 S 112	ZF 37
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	9	16 S 112	ZF 37
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 112	ZF 37
78	T 09063	1295 233 025	000 263 1920	SYNCHRONIZER CONE (63 T.)	1	16 S 112	ZF 37

67	T 16700	1296 298 904	000 262 0306	PLANETARY GEAR REPAIR KIT (26 T.)		16 S 112	ZF 37
62	T 15775	0631 329 050	001481 005036	GEAR SHAFT ELASTIC PIN	5	16 S 112	ZF 37
63	T 15771	0631 329 017	001481 003028	GEAR SHAFT ELASTIC PIN	5	16 S 112	ZF 37
64	T 08940	0501 305 887	003 264 2252	GEAR THRUST WASHER	10	16 S 112	ZF 37
65	T 08939	0730 103 846	003 264 2052	GEAR SPACER RING	15	16 S 112	ZF 37
66	T 08936	0735 470 057	001 981 1187	GEAR NEEDLE ROLLER	180	16 S 112	ZF 37
68	T 16702	1295 232 027	000 260 1497	GEAR SET (26 T.) (5 PCS.)	1	16 S 112	ZF 37



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16K130


85

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 40
4-510

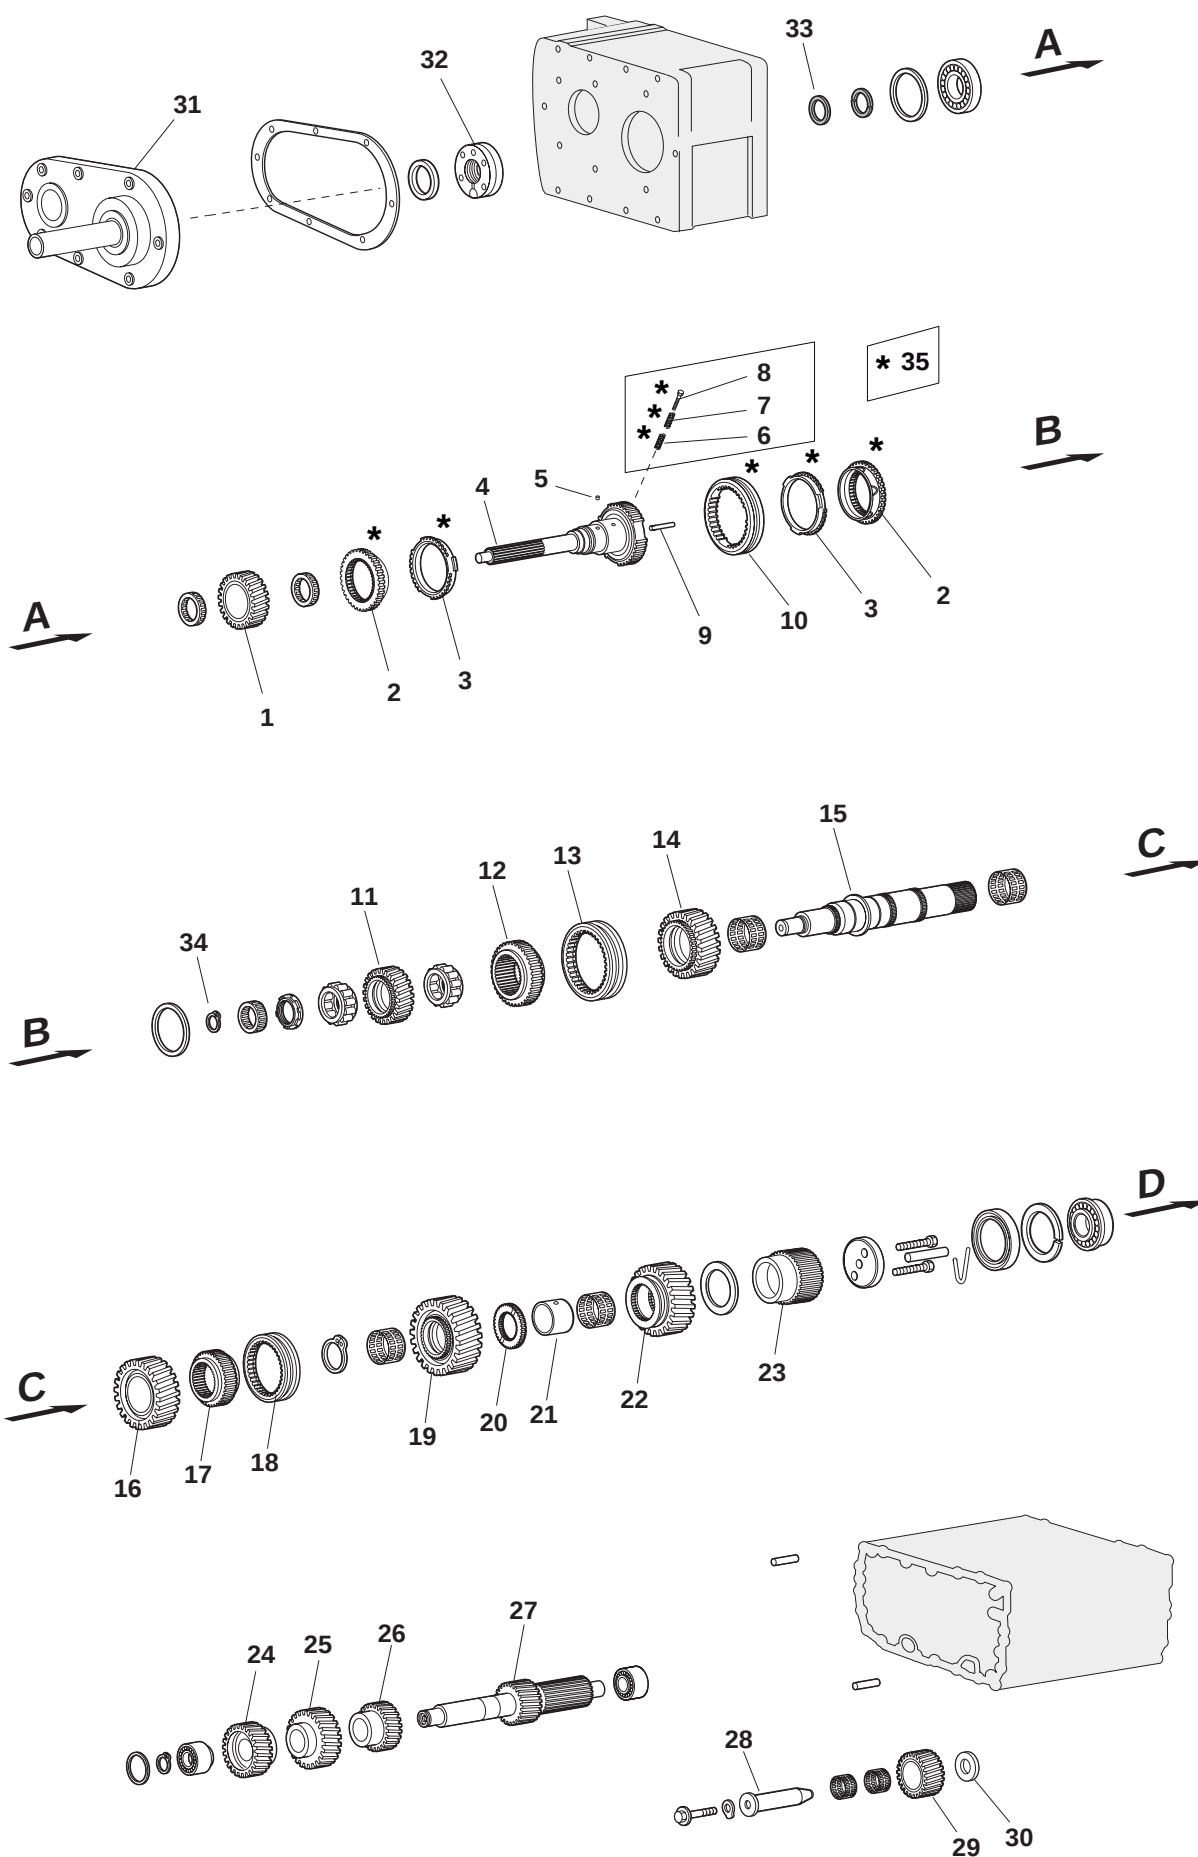

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	T 19448	1295 302 070	000 262 5210	CONSTANT GEAR (30-58 T.)	
1	T 09771	1295 302 071	000 262 4010	CONSTANT GEAR (28-58 T.)	
1	T 19500	1295 302 122	-----	CONSTANT GEAR (29-58 T.)	
1	-----	1295 302 168	-----	CONSTANT GEAR (29 T.)	
1	-----	1295 302 174	-----	CONSTANT GEAR (30 T.)	
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	1
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	1
4	T 09793	1295 202 004	001 262 1802	MAIN DRIVE GEAR (57 T.)	A
4	T 11210	1295 202 007	-----	MAIN DRIVE GEAR (57 T.)	B
4	-----	1295 202 013	-----	MAIN DRIVE GEAR	C
4	-----	1295 202 036	-----	MAIN DRIVE GEAR	D
4	-----	1295 202 039	-----	MAIN DRIVE GEAR	E
4	-----	1295 221 001	001 262 1302	MAIN DRIVE GEAR	
5	-----	0635 470 012	005402 007200	SYNCHRONIZER CYLINDER ROLLER	
6	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	1
7	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	1
8	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	1
9	-----	0730 062 323	000 261 0766	MAIN DRIVE GEAR TUBE	
10	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
11	-----	1295 304 181	-----	FOURTH SPEED GEAR (28 T.)	
11	-----	1295 304 182	-----	FOURTH SPEED GEAR (30 T.)	
11	-----	1295 304 303	-----	FOURTH SPEED GEAR (26 T.)	
12	-----	1295 304 234	-----	THIRD AND FOURTH SPEED CLUTCH GEAR	
13	-----	1295 304 179	-----	THIRD AND FOURTH SPEED SLIDING COLLAR	
14	-----	1295 304 187	-----	THIRD SPEED GEAR (34 T.)	
14	-----	1295 304 188	-----	THIRD SPEED GEAR (32 T.)	
15	-----	1295 304 243	-----	MAINSHAFT	
15	-----	1295 304 304	-----	MAINSHAFT	
16	-----	1295 304 184	-----	SECOND SPEED GEAR (38 T.)	
16	-----	1295 304 185	-----	SECOND SPEED GEAR (37 T.)	
17	T 09753	1295 304 235	000 262 2127	FIRST AND SECOND SPEED CLUTCH GEAR (22 T.)	
18	T 19109	1295 304 178	-----	FIRST AND SECOND SPEED SLIDING COLLAR (22 T.)	
19	-----	1295 304 194	-----	FIRST SPEED GEAR (44 T.)	
19	-----	1295 304 204	-----	FIRST SPEED GEAR (44 T.)	
19	-----	1295 304 205	-----	FIRST SPEED GEAR (47 T.)	
20	-----	1295 304 024	-----	FIRST SPEED AND REVERSE GEAR CONE	
20	T 19360	1295 304 206	000 262 1540	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	
21	T 19100	1295 304 012	000 262 2050	REVERSE GEAR SLEEVE	
22	-----	1295 304 115	-----	REVERSE GEAR (39 T.)	
22	-----	1295 304 200	000 262 5111	REVERSE GEAR (38 T.)	
22	-----	1295 304 201	000 262 9111	REVERSE GEAR (39 T.)	
23	T 15359	1295 304 247	000 262 0109	PLANETARY REDUCTION SUN GEAR (27 T.)	
23	-----	1295 304 251	-----	PLANETARY REDUCTION SUN GEAR (24 T.)	
24	T 09799	1295 303 036	000 263 8410	COUNTERSHAFT CONSTANT GEAR (31 T.)	
24	T 09787	1295 303 037	000 263 3710	COUNTERSHAFT CONSTANT GEAR (34 T.)	
24	-----	1295 303 092	-----	COUNTERSHAFT CONSTANT GEAR (32 T.)	
24	-----	1295 303 102	-----	COUNTERSHAFT CONSTANT GEAR (31 T.)	
25	T 09785	1295 303 027	000 263 3610	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	
25	T 19455	1295 303 028	000 263 8510	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	
25	T 19512	1295 303 094	-----	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	
25	-----	1295 303 104	-----	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	
26	-----	1295 303 005	-----	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	
26	-----	1295 303 006	-----	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	
27	-----	1295 303 042	-----	COUNTERSHAFT (19-23 T.)	
27	-----	1295 303 055	-----	COUNTERSHAFT (17-20 T.)	
27	-----	1295 303 056	-----	COUNTERSHAFT (19-23 T.)	
27	-----	1295 303 089	-----	COUNTERSHAFT (19-23 T.)	
28	T 11447	1295 305 056	000 263 1430	REVERSE IDLER GEAR SHAFT	
29	-----	1295 305 051	000 263 0232	REVERSE IDLER GEAR (21 T.)	
29	-----	1295 305 052	000 263 0032	REVERSE IDLER GEAR (24 T.)	
29	-----	1297 305 003	-----	REVERSE IDLER GEAR (21 T.)	
30	T 14283	0730 150 064	343 263 0062	REVERSE IDLER GEAR THRUST WASHER	
31	-----	1295 302 099	-----	MAIN DRIVE GEAR BEARING RETAINER	D
31	-----	1297 302 018	000 262 4629	MAIN DRIVE GEAR BEARING RETAINER	A
31	-----	1297 302 019	-----	MAIN DRIVE GEAR BEARING RETAINER	AB
31	-----	1297 302 053	000 262 4329	MAIN DRIVE GEAR BEARING RETAINER	C
31	-----	1297 302 238	-----	MAIN DRIVE GEAR BEARING RETAINER	E
32	T 09751	1295 202 041	000 260 1290	MAIN DRIVE GEAR OIL PUMP	
33	T 15289	0730 061 816	000 262 0673	SPACER RING	
34	T 09503	0630 501 024	000471 030000	MAINSHAFT BEARING CIRCLIP	
35	T 16154	1295 298 936	-----	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT	1(*)

87

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme


Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 91


(*) For the composition of the kits please see page 91

16 K 130



ZF 40
4-510

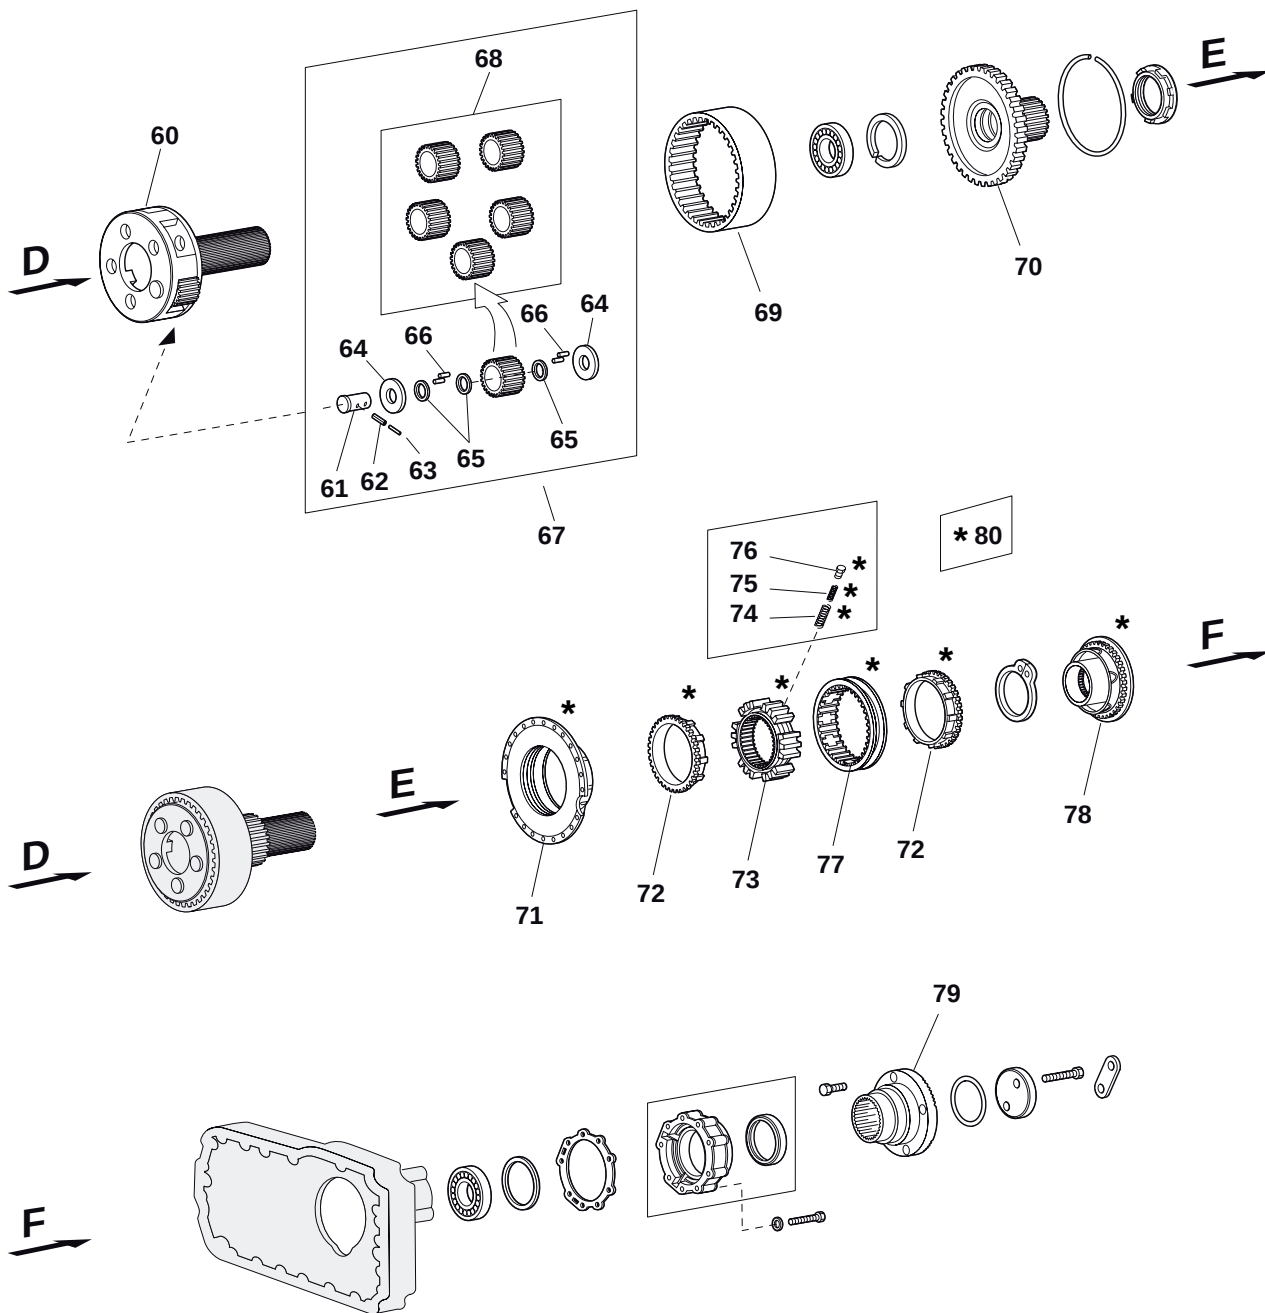

GV

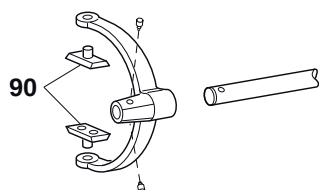

GP

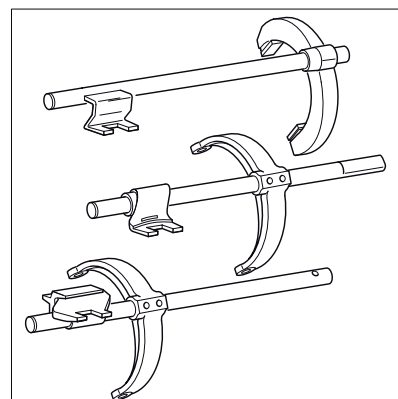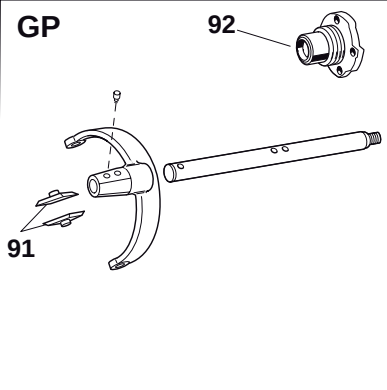

89

ZF 40
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 305 887	T 08940	003 264 2252	ZF 40	64	1295 304 247	T 15359	000 262 0109	ZF 40	23
0630 501 024	T 09503	000471 030000	ZF 40	34	1295 304 251	-----	-----	ZF 40	23
0630 531 055	T 19907	003 994 3841	ZF 40	-----	1295 304 278	T 08871	000 262 1940	ZF 40	2
0631 329 017	T 15771	001481 003028	ZF 40	63	1295 304 303	-----	-----	ZF 40	11
0631 329 050	T 15775	001481 005036	ZF 40	62	1295 304 304	-----	-----	ZF 40	15
0635 331 390	T 19914	004 981 8625	ZF 40	-----	1295 305 051	-----	000 263 0232	ZF 40	29
0635 470 012	-----	005402 007200	ZF 40	5	1295 305 052	-----	000 263 0032	ZF 40	29
0730 061 816	T 15289	000 262 0673	ZF 40	33	1295 305 056	T 11447	000 263 1430	ZF 40	28
0730 062 323	-----	000 261 0766	ZF 40	9	1295 306 132	T 08933	000 268 0849	ZF 40	90
0730 103 846	T 08939	003 264 2052	ZF 40	65	1295 307 243	T 19116	000 267 0474	ZF 40	-----
0730 150 064	T 14283	343 263 0062	ZF 40	30	1295 307 274	T 18581	000 267 0503	ZF 40	-----
0732 040 385	T 08950	336 264 0693	ZF 40	6	1295 307 294	T 19124	000 267 0820	ZF 40	-----
0732 040 385	T 08950	336 264 0693	ZF 40	74	1295 307 479	T 18869	000 267 2622	ZF 40	-----
0732 040 386	T 08951	336 264 0793	ZF 40	7	1295 307 533	T 19130	000 265 2031	ZF 40	-----
0732 040 386	T 08951	336 264 0793	ZF 40	75	1295 332 021	-----	000 263 0025	ZF 40	70
0732 040 736	T 09068	002 993 7501	ZF 40	-----	1295 332 053	-----	000 263 6410	ZF 40	69
0735 470 057	T 08936	001 981 1187	ZF 40	66	1295 332 084	-----	-----	ZF 40	70
1240 304 278	T 08949	336 264 0239	ZF 40	8	1295 332 086	-----	001 263 2110	ZF 40	69
1240 304 278	T 08949	336 264 0239	ZF 40	76	1295 338 014	-----	000 264 2745	ZF 40	79
1240 317 075	T 08917	000 264 1423	ZF 40	-----	1295 338 061	-----	000 264 3645	ZF 40	79
1269 332 036	T 08919	000 264 1618	ZF 40	61	1295 338 083	T 19927	000 264 5150	ZF 40	-----
1295 142 011	T 19902	000 260 4605	ZF 40	-----	1296 213 028	T 11462	000 264 4206	ZF 40	-----
1295 202 004	T 09793	001 262 1802	ZF 40	4	1296 233 006	T 08908	000 263 1720	ZF 40	71
1295 202 007	T 11210	-----	ZF 40	4	1296 298 904	T 16700	000 262 0306	ZF 40	67
1295 202 013	-----	-----	ZF 40	4	1296 312 042	T 16712	000 267 0519	ZF 40	92
1295 202 036	-----	-----	ZF 40	4	1296 333 002	T 08899	000 263 0735	ZF 40	73
1295 202 039	-----	-----	ZF 40	4	1296 333 022	T 09061	000 263 0234	ZF 40	72
1295 202 041	T 09751	000 260 1290	ZF 40	32	1296 333 023	T 09062	000 263 0523	ZF 40	77
1295 221 001	-----	001 262 1302	ZF 40	4	1296 333 045	T 15084	000 263 0534	ZF 40	72
1295 232 027	T 16702	000 260 1497	ZF 40	68	1296 334 004	T 17892	000 265 0649	ZF 40	91
1295 232 037	-----	-----	ZF 40	60	1297 203 005	T 19936	000 264 4218	ZF 40	-----
1295 232 038	-----	-----	ZF 40	68	1297 302 018	-----	000 262 4629	ZF 40	31
1295 232 048	-----	000 260 4361	ZF 40	60	1297 302 019	-----	-----	ZF 40	31
1295 233 025	T 09063	000 263 1920	ZF 40	78	1297 302 053	-----	000 262 4329	ZF 40	31
1295 298 936	T 16154	-----	ZF 40	35	1297 302 238	-----	-----	ZF 40	31
1295 302 070	T 19448	000 262 5210	ZF 40	1	1297 305 003	-----	-----	ZF 40	29
1295 302 071	T 09771	000 262 4010	ZF 40	1	1304 304 686	T 15151	000 262 9934	ZF 40	3
1295 302 099	-----	-----	ZF 40	31					
1295 302 122	T 19500	-----	ZF 40	1					
1295 302 168	-----	-----	ZF 40	1					
1295 302 174	-----	-----	ZF 40	1					
1295 303 005	-----	-----	ZF 40	26					
1295 303 006	-----	-----	ZF 40	26					
1295 303 027	T 09785	000 263 3610	ZF 40	25					
1295 303 028	T 19455	000 263 8510	ZF 40	25					
1295 303 036	T 09799	000 263 8410	ZF 40	24					
1295 303 037	T 09787	000 263 3710	ZF 40	24					
1295 303 042	-----	-----	ZF 40	27					
1295 303 055	-----	-----	ZF 40	27					
1295 303 056	-----	-----	ZF 40	27					
1295 303 089	-----	-----	ZF 40	27					
1295 303 092	-----	-----	ZF 40	24					
1295 303 094	T 19512	-----	ZF 40	25					
1295 303 102	-----	-----	ZF 40	24					
1295 303 104	-----	-----	ZF 40	25					
1295 304 002	T 09056	000 262 3623	ZF 40	10					
1295 304 012	T 19100	000 262 2050	ZF 40	21					
1295 304 024	-----	-----	ZF 40	20					
1295 304 115	-----	-----	ZF 40	22					
1295 304 178	T 19109	-----	ZF 40	18					
1295 304 179	-----	-----	ZF 40	13					
1295 304 181	-----	-----	ZF 40	11					
1295 304 182	-----	-----	ZF 40	11					
1295 304 184	-----	-----	ZF 40	16					
1295 304 185	-----	-----	ZF 40	16					
1295 304 187	-----	-----	ZF 40	14					
1295 304 188	-----	-----	ZF 40	14					
1295 304 194	-----	-----	ZF 40	19					
1295 304 200	-----	000 262 5111	ZF 40	22					
1295 304 201	-----	000 262 9111	ZF 40	22					
1295 304 204	-----	-----	ZF 40	19					
1295 304 205	-----	-----	ZF 40	19					
1295 304 206	T 19360	000 262 1540	ZF 40	20					
1295 304 234	-----	-----	ZF 40	12					
1295 304 235	T 09753	000 262 2127	ZF 40	17					
1295 304 243	-----	-----	ZF 40	15					

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
-----	-----	----	----------	-------------	------	-------	-------

42	T 16154	1295 298 936	-----	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT		16 K 130	ZF 40
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	2	16 K 130	ZF 40
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	2	16 K 130	ZF 40
6	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 K 130	ZF 40
7	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 K 130	ZF 40
8	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 K 130	ZF 40
10	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 K 130	ZF 40

80	T 16155	1295 298 937	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 K 130	ZF 40
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 K 130	ZF 40
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 K 130	ZF 40
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	6	16 K 130	ZF 40
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	6	16 K 130	ZF 40
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	6	16 K 130	ZF 40
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 K 130	ZF 40
78	T 09063	1295 233 025	000 263 1920	SYNCHRONIZER CONE (63 T.)	1	16 K 130	ZF 40

80	T 16156	1295 298 938	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 K 130	ZF 40
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 K 130	ZF 40
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 K 130	ZF 40
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	6	16 K 130	ZF 40
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	6	16 K 130	ZF 40
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	6	16 K 130	ZF 40
78	T 09063	1295 233 025	000 263 1920	SYNCHRONIZER CONE (63 T.)	1	16 K 130	ZF 40

80	T 16167	1295 298 959	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 K 130	ZF 40
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 K 130	ZF 40
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 K 130	ZF 40
73	T 08899	1296 333 002	000 263 0735	SYNCHRONIZER HUB	1	16 K 130	ZF 40
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	9	16 K 130	ZF 40
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	9	16 K 130	ZF 40
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	9	16 K 130	ZF 40
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 K 130	ZF 40
78	T 09063	1295 233 025	000 263 1920	SYNCHRONIZER CONE (63 T.)	1	16 K 130	ZF 40

67	T 16700	1296 298 904	000 262 0306	PLANETARY GEAR REPAIR KIT (26 T.)		16 K 130	ZF 40
62	T 15775	0631 329 050	001481 005036	GEAR SHAFT ELASTIC PIN	5	16 K 130	ZF 40
63	T 15771	0631 329 017	001481 003028	GEAR SHAFT ELASTIC PIN	5	16 K 130	ZF 40
64	T 08940	0501 305 887	003 264 2252	GEAR THRUST WASHER	10	16 K 130	ZF 40
65	T 08939	0730 103 846	003 264 2052	GEAR SPACER RING	15	16 K 130	ZF 40
66	T 08936	0735 470 057	001 981 1187	GEAR NEEDLE ROLLER	180	16 K 130	ZF 40
68	T 16702	1295 232 027	000 260 1497	GEAR SET (26 T.) (5 PCS.)	1	16 K 130	ZF 40



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16S130


93

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 41
4-510

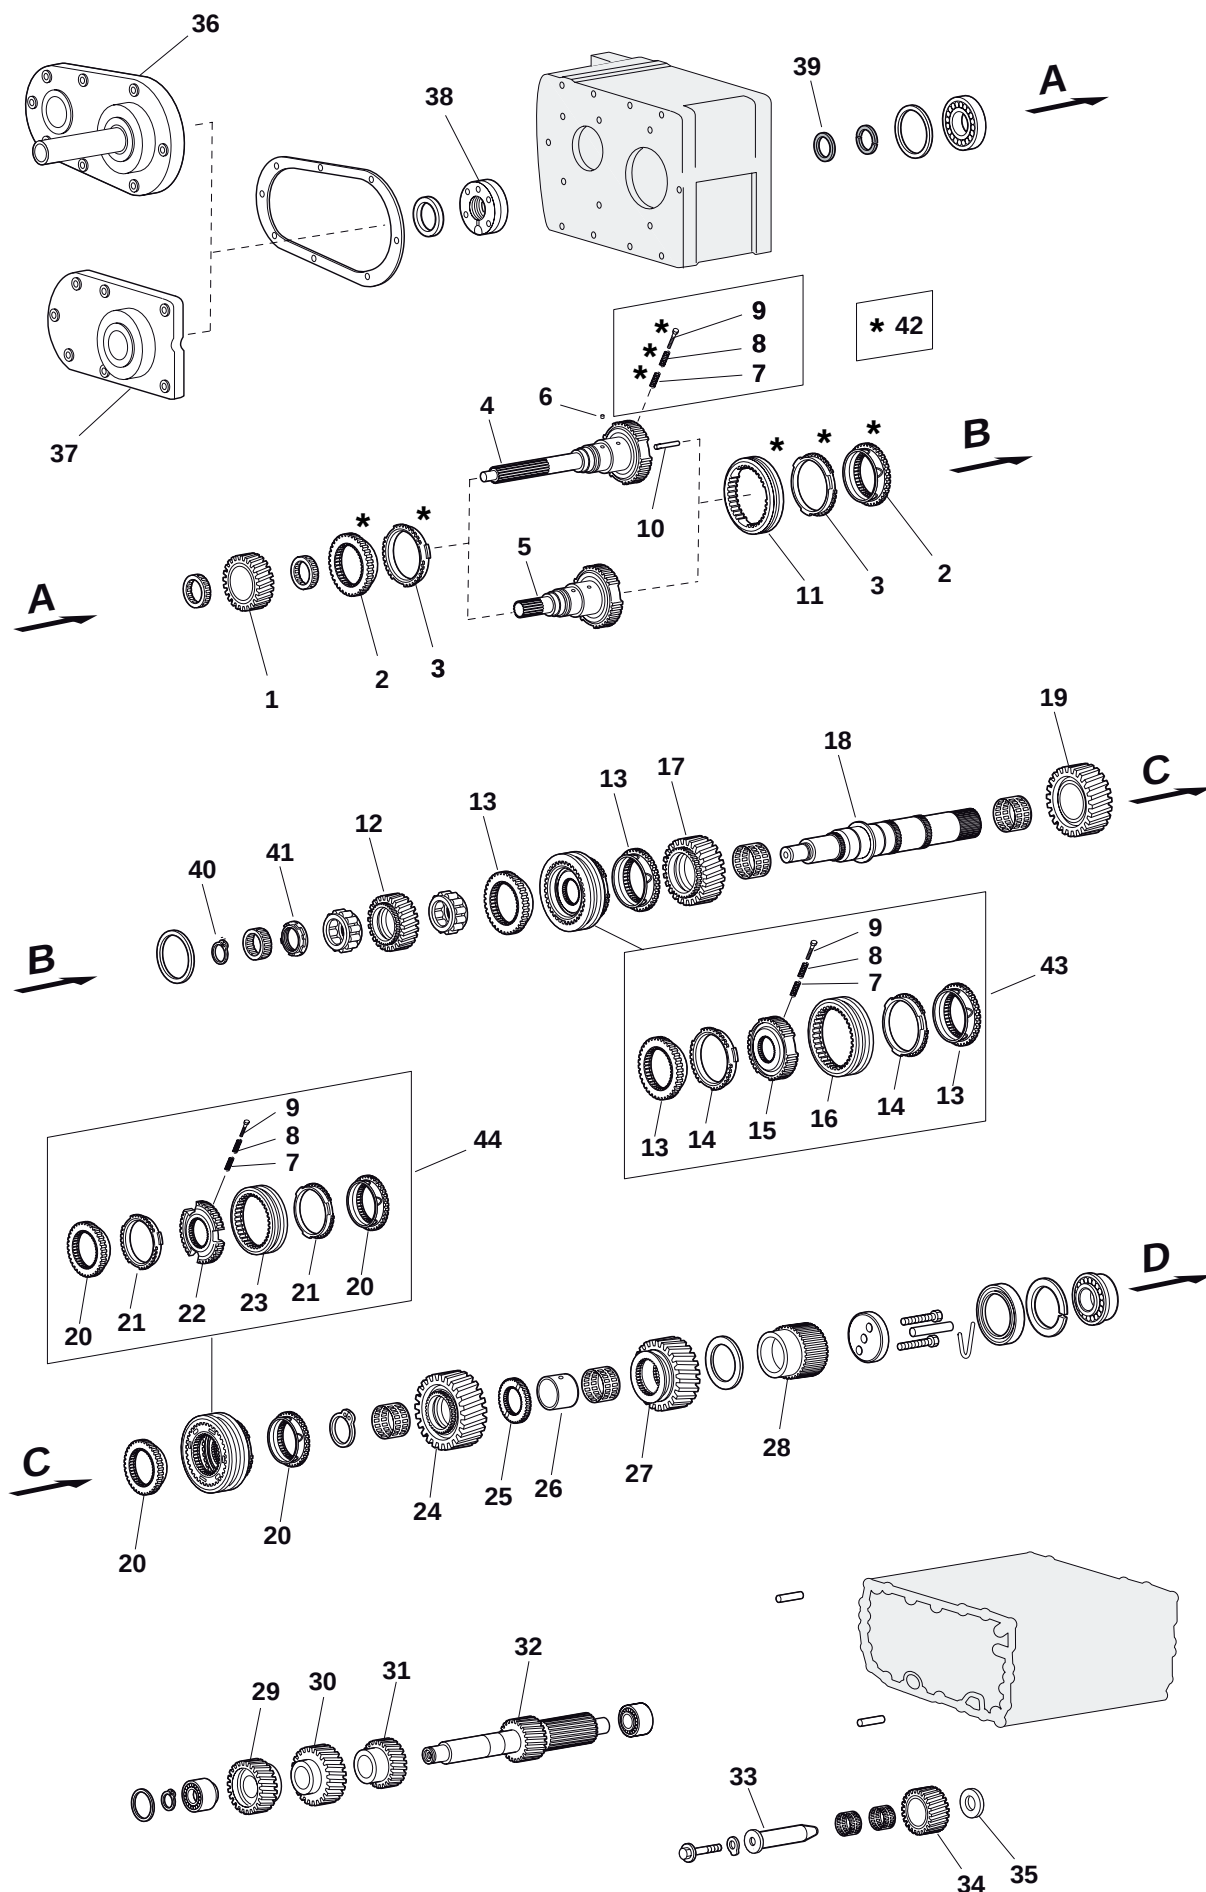

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	-----	1295 202 021	-----	CONSTANT GEAR (28 T.)	
1	-----	1295 202 022	-----	CONSTANT GEAR (30 T.)	
1	T 19448	1295 302 070	000 262 5210	CONSTANT GEAR (30-58 T.)	
1	T 09771	1295 302 071	000 262 4010	CONSTANT GEAR (28-58 T.)	
1	T 15362	1295 302 074	000 262 3110	CONSTANT GEAR (28-61 T.)	
1	T 19500	1295 302 122	-----	CONSTANT GEAR (29-58 T.)	
1	-----	1295 302 168	-----	CONSTANT GEAR (29 T.)	
1	-----	1295 302 174	-----	CONSTANT GEAR (30 T.)	
2	T 08858	1295 304 165	000 262 1440	SYNCHRONIZER CONE (57 T.)	
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	1
3	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	1
4	T 09793	1295 202 004	001 262 1802	MAIN DRIVE GEAR (57 T.)	A
4	-----	1295 202 005	-----	MAIN DRIVE GEAR	B
4	-----	1295 202 006	-----	MAIN DRIVE GEAR	C
4	T 11210	1295 202 007	-----	MAIN DRIVE GEAR (57 T.)	D
4	-----	1295 202 008	-----	MAIN DRIVE GEAR	E
4	-----	1295 202 011	-----	MAIN DRIVE GEAR	F
4	-----	1295 202 012	-----	MAIN DRIVE GEAR	G
4	-----	1295 202 013	-----	MAIN DRIVE GEAR	H
4	-----	1295 202 015	-----	MAIN DRIVE GEAR	I
4	T 19096	1295 202 019	001 262 0202	MAIN DRIVE GEAR (57 T.)	
4	-----	1295 202 020	-----	MAIN DRIVE GEAR	J
4	-----	1295 202 023	-----	MAIN DRIVE GEAR	K
4	-----	1295 202 024	-----	MAIN DRIVE GEAR	L
4	-----	1295 202 025	-----	MAIN DRIVE GEAR	M
4	T 11171	1295 202 028	001 262 1902	MAIN DRIVE GEAR (57 T.)	N
4	-----	1295 202 039	-----	MAIN DRIVE GEAR	O
4	-----	1295 202 044	-----	MAIN DRIVE GEAR	P
4	-----	1295 202 045	-----	MAIN DRIVE GEAR	Q
4	-----	1295 202 052	-----	MAIN DRIVE GEAR	R
4	-----	1295 221 001	001 262 1302	MAIN DRIVE GEAR	
4	-----	1295 221 002	-----	MAIN DRIVE GEAR	
4	-----	1295 221 003	001 262 3802	MAIN DRIVE GEAR	
5	-----	1295 202 036	-----	MAIN DRIVE GEAR	T
6	-----	0635 470 012	005402 007200	SYNCHRONIZER CYLINDER ROLLER	
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	1-3-4-6-8
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	2-5-7-9
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	1-3-4-6-8
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	1-3-4-6-8
9	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	2-5-7-9
10	-----	0730 062 323	000 261 0766	MAIN DRIVE GEAR TUBE	
11	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
12	T 09759	1295 304 135	000 262 2514	FOURTH SPEED GEAR (58-30-58 T.)	
12	T 15713	1295 304 136	000 262 4814	FOURTH SPEED GEAR (58-28-58 T.)	
12	T 19111	1295 304 236	-----	FOURTH SPEED GEAR (58-26-58 T.)	
12	-----	1295 304 322	-----	FOURTH SPEED GEAR (30 T.)	
12	-----	1295 304 323	-----	FOURTH SPEED GEAR (28 T.)	
13	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	4
13	T 16723	1297 304 369	-----	SYNCHRONIZER CONE (57 T.)	5
14	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	3
14	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2-5
14	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	4
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	3-4
15	-----	1297 304 446	-----	SYNCHRONIZER HUB	2-5
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	3-4
16	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	2-5
17	-----	1295 204 005	-----	THIRD SPEED GEAR (34 T.)	
17	-----	1295 204 009	-----	THIRD SPEED GEAR (32 T.)	
17	T 15731	1295 304 127	000 262 7113	THIRD SPEED GEAR (32-58 T.)	
17	T 11158	1295 304 128	000 262 3213	THIRD SPEED GEAR (34-58 T.)	
17	-----	1295 304 269	-----	THIRD SPEED GEAR (25 T.)	
17	-----	1295 304 307	-----	THIRD SPEED GEAR (32 T.)	
17	-----	1295 304 324	-----	THIRD SPEED GEAR (34 T.)	
18	T 09763	1295 304 245	000 262 2605	MAINSHAFT	
18	-----	1295 304 250	-----	MAINSHAFT	
18	-----	1295 304 273	-----	MAINSHAFT	
19	-----	1295 204 006	-----	SECOND SPEED GEAR (38 T.)	
19	-----	1295 304 010	-----	SECOND SPEED GEAR (37 T.)	
19	-----	1295 304 120	000 262 6312	SECOND SPEED GEAR (37 T.)	
19	T 15708	1295 304 121	000 262 2612	SECOND SPEED GEAR (38-58 T.)	
19	-----	1295 304 271	-----	SECOND SPEED GEAR (34 T.)	

95

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme


Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 104

(*) For the composition of the kits please see page 104.

16 S 130

ZF 41
4-510

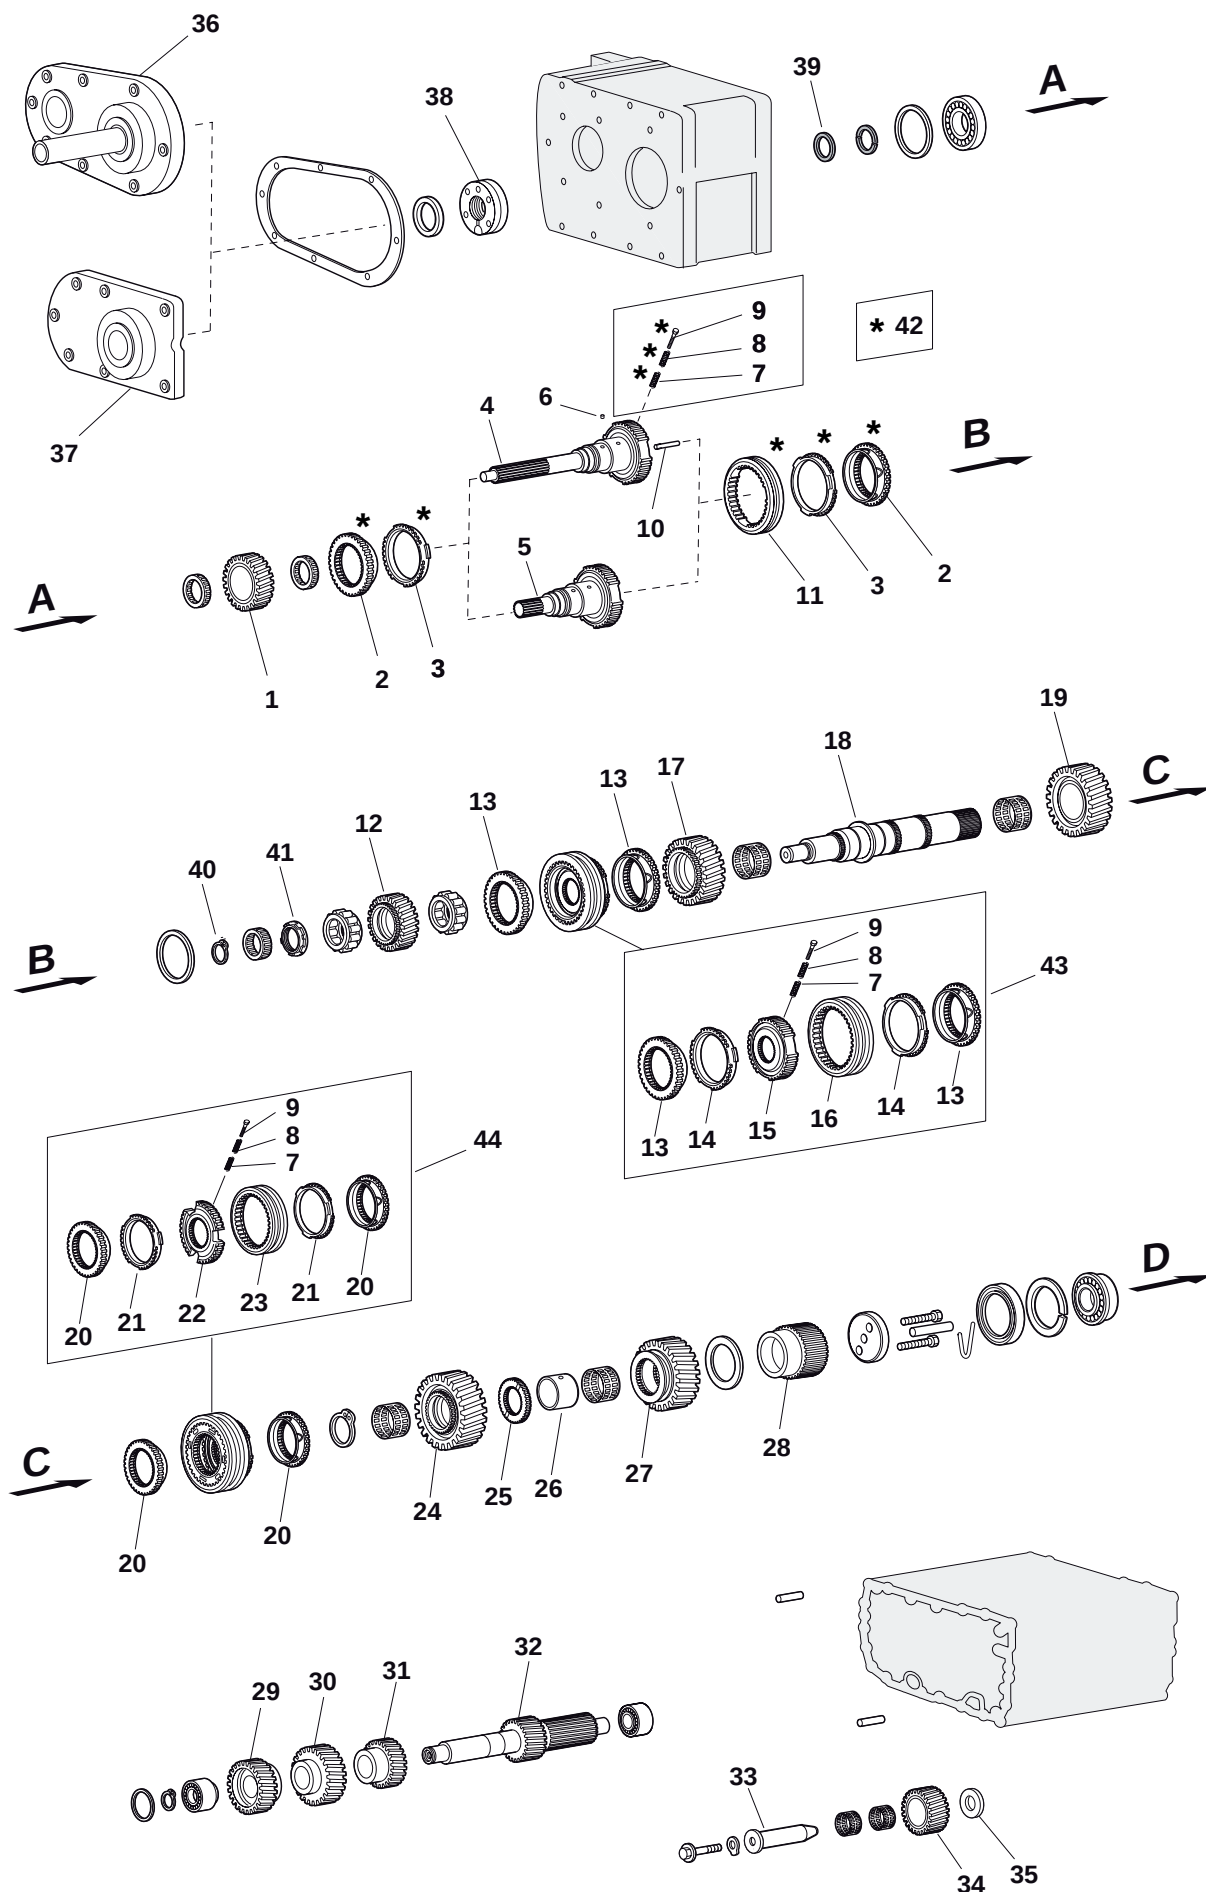

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
19	-----	1295 304 305	-----	SECOND SPEED GEAR (37 T.)	
20	T 09054	1297 304 196	000 262 2140	SYNCHRONIZER CONE (63 T.)	8
20	T 16726	1297 304 371	-----	SYNCHRONIZER CONE (63 T.)	9
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	6-8
21	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	
21	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	9
21	T 18028	1297 304 485	-----	SYNCHRONIZER BLOCKING RING	7
22	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	6-8
22	-----	1297 304 445	-----	SYNCHRONIZER HUB	7-9
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	6-8
23	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	
23	-----	1297 304 450	-----	SYNCHRONIZER SLIDING COLLAR	7-9
24	-----	1295 204 007	-----	FIRST SPEED GEAR (47 T.)	
24	-----	1295 204 011	-----	FIRST SPEED GEAR (44 T.)	
24	-----	1295 304 123	-----	FIRST SPEED GEAR (44 T.)	
24	T 15719	1295 304 202	000 262 5011	FIRST SPEED GEAR (47-58 T.)	
24	-----	1295 304 203	000 262 9011	FIRST SPEED GEAR (44 T.)	
24	-----	1295 304 270	-----	FIRST SPEED GEAR (41 T.)	
24	-----	1295 304 306	-----	FIRST SPEED GEAR (44 T.)	
25	-----	1295 304 024	-----	FIRST SPEED AND REVERSE GEAR CONE	
25	T 19360	1295 304 206	000 262 1540	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	
26	T 19100	1295 304 012	000 262 2050	REVERSE GEAR SLEEVE	
26	-----	1295 304 263	-----	REVERSE GEAR SLEEVE	
27	-----	1295 304 115	-----	REVERSE GEAR (39 T.)	
27	-----	1295 304 200	000 262 5111	REVERSE GEAR (38 T.)	
27	-----	1295 304 201	000 262 9111	REVERSE GEAR (39 T.)	
27	-----	1295 304 272	-----	REVERSE GEAR (39 T.)	
28	T 15377	1295 304 248	000 262 0209	PLANETARY REDUCTION SUN GEAR (27 T.)	
28	-----	1295 304 251	-----	PLANETARY REDUCTION SUN GEAR (24 T.)	
29	T 09799	1295 303 036	000 263 8410	COUNTERSHAFT CONSTANT GEAR (31 T.)	
29	T 09787	1295 303 037	000 263 3710	COUNTERSHAFT CONSTANT GEAR (34 T.)	
29	-----	1295 303 092	-----	COUNTERSHAFT CONSTANT GEAR (32 T.)	
29	-----	1295 303 102	-----	COUNTERSHAFT CONSTANT GEAR (31 T.)	
30	T 09785	1295 303 027	000 263 3610	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	
30	T 19455	1295 303 028	000 263 8510	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	
30	T 19512	1295 303 094	-----	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	
30	-----	1295 303 103	-----	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	
30	-----	1295 303 104	-----	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	
31	T 19986	1295 303 025	000 263 8310	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	
31	T 09783	1295 303 026	000 263 3510	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	
31	-----	1295 303 071	-----	COUNTERSHAFT THIRD SPEED GEAR (36 T.)	
31	-----	1295 303 091	-----	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	
32	-----	1295 303 045	-----	COUNTERSHAFT (19-23 T.)	
32	T 09781	1295 303 066	000 263 3402	COUNTERSHAFT (17-20 T.)	
32	T 19464	1295 303 067	000 263 4902	COUNTERSHAFT (19-23 T.)	
32	-----	1295 303 072	-----	COUNTERSHAFT	
33	T 11447	1295 305 056	000 263 1430	REVERSE IDLER GEAR SHAFT	
34	-----	1295 305 051	000 263 0232	REVERSE IDLER GEAR (21 T.)	
34	-----	1295 305 052	000 263 0032	REVERSE IDLER GEAR (24 T.)	
34	-----	1297 305 003	-----	REVERSE IDLER GEAR (21 T.)	
35	T 14283	0730 150 064	343 263 0062	REVERSE IDLER GEAR THRUST WASHER	
36	-----	1297 302 011	-----	MAIN DRIVE GEAR BEARING RETAINER	B F
36	T 15567	1297 302 012	000 262 3329	MAIN DRIVE GEAR BEARING RETAINER	F A
36	-----	1297 302 013	-----	MAIN DRIVE GEAR BEARING RETAINER	A D F
36	-----	1297 302 014	-----	MAIN DRIVE GEAR BEARING RETAINER	F
36	-----	1297 302 015	-----	MAIN DRIVE GEAR BEARING RETAINER	Q
36	-----	1297 302 025	-----	MAIN DRIVE GEAR BEARING RETAINER	F
36	-----	1297 302 029	-----	MAIN DRIVE GEAR BEARING RETAINER	I
36	T 15569	1297 302 042	000 262 3429	MAIN DRIVE GEAR BEARING RETAINER	L N
36	-----	1297 302 056	-----	MAIN DRIVE GEAR BEARING RETAINER	
36	-----	1297 302 082	-----	MAIN DRIVE GEAR BEARING RETAINER	E
36	-----	1297 302 108	-----	MAIN DRIVE GEAR BEARING RETAINER	C G
36	-----	1297 302 127	-----	MAIN DRIVE GEAR BEARING RETAINER	H
36	-----	1297 302 134	-----	MAIN DRIVE GEAR BEARING RETAINER	J
36	-----	1297 302 169	-----	MAIN DRIVE GEAR BEARING RETAINER	G M
36	-----	1297 302 180	-----	MAIN DRIVE GEAR BEARING RETAINER	P R S
36	-----	1297 302 239	-----	MAIN DRIVE GEAR BEARING RETAINER	O
36	-----	1297 302 268	-----	MAIN DRIVE GEAR BEARING RETAINER	E
37	-----	1295 302 100	000 262 4529	MAIN DRIVE GEAR BEARING RETAINER	T
37	-----	1297 302 084	-----	MAIN DRIVE GEAR BEARING RETAINER	H
37	-----	1297 302 099	-----	MAIN DRIVE GEAR BEARING RETAINER	D K

97

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme


Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 104

(*) For the composition of the kits please see page 104.

16 S 130





ZF 41
4-510

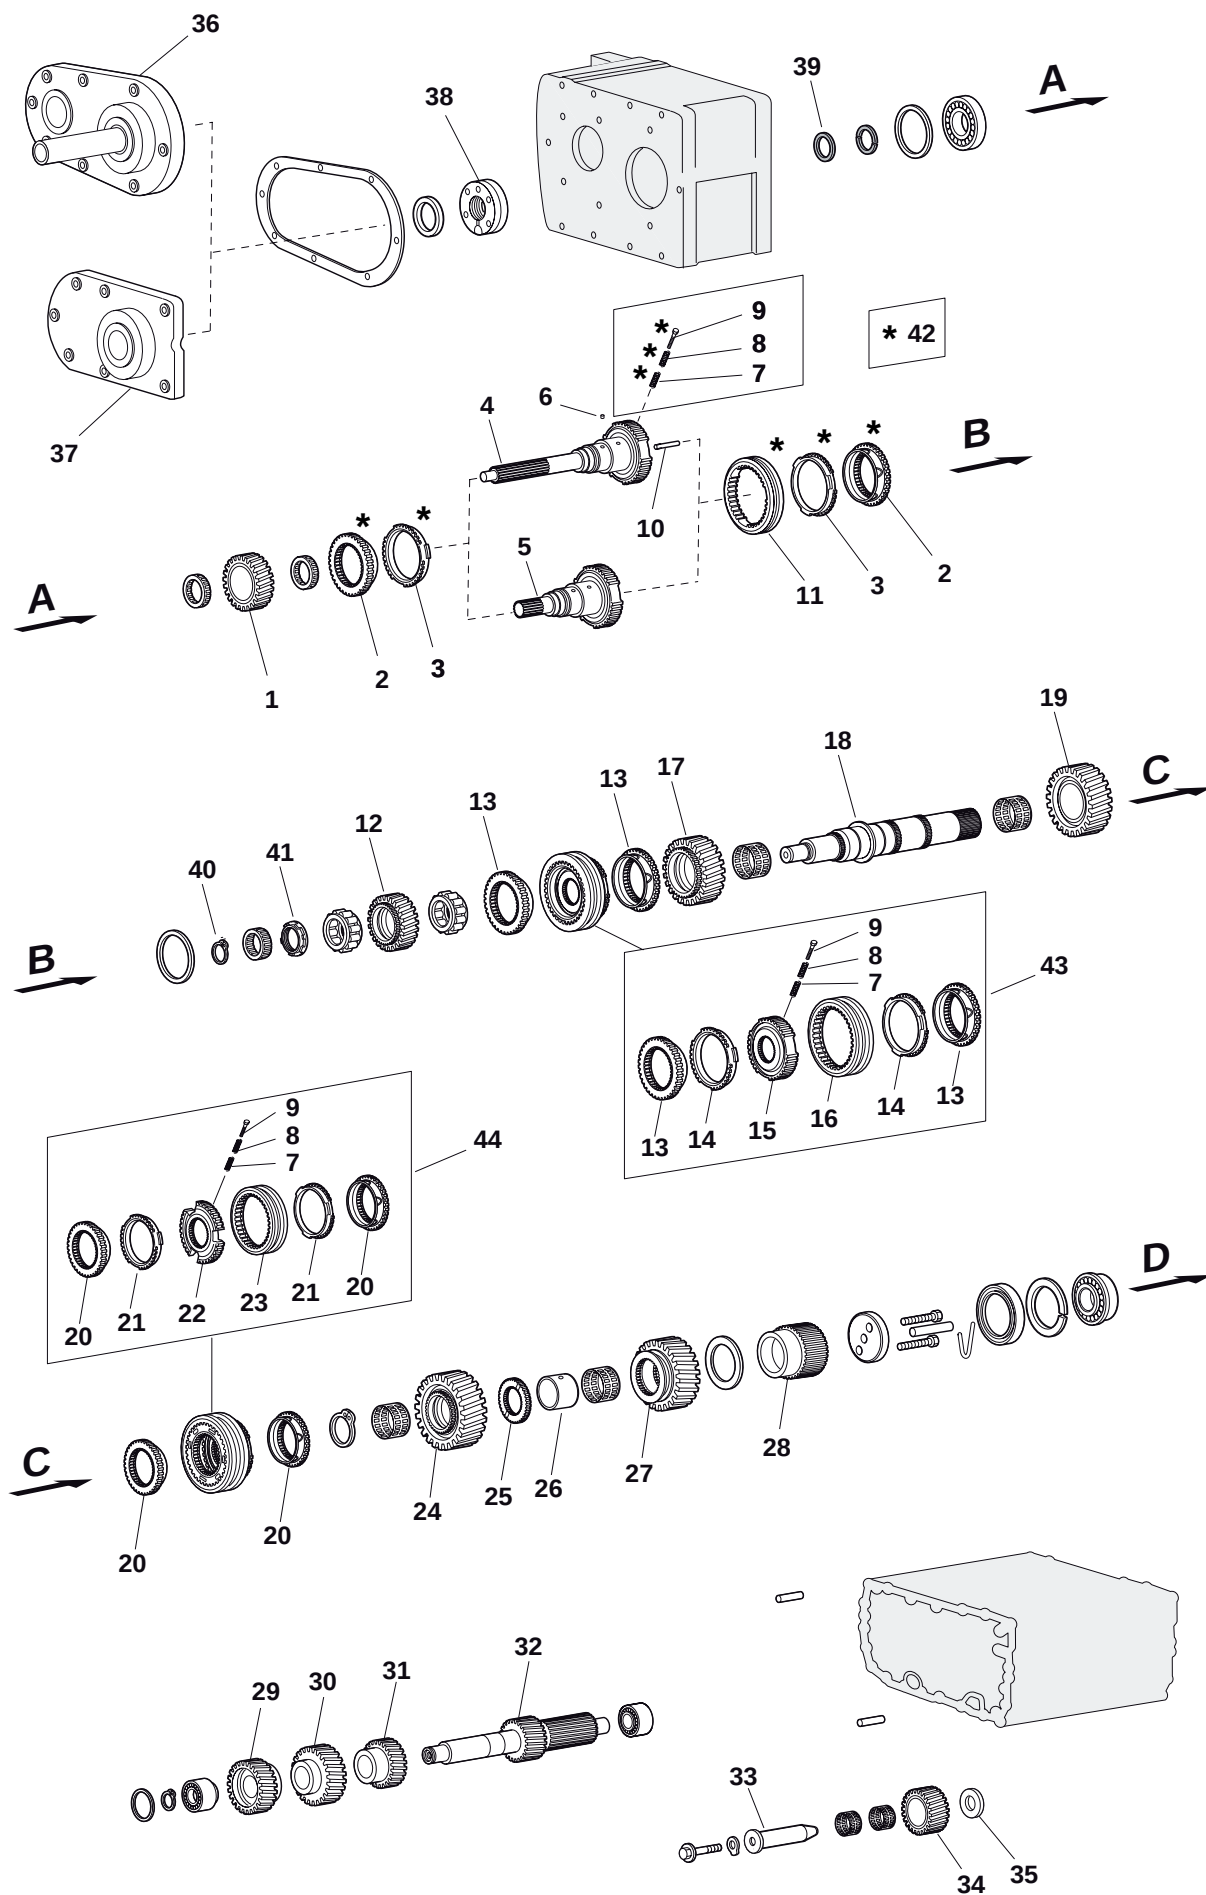

99

Articoli con la stessa lettera o numero vanno accoppiati assieme
 Items with same letter or number must be coupled together.
 (*) Per la composizione dei kit vedi pagina 104
 (*) For the composition of the kits please see page 104.

ZF 41
4-510

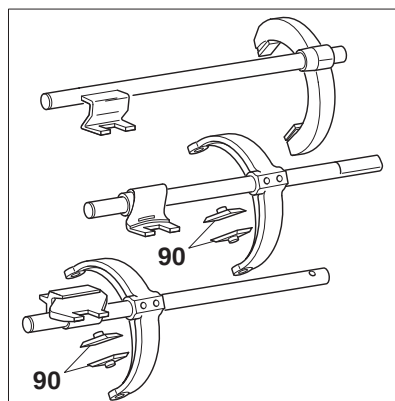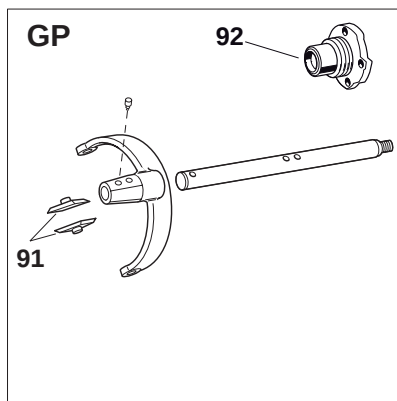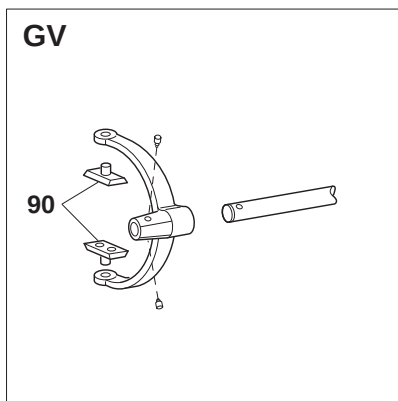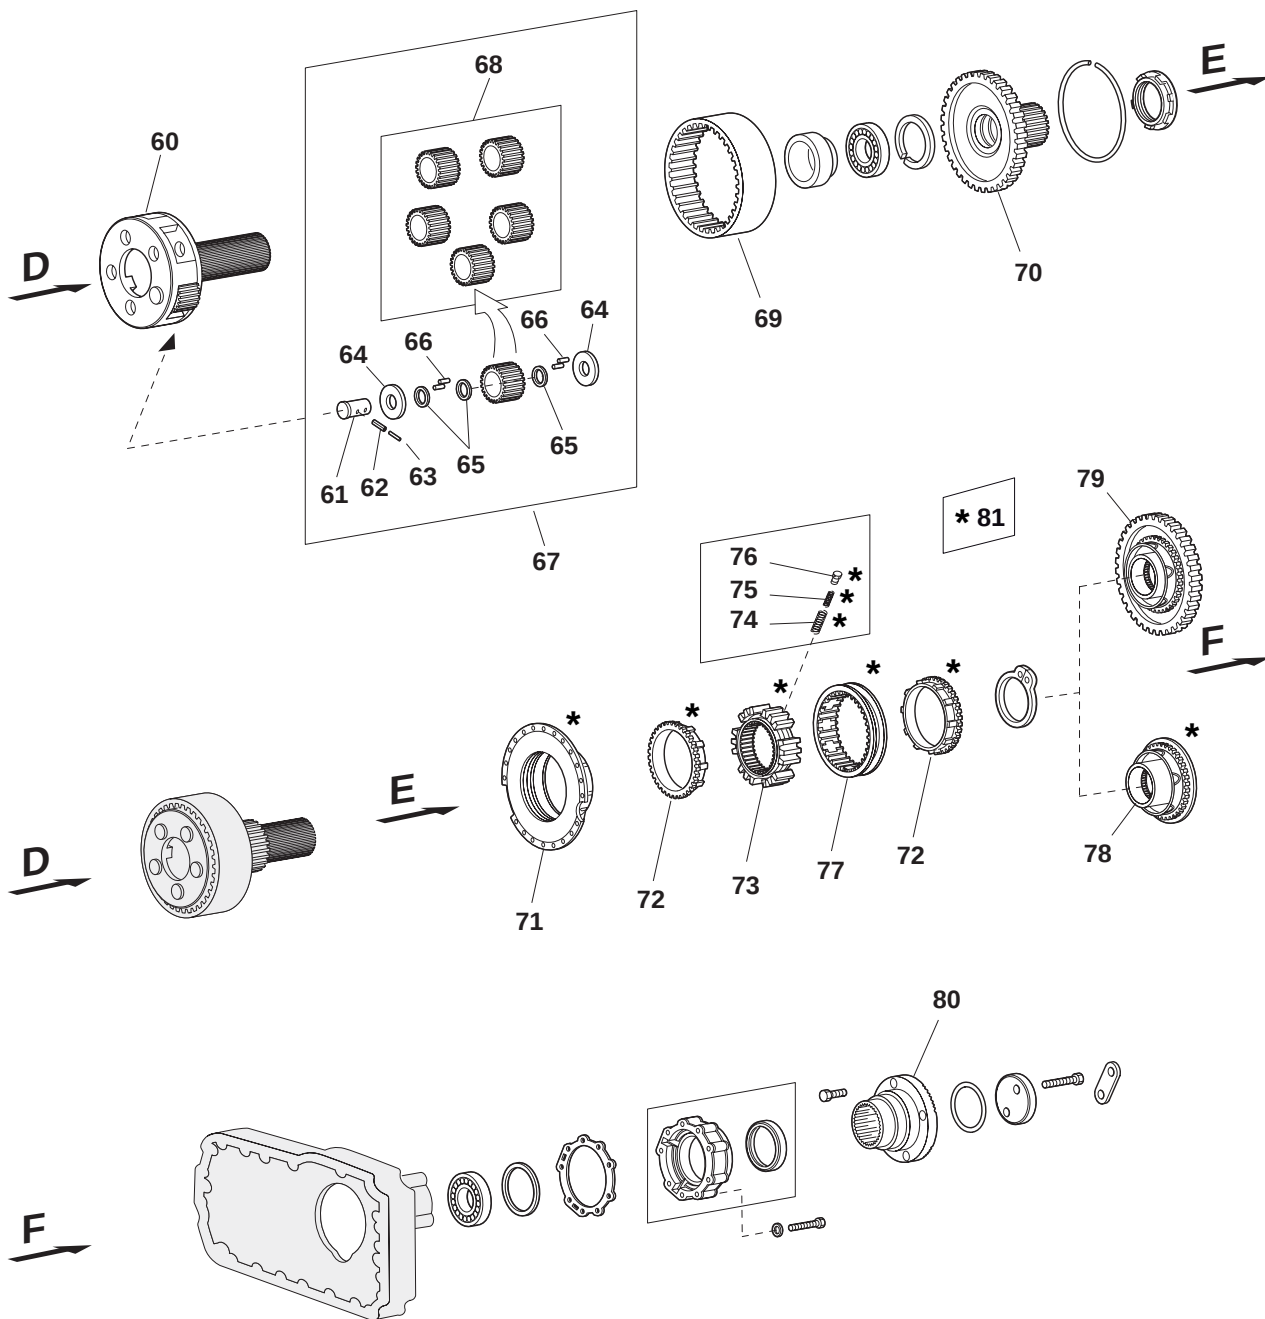

101

ZF 41
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 305 887	T 08940	003 264 2252	ZF 41	64	1295 302 168	-----	-----	ZF 41	1
0501 306 212	T 15745	000 263 0562	ZF 41	64	1295 302 174	-----	-----	ZF 41	1
0630 501 024	T 09503	000471 030000	ZF 41	40	1295 303 025	T 19986	000 263 8310	ZF 41	31
0630 531 055	T 19907	003 994 3841	ZF 41	-----	1295 303 026	T 09783	000 263 3510	ZF 41	31
0631 329 017	T 15771	001481 003028	ZF 41	63	1295 303 027	T 09785	000 263 3610	ZF 41	30
0631 329 050	T 15775	001481 005036	ZF 41	62	1295 303 028	T 19455	000 263 8510	ZF 41	30
0635 331 390	T 19914	004 981 8625	ZF 41	-----	1295 303 036	T 09799	000 263 8410	ZF 41	29
0635 470 012	-----	005402 007200	ZF 41	6	1295 303 037	T 09787	000 263 3710	ZF 41	29
0730 061 816	T 15289	000 262 0673	ZF 41	39	1295 303 045	-----	-----	ZF 41	32
0730 062 323	-----	000 261 0766	ZF 41	10	1295 303 066	T 09781	000 263 3402	ZF 41	32
0730 103 846	T 08939	003 264 2052	ZF 41	65	1295 303 067	T 19464	000 263 4902	ZF 41	32
0730 150 064	T 14283	343 263 0062	ZF 41	35	1295 303 071	-----	-----	ZF 41	31
0732 040 385	T 08950	336 264 0693	ZF 41	7	1295 303 072	-----	-----	ZF 41	32
0732 040 385	T 08950	336 264 0693	ZF 41	74	1295 303 091	-----	-----	ZF 41	31
0732 040 386	T 08951	336 264 0793	ZF 41	8	1295 303 092	-----	-----	ZF 41	29
0732 040 386	T 08951	336 264 0793	ZF 41	75	1295 303 094	T 19512	-----	ZF 41	30
0732 040 409	T 13440	005 993 6101	ZF 41	7	1295 303 102	-----	-----	ZF 41	29
0732 040 736	T 09068	002 993 7501	ZF 41	-----	1295 303 103	-----	-----	ZF 41	30
0735 470 057	T 08936	001 981 1187	ZF 41	66	1295 303 104	-----	-----	ZF 41	30
0737 502 092	T 15366	000 990 2360	ZF 41	41	1295 304 002	T 09056	000 262 3623	ZF 41	11
0750 119 109	T 15760	001 981 5487	ZF 41	66	1295 304 002	T 09056	000 262 3623	ZF 41	16
1240 304 278	T 08949	336 264 0239	ZF 41	9	1295 304 002	T 09056	000 262 3623	ZF 41	23
1240 304 278	T 08949	336 264 0239	ZF 41	76	1295 304 004	T 08795	000 262 2034	ZF 41	3
1240 317 075	T 08917	000 264 1423	ZF 41	-----	1295 304 004	T 08795	000 262 2034	ZF 41	14
1246 304 278	T 08874	000 262 2434	ZF 41	21	1295 304 004	T 08795	000 262 2034	ZF 41	21
1257 304 020	T 08946	336 262 0023	ZF 41	23	1295 304 010	-----	-----	ZF 41	19
1269 332 036	T 08919	000 264 1618	ZF 41	61	1295 304 012	T 19100	000 262 2050	ZF 41	26
1295 202 004	T 09793	001 262 1802	ZF 41	4	1295 304 024	-----	-----	ZF 41	25
1295 202 005	-----	-----	ZF 41	4	1295 304 115	-----	-----	ZF 41	27
1295 202 006	-----	-----	ZF 41	4	1295 304 120	-----	000 262 6312	ZF 41	19
1295 202 007	T 11210	-----	ZF 41	4	1295 304 121	T 15708	000 262 2612	ZF 41	19
1295 202 008	-----	-----	ZF 41	4	1295 304 123	-----	-----	ZF 41	24
1295 202 011	-----	-----	ZF 41	4	1295 304 127	T 15731	000 262 7113	ZF 41	17
1295 202 012	-----	-----	ZF 41	4	1295 304 128	T 11158	000 262 3213	ZF 41	17
1295 202 013	-----	-----	ZF 41	4	1295 304 135	T 09759	000 262 2514	ZF 41	12
1295 202 015	-----	-----	ZF 41	4	1295 304 136	T 15713	000 262 4814	ZF 41	12
1295 202 019	T 19096	001 262 0202	ZF 41	4	1295 304 165	T 08858	000 262 1440	ZF 41	2
1295 202 020	-----	-----	ZF 41	4	1295 304 200	-----	000 262 5111	ZF 41	27
1295 202 021	-----	-----	ZF 41	1	1295 304 201	-----	000 262 9111	ZF 41	27
1295 202 022	-----	-----	ZF 41	1	1295 304 202	T 15719	000 262 5011	ZF 41	24
1295 202 023	-----	-----	ZF 41	4	1295 304 203	-----	000 262 9011	ZF 41	24
1295 202 024	-----	-----	ZF 41	4	1295 304 206	T 19360	000 262 1540	ZF 41	25
1295 202 025	-----	-----	ZF 41	4	1295 304 236	T 19111	-----	ZF 41	12
1295 202 028	T 11171	001 262 1902	ZF 41	4	1295 304 245	T 09763	000 262 2605	ZF 41	18
1295 202 036	-----	-----	ZF 41	5	1295 304 248	T 15377	000 262 0209	ZF 41	28
1295 202 039	-----	-----	ZF 41	4	1295 304 250	-----	-----	ZF 41	18
1295 202 041	T 09751	000 260 1290	ZF 41	38	1295 304 251	-----	-----	ZF 41	28
1295 202 044	-----	-----	ZF 41	4	1295 304 263	-----	-----	ZF 41	26
1295 202 045	-----	-----	ZF 41	4	1295 304 269	-----	-----	ZF 41	17
1295 202 052	-----	-----	ZF 41	4	1295 304 270	-----	-----	ZF 41	24
1295 203 005	T 20125	-----	ZF 41	-----	1295 304 271	-----	-----	ZF 41	19
1295 204 005	-----	-----	ZF 41	17	1295 304 272	-----	-----	ZF 41	27
1295 204 006	-----	-----	ZF 41	19	1295 304 273	-----	-----	ZF 41	18
1295 204 007	-----	-----	ZF 41	24	1295 304 278	T 08871	000 262 1940	ZF 41	2
1295 204 009	-----	-----	ZF 41	17	1295 304 278	T 08871	000 262 1940	ZF 41	13
1295 204 011	-----	-----	ZF 41	24	1295 304 305	-----	-----	ZF 41	19
1295 221 001	-----	001 262 1302	ZF 41	4	1295 304 306	-----	-----	ZF 41	24
1295 221 002	-----	-----	ZF 41	4	1295 304 307	-----	-----	ZF 41	17
1295 221 003	-----	001 262 3802	ZF 41	4	1295 304 322	-----	-----	ZF 41	12
1295 232 027	T 16702	000 260 1497	ZF 41	68	1295 304 323	-----	-----	ZF 41	12
1295 232 048	-----	000 260 4361	ZF 41	60	1295 304 324	-----	-----	ZF 41	17
1295 233 025	T 09063	000 263 1920	ZF 41	78	1295 305 051	-----	000 263 0232	ZF 41	34
1295 238 003	-----	-----	ZF 41	80	1295 305 052	-----	000 263 0032	ZF 41	34
1295 298 915	T 20194	-----	ZF 41	-----	1295 305 056	T 11447	000 263 1430	ZF 41	33
1295 298 936	T 16154	-----	ZF 41	42	1295 306 132	T 08933	000 268 0849	ZF 41	90
1295 298 937	T 16155	-----	ZF 41	81	1295 307 158	T 19945	000 267 0046	ZF 41	-----
1295 298 938	T 16156	-----	ZF 41	81	1295 307 243	T 19116	000 267 0474	ZF 41	-----
1295 298 939	T 16157	-----	ZF 41	81	1295 307 274	T 18581	000 267 0503	ZF 41	-----
1295 298 950	T 16159	-----	ZF 41	81	1295 307 275	T 18886	000 267 0803	ZF 41	-----
1295 298 959	T 16167	-----	ZF 41	81	1295 307 294	T 19124	000 267 0820	ZF 41	-----
1295 298 960	T 20200	-----	ZF 41	-----	1295 307 330	T 19994	000 267 1303	ZF 41	-----
1295 302 070	T 19448	000 262 5210	ZF 41	1	1295 307 479	T 18869	000 267 2622	ZF 41	-----
1295 302 071	T 09771	000 262 4010	ZF 41	1	1295 307 533	T 19130	000 265 2031	ZF 41	-----
1295 302 074	T 15362	000 262 3110	ZF 41	1	1295 332 021	-----	000 263 0025	ZF 41	70
1295 302 100	-----	000 262 4529	ZF 41	37	1295 332 053	-----	000 263 6410	ZF 41	69
1295 302 122	T 19500	-----	ZF 41	1	1295 332 086	-----	001 263 2110	ZF 41	69

103

ZF 41
4-510

KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
42	T 16154	1295 298 936	-----	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	2	16 S 130	ZF 41
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 130	ZF 41
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 130	ZF 41
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 130	ZF 41
11	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 130	ZF 41
43	-----	1297 204 054	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 130	ZF 41
9	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 130	ZF 41
14	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
15	-----	1297 304 446	-----	SYNCHRONIZER HUB	1	16 S 130	ZF 41
16	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 130	ZF 41
43	T 16161	1297 204 059	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 130	ZF 41
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 130	ZF 41
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 130	ZF 41
14	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	1	16 S 130	ZF 41
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 130	ZF 41
43	T 18620	1297 298 958	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 130	ZF 41
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 130	ZF 41
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 130	ZF 41
13	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	2	16 S 130	ZF 41
14	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	1	16 S 130	ZF 41
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 130	ZF 41
43	-----	1297 298 959	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 130	ZF 41
9	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 130	ZF 41
13	T 16723	1297 304 369	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 130	ZF 41
14	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
15	-----	1297 304 446	-----	SYNCHRONIZER HUB	1	16 S 130	ZF 41
16	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 130	ZF 41
44	T 16160	1297 204 019	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 130	ZF 41
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 130	ZF 41
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 130	ZF 41
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	1	16 S 130	ZF 41
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 130	ZF 41
44	-----	1297 204 053	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 130	ZF 41
9	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 130	ZF 41
21	T 18028	1297 304 485	-----	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
22	-----	1297 304 445	-----	SYNCHRONIZER HUB	1	16 S 130	ZF 41
23	-----	1297 304 450	-----	SYNCHRONIZER SLIDING COLLAR	1	16 S 130	ZF 41

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
44	T 18619	1297 298 956	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 130	ZF 41
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 130	ZF 41
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 130	ZF 41
20	T 09054	1297 304 196	000 262 2140	SYNCHRONIZER CONE (63 T.)	2	16 S 130	ZF 41
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	1	16 S 130	ZF 41
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 130	ZF 41
44	T 18619	1297 298 957	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 130	ZF 41
9	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 130	ZF 41
20	T 16726	1297 304 371	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 130	ZF 41
21	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
22	-----	1297 304 445	-----	SYNCHRONIZER HUB	1	16 S 130	ZF 41
23	-----	1297 304 450	-----	SYNCHRONIZER SLIDING COLLAR	1	16 S 130	ZF 41
81	T 16155	1295 298 937	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 130	ZF 41
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	6	16 S 130	ZF 41
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	6	16 S 130	ZF 41
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	6	16 S 130	ZF 41
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 130	ZF 41
78	T 09063	1295 233 025	000 263 1920	SYNCHRONIZER CONE (63 T.)	1	16 S 130	ZF 41
81	T 16156	1295 298 938	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 130	ZF 41
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	6	16 S 130	ZF 41
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	6	16 S 130	ZF 41
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	6	16 S 130	ZF 41
78	T 09063	1295 233 025	000 263 1920	SYNCHRONIZER CONE (63 T.)	1	16 S 130	ZF 41
81	T 16157	1295 298 939	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 130	ZF 41
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	6	16 S 130	ZF 41
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	6	16 S 130	ZF 41
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	6	16 S 130	ZF 41
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 130	ZF 41
78	T 14809	1313 233 001	000 263 2020	SYNCHRONIZER CONE (63 T.)	1	16 S 130	ZF 41
81	T 16159	1295 298 950	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 130	ZF 41
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
73	T 08899	1296 333 002	000 263 0735	SYNCHRONIZER HUB	1	16 S 130	ZF 41
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	9	16 S 130	ZF 41
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	9	16 S 130	ZF 41
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	9	16 S 130	ZF 41
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 130	ZF 41
78	T 14809	1313 233 001	000 263 2020	SYNCHRONIZER CONE (63 T.)	1	16 S 130	ZF 41

KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
-----	-----	----	----------	-------------	------	-------	-------

81	T 16167	1295 298 959	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 130	ZF 41
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 130	ZF 41
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 130	ZF 41
73	T 08899	1296 333 002	000 263 0735	SYNCHRONIZER HUB	1	16 S 130	ZF 41
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	9	16 S 130	ZF 41
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	9	16 S 130	ZF 41
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	9	16 S 130	ZF 41
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 130	ZF 41
78	T 09063	1295 233 025	000 263 1920	SYNCHRONIZER CONE (63 T.)	1	16 S 130	ZF 41

67	T 16700	1296 298 904	000 262 0306	PLANETARY GEAR REPAIR KIT (26 T.)		16 S 130	ZF 41
62	T 15775	0631 329 050	001481 005036	GEAR SHAFT ELASTIC PIN	5	16 S 130	ZF 41
63	T 15771	0631 329 017	001481 003028	GEAR SHAFT ELASTIC PIN	5	16 S 130	ZF 41
64	T 08940	0501 305 887	003 264 2252	GEAR THRUST WASHER	10	16 S 130	ZF 41
65	T 08939	0730 103 846	003 264 2052	GEAR SPACER RING	15	16 S 130	ZF 41
66	T 08936	0735 470 057	001 981 1187	GEAR NEEDLE ROLLER	180	16 S 130	ZF 41
68	T 16702	1295 232 027	000 260 1497	GEAR SET (26 T.) (5 PCS.)	1	16 S 130	ZF 41



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16K160


109

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 43
4-510

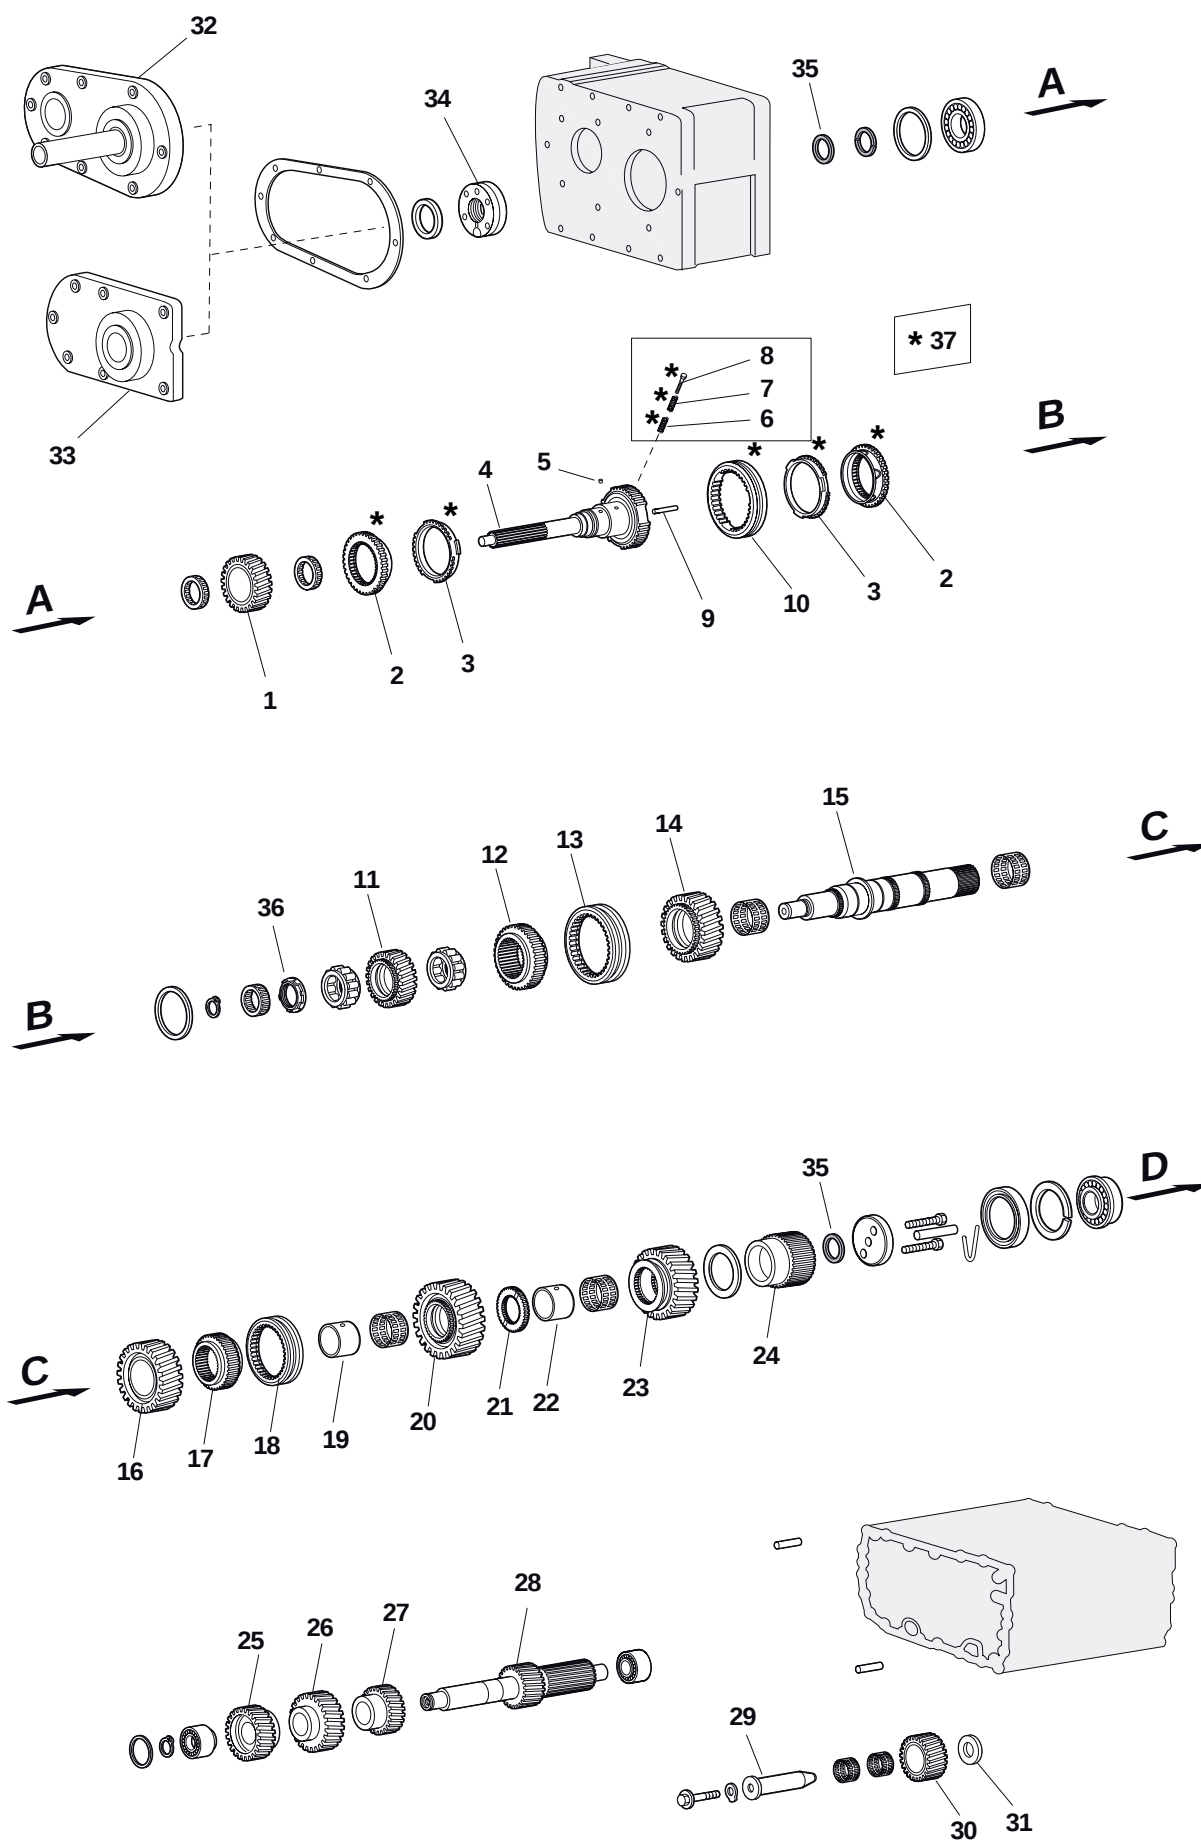

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	T 09773	1297 302 176	000 262 4510	CONSTANT GEAR (28-58 T.)	
1	T 11774	1297 302 177	000 262 4610	CONSTANT GEAR (30-58 T.)	
1	-----	1297 302 250	000 262 5810	CONSTANT GEAR (29T .)	
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	1
3	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	1
4	-----	1297 202 004	-----	MAIN DRIVE GEAR	A
4	-----	1297 202 008	-----	MAIN DRIVE GEAR	B
4	-----	1297 202 011	-----	MAIN DRIVE GEAR	C
4	-----	1297 202 014	-----	MAIN DRIVE GEAR	D
4	-----	1297 202 045	-----	MAIN DRIVE GEAR	E
4	-----	1297 202 046	-----	MAIN DRIVE GEAR	F
4	-----	1297 202 052	-----	MAIN DRIVE GEAR	G
4	T 15053	1297 202 053	001 262 2802	MAIN DRIVE GEAR (57 T.)	H
4	-----	1297 202 062	-----	MAIN DRIVE GEAR	I
4	-----	1297 202 063	-----	MAIN DRIVE GEAR	J
4	-----	1297 221 006	-----	MAIN DRIVE GEAR	
5	-----	0635 470 012	005402 007200	SYNCHRONIZER CYLINDER ROLLER	
6	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	1
7	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	1
8	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	1
9	-----	0730 062 323	000 261 0766	MAIN DRIVE GEAR TUBE	
10	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
11	T 09767	1297 304 127	000 262 3214	FOURTH SPEED GEAR (23-30-58 T.)	
11	T 19481	1297 304 128	-----	FOURTH SPEED GEAR (23-28-58 T.)	
11	-----	1297 304 258	-----	FOURTH SPEED GEAR (29 T.)	
12	T 16595	1297 304 188	000 262 2227	THIRD AND FOURTH SPEED CLUTCH GEAR (23 T.)	
13	T 09779	1297 304 120	000 262 5023	THIRD AND FOURTH SPEED SLIDING COLLAR (23 SPLINES)	
14	T 09775	1297 304 115	000 262 4713	THIRD SPEED GEAR (34-23 T.)	
14	T 19478	1297 304 116	-----	THIRD SPEED GEAR (32-23 T.)	
15	T 19074	1297 304 179	000 262 3605	MAINSHAFT	
15	-----	1297 304 264	-----	MAINSHAFT	
16	T 09769	1297 304 112	000 262 3912	SECOND SPEED GEAR (38-22 T.)	
16	T 19476	1297 304 113	-----	SECOND SPEED GEAR (37-22 T.)	
17	T 09753	1295 304 235	000 262 2127	FIRST AND SECOND SPEED CLUTCH GEAR (22 T.)	
18	T 09777	1297 304 119	000 262 4923	FIRST AND SECOND SPEED SLIDING COLLAR (22 SPLINES)	
19	T 09765	1297 304 055	000 262 3050	FIRST SPEED GEAR SLEEVE	
20	T 18326	1297 304 150	000 262 6811	FIRST SPEED GEAR (47-22 T.)	
20	T 19293	1297 304 151	-----	FIRST SPEED GEAR (44-22 T.)	
21	T 19368	1297 304 154	000 262 1640	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	
22	T 09755	1297 304 034	000 262 2350	REVERSE GEAR SLEEVE	
23	-----	1297 304 148	000 262 5311	REVERSE GEAR (38 T.)	
23	-----	1297 304 149	000 262 8611	REVERSE GEAR (39 T.)	
24	T 15383	1297 304 187	000 262 0309	PLANETARY REDUCTION SUN GEAR (27 T.)	
24	-----	1297 304 265	-----	PLANETARY REDUCTION SUN GEAR (24 T.)	
25	T 15033	1297 303 066	000 263 6610	COUNTERSHAFT CONSTANT GEAR (34 T.)	
25	T 15040	1297 303 074	000 263 6910	COUNTERSHAFT CONSTANT GEAR (31 T.)	
25	T 19952	1297 303 098	001 263 0510	COUNTERSHAFT CONSTANT GEAR (32 T.)	
26	T 15026	1297 303 065	000 263 6510	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	
26	T 15047	1297 303 072	000 263 7010	COUNTERSHAFT FOURTH SPEED GEAR (34 T.)	
26	-----	1297 303 114	-----	COUNTERSHAFT FOURTH SPEED GEAR (39 T.)	
27	T 19288	1297 303 077	000 263 6710	COUNTERSHAFT THIRD SPEED GEAR (25 T.)	
27	-----	1297 303 081	-----	COUNTERSHAFT THIRD SPEED GEAR (28 T.)	
28	T 11167	1297 303 047	000 263 3302	COUNTERSHAFT (17-20 T.)	
28	-----	1297 303 048	-----	COUNTERSHAFT (19-23 T.)	
28	-----	1297 303 070	-----	COUNTERSHAFT (19-23 T.)	
29	T 11447	1295 305 056	000 263 1430	REVERSE IDLER GEAR SHAFT	
30	-----	1295 305 051	000 263 0232	REVERSE IDLER GEAR (21 T.)	
30	-----	1295 305 052	000 263 0032	REVERSE IDLER GEAR (24 T.)	
31	T 14283	0730 150 064	343 263 0062	REVERSE IDLER GEAR THRUST WASHER	
32	-----	1297 302 013	-----	MAIN DRIVE GEAR BEARING RETAINER	A
32	-----	1297 302 017	-----	MAIN DRIVE GEAR BEARING RETAINER	G
32	-----	1297 302 018	000 262 4629	MAIN DRIVE GEAR BEARING RETAINER	A
32	-----	1297 302 019	-----	MAIN DRIVE GEAR BEARING RETAINER	AB
32	-----	1297 302 053	000 262 4329	MAIN DRIVE GEAR BEARING RETAINER	EH J
32	-----	1297 302 126	-----	MAIN DRIVE GEAR BEARING RETAINER	D
32	-----	1297 302 238	-----	MAIN DRIVE GEAR BEARING RETAINER	C
32	-----	1297 302 289	-----	MAIN DRIVE GEAR BEARING RETAINER	I
33	-----	1297 302 109	-----	MAIN DRIVE GEAR BEARING RETAINER	D
33	-----	1297 302 130	-----	MAIN DRIVE GEAR BEARING RETAINER	D
33	-----	1297 302 158	-----	MAIN DRIVE GEAR BEARING RETAINER	D
33	-----	1297 302 185	-----	MAIN DRIVE GEAR BEARING RETAINER	F

111

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme


Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 117

(*) For the composition of the kits please see page 117.

16 K 160

ZF 43
4-510

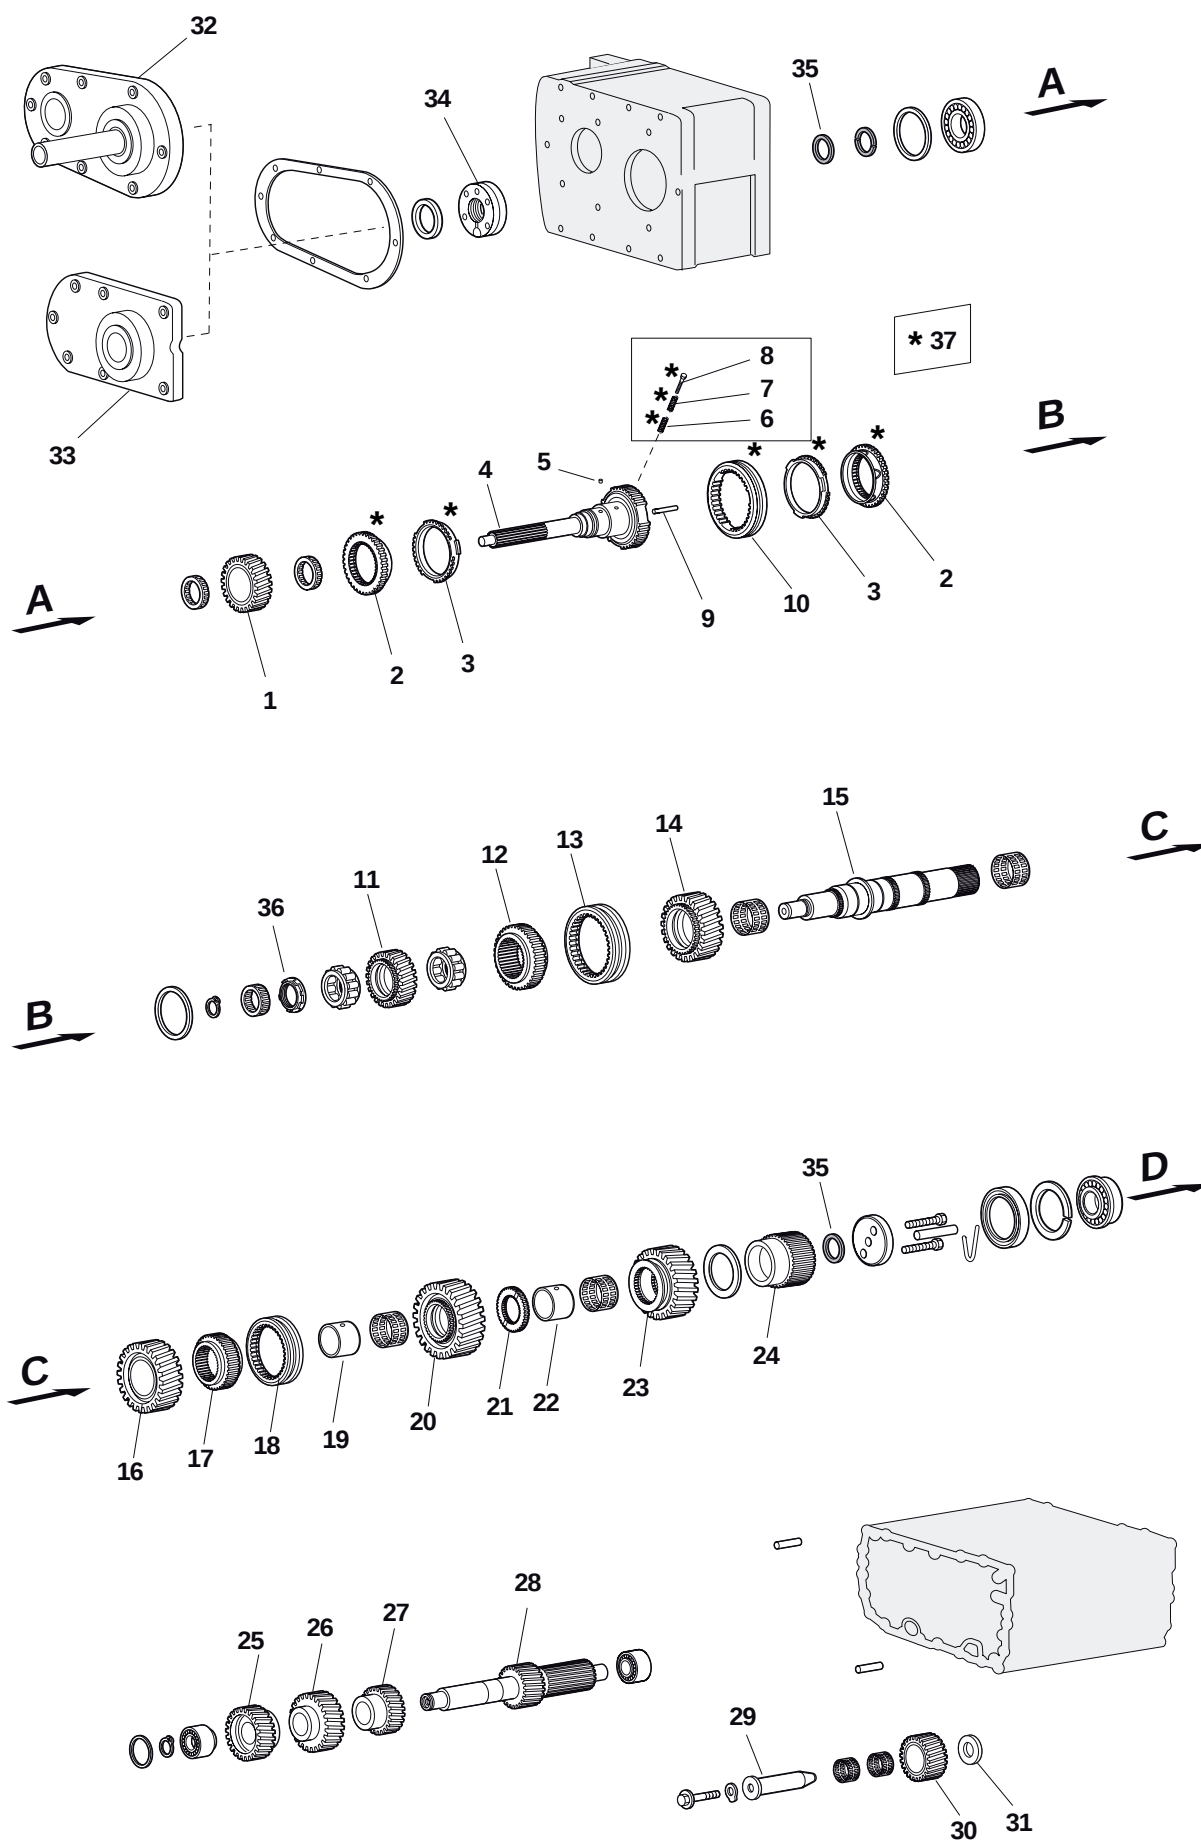


[illegible]


(*) Per la composizione dei kit vedi pagina 117

(*) For the composition of the kits please see page 117.



ZF 43
4-510

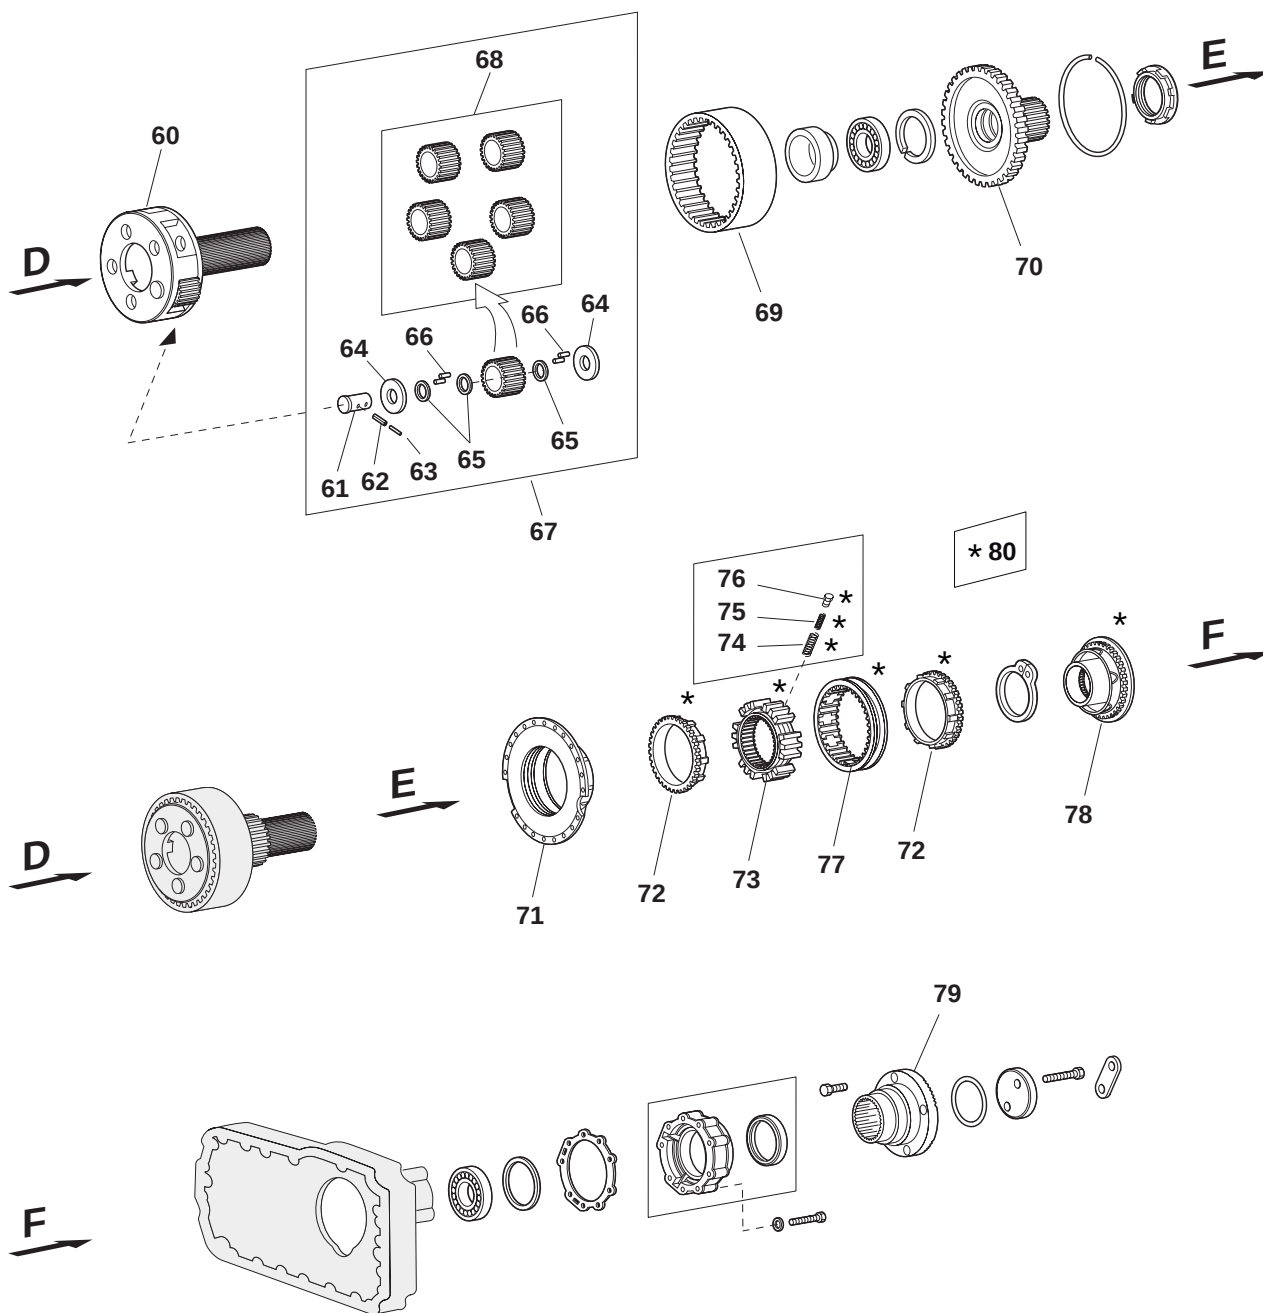

GV

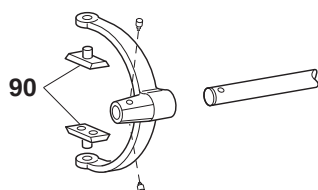

GP

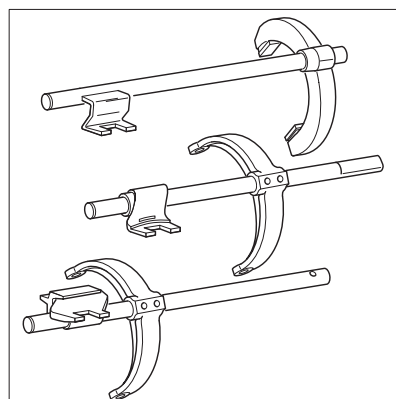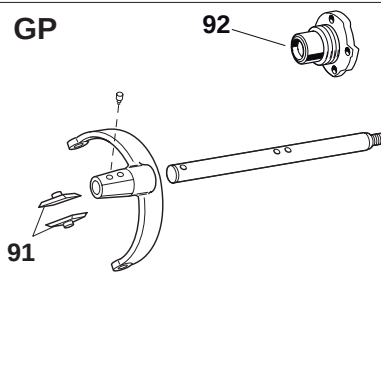

115

ZF 43
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 305 887	T 08940	003 264 2252	ZF 37	64	1296 221 001	-----	001 262 0902	ZF 37	4
0630 501 024	T 09503	000471 030000	ZF 37	40	1296 221 002	-----	001 262 3302	ZF 37	4
0630 531 055	T 19907	003 994 3841	ZF 37	-----	1296 233 006	T 08908	000 263 1720	ZF 37	71
0631 329 017	T 15771	001481 003028	ZF 37	63	1296 298 904	T 16700	000 262 0306	ZF 37	67
0631 329 050	T 15775	001481 005036	ZF 37	62	1296 302 002	-----	-----	ZF 37	1
0635 331 390	T 19914	004 981 8625	ZF 37	-----	1296 302 003	T 11161	000 262 3910	ZF 37	1
0635 470 012	-----	005402 007200	ZF 37	6	1296 302 023	T 14807	000 262 3010	ZF 37	1
0730 061 816	T 15289	000 262 0673	ZF 37	39	1296 303 002	T 11169	000 263 3310	ZF 37	30
0730 062 323	-----	000 261 0766	ZF 37	10	1296 303 003	-----	-----	ZF 37	30
0730 103 846	T 08939	003 264 2052	ZF 37	65	1296 303 008	-----	-----	ZF 37	31
0730 150 064	T 14283	343 263 0062	ZF 37	35	1296 303 009	T 11163	000 263 3110	ZF 37	31
0732 040 385	T 08950	336 264 0693	ZF 37	7	1296 303 013	-----	-----	ZF 37	29
0732 040 385	T 08950	336 264 0693	ZF 37	74	1296 303 014	T 11165	000 263 3210	ZF 37	29
0732 040 386	T 08951	336 264 0793	ZF 37	8	1296 303 025	T 15364	000 263 3502	ZF 37	32
0732 040 386	T 08951	336 264 0793	ZF 37	75	1296 303 026	-----	-----	ZF 37	32
0732 040 736	T 09068	002 993 7501	ZF 37	-----	1296 304 070	T 19132	000 262 2512	ZF 37	19
0735 470 057	T 08936	001 981 1187	ZF 37	66	1296 304 071	-----	-----	ZF 37	19
0737 502 092	T 15366	000 990 2360	ZF 37	41	1296 304 087	T 11156	000 262 3113	ZF 37	17
1240 304 278	T 08949	336 264 0239	ZF 37	9	1296 304 088	-----	-----	ZF 37	17
1240 304 278	T 08949	336 264 0239	ZF 37	76	1296 304 090	T 11154	000 262 2414	ZF 37	12
1240 317 075	T 08917	000 264 1423	ZF 37	-----	1296 304 091	-----	-----	ZF 37	12
1246 304 278	T 08874	000 262 2434	ZF 37	21	1296 304 097	-----	000 262 4911	ZF 37	27
1257 304 020	T 08946	336 262 0023	ZF 37	23	1296 304 098	-----	-----	ZF 37	27
1269 332 036	T 08919	000 264 1618	ZF 37	61	1296 304 099	-----	000 262 4811	ZF 37	24
1295 202 041	T 09751	000 260 1290	ZF 37	38	1296 304 100	-----	-----	ZF 37	24
1295 203 005	T 20125	-----	ZF 37	-----	1296 304 119	T 19135	000 262 2505	ZF 37	18
1295 232 027	T 16702	000 260 1497	ZF 37	68	1296 312 042	T 16712	000 267 0519	ZF 37	92
1295 232 048	-----	000 260 4361	ZF 37	60	1296 333 002	T 08899	000 263 0735	ZF 37	73
1295 233 025	T 09063	000 263 1920	ZF 37	78	1296 333 022	T 09061	000 263 0234	ZF 37	72
1295 238 003	-----	-----	ZF 37	79	1296 333 023	T 09062	000 263 0523	ZF 37	77
1295 298 915	T 20194	-----	ZF 37	-----	1296 333 045	T 15084	000 263 0534	ZF 37	72
1295 298 936	T 16154	-----	ZF 37	42	1296 334 004	T 17892	000 265 0649	ZF 37	91
1295 298 937	T 16155	-----	ZF 37	80	1297 204 019	T 16160	-----	ZF 37	44
1295 298 937	T 16155	-----	ZF 40	80	1297 204 059	T 16161	-----	ZF 37	43
1295 298 938	T 16156	-----	ZF 37	80	1297 298 956	T 18619	-----	ZF 37	44
1295 298 938	T 16156	-----	ZF 40	80	1297 298 958	T 18620	-----	ZF 37	43
1295 298 959	T 16167	-----	ZF 37	80	1297 302 011	-----	-----	ZF 37	36
1295 298 959	T 16167	-----	ZF 40	80	1297 302 012	T 15567	000 262 3329	ZF 37	36
1295 298 960	T 20200	-----	ZF 37	-----	1297 302 013	-----	-----	ZF 37	36
1295 302 100	-----	000 262 4529	ZF 37	37	1297 302 108	-----	-----	ZF 37	36
1295 304 002	T 09056	000 262 3623	ZF 37	11	1297 302 169	-----	-----	ZF 37	36
1295 304 002	T 09056	000 262 3623	ZF 37	16	1297 304 031	T 08892	000 262 3935	ZF 37	15
1295 304 002	T 09056	000 262 3623	ZF 37	23	1297 304 031	T 08892	000 262 3935	ZF 37	22
1295 304 004	T 08795	000 262 2034	ZF 37	3	1297 304 195	T 08895	000 262 4435	ZF 37	22
1295 304 004	T 08795	000 262 2034	ZF 37	14	1297 304 196	T 09054	000 262 2140	ZF 37	20
1295 304 004	T 08795	000 262 2034	ZF 37	21	1304 304 686	T 15151	000 262 9934	ZF 37	3
1295 304 012	T 19100	000 262 2050	ZF 37	26	1304 304 686	T 15151	000 262 9934	ZF 37	14
1295 304 165	T 08858	000 262 1440	ZF 37	2					
1295 304 206	T 19360	000 262 1540	ZF 37	25					
1295 304 247	T 15359	000 262 0109	ZF 37	28					
1295 304 278	T 08871	000 262 1940	ZF 37	2					
1295 304 278	T 08871	000 262 1940	ZF 37	13					
1295 304 278	T 08871	000 262 1940	ZF 37	20					
1295 305 051	-----	000 263 0232	ZF 37	34					
1295 305 052	-----	000 263 0032	ZF 37	34					
1295 305 056	T 11447	000 263 1430	ZF 37	33					
1295 306 132	T 08933	000 268 0849	ZF 37	90					
1295 307 158	T 19945	000 267 0046	ZF 37	-----					
1295 307 243	T 19116	000 267 0474	ZF 37	-----					
1295 307 274	T 18581	000 267 0503	ZF 37	-----					
1295 307 275	T 18886	000 267 0803	ZF 37	-----					
1295 307 294	T 19124	000 267 0820	ZF 37	-----					
1295 307 330	T 19994	000 267 1303	ZF 37	-----					
1295 307 479	T 18869	000 267 2622	ZF 37	-----					
1295 307 533	T 19130	000 265 2031	ZF 37	-----					
1295 332 021	-----	000 263 0025	ZF 37	70					
1295 332 053	-----	000 263 6410	ZF 37	69					
1295 338 014	-----	000 264 2745	ZF 37	79					
1295 338 059	T 14811	000 264 3745	ZF 37	79					
1295 338 061	-----	000 264 3645	ZF 37	79					
1295 338 083	T 19927	000 264 5150	ZF 37	-----					
1296 202 001	T 11173	001 262 2002	ZF 37	4					
1296 202 004	T 15119	000 262 9402	ZF 37	4					
1296 202 006	-----	-----	ZF 37	4					
1296 202 010	-----	-----	ZF 37	4					
1296 202 011	-----	-----	ZF 37	5					

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
-----	-----	----	----------	-------------	------	-------	-------

37	T 16154	1295 298 936	-----	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT		16 K 160	ZF 43
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	2	16 K 160	ZF 43
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	2	16 K 160	ZF 43
6	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 K 160	ZF 43
7	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 K 160	ZF 43
8	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 K 160	ZF 43
10	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 K 160	ZF 43

80	T 16157	1295 298 939	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 K 160	ZF 43
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 K 160	ZF 43
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 K 160	ZF 43
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	6	16 K 160	ZF 43
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	6	16 K 160	ZF 43
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	6	16 K 160	ZF 43
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 K 160	ZF 43
78	T 14809	1313 233 001	000 263 2020	SYNCHRONIZER CONE (63 T.)	1	16 K 160	ZF 43

80	T 16159	1295 298 950	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 K 160	ZF 43
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 K 160	ZF 43
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 K 160	ZF 43
73	T 08899	1296 333 002	000 263 0735	SYNCHRONIZER HUB	1	16 K 160	ZF 43
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	9	16 K 160	ZF 43
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	9	16 K 160	ZF 43
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	9	16 K 160	ZF 43
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 K 160	ZF 43
78	T 14809	1313 233 001	000 263 2020	SYNCHRONIZER CONE (63 T.)	1	16 K 160	ZF 43

67	T 15659	1297 298 912	000 262 0406	GEAR REPAIR KIT (26 T.)		16 K 160	ZF 43
62	T 15775	0631 329 050	001481 005036	GEAR SHAFT ELASTIC PIN	5	16 K 160	ZF 43
63	T 15771	0631 329 017	001481 003028	GEAR SHAFT ELASTIC PIN	5	16 K 160	ZF 43
64	T 15745	0501 306 212	000 263 0562	GEAR THRUST WASHER	10	16 K 160	ZF 43
65	T 08939	0730 103 846	003 264 2052	GEAR SPACER RING	15	16 K 160	ZF 43
66	T 15760	0750 119 109	001 981 5487	GEAR NEEDLE ROLLER	120	16 K 160	ZF 43
68	T 10131	1297 232 023	000 260 1597	GEAR SET (26 T.) (5 PCS.)	1	16 K 160	ZF 43



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16S160


119

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 44
4-510

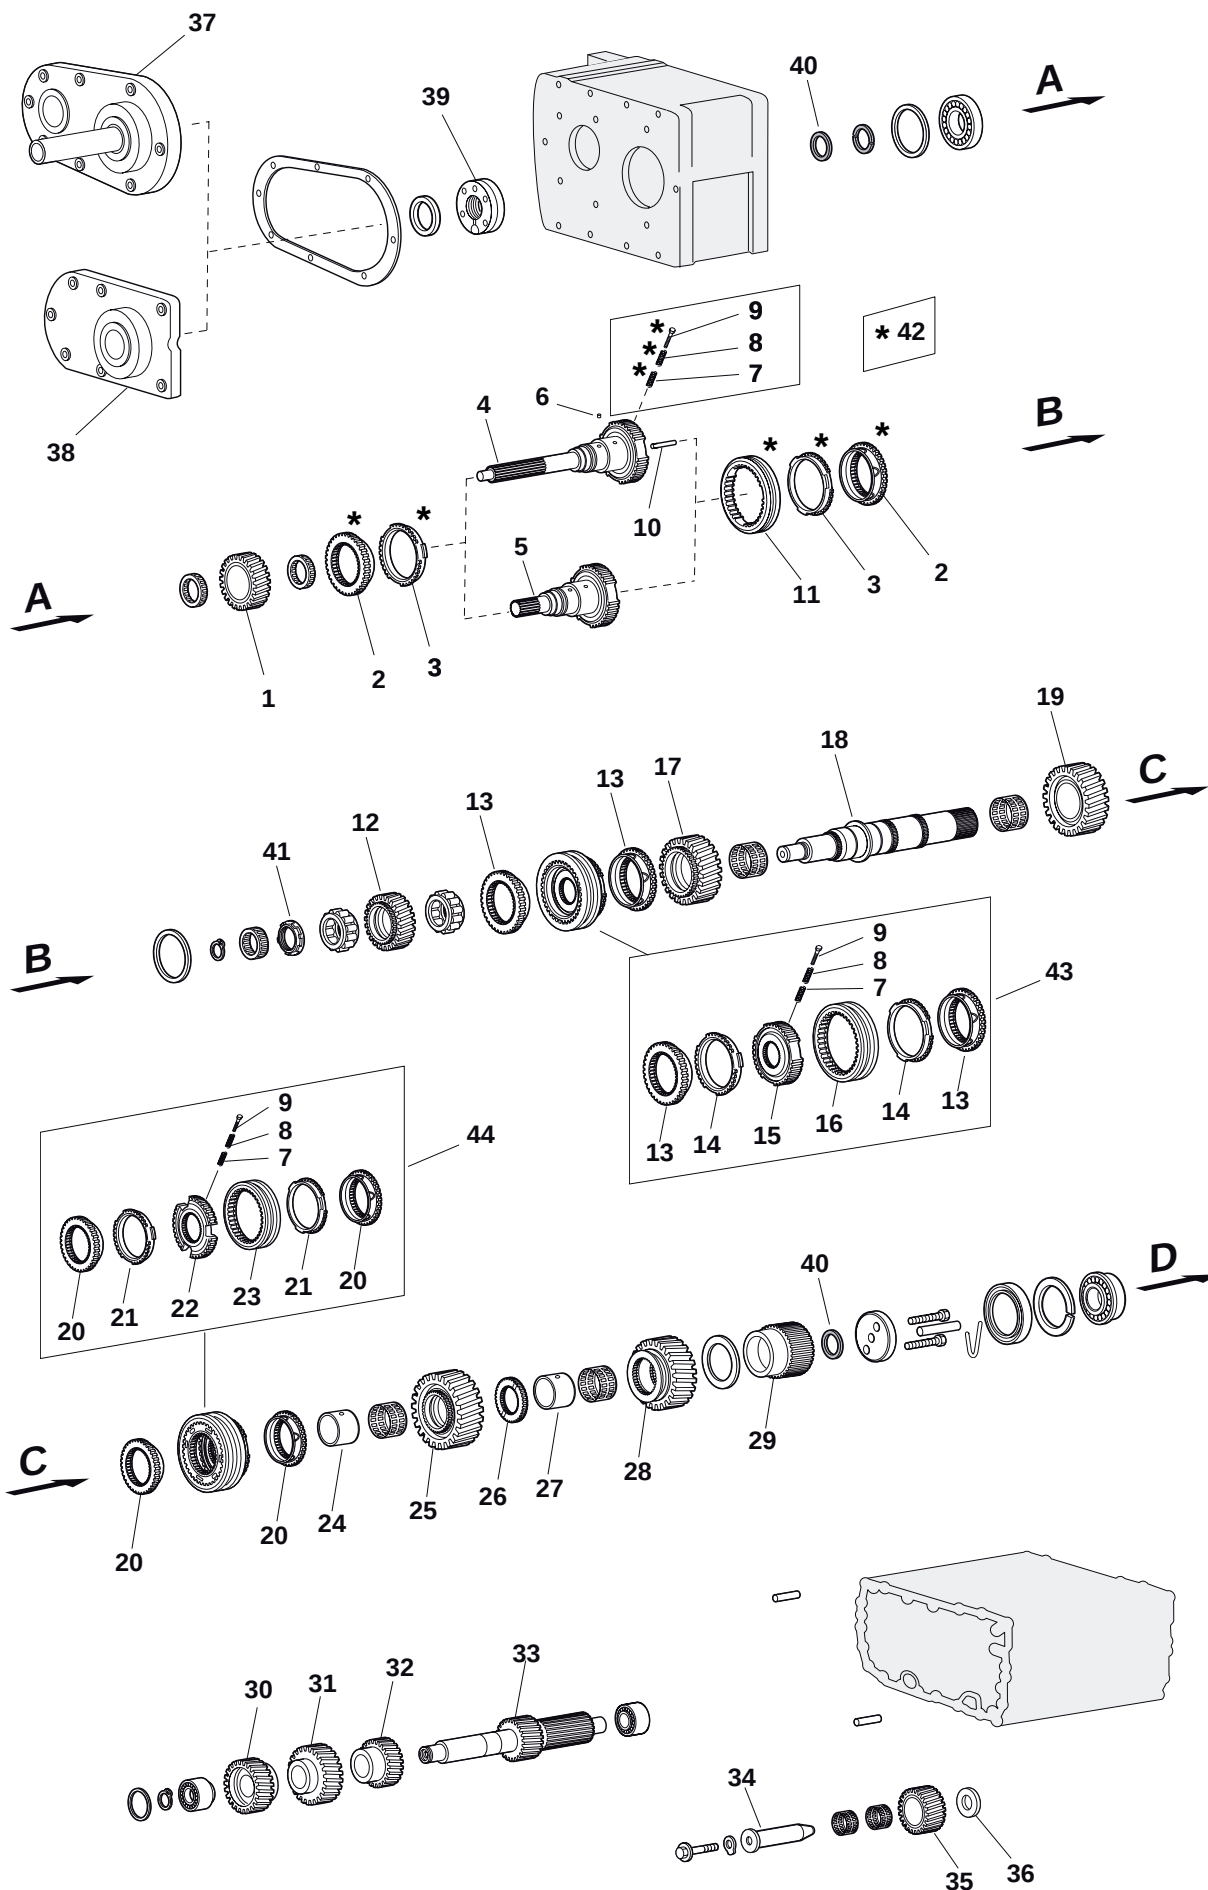

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	T 15014	1297 302 074	000 262 3210	CONSTANT GEAR (28-61 T.)	
1	T 09773	1297 302 176	000 262 4510	CONSTANT GEAR (28-58 T.)	
1	T 11774	1297 302 177	000 262 4610	CONSTANT GEAR (30-58 T.)	
1	T 19521	1297 302 241	-----	CONSTANT GEAR (26-58 T.)	
1	-----	1297 302 250	000 262 5810	CONSTANT GEAR (29 T.)	
2	T 08858	1295 304 165	000 262 1440	SYNCHRONIZER CONE (57 T.)	
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	1
3	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	1
4	-----	1297 202 003	-----	MAIN DRIVE GEAR	A
4	-----	1297 202 004	-----	MAIN DRIVE GEAR	B
4	-----	1297 202 005	-----	MAIN DRIVE GEAR	
4	-----	1297 202 008	-----	MAIN DRIVE GEAR	C
4	-----	1297 202 009	-----	MAIN DRIVE GEAR	D
4	-----	1297 202 011	-----	MAIN DRIVE GEAR	E
4	-----	1297 202 014	-----	MAIN DRIVE GEAR	F
4	T 09791	1297 202 030	001 262 0302	MAIN DRIVE GEAR (57 T.)	
4	-----	1297 202 045	-----	MAIN DRIVE GEAR	G
4	-----	1297 202 046	-----	MAIN DRIVE GEAR	H
4	-----	1297 202 047	-----	MAIN DRIVE GEAR	I
4	-----	1297 202 048	-----	MAIN DRIVE GEAR	J
4	-----	1297 202 049	-----	MAIN DRIVE GEAR	K
4	-----	1297 202 051	-----	MAIN DRIVE GEAR	L
4	-----	1297 202 052	-----	MAIN DRIVE GEAR	M
4	T 15053	1297 202 053	001 262 2802	MAIN DRIVE GEAR (57 T.)	N
4	-----	1297 202 054	-----	MAIN DRIVE GEAR (57 T.)	O
4	-----	1297 202 061	001 262 3202	MAIN DRIVE GEAR	
4	-----	1297 202 062	-----	MAIN DRIVE GEAR	P
4	-----	1297 202 063	-----	MAIN DRIVE GEAR	Q
4	-----	1297 202 064	-----	MAIN DRIVE GEAR	R
4	-----	1297 202 066	-----	MAIN DRIVE GEAR	S
4	-----	1297 202 067	-----	MAIN DRIVE GEAR	T
4	-----	1297 221 006	-----	MAIN DRIVE GEAR	
4	-----	1297 221 008	-----	MAIN DRIVE GEAR	
4	-----	1297 221 009	-----	MAIN DRIVE GEAR	
4	-----	1297 221 010	-----	MAIN DRIVE GEAR	
5	-----	1297 202 044	001 262 3002	MAIN DRIVE GEAR	U
6	-----	0635 470 012	005402 007200	SYNCHRONIZER CYLINDER ROLLER	
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	1-2-3-4-5
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	1-2-3-4-5
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	1-2-3-4-5
10	-----	0730 062 323	000 261 0766	MAIN DRIVE GEAR TUBE	
11	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
12	T 15019	1297 304 260	000 262 4414	FOURTH SPEED GEAR (58-30-58 T.)	
12	T 15016	1297 304 267	000 262 4214	FOURTH SPEED GEAR (58-28-58 T.)	
12	T 19483	1297 304 318	000 262 6014	FOURTH SPEED GEAR (58-26-58 T.)	
12	T 19530	1297 304 413	-----	FOURTH SPEED GEAR (58-29-58 T.)	
13	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	3
14	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	2
14	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	3
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	2-3
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	2-3
17	T 18328	1297 304 261	000 262 6913	THIRD SPEED GEAR (34-58 T.)	
17	T 15727	1297 304 266	000 262 6213	THIRD SPEED GEAR (32-58 T.)	
17	T 19980	1297 304 414	-----	THIRD SPEED GEAR (34-58 T.)	
18	T 18353	1297 304 181	000 262 2705	MAINSHAFT	
18	-----	1297 304 193	000 262 4405	MAINSHAFT	
19	T 15724	1297 304 269	000 262 5612	SECOND SPEED GEAR (37-58 T.)	
19	T 18313	1297 304 442	000 262 6512	SECOND SPEED GEAR (38-58 T.)	
20	T 09054	1297 304 196	000 262 2140	SYNCHRONIZER CONE (63 T.)	5
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	4-5
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	4-5
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	4-5
24	T 09757	1297 304 035	000 262 2450	FIRST SPEED GEAR SLEEVE	
25	T 15736	1297 304 270	000 262 8511	FIRST SPEED GEAR (44-58 T.)	
25	T 18889	1297 304 441	000 262 9211	FIRST SPEED GEAR (47-58 T.)	
26	T 19368	1297 304 154	000 262 1640	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	
27	T 09755	1297 304 034	000 262 2350	REVERSE GEAR SLEEVE	
28	-----	1297 304 148	000 262 5311	REVERSE GEAR (38 T.)	
28	-----	1297 304 149	000 262 8611	REVERSE GEAR (39 T.)	
29	T 15383	1297 304 187	000 262 0309	PLANETARY REDUCTION SUN GEAR (27 T.)	
29	-----	1297 304 439	000 262 0909	PLANETARY REDUCTION SUN GEAR (24 T.)	

121

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme

Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 128


(*) For the composition of the kits please see page 128.

.

.





16 S 160

ZF 44
4-510

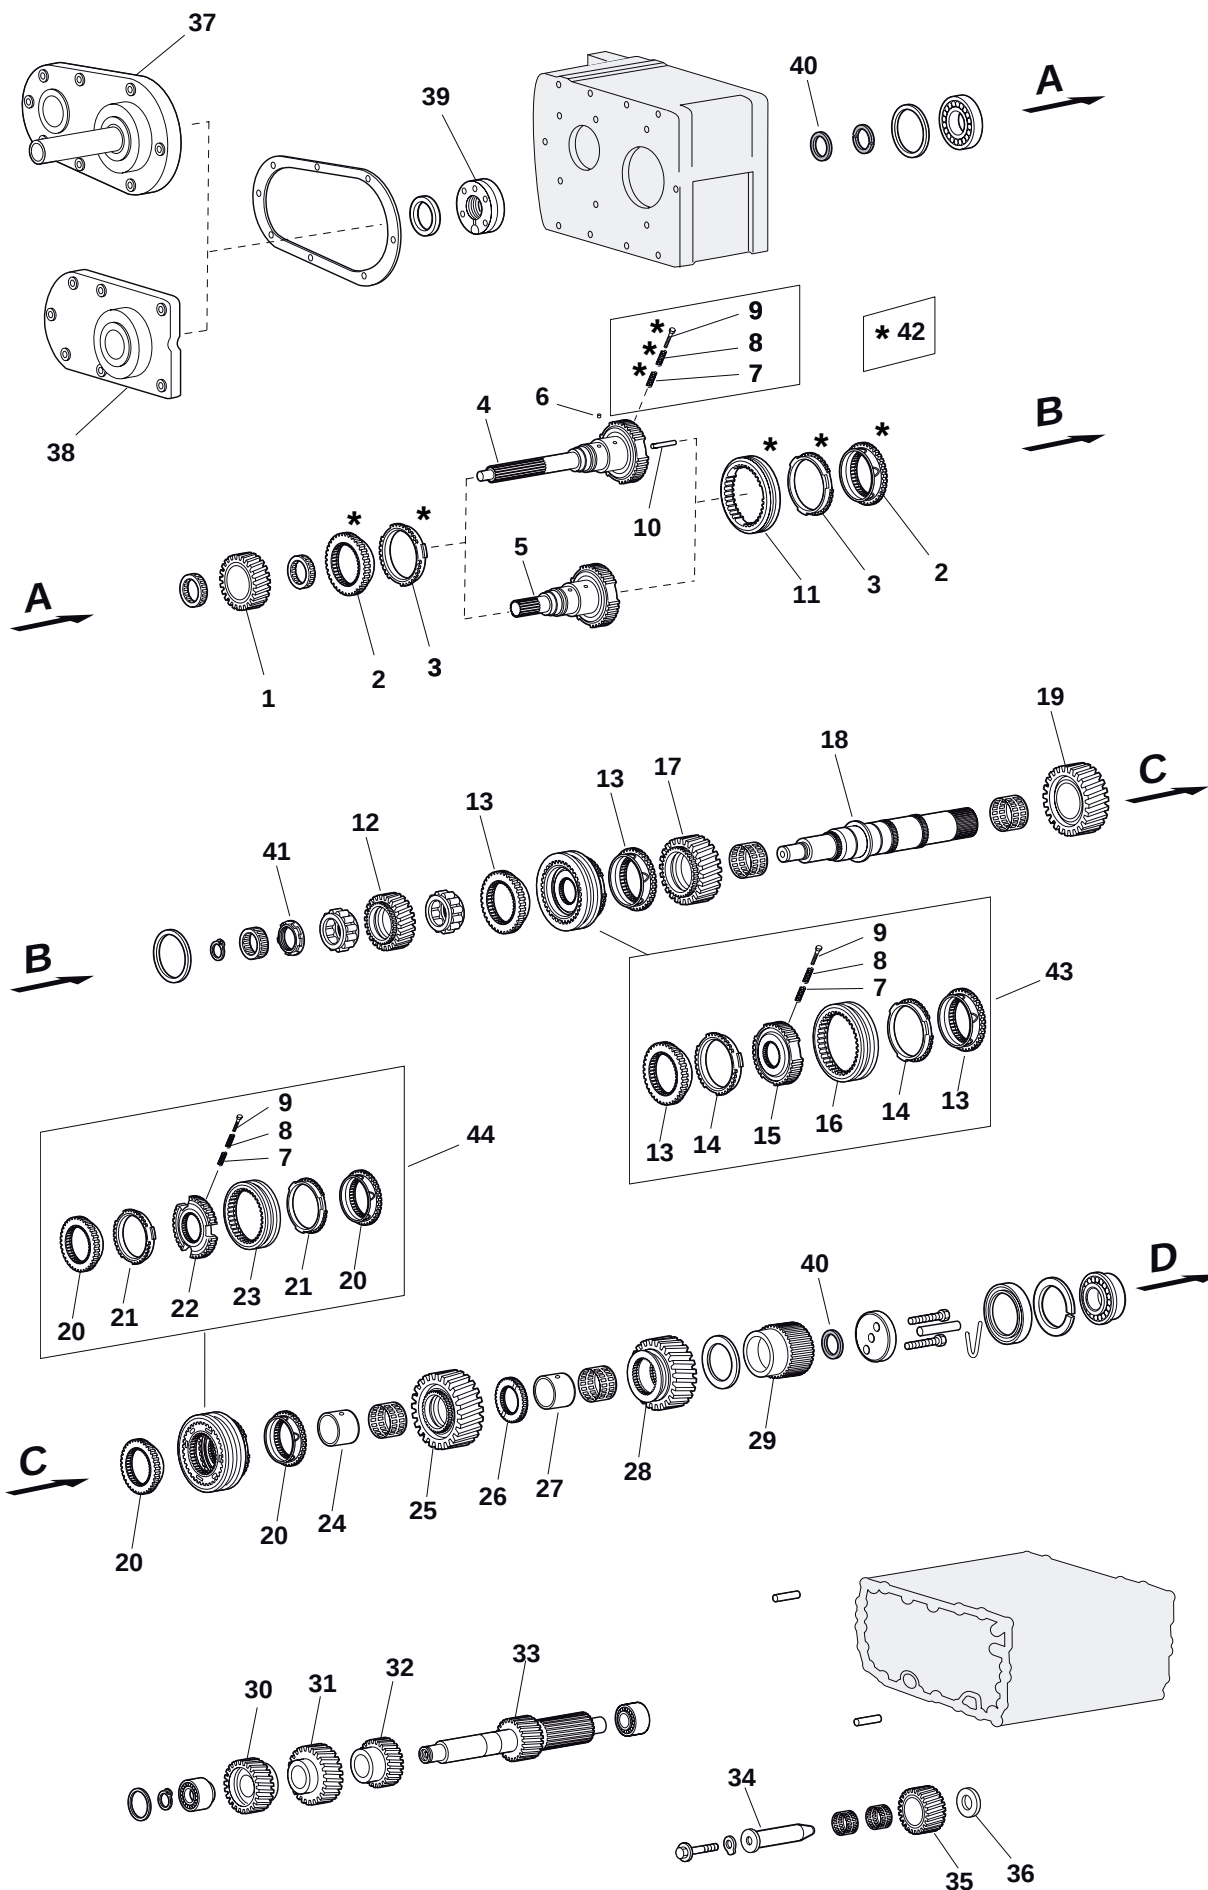

123

ZF 44
4-510

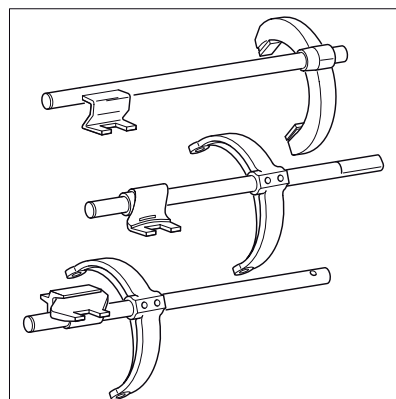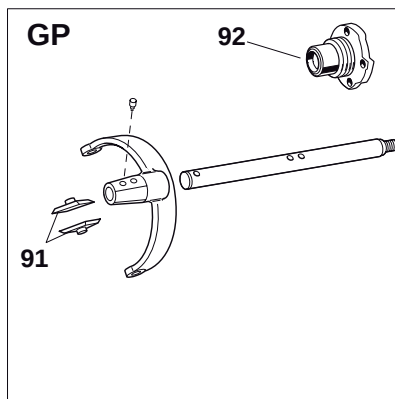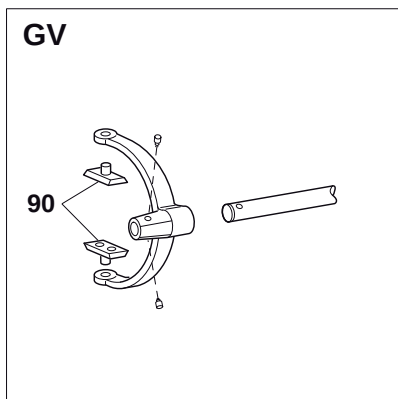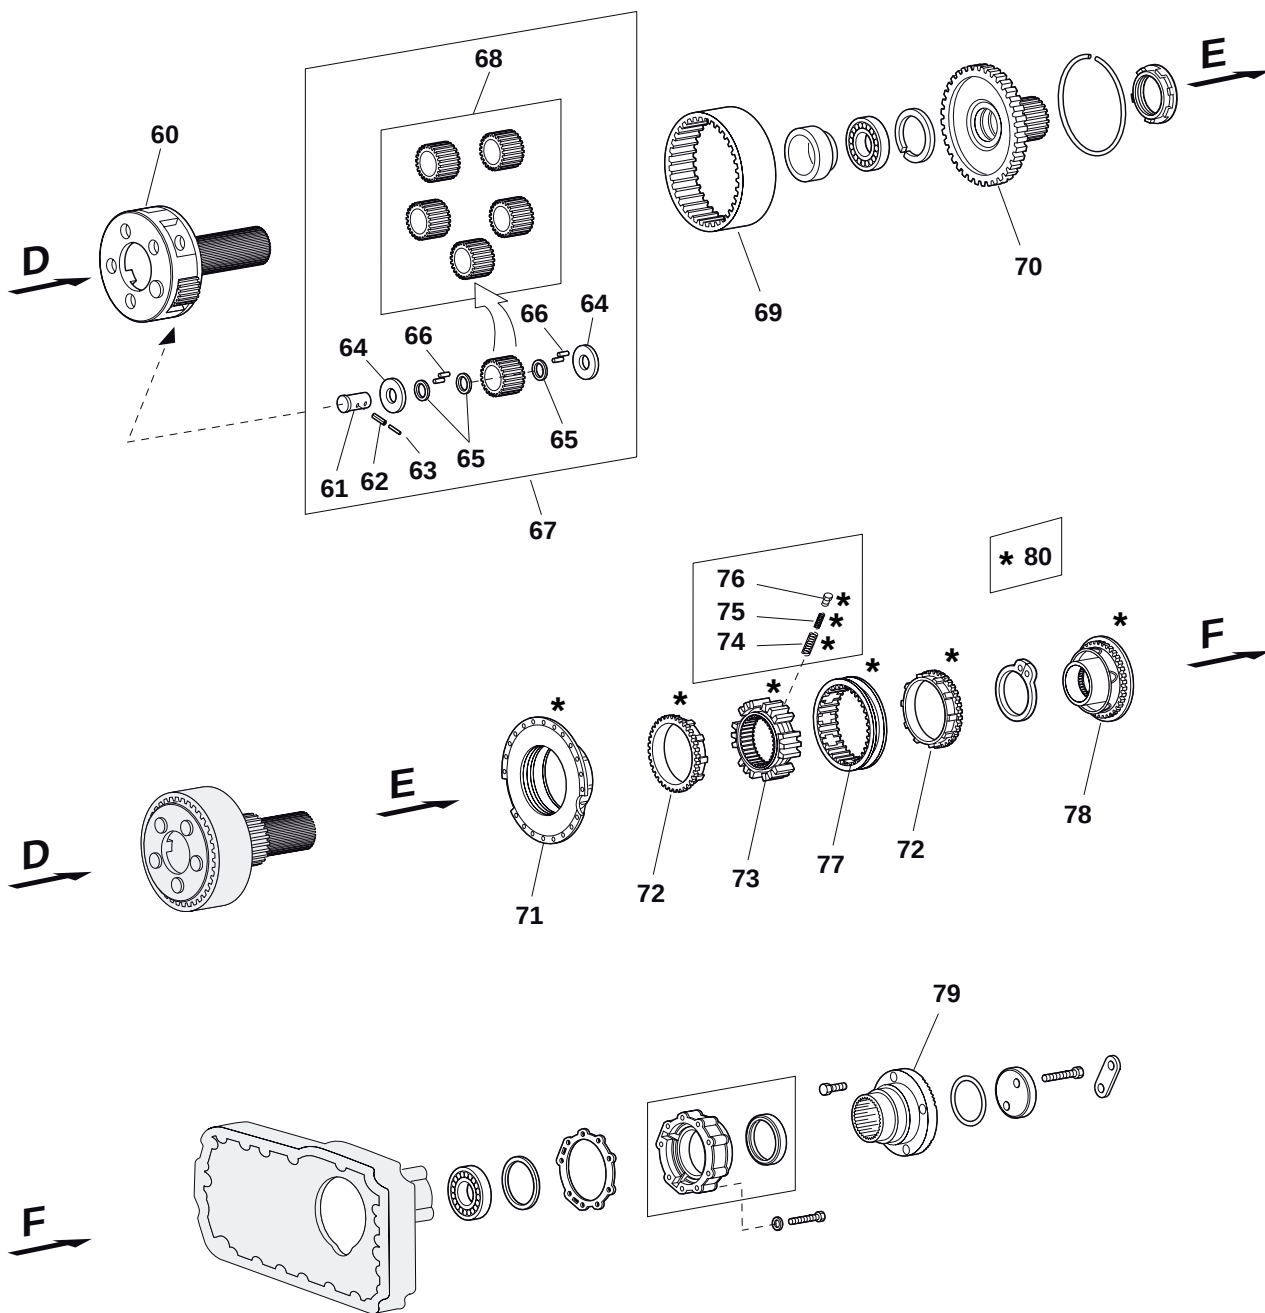

125

ZF 44
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 306 212	T 15745	000 263 0562	ZF 44	64	1297 202 053	T 15053	001 262 2802	ZF 44	4
0630 531 055	T 19907	003 994 3841	ZF 44	----	1297 202 054	-----	-----	ZF 44	4
0631 329 017	T 15771	001481 003028	ZF 44	63	1297 202 061	-----	001 262 3202	ZF 44	4
0631 329 050	T 15775	001481 005036	ZF 44	62	1297 202 062	-----	-----	ZF 44	4
0635 331 390	T 19914	004 981 8625	ZF 44	----	1297 202 063	-----	-----	ZF 44	4
0635 470 012	-----	005402 007200	ZF 44	6	1297 202 064	-----	-----	ZF 44	4
0730 061 816	T 15289	000 262 0673	ZF 44	40	1297 202 066	-----	-----	ZF 44	4
0730 062 323	-----	000 261 0766	ZF 44	10	1297 202 067	-----	-----	ZF 44	4
0730 103 846	T 08939	003 264 2052	ZF 44	65	1297 203 005	T 19936	000 264 4218	ZF 44	----
0730 150 064	T 14283	343 263 0062	ZF 44	36	1297 204 019	T 16160	-----	ZF 44	44
0730 260 330	T 16568	000 268 2150	ZF 44	----	1297 204 059	T 16161	-----	ZF 44	43
0732 040 385	T 08950	336 264 0693	ZF 44	7	1297 221 006	-----	-----	ZF 44	4
0732 040 385	T 08950	336 264 0693	ZF 44	74	1297 221 008	-----	-----	ZF 44	4
0732 040 386	T 08951	336 264 0793	ZF 44	8	1297 221 009	-----	-----	ZF 44	4
0732 040 386	T 08951	336 264 0793	ZF 44	75	1297 221 010	-----	-----	ZF 44	4
0732 040 736	T 09068	002 993 7501	ZF 44	----	1297 232 023	T 10131	000 262 1597	ZF 44	68
0737 502 092	T 15366	000 990 2360	ZF 44	41	1297 232 024	-----	-----	ZF 44	68
0750 119 109	T 15760	001 981 5487	ZF 44	66	1297 232 039	T 19961	000 260 3561	ZF 44	60
1240 304 278	T 08949	336 264 0239	ZF 44	9	1297 232 045	-----	000 260 4061	ZF 44	60
1240 304 278	T 08949	336 264 0239	ZF 44	76	1297 298 912	T 15659	000 262 0406	ZF 44	67
1240 317 075	T 08917	000 264 1423	ZF 44	----	1297 298 956	T 18619	-----	ZF 44	44
1246 304 278	T 08874	000 262 2434	ZF 44	21	1297 298 958	T 18620	-----	ZF 44	43
1257 304 020	T 08946	336 262 0023	ZF 44	23	1297 302 011	-----	-----	ZF 44	37
1295 142 011	T 19902	000 260 4605	ZF 44	----	1297 302 013	-----	-----	ZF 44	37
1295 202 041	T 09751	000 260 1290	ZF 44	39	1297 302 015	-----	-----	ZF 44	37
1295 298 915	T 20194	-----	ZF 44	----	1297 302 025	-----	-----	ZF 44	37
1295 298 936	T 16154	-----	ZF 44	42	1297 302 042	T 15569	000 262 3429	ZF 44	37
1295 298 939	T 16157	-----	ZF 44	80	1297 302 043	-----	-----	ZF 44	37
1295 298 950	T 16159	-----	ZF 44	80	1297 302 056	-----	-----	ZF 44	37
1295 298 960	T 20200	-----	ZF 44	----	1297 302 074	T 15014	000 262 3210	ZF 44	1
1295 302 100	-----	000 262 4529	ZF 44	38	1297 302 082	-----	-----	ZF 44	37
1295 304 002	T 09056	000 262 3623	ZF 44	11	1297 302 084	-----	-----	ZF 44	38
1295 304 002	T 09056	000 262 3623	ZF 44	16	1297 302 107	-----	-----	ZF 44	37
1295 304 004	T 08795	000 262 2034	ZF 44	3	1297 302 109	-----	-----	ZF 44	38
1295 304 004	T 08795	000 262 2034	ZF 44	14	1297 302 112	-----	-----	ZF 44	38
1295 304 165	T 08858	000 262 1440	ZF 44	2	1297 302 117	-----	-----	ZF 44	37
1295 304 278	T 08871	000 262 1940	ZF 44	2	1297 302 167	-----	-----	ZF 44	37
1295 304 278	T 08871	000 262 1940	ZF 44	13	1297 302 169	-----	-----	ZF 44	37
1295 305 051	-----	000 263 0232	ZF 44	35	1297 302 176	T 09773	000 262 4510	ZF 44	1
1295 305 052	-----	000 263 0032	ZF 44	35	1297 302 177	T 11774	000 262 4610	ZF 44	1
1295 305 056	T 11447	000 263 1430	ZF 44	34	1297 302 184	-----	-----	ZF 44	38
1295 306 132	T 08933	000 268 0849	ZF 44	90	1297 302 235	-----	-----	ZF 44	37
1295 307 158	T 19945	000 267 0046	ZF 44	----	1297 302 239	-----	-----	ZF 44	37
1295 307 243	T 19116	000 267 0474	ZF 44	----	1297 302 241	T 19521	-----	ZF 44	1
1295 307 274	T 18581	000 267 0503	ZF 44	----	1297 302 250	-----	000 262 5810	ZF 44	1
1295 307 275	T 18886	000 267 0803	ZF 44	----	1297 302 268	-----	-----	ZF 44	37
1295 307 294	T 19124	000 267 0820	ZF 44	----	1297 302 270	-----	-----	ZF 44	37
1295 307 330	T 19994	000 267 1303	ZF 44	----	1297 302 272	-----	-----	ZF 44	37
1295 307 479	T 18869	000 267 2622	ZF 44	----	1297 303 065	T 15026	000 263 6510	ZF 44	31
1295 307 533	T 19130	000 265 2031	ZF 44	----	1297 303 066	T 15033	000 263 6610	ZF 44	30
1295 332 086	-----	001 263 2110	ZF 44	69	1297 303 067	T 09789	000 263 7410	ZF 44	32
1295 338 083	T 19927	000 264 5150	ZF 44	----	1297 303 072	T 15047	000 263 7010	ZF 44	31
1296 213 028	T 11462	000 264 4206	ZF 44	----	1297 303 073	T 15755	000 263 6810	ZF 44	32
1296 233 006	T 08908	000 263 1720	ZF 44	71	1297 303 074	T 15040	000 263 6910	ZF 44	30
1296 312 042	T 16712	000 267 0519	ZF 44	92	1297 303 075	T 15751	000 263 4502	ZF 44	33
1296 333 002	T 08899	000 263 0735	ZF 44	73	1297 303 086	T 19971	-----	ZF 44	30
1296 333 022	T 09061	000 263 0234	ZF 44	72	1297 303 097	T 19759	000 263 8010	ZF 44	31
1296 333 023	T 09062	000 263 0523	ZF 44	77	1297 303 098	T 19952	001 263 0510	ZF 44	30
1296 333 045	T 15084	000 263 0534	ZF 44	72	1297 303 123	T 19526	-----	ZF 44	31
1296 334 004	T 17892	000 265 0649	ZF 44	91	1297 303 132	T 19975	-----	ZF 44	32
1297 202 003	-----	-----	ZF 44	4	1297 303 140	T 18339	000 263 5002	ZF 44	33
1297 202 004	-----	-----	ZF 44	4	1297 304 031	T 08892	000 262 3935	ZF 44	15
1297 202 005	-----	-----	ZF 44	4	1297 304 034	T 09755	000 262 2350	ZF 44	27
1297 202 008	-----	-----	ZF 44	4	1297 304 035	T 09757	000 262 2450	ZF 44	24
1297 202 009	-----	-----	ZF 44	4	1297 304 148	-----	000 262 5311	ZF 44	28
1297 202 011	-----	-----	ZF 44	4	1297 304 149	-----	000 262 8611	ZF 44	28
1297 202 014	-----	-----	ZF 44	4	1297 304 154	T 19368	000 262 1640	ZF 44	26
1297 202 030	T 09791	001 262 0302	ZF 44	4	1297 304 181	T 18353	000 262 2705	ZF 44	18
1297 202 044	-----	001 262 3002	ZF 44	5	1297 304 187	T 15383	000 262 0309	ZF 44	29
1297 202 045	-----	-----	ZF 44	4	1297 304 193	-----	000 262 4405	ZF 44	18
1297 202 046	-----	-----	ZF 44	4	1297 304 195	T 08895	000 262 4435	ZF 44	22
1297 202 047	-----	-----	ZF 44	4	1297 304 196	T 09054	000 262 2140	ZF 44	20
1297 202 048	-----	-----	ZF 44	4	1297 304 260	T 15019	000 262 4414	ZF 44	12
1297 202 049	-----	-----	ZF 44	4	1297 304 261	T 18328	000 262 6913	ZF 44	17
1297 202 051	-----	-----	ZF 44	4	1297 304 266	T 15727	000 262 6213	ZF 44	17
1297 202 052	-----	-----	ZF 44	4	1297 304 267	T 15016	000 262 4214	ZF 44	12

127

ZF 44
4-510

KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
42	T 16154	1295 298 936	-----	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT		16 S 160	ZF 44
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	2	16 S 160	ZF 44
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	2	16 S 160	ZF 44
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 160	ZF 44
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 160	ZF 44
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 160	ZF 44
11	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 160	ZF 44
43	T 16161	1297 204 059	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 160	ZF 44
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 160	ZF 44
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 160	ZF 44
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 160	ZF 44
14	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	2	16 S 160	ZF 44
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	1	16 S 160	ZF 44
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 160	ZF 44
43	T 18620	1297 298 958	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 160	ZF 44
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 160	ZF 44
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 160	ZF 44
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 160	ZF 44
13	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	2	16 S 160	ZF 44
14	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	2	16 S 160	ZF 44
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	1	16 S 160	ZF 44
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 160	ZF 44
44	T 16160	1297 204 019	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 160	ZF 44
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 160	ZF 44
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 160	ZF 44
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 160	ZF 44
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	2	16 S 160	ZF 44
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	1	16 S 160	ZF 44
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 160	ZF 44
44	T 18619	1297 298 956	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 160	ZF 44
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 160	ZF 44
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 160	ZF 44
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 160	ZF 44
20	T 09054	1297 304 196	000 262 2140	SYNCHRONIZER CONE (63 T.)	2	16 S 160	ZF 44
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	2	16 S 160	ZF 44
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	1	16 S 160	ZF 44
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 160	ZF 44
81	T 16157	1295 298 939	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 160	ZF 44
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 160	ZF 44
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 160	ZF 44
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	6	16 S 160	ZF 44
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	6	16 S 160	ZF 44
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	6	16 S 160	ZF 44
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 160	ZF 44
78	T 14809	1313 233 001	000 263 2020	SYNCHRONIZER CONE (63 T.)	1	16 S 160	ZF 44



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16K190


131

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.


Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 46
4-510

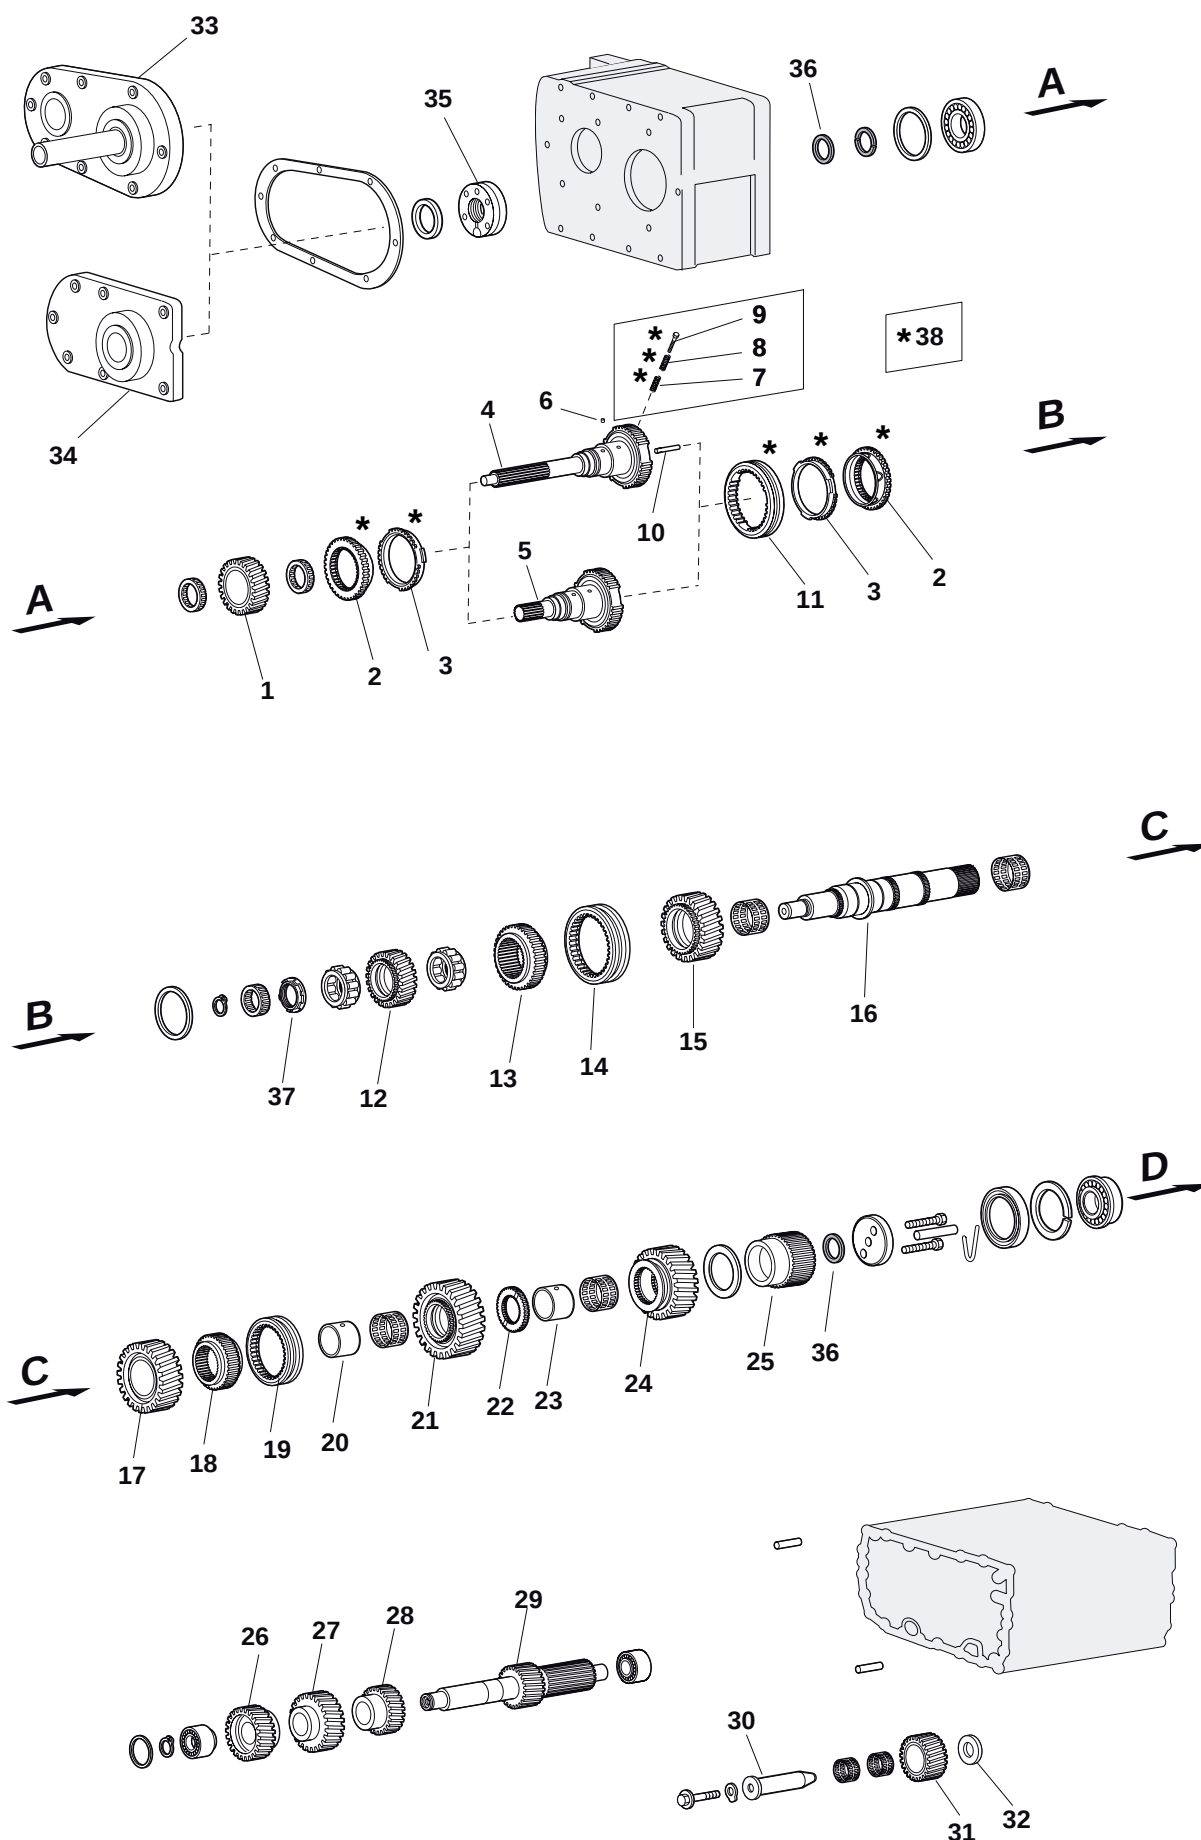


133



ZF 46
4-510

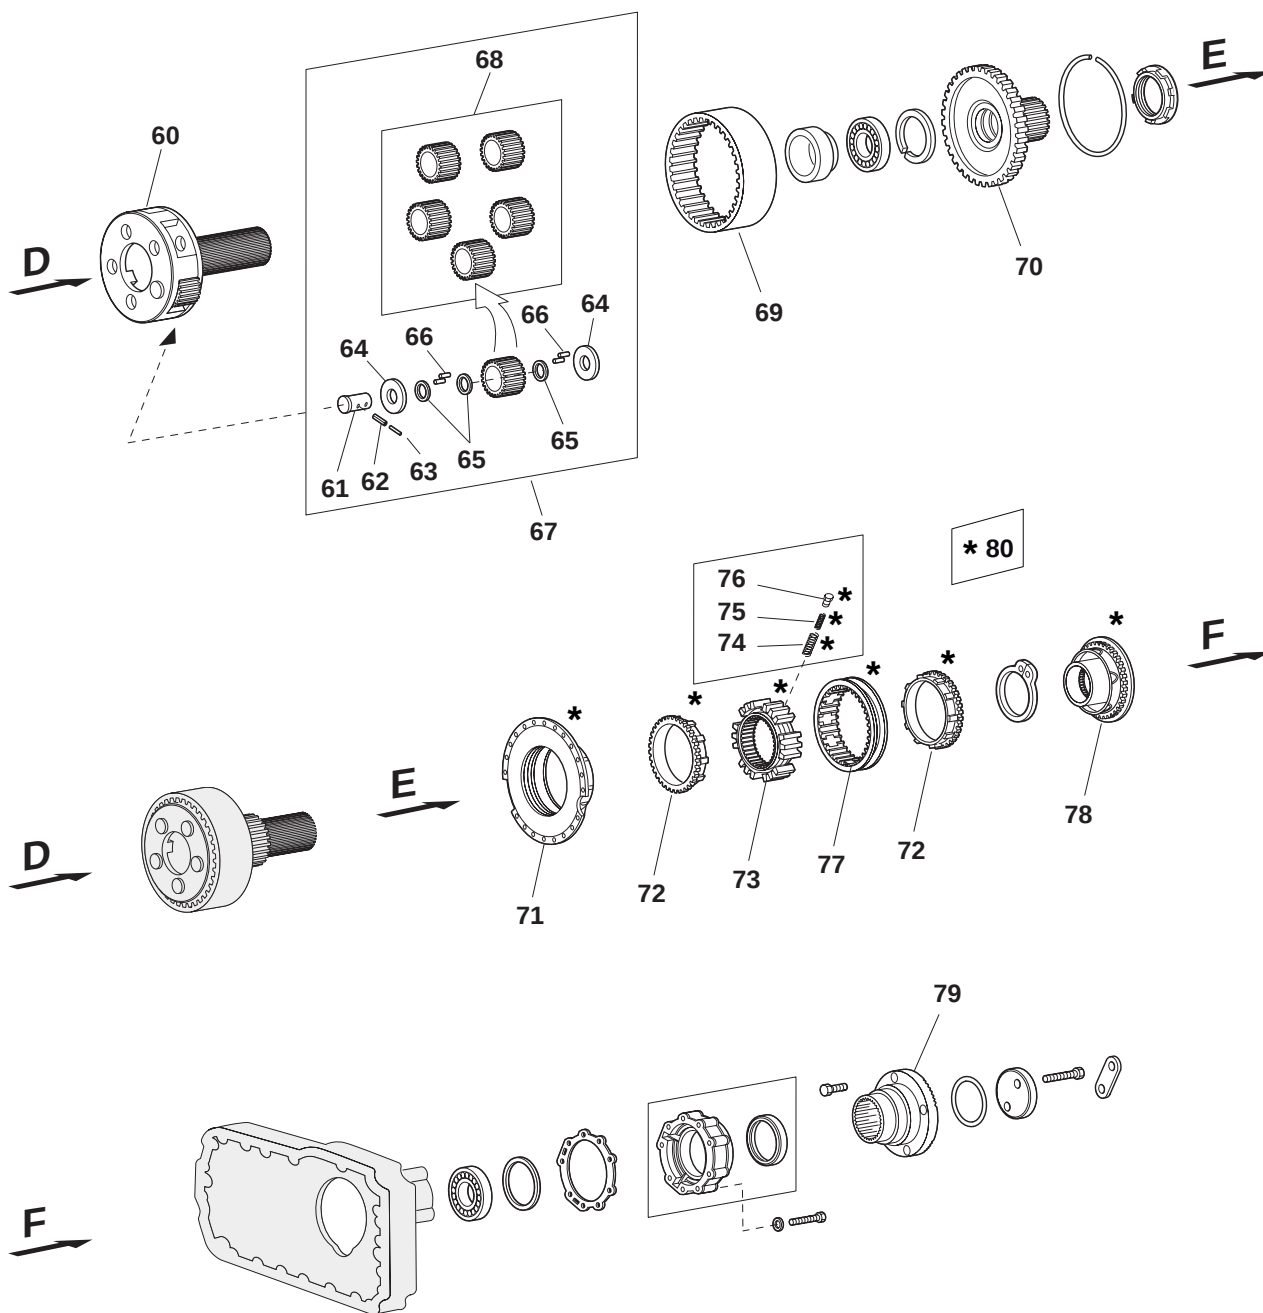

GV

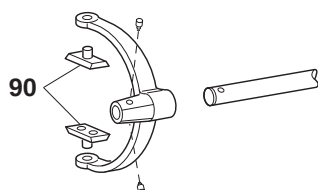

GP

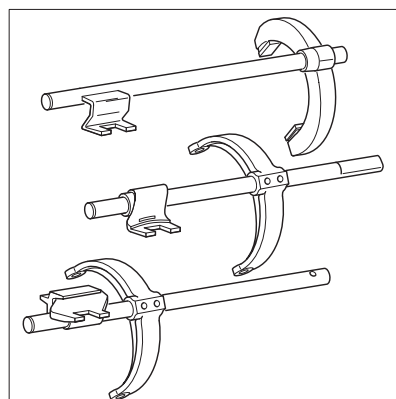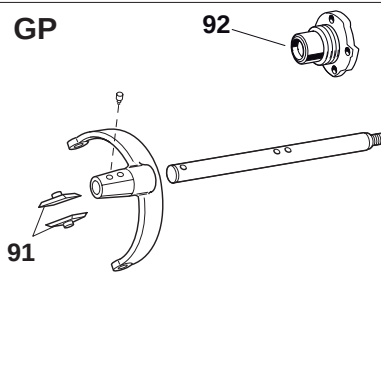

135

ZF 46
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 306 212	T 15745	000 263 0562	ZF 46	64	1297 304 119	T 09777	000 262 4923	ZF 46	19
0630 531 055	T 19907	003 994 3841	ZF 46	----	1297 304 120	T 09779	000 262 5023	ZF 46	14
0631 329 017	T 15771	001481 003028	ZF 46	63	1297 304 148	----	000 262 5311	ZF 46	24
0631 329 050	T 15775	001481 005036	ZF 46	62	1297 304 149	----	000 262 8611	ZF 46	24
0635 331 390	T 19914	004 981 8625	ZF 46	----	1297 304 154	T 19368	000 262 1640	ZF 46	22
0635 470 012	----	005402 007200	ZF 46	6	1297 304 179	T 19074	000 262 3605	ZF 46	16
0730 061 816	T 15289	000 262 0673	ZF 46	36	1297 304 187	T 15383	000 262 0309	ZF 46	25
0730 062 323	----	000 261 0766	ZF 46	10	1297 304 188	T 16595	000 262 2227	ZF 46	13
0730 103 846	T 08939	003 264 2052	ZF 46	65	1297 304 264	----	----	ZF 46	16
0730 150 064	T 14283	343 263 0062	ZF 46	32	1297 304 265	----	----	ZF 46	25
0732 040 385	T 08950	336 264 0693	ZF 46	7	1297 304 271	----	000 262 5412	ZF 46	17
0732 040 385	T 08950	336 264 0693	ZF 46	74	1297 304 272	----	000 262 8311	ZF 46	21
0732 040 386	T 08951	336 264 0793	ZF 46	8	1297 304 273	----	000 262 6113	ZF 46	15
0732 040 386	T 08951	336 264 0793	ZF 46	75	1297 304 274	----	000 262 4114	ZF 46	12
0732 040 736	T 09068	002 993 7501	ZF 46	----	1297 304 277	----	----	ZF 46	21
0737 502 092	T 15366	000 990 2360	ZF 46	37	1297 304 278	----	----	ZF 46	17
0750 119 109	T 15760	001 981 5487	ZF 46	66	1297 304 279	----	----	ZF 46	15
1240 304 278	T 08949	336 264 0239	ZF 46	9	1297 304 308	----	----	ZF 46	12
1240 304 278	T 08949	336 264 0239	ZF 46	76	1297 304 380	----	----	ZF 46	12
1240 317 075	T 08917	000 264 1423	ZF 46	----	1297 332 017	T 20043	000 263 0125	ZF 46	70
1295 142 011	T 19902	000 260 4605	ZF 46	----	1297 332 035	----	000 263 0425	ZF 46	70
1295 202 041	T 09751	000 260 1290	ZF 46	35	1297 332 080	----	000 263 6310	ZF 46	69
1295 202 057	----	----	ZF 46	35	1297 332 109	T 15739	000 263 0374	ZF 46	61
1295 298 936	T 16154	----	ZF 46	38	1297 338 008	----	000 264 4945	ZF 46	79
1295 298 939	T 16157	----	ZF 46	80	1297 338 009	----	----	ZF 46	79
1295 298 950	T 16159	----	ZF 46	80	1297 338 010	----	000 262 2845	ZF 46	79
1295 302 099	----	----	ZF 46	34	1297 338 038	T 14812	000 264 4145	ZF 46	79
1295 304 002	T 09056	000 262 3623	ZF 46	11	1304 304 686	T 15151	000 262 9934	ZF 46	3
1295 304 004	T 08795	000 262 2034	ZF 46	3	1313 233 001	T 14809	000 263 2020	ZF 46	78
1295 304 235	T 09753	000 262 2127	ZF 46	18					
1295 304 278	T 08871	000 262 1940	ZF 46	2					
1295 305 051	----	000 263 0232	ZF 46	31					
1295 305 052	----	000 263 0032	ZF 46	31					
1295 305 056	T 11447	000 263 1430	ZF 46	30					
1295 306 132	T 08933	000 268 0849	ZF 46	90					
1295 307 243	T 19116	000 267 0474	ZF 46	----					
1295 307 275	T 18886	000 267 0803	ZF 46	----					
1295 307 479	T 18869	000 267 2622	ZF 46	----					
1295 332 086	----	001 263 2110	ZF 46	69					
1295 338 083	T 19927	000 264 5150	ZF 46	----					
1296 213 028	T 11462	000 264 4206	ZF 46	----					
1296 233 006	T 08908	000 263 1720	ZF 46	71					
1296 312 042	T 16712	000 267 0519	ZF 46	92					
1296 333 002	T 08899	000 263 0735	ZF 46	73					
1296 333 022	T 09061	000 263 0234	ZF 46	72					
1296 333 023	T 09062	000 263 0523	ZF 46	77					
1296 333 045	T 15084	000 263 0534	ZF 46	72					
1296 334 004	T 17892	000 265 0649	ZF 46	91					
1297 202 044	----	001 262 3002	ZF 46	5					
1297 202 047	----	----	ZF 46	4					
1297 202 053	T 15053	001 262 2802	ZF 46	4					
1297 203 005	T 19936	000 264 4218	ZF 46	----					
1297 232 023	T 10131	000 260 1597	ZF 46	68					
1297 232 024	----	----	ZF 46	68					
1297 232 039	T 19961	000 260 3561	ZF 46	60					
1297 232 045	----	000 260 4061	ZF 46	60					
1297 298 912	T 15659	000 262 0406	ZF 46	67					
1297 298 919	----	000 262 2297	ZF 46	67					
1297 302 053	----	000 262 4329	ZF 46	33					
1297 302 081	----	----	ZF 46	33					
1297 302 176	T 09773	000 262 4510	ZF 46	1					
1297 302 177	T 11774	000 262 4610	ZF 46	1					
1297 302 185	----	----	ZF 46	34					
1297 302 250	----	000 262 5810	ZF 46	1					
1297 303 065	T 15026	000 263 6510	ZF 46	27					
1297 303 066	T 15033	000 263 6610	ZF 46	26					
1297 303 072	T 15047	000 263 7010	ZF 46	27					
1297 303 074	T 15040	000 263 6910	ZF 46	26					
1297 303 076	----	000 263 4402	ZF 46	29					
1297 303 077	T 19288	000 263 6710	ZF 46	28					
1297 303 080	----	----	ZF 46	29					
1297 303 081	----	----	ZF 46	28					
1297 303 098	T 19952	001 263 0510	ZF 46	26					
1297 303 114	----	----	ZF 46	27					
1297 304 034	T 09755	000 262 2350	ZF 46	23					
1297 304 055	T 09765	000 262 3050	ZF 46	20					

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
-----	-----	----	----------	-------------	------	-------	-------

42	T 16154	1295 298 936	-----	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT		16 K 190	ZF 46
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	2	16 K 190	ZF 46
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	2	16 K 190	ZF 46
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 K 190	ZF 46
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 K 190	ZF 46
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 K 190	ZF 46
11	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 K 190	ZF 46

80	T 16157	1295 298 939	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 K 190	ZF 46
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 K 190	ZF 46
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 K 190	ZF 46
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	6	16 K 190	ZF 46
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	6	16 K 190	ZF 46
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	6	16 K 190	ZF 46
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 K 190	ZF 46
78	T 14809	1313 233 001	000 263 2020	SYNCHRONIZER CONE (63 T.)	1	16 K 190	ZF 46

80	T 16159	1295 298 950	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 K 190	ZF 46
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 K 190	ZF 46
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 K 190	ZF 46
73	T 08899	1296 333 002	000 263 0735	SYNCHRONIZER HUB	1	16 K 190	ZF 46
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	9	16 K 190	ZF 46
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	9	16 K 190	ZF 46
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	9	16 K 190	ZF 46
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 K 190	ZF 46
78	T 14809	1313 233 001	000 263 2020	SYNCHRONIZER CONE (63 T.)	1	16 K 190	ZF 46

67	T 15659	1297 298 912	000 262 0406	GEAR REPAIR KIT (26 T.)		16 K 190	ZF 46
62	T 15775	0631 329 050	001481 005036	GEAR SHAFT ELASTIC PIN	5	16 K 190	ZF 46
63	T 15771	0631 329 017	001481 003028	GEAR SHAFT ELASTIC PIN	5	16 K 190	ZF 46
64	T 15745	0501 306 212	000 263 0562	GEAR THRUST WASHER	10	16 K 190	ZF 46
65	T 08939	0730 103 846	003 264 2052	GEAR SPACER RING	15	16 K 190	ZF 46
66	T 15760	0750 119 109	001 981 5487	GEAR NEEDLE ROLLER	120	16 K 190	ZF 46
68	T 10131	1297 232 023	000 260 1597	GEAR SET (26 T.) (5 PCS.)	1	16 K 190	ZF 46



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16S190


139

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 47
4-510

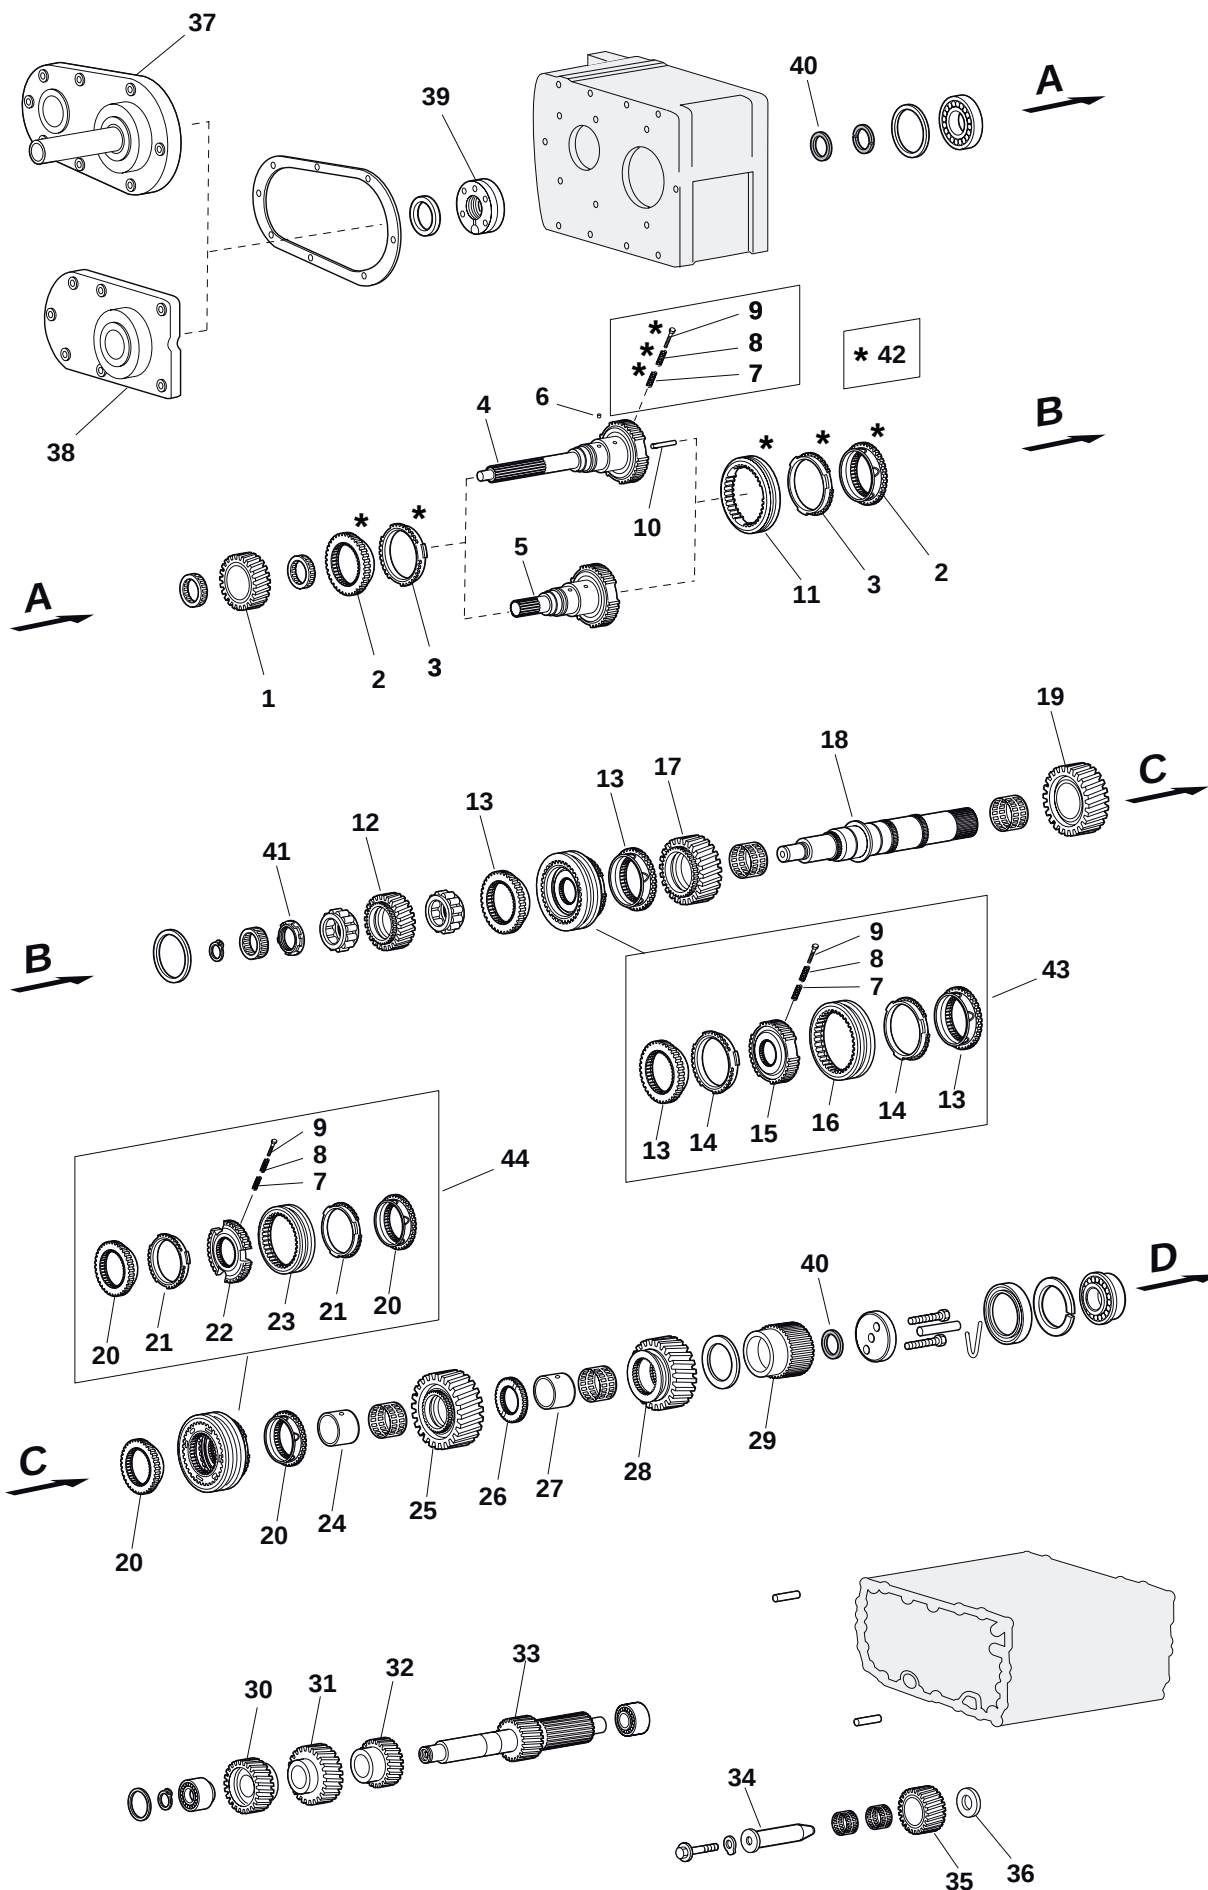

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	T 09773	1297 302 176	000 262 4510	CONSTANT GEAR (28-58 T.)	
1	T 11774	1297 302 177	000 262 4610	CONSTANT GEAR (30-58 T.)	
1	T 19521	1297 302 241	-----	CONSTANT GEAR (26-58 T.)	
1	-----	1297 302 250	000 262 5810	CONSTANT GEAR (29 T.)	
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	1
3	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	1
4	-----	1297 202 003	-----	MAIN DRIVE GEAR	A
4	-----	1297 202 004	-----	MAIN DRIVE GEAR	B
4	-----	1297 202 008	-----	MAIN DRIVE GEAR	C
4	-----	1297 202 009	-----	MAIN DRIVE GEAR	D
4	-----	1297 202 011	-----	MAIN DRIVE GEAR	E
4	-----	1297 202 045	-----	MAIN DRIVE GEAR	F
4	-----	1297 202 049	-----	MAIN DRIVE GEAR	G
4	T 15053	1297 202 053	001 262 2802	MAIN DRIVE GEAR (57 T.)	H
4	-----	1297 202 054	-----	MAIN DRIVE GEAR (57 T.)	I
4	-----	1297 202 061	001 262 3202	MAIN DRIVE GEAR	
4	-----	1297 202 063	-----	MAIN DRIVE GEAR	J
4	-----	1297 202 069	-----	MAIN DRIVE GEAR	K
4	-----	1297 221 009	-----	MAIN DRIVE GEAR	L
5	-----	1297 202 044	001 262 3002	MAIN DRIVE GEAR	
6	-----	0635 470 012	005402 007200	SYNCHRONIZER CYLINDER ROLLER	
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	1-3-4-7-8
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	2-5-6-9
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	1-3-4-7-8
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	1-3-4-7-8
9	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	2-5-6-9
10	-----	0730 062 323	000 261 0766	MAIN DRIVE GEAR TUBE	
11	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
12	T 15019	1297 304 260	000 262 4414	FOURTH SPEED GEAR (58-30-58 T.)	
12	T 15016	1297 304 267	000 262 4214	FOURTH SPEED GEAR (58-28-58 T.)	
12	T 19483	1297 304 318	000 262 6014	FOURTH SPEED GEAR (58-26-58 T.)	
12	T 19530	1297 304 413	-----	FOURTH SPEED GEAR (58-29-58 T.)	
13	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	4
13	T 16723	1297 304 369	-----	SYNCHRONIZER CONE (57 T.)	5
14	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	3
14	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2-5-6
14	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	4
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	3-4
15	-----	1297 304 446	-----	SYNCHRONIZER HUB	2-5-6
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	3-4
16	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	2-5-6
17	T 18328	1297 304 261	000 262 6913	THIRD SPEED GEAR (34-58 T.)	
17	T 15727	1297 304 266	000 262 6213	THIRD SPEED GEAR (32-58 T.)	
17	T 19980	1297 304 414	-----	THIRD SPEED GEAR (34-58 T.)	
18	T 18353	1297 304 181	000 262 2705	MAINSHAFT	
18	-----	1297 304 193	000 262 4405	MAINSHAFT	
19	T 15724	1297 304 269	000 262 5612	SECOND SPEED GEAR (37-58 T.)	
19	T 18313	1297 304 442	000 262 6512	SECOND SPEED GEAR (38-58 T.)	
20	T 09054	1297 304 196	000 262 2140	SYNCHRONIZER CONE (63 T.)	8
20	T 16726	1297 304 371	-----	SYNCHRONIZER CONE (63 T.)	9
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	7-8
21	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	9
21	T 18028	1297 304 485	-----	SYNCHRONIZER BLOCKING RING	6
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	7-8
22	-----	1297 304 445	-----	SYNCHRONIZER HUB	6-9
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	7-8
23	-----	1297 304 450	-----	SYNCHRONIZER SLIDING COLLAR	6-9
24	T 09757	1297 304 035	000 262 2450	FIRST SPEED GEAR SLEEVE	
25	T 15736	1297 304 270	000 262 8511	FIRST SPEED GEAR (44-58 T.)	
25	T 18889	1297 304 441	000 262 9211	FIRST SPEED GEAR (47-58 T.)	
26	T 19368	1297 304 154	000 262 1640	FIRST SPEED AND REVERSE GEAR CONE (24 T.)	
27	T 09755	1297 304 034	000 262 2350	REVERSE GEAR SLEEVE	
28	-----	1297 304 148	000 262 5311	REVERSE GEAR (38 T.)	
28	-----	1297 304 149	000 262 8611	REVERSE GEAR (39 T.)	
29	T 15383	1297 304 187	000 262 0309	PLANETARY REDUCTION SUN GEAR (27 T.)	
29	-----	1297 304 439	000 262 0909	PLANETARY REDUCTION SUN GEAR (24 T.)	
30	T 15033	1297 303 066	000 263 6610	COUNTERSHAFT CONSTANT GEAR (34 T.)	
30	T 15040	1297 303 074	000 263 6910	COUNTERSHAFT CONSTANT GEAR (31 T.)	
30	T 19971	1297 303 086	-----	COUNTERSHAFT CONSTANT GEAR (35 T.)	
30	T 19952	1297 303 098	000 263 0510	COUNTERSHAFT CONSTANT GEAR (32 T.)	
31	T 15026	1297 303 065	000 263 6510	COUNTERSHAFT FOURTH SPEED GEAR (31 T.)	

141

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme

Items with same letter or number must be coupled together.


(*) Per la composizione dei kit vedi pagina 148

(*) For the composition of the kits please see page 148.

.

16 S 190

ZF 47
4-510

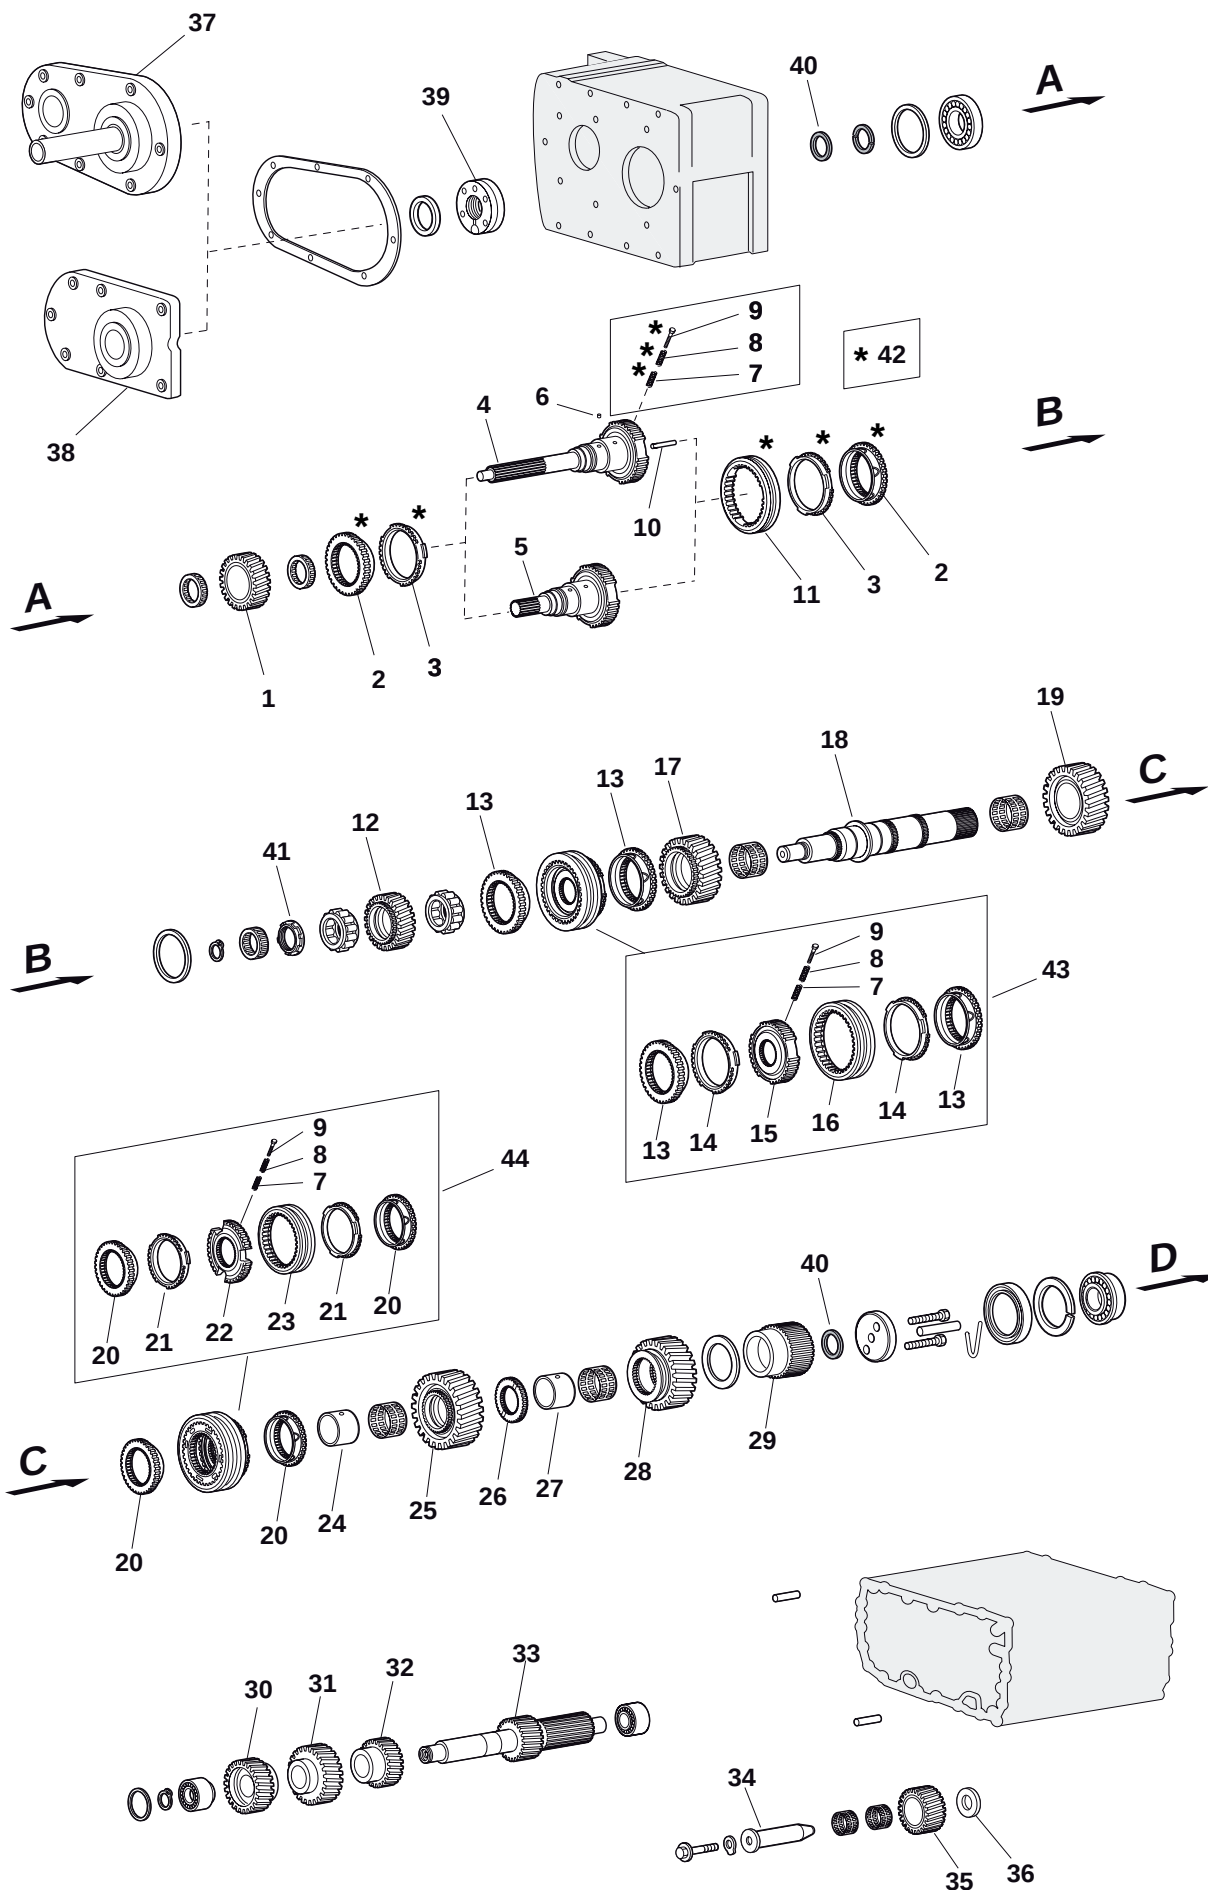

143

Articoli con la stessa lettera o numero vanno accoppiati assieme





Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 148

(*) For the composition of the kits please see page 148.

.

ZF 47
4-510

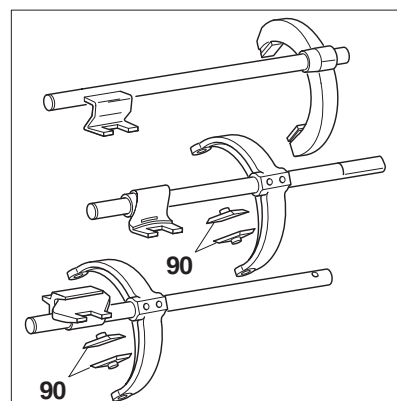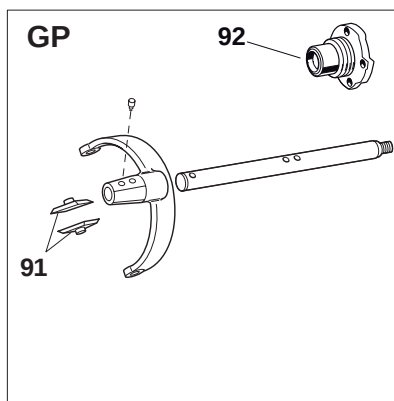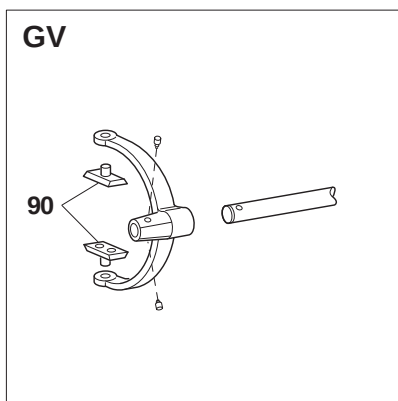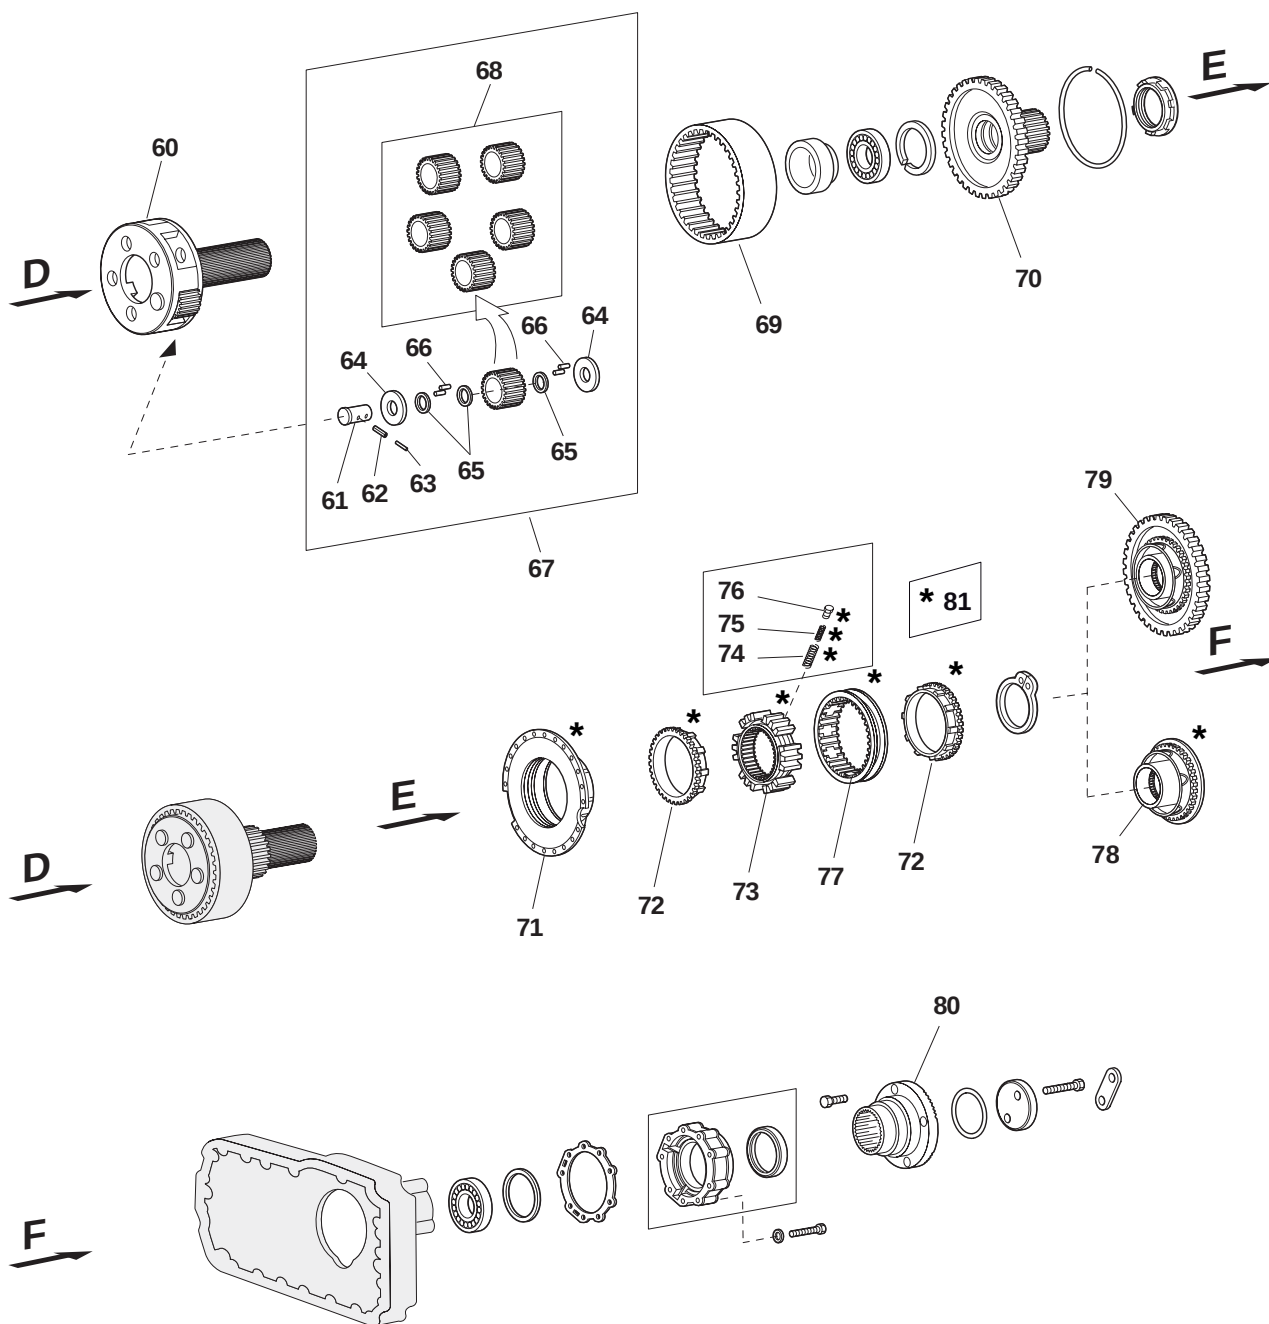

145

ZF 47
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 306 212	T 15745	000 263 0562	ZF 47	64	1297 202 061	-----	001 262 3202	ZF 47	4
0501 308 981	-----	000 263 0762	ZF 47	64	1297 202 063	-----	-----	ZF 47	4
0630 531 055	T 19907	003 994 3841	ZF 47	-----	1297 202 069	-----	-----	ZF 47	4
0631 329 017	T 15771	001481 003028	ZF 47	63	1297 203 005	T 19936	000 264 4218	ZF 47	-----
0631 329 050	T 15775	001481 005036	ZF 47	62	1297 204 019	T 16160	-----	ZF 47	44
0631 329 051	-----	-----	ZF 47	62	1297 204 053	-----	-----	ZF 47	44
0631 329 167	-----	-----	ZF 47	63	1297 204 054	-----	-----	ZF 47	43
0635 331 390	T 19914	004 981 8625	ZF 47	-----	1297 204 059	T 16161	-----	ZF 47	43
0635 470 012	-----	005402 007200	ZF 47	6	1297 221 009	-----	-----	ZF 47	4
0730 061 816	T 15289	000 262 0673	ZF 47	40	1297 232 023	T 10131	000 260 1597	ZF 47	68
0730 062 323	-----	000 261 0766	ZF 47	10	1297 232 024	-----	-----	ZF 47	68
0730 103 846	T 08939	003 264 2052	ZF 47	65	1297 232 039	T 19961	000 260 3561	ZF 47	60
0730 107 168	-----	000 264 0947	ZF 47	65	1297 232 045	-----	000 260 4061	ZF 47	60
0730 150 064	T 14283	343 263 0062	ZF 47	36	1297 233 056	T 15934	000 263 2220	ZF 47	78
0730 260 330	T 16568	000 268 2150	ZF 47	-----	1297 298 912	T 15659	000 262 0406	ZF 47	67
0732 040 385	T 08950	336 264 0693	ZF 47	7	1297 298 919	-----	000 260 2297	ZF 47	67
0732 040 385	T 08950	336 264 0693	ZF 47	74	1297 298 956	T 18619	-----	ZF 47	44
0732 040 386	T 08951	336 264 0793	ZF 47	8	1297 298 957	-----	-----	ZF 47	44
0732 040 386	T 08951	336 264 0793	ZF 47	75	1297 298 958	T 18620	-----	ZF 47	43
0732 040 409	T 13440	005 993 6101	ZF 47	7	1297 298 959	-----	-----	ZF 47	43
0732 040 736	T 09068	002 993 7501	ZF 47	-----	1297 302 013	-----	-----	ZF 47	37
0737 502 092	T 15366	000 990 2360	ZF 47	41	1297 302 015	-----	-----	ZF 47	37
0750 119 109	T 15760	001 981 5487	ZF 47	66	1297 302 025	-----	-----	ZF 47	37
0750 119 116	-----	000 981 4686	ZF 47	66	1297 302 042	T 15569	000 262 3429	ZF 47	37
1240 304 278	T 08949	336 264 0239	ZF 47	9	1297 302 043	-----	-----	ZF 47	37
1240 304 278	T 08949	336 264 0239	ZF 47	76	1297 302 082	-----	-----	ZF 47	37
1240 317 075	T 08917	000 264 1423	ZF 47	-----	1297 302 176	T 09773	000 262 4510	ZF 47	1
1246 304 278	T 08874	000 262 2434	ZF 47	21	1297 302 177	T 11774	000 262 4610	ZF 47	1
1257 304 020	T 08946	336 262 0023	ZF 47	23	1297 302 235	-----	-----	ZF 47	37
1295 142 011	T 19902	000 260 4605	ZF 47	-----	1297 302 239	-----	-----	ZF 47	37
1295 202 041	T 09751	000 260 1290	ZF 47	39	1297 302 241	T 19521	-----	ZF 47	1
1295 202 057	-----	-----	ZF 47	39	1297 302 250	-----	000 262 5810	ZF 47	1
1295 298 915	T 20194	-----	ZF 47	-----	1297 302 268	-----	-----	ZF 47	37
1295 298 936	T 16154	-----	ZF 47	42	1297 302 272	-----	-----	ZF 47	37
1295 298 939	T 16157	-----	ZF 47	81	1297 303 065	T 15026	000 263 6510	ZF 47	31
1295 298 950	T 16159	-----	ZF 47	81	1297 303 066	T 15033	000 263 6610	ZF 47	30
1295 298 960	T 20200	-----	ZF 47	-----	1297 303 067	T 09789	000 263 7410	ZF 47	32
1295 298 962	T 16168	-----	ZF 47	81	1297 303 072	T 15047	000 263 7010	ZF 47	31
1295 302 100	-----	000 262 4529	ZF 47	38	1297 303 073	T 15755	000 263 6810	ZF 47	32
1295 304 002	T 09056	000 262 3623	ZF 47	11	1297 303 074	T 15040	000 263 6910	ZF 47	30
1295 304 002	T 09056	000 262 3623	ZF 47	16	1297 303 075	T 15751	000 263 4502	ZF 47	33
1295 304 004	T 08795	000 262 2034	ZF 47	3	1297 303 086	T 19971	-----	ZF 47	30
1295 304 004	T 08795	000 262 2034	ZF 47	14	1297 303 097	T 19759	000 263 8010	ZF 47	31
1295 304 278	T 08871	000 262 1940	ZF 47	2	1297 303 098	T 19952	000 263 0510	ZF 47	30
1295 304 278	T 08871	000 262 1940	ZF 47	13	1297 303 123	T 19526	-----	ZF 47	31
1295 305 051	-----	000 263 0232	ZF 47	35	1297 303 132	T 19975	-----	ZF 47	32
1295 305 052	-----	000 263 0032	ZF 47	35	1297 303 140	T 18339	000 263 5002	ZF 47	33
1295 305 056	T 11447	000 263 1430	ZF 47	34	1297 304 031	T 08892	000 262 3935	ZF 47	15
1295 306 132	T 08933	000 268 0849	ZF 47	90	1297 304 034	T 09755	000 262 2350	ZF 47	27
1295 307 158	T 19945	000 267 0046	ZF 47	-----	1297 304 035	T 09757	000 262 2450	ZF 47	24
1295 307 243	T 19116	000 267 0474	ZF 47	-----	1297 304 148	-----	000 262 5311	ZF 47	28
1295 307 274	T 18581	000 267 0503	ZF 47	-----	1297 304 149	-----	000 262 8611	ZF 47	28
1295 307 275	T 18886	000 267 0803	ZF 47	-----	1297 304 154	T 19368	000 262 1640	ZF 47	26
1295 307 294	T 19124	000 267 0820	ZF 47	-----	1297 304 181	T 18353	000 262 2705	ZF 47	18
1295 307 330	T 19994	000 267 1303	ZF 47	-----	1297 304 187	T 15383	000 262 0309	ZF 47	29
1295 307 479	T 18869	000 267 2622	ZF 47	-----	1297 304 193	-----	000 262 4405	ZF 47	18
1295 332 086	-----	001 263 2110	ZF 47	69	1297 304 195	T 08895	000 262 4435	ZF 47	22
1295 338 083	T 19927	000 264 5150	ZF 47	-----	1297 304 196	T 09054	000 262 2140	ZF 47	20
1296 213 028	T 11462	000 264 4206	ZF 47	-----	1297 304 260	T 15019	000 262 4414	ZF 47	12
1296 233 006	T 08908	000 263 1720	ZF 47	71	1297 304 261	T 18328	000 262 6913	ZF 47	17
1296 312 042	T 16712	000 267 0519	ZF 47	92	1297 304 266	T 15727	000 262 6213	ZF 47	17
1296 333 002	T 08899	000 263 0735	ZF 47	73	1297 304 267	T 15016	000 262 4214	ZF 47	12
1296 333 022	T 09061	000 263 0234	ZF 47	72	1297 304 269	T 15724	000 262 5612	ZF 47	19
1296 333 023	T 09062	000 263 0523	ZF 47	77	1297 304 270	T 15736	000 262 8511	ZF 47	25
1296 333 045	T 15084	000 263 0534	ZF 47	72	1297 304 318	T 19483	000 262 6014	ZF 47	12
1296 334 004	T 17892	000 265 0649	ZF 47	91	1297 304 369	T 16723	-----	ZF 47	13
1297 202 003	-----	-----	ZF 47	4	1297 304 371	T 16726	-----	ZF 47	20
1297 202 004	-----	-----	ZF 47	4	1297 304 401	T 17880	000 262 4934	ZF 47	21
1297 202 008	-----	-----	ZF 47	4	1297 304 413	T 19530	-----	ZF 47	12
1297 202 009	-----	-----	ZF 47	4	1297 304 414	T 19980	-----	ZF 47	17
1297 202 011	-----	-----	ZF 47	4	1297 304 436	T 15096	000 264 0839	ZF 47	9
1297 202 044	-----	001 262 3002	ZF 47	5	1297 304 439	-----	000 262 0909	ZF 47	29
1297 202 045	-----	-----	ZF 47	4	1297 304 441	T 18889	000 262 9211	ZF 47	25
1297 202 049	-----	-----	ZF 47	4	1297 304 442	T 18313	000 262 6512	ZF 47	19
1297 202 053	T 15053	001 262 2802	ZF 47	4	1297 304 445	-----	-----	ZF 47	22
1297 202 054	-----	-----	ZF 47	4	1297 304 446	-----	-----	ZF 47	15

147

ZF 47
4-510

KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
42	T 16154	1295 298 936	-----	FIFTH AND SIXTH SPEED SYNCHRONIZER REPAIR KIT		16 S 190	ZF 47
2	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	2	16 S 190	ZF 47
3	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 190	ZF 47
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 190	ZF 47
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 190	ZF 47
11	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 190	ZF 47
43	-----	1297 204 054	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 190	ZF 47
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 190	ZF 47
9	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 190	ZF 47
14	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
15	-----	1297 304 446	-----	SYNCHRONIZER HUB	1	16 S 190	ZF 47
16	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 190	ZF 47
43	T 16161	1297 204 059	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 190	ZF 47
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 190	ZF 47
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 190	ZF 47
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 190	ZF 47
14	T 08795	1295 304 004	000 262 2034	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	1	16 S 190	ZF 47
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 190	ZF 47
43	T 18620	1297 298 958	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 190	ZF 47
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 190	ZF 47
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 190	ZF 47
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 190	ZF 47
13	T 08871	1295 304 278	000 262 1940	SYNCHRONIZER CONE (57 T.)	2	16 S 190	ZF 47
14	T 15151	1304 304 686	000 262 9934	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
15	T 08892	1297 304 031	000 262 3935	SYNCHRONIZER HUB	1	16 S 190	ZF 47
16	T 09056	1295 304 002	000 262 3623	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 190	ZF 47
43	-----	1297 298 959	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 190	ZF 47
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 190	ZF 47
9	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 190	ZF 47
13	T 16723	1297 304 369	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 190	ZF 47
14	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
15	-----	1297 304 446	-----	SYNCHRONIZER HUB	1	16 S 190	ZF 47
16	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 190	ZF 47
44	-----	1297 204 053	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 190	ZF 47
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 190	ZF 47
9	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 190	ZF 47
21	T 18028	1297 304 485	-----	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
22	-----	1297 304 445	-----	SYNCHRONIZER HUB	1	16 S 190	ZF 47
23	-----	1297 304 450	-----	SYNCHRONIZER SLIDING COLLAR	1	16 S 190	ZF 47
44	T 16160	1297 204 019	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 190	ZF 47
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 190	ZF 47
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 190	ZF 47
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 190	ZF 47
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	1	16 S 190	ZF 47
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 190	ZF 47

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
44	T 18619	1297 298 956	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 190	ZF 47	
7	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	3	16 S 190	ZF 47
8	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	3	16 S 190	ZF 47
9	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 190	ZF 47
20	T 09054	1297 304 196	000 262 2140	SYNCHRONIZER CONE (63 T.)	2	16 S 190	ZF 47
21	T 08874	1246 304 278	000 262 2434	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
22	T 08895	1297 304 195	000 262 4435	SYNCHRONIZER HUB	1	16 S 190	ZF 47
23	T 08946	1257 304 020	336 262 0023	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 190	ZF 47
44	T 18619	1297 298 957	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	16 S 190	ZF 47	
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 190	ZF 47
9	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 190	ZF 47
20	T 16726	1297 304 371	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 190	ZF 47
21	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
22	-----	1297 304 445	-----	SYNCHRONIZER HUB	1	16 S 190	ZF 47
23	-----	1297 304 450	-----	SYNCHRONIZER SLIDING COLLAR	1	16 S 190	ZF 47
81	T 16157	1295 298 939	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 190	ZF 47	
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 190	ZF 47
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	6	16 S 190	ZF 47
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	6	16 S 190	ZF 47
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	6	16 S 190	ZF 47
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 190	ZF 47
78	T 14809	1313 233 001	000 263 2020	SYNCHRONIZER CONE (63 T.)	1	16 S 190	ZF 47
81	T 16159	1295 298 950	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 190	ZF 47	
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 190	ZF 47
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
73	T 08899	1296 333 002	000 263 0735	SYNCHRONIZER HUB	1	16 S 190	ZF 47
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	9	16 S 190	ZF 47
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	9	16 S 190	ZF 47
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	9	16 S 190	ZF 47
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 190	ZF 47
78	T 14809	1313 233 001	000 263 2020	SYNCHRONIZER CONE (63 T.)	1	16 S 190	ZF 47
81	T 16168	1295 298 962	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT	16 S 190	ZF 47	
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 190	ZF 47
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 190	ZF 47
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	9	16 S 190	ZF 47
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	9	16 S 190	ZF 47
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	9	16 S 190	ZF 47
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 190	ZF 47
78	T 15934	1297 233 056	000 263 2220	SYNCHRONIZER CONE (63 T.)	1	16 S 190	ZF 47
67	T 15659	1297 298 912	000 262 0406	PLANETARY GEAR REPAIR KIT (26 T.)	16 S 190	ZF 47	
61	T 15739	1297 332 109	000 263 0374	GEAR SHAFT	5	16 S 190	ZF 47
62	T 15775	0631 329 050	001481 005036	GEAR SHAFT ELASTIC PIN	5	16 S 190	ZF 47
63	T 15771	0631 329 017	001481 003028	GEAR SHAFT ELASTIC PIN	5	16 S 190	ZF 47
64	T 15745	0501 306 212	000 263 0562	GEAR THRUST WASHER	10	16 S 190	ZF 47
65	T 08939	0730 103 846	003 264 2052	GEAR SPACER RING	15	16 S 190	ZF 47
66	T 15760	0750 119 109	001 981 5487	GEAR NEEDLE ROLLER	120	16 S 190	ZF 47
68	T 10131	1297 232 023	000 260 1597	GEAR SET (26 T.) (5 PCS.)	1	16 S 190	ZF 47

KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
67	-----	1297 298 919	000 260 2297	PLANETARY GEAR REPAIR KIT (26 T.)		16 S 190	ZF 47
61	T 15739	1297 332 109	000 263 0374	GEAR SHAFT	5	16 S 190	ZF 47
62	T 15775	0631 329 050	001481 005036	GEAR SHAFT ELASTIC PIN	5	16 S 190	ZF 47
63	T 15771	0631 329 017	001481 003028	GEAR SHAFT ELASTIC PIN	5	16 S 190	ZF 47
64	T 15745	0501 306 212	000 263 0562	GEAR THRUST WASHER	10	16 S 190	ZF 47
65	T 08939	0730 103 846	003 264 2052	GEAR SPACER RING	15	16 S 190	ZF 47
66	T 15760	0750 119 109	001 981 5487	GEAR NEEDLE ROLLER	120	16 S 190	ZF 47
68	-----	1297 232 024	000 260 1597	GEAR SET (26 T.) (5 PCS.)	1	16 S 190	ZF 47



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16S150


153

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 50
4-510

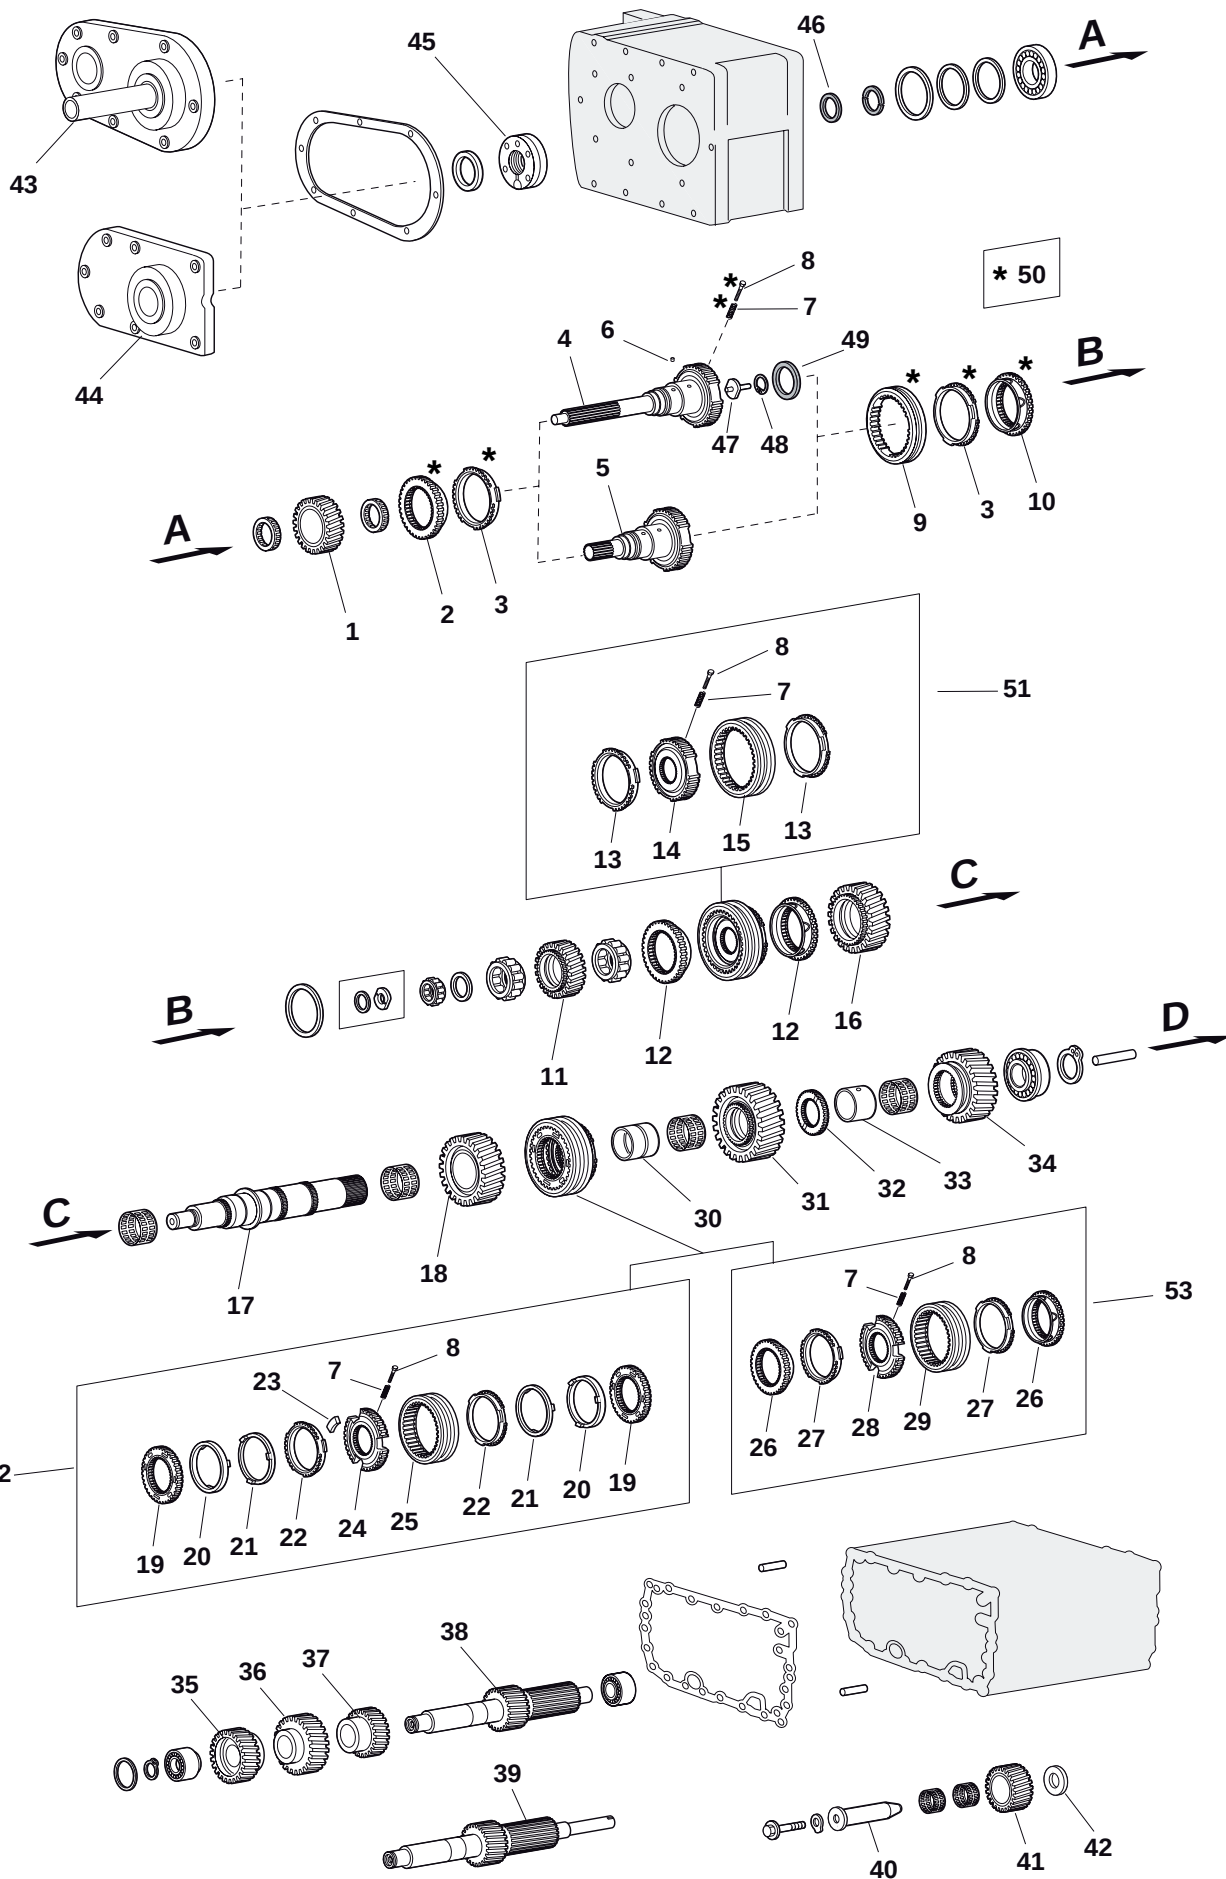

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	-----	1313 302 035	-----	CONSTANT GEAR (30 T.)	
1	T 20005	1313 302 036	-----	CONSTANT GEAR (34-30 T.)	
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1
3	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	1
4	T 11730	1313 202 013	-----	MAIN DRIVE GEAR (57 T.)	A
4	-----	1313 202 014	-----	MAIN DRIVE GEAR	B
4	-----	1313 202 015	-----	MAIN DRIVE GEAR (57 T.)	C
4	-----	1313 202 016	-----	MAIN DRIVE GEAR	
4	-----	1313 202 017	-----	MAIN DRIVE GEAR (57 T.)	D
4	-----	1313 202 018	-----	MAIN DRIVE GEAR	E
4	-----	1313 202 023	-----	MAIN DRIVE GEAR	F
4	-----	1313 221 004	-----	MAIN DRIVE GEAR	
4	-----	1313 221 006	-----	MAIN DRIVE GEAR	
5	-----	1313 202 019	-----	MAIN DRIVE GEAR	G
6	-----	0635 470 012	005402 007200	SYNCHRONIZER CYLINDER ROLLER	
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	1-2-3-4-5-6-7-8-9
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	1-2-3-4-5-6-7-8-9
9	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
10	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1
11	-----	1296 304 131	-----	FOURTH SPEED GEAR (34 T.)	
11	T 20022	1313 304 005	-----	FOURTH SPEED GEAR (30-30-30 T.)	
12	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2
12	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	3
12	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	4
13	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
13	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2
13	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	3
13	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	4
14	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	2
14	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	3
14	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	4
15	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	2
15	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	3
15	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	4
16	-----	1313 304 080	-----	THIRD SPEED GEAR (32 T.)	
16	-----	1313 304 081	-----	THIRD SPEED GEAR (34 T.)	
17	T 17834	1315 304 130	-----	MAINSHAFT	
18	-----	1313 304 077	-----	SECOND SPEED GEAR (38 T.)	
18	-----	1313 304 078	-----	SECOND SPEED GEAR (37 T.)	
19	T 15090	1312 304 106	000 263 2120	SYNCHRONIZER CLUTCH GEAR (63 T.)	5
20	T 15059	1268 304 424	000 262 2636	SYNCHRONIZER INTERNAL RING	5
21	T 15065	1268 304 494	000 262 3436	SYNCHRONIZER INTERMEDIATE RING	5
22	T 15072	1268 304 525	000 262 3934	SYNCHRONIZER BLOCKING RING	5
23	T 17222	1312 304 159	000 262 4240	SYNCHRONIZER SHIFTING PLATE	5
24	T 18047	1312 304 158	-----	SYNCHRONIZER HUB (63 T.)	5
25	T 14989	1310 304 175	001 262 1123	SYNCHRONIZER SLIDING COLLAR (63 T.)	5
26	T 18035	1313 304 009	-----	SYNCHRONIZER CONE (63 T.)	7
26	T 18072	1316 304 146	-----	SYNCHRONIZER CONE (63 T.)	8
26	T 17866	1316 304 156	-----	SYNCHRONIZER CONE (63 T.)	9
27	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	6-7
27	T 18028	1297 304 485	-----	SYNCHRONIZER BLOCKING RING	
27	T 18077	1316 304 150	001 262 1034	SYNCHRONIZER BLOCKING RING	8
27	T 17873	1316 304 170	-----	SYNCHRONIZER BLOCKING RING	9
28	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	6-7
28	T 18074	1316 304 148	-----	SYNCHRONIZER HUB (63 T.)	8
28	T 17869	1316 304 163	-----	SYNCHRONIZER HUB (63 T.)	9
29	T 18070	1315 304 136	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	8
29	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	6-7
29	T 17872	1316 304 169	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	9
30	T 20028	1313 304 038	-----	FIRST SPEED GEAR SLEEVE	
31	-----	1313 304 039	-----	FIRST SPEED GEAR (44 T.)	
31	-----	1313 304 070	-----	FIRST SPEED GEAR	
32	-----	1313 304 037	-----	FIRST SPEED AND REVERSE GEAR CONE	
33	T 19190	1315 304 132	-----	REVERSE SPEED GEAR SLEEVE	
34	-----	1313 304 041	-----	REVERSE GEAR (38 T.)	
34	-----	1313 304 042	-----	REVERSE GEAR (39 T.)	
35	-----	1296 303 037	-----	COUNTERSHAFT CONSTANT GEAR (39 T.)	
35	T 20016	1313 303 004	-----	COUNTERSHAFT CONSTANT GEAR (37 T.)	
36	-----	1296 303 036	-----	COUNTERSHAFT FOURTH SPEED GEAR (37 T.)	
36	T 20010	1313 303 003	-----	COUNTERSHAFT FOURTH SPEED GEAR (39 T.)	
37	-----	1296 303 035	-----	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	

155

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme


Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 161

(*) For the composition of the kits please see page 161.

16 S 150

ZF 50
4-510

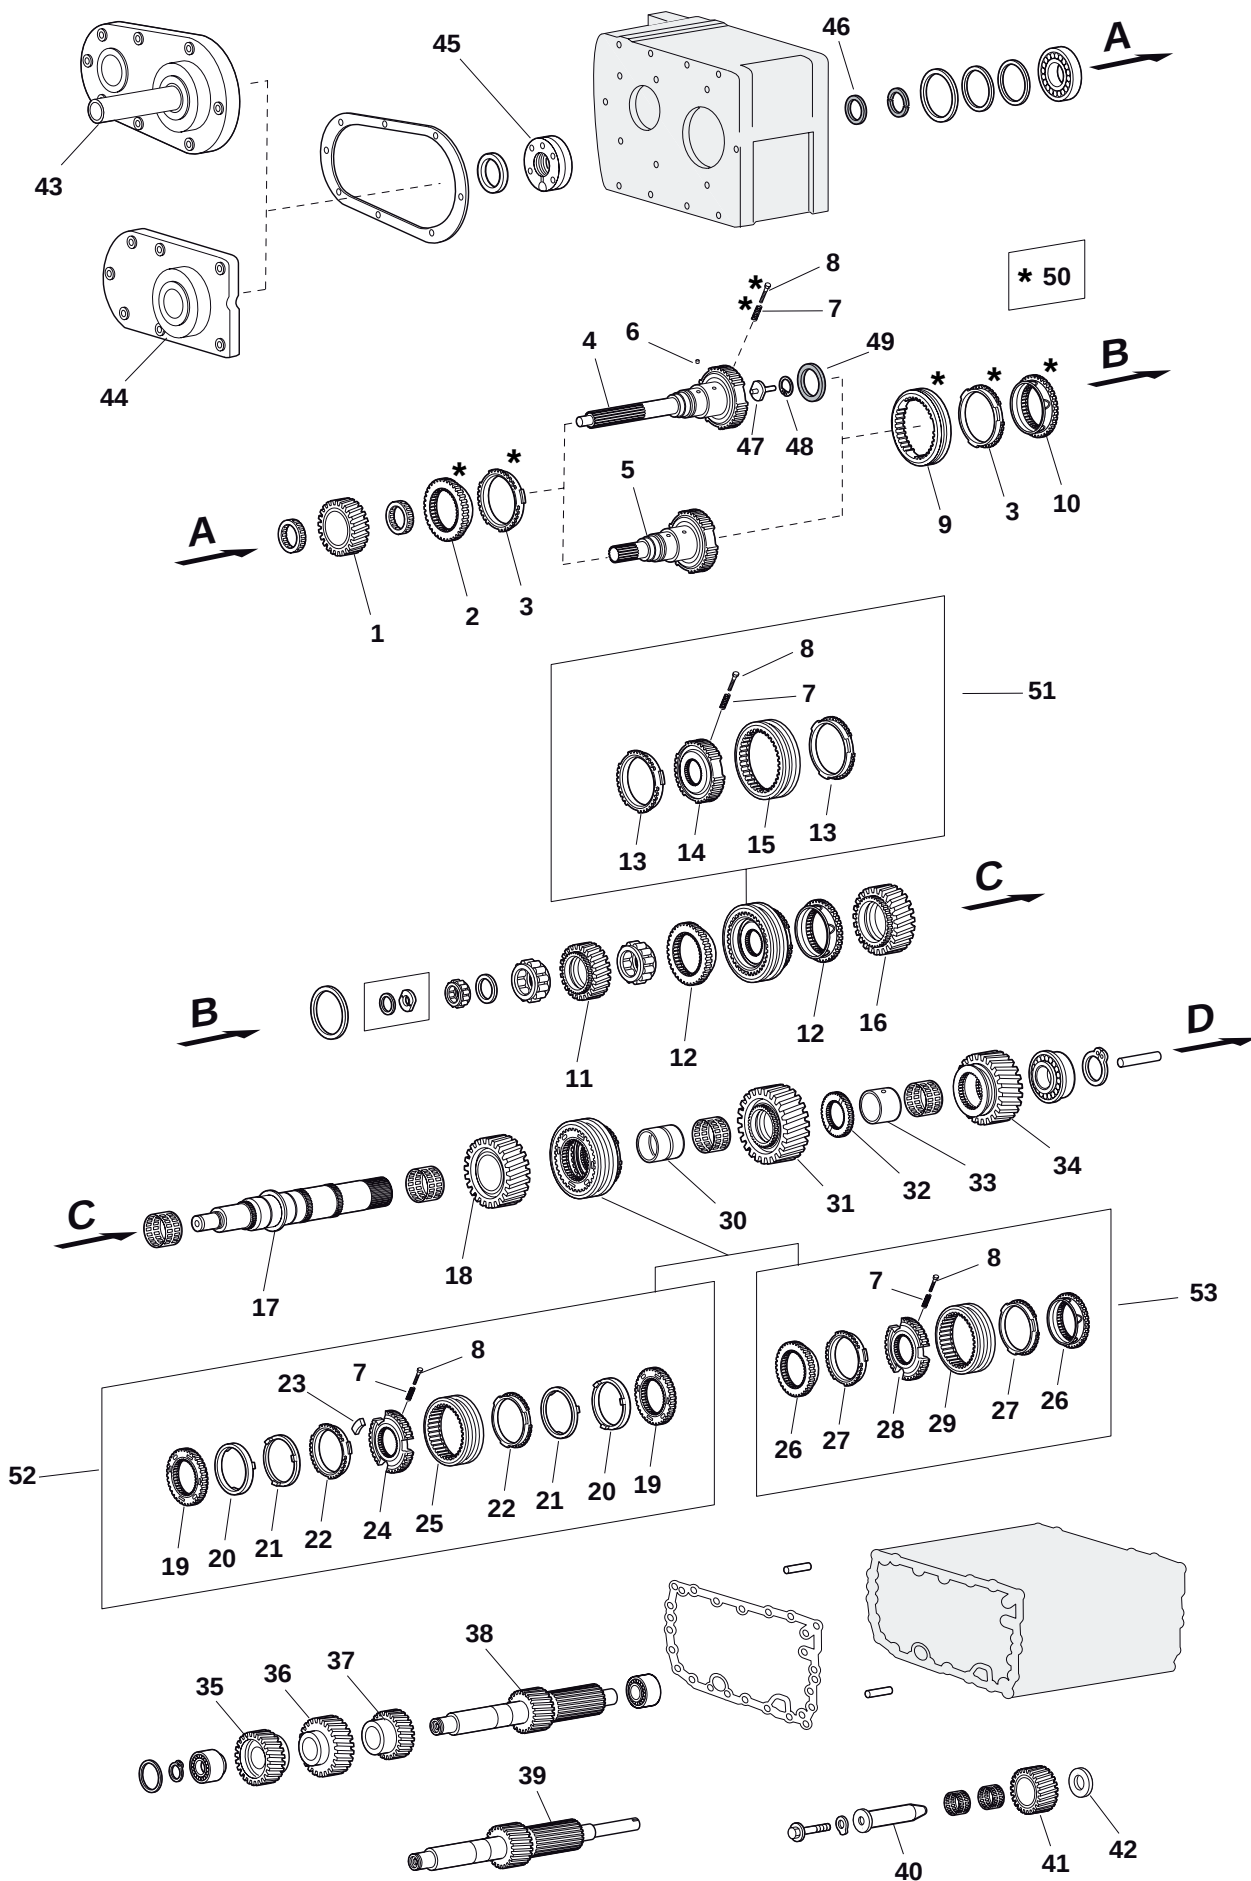

157

Articoli con la stessa lettera o numero vanno accoppiati assieme





Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 161

(*) For the composition of the kits please see page 161.

.

ZF 50
4-510

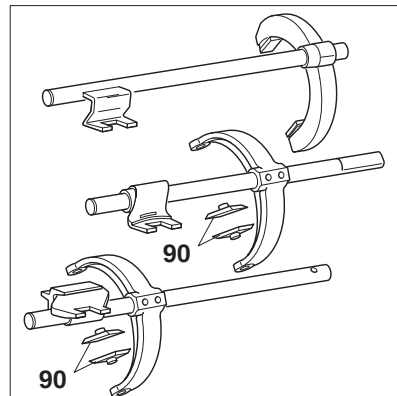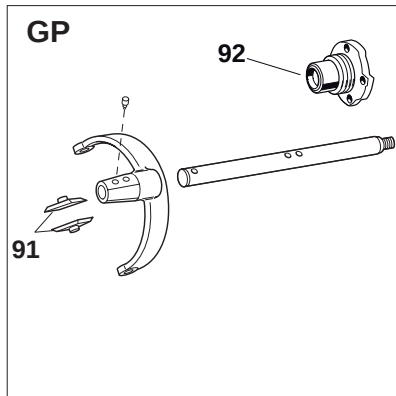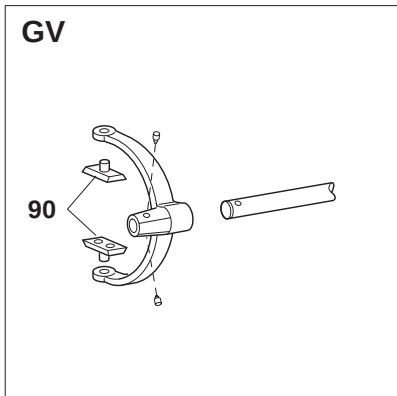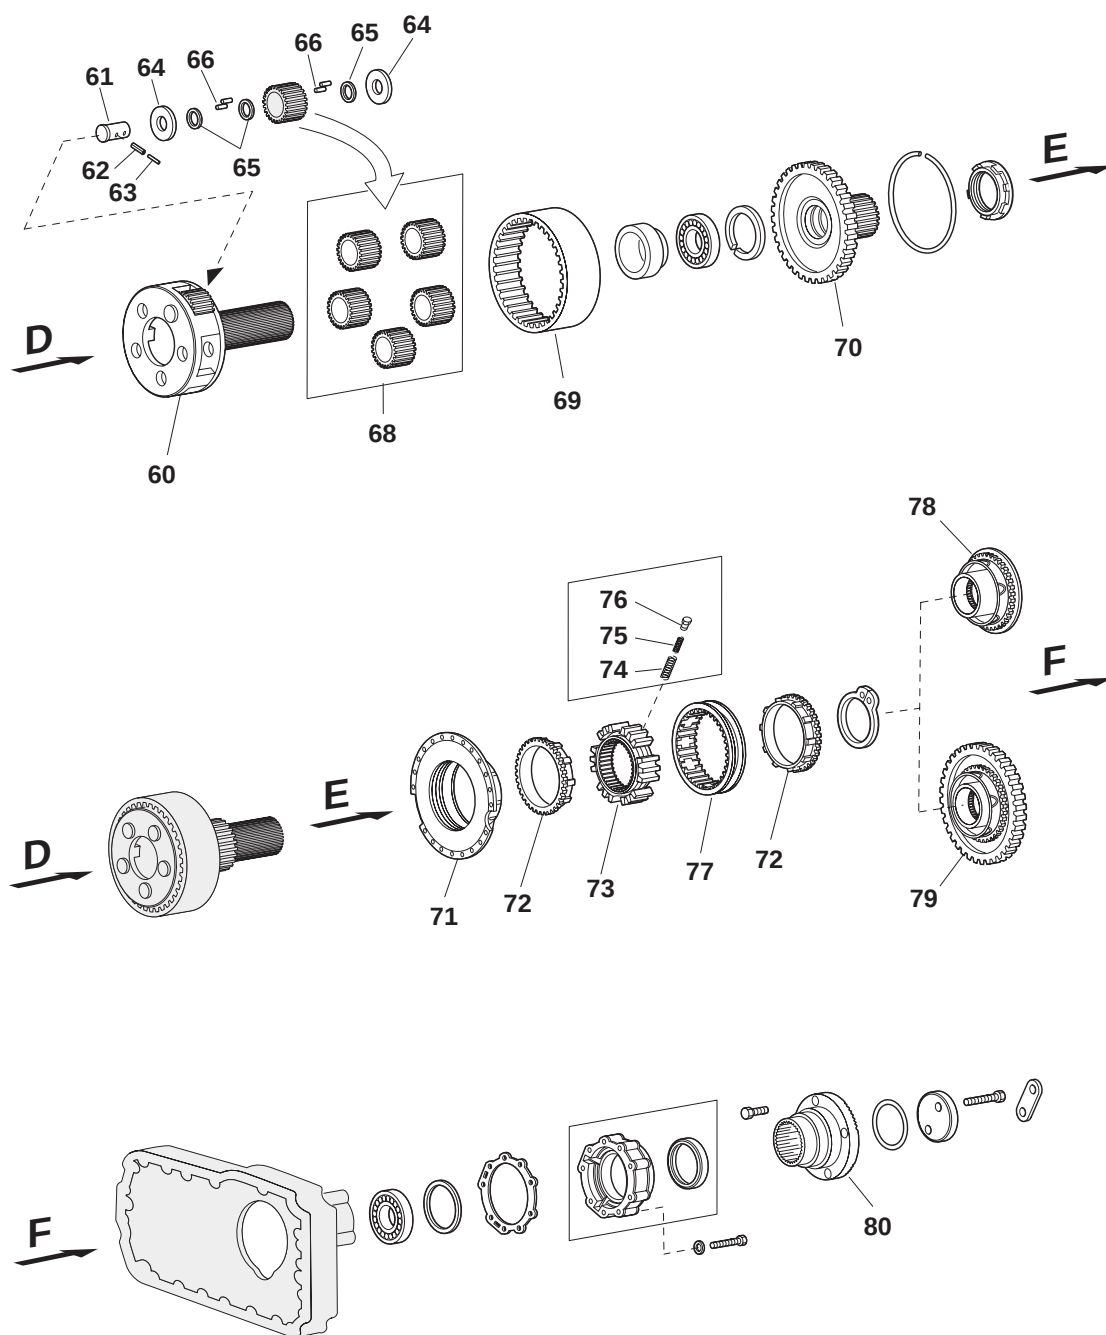

159

Articoli con la stessa lettera o numero vanno accoppiati assieme

Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 161

(*) For the composition of the kits please see page 161.

ZF 50
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 308 981	-----	000 263 0762	ZF 50	64	1313 202 023	-----	-----	ZF 50	4
0501 314 060	T 18524	-----	ZF 50	49	1313 204 003	T 18629	-----	ZF 50	53
0630 502 027	T 18530	-----	ZF 50	48	1313 221 004	-----	-----	ZF 50	4
0631 329 051	-----	-----	ZF 50	62	1313 221 006	-----	-----	ZF 50	4
0631 329 167	-----	-----	ZF 50	63	1313 232 003	-----	-----	ZF 50	68
0635 470 012	-----	005402 007200	ZF 50	6	1313 233 001	T 14809	000 263 2020	ZF 50	78
0730 061 816	T 15289	000 262 0673	ZF 50	46	1313 298 909	T 18631	-----	ZF 50	53
0730 107 168	-----	000 264 0947	ZF 50	65	1313 302 035	-----	-----	ZF 50	1
0730 150 064	T 14283	343 263 0062	ZF 50	42	1313 302 036	T 20005	-----	ZF 50	1
0730 260 330	T 16568	000 268 2150	ZF 50	-----	1313 303 002	-----	-----	ZF 50	37
0732 040 385	T 08950	336 264 0693	ZF 50	74	1313 303 003	T 20010	-----	ZF 50	36
0732 040 386	T 08951	336 264 0793	ZF 50	75	1313 303 004	T 20016	-----	ZF 50	35
0732 040 409	T 13440	005 993 6101	ZF 50	7	1313 303 010	-----	-----	ZF 50	38
0732 040 736	T 09068	002 993 7501	ZF 50	-----	1313 303 011	-----	-----	ZF 50	38
0735 470 164	-----	-----	ZF 50	66	1313 303 035	-----	-----	ZF 50	39
1240 304 278	T 08949	336 264 0239	ZF 50	76	1313 304 005	T 20022	-----	ZF 50	11
1268 304 424	T 15059	000 262 2636	ZF 50	20	1313 304 008	T 18287	-----	ZF 50	28
1268 304 494	T 15065	000 262 3436	ZF 50	21	1313 304 009	T 18035	-----	ZF 50	26
1268 304 525	T 15072	000 262 3934	ZF 50	22	1313 304 037	-----	-----	ZF 50	32
1295 202 041	T 09751	000 260 1290	ZF 50	45	1313 304 038	T 20028	-----	ZF 50	30
1295 298 915	T 20194	-----	ZF 50	-----	1313 304 039	-----	-----	ZF 50	31
1295 302 100	-----	000 262 4529	ZF 50	44	1313 304 041	-----	-----	ZF 50	34
1295 305 056	T 11447	000 263 1430	ZF 50	40	1313 304 042	-----	-----	ZF 50	34
1295 307 243	T 19116	000 267 0474	ZF 50	-----	1313 304 070	-----	-----	ZF 50	31
1295 307 274	T 18581	000 267 0503	ZF 50	-----	1313 304 077	-----	-----	ZF 50	18
1295 307 275	T 18886	000 267 0803	ZF 50	-----	1313 304 078	-----	-----	ZF 50	18
1295 307 294	T 19124	000 267 0820	ZF 50	-----	1313 304 080	-----	-----	ZF 50	16
1295 307 479	T 18869	000 267 2622	ZF 50	-----	1313 304 081	-----	-----	ZF 50	16
1295 332 086	-----	001 263 2110	ZF 50	69	1313 305 001	-----	-----	ZF 50	41
1296 213 028	T 11462	000 264 4206	ZF 50	-----	1313 305 002	-----	-----	ZF 50	41
1296 232 002	-----	-----	ZF 50	60	1313 332 020	-----	-----	ZF 50	70
1296 233 006	T 08908	000 263 1720	ZF 50	71	1313 333 001	T 18052	-----	ZF 50	73
1296 303 035	-----	-----	ZF 50	37	1313 338 002	-----	-----	ZF 50	80
1296 303 036	-----	-----	ZF 50	36	1313 338 011	-----	-----	ZF 50	80
1296 303 037	-----	-----	ZF 50	35	1315 232 023	-----	-----	ZF 50	60
1296 304 131	-----	-----	ZF 50	11	1315 298 018	T 18632	-----	ZF 50	51
1296 312 042	T 16712	000 267 0519	ZF 50	92	1315 298 054	T 18060	-----	ZF 50	53
1296 332 005	-----	-----	ZF 50	61	1315 298 055	T 18061	-----	ZF 50	51
1296 333 022	T 09061	000 263 0234	ZF 50	72	1315 298 060	T 17864	-----	ZF 50	53
1296 333 023	T 09062	000 263 0523	ZF 50	77	1315 298 061	T 17865	-----	ZF 50	51
1296 333 045	T 15084	000 263 0534	ZF 50	72	1315 302 196	T 18533	-----	ZF 50	47
1296 334 004	T 17892	000 265 0649	ZF 50	91	1315 304 130	T 17834	-----	ZF 50	17
1297 298 955	T 16173	-----	ZF 50	50	1315 304 132	T 19190	-----	ZF 50	33
1297 304 401	T 17880	000 262 4934	ZF 50	27	1315 304 135	T 18068	-----	ZF 50	15
1297 304 402	T 11724	000 262 3834	ZF 50	3	1315 304 136	T 18070	-----	ZF 50	29
1297 304 402	T 11724	000 262 3834	ZF 50	13	1316 304 078	T 18297	000 262 7623	ZF 50	29
1297 304 436	T 15096	000 264 0839	ZF 50	8	1316 304 145	T 18071	-----	ZF 50	12
1297 304 484	T 15078	000 262 7034	ZF 50	3	1316 304 146	T 18072	-----	ZF 50	26
1297 304 484	T 15078	000 262 7034	ZF 50	13	1316 304 147	T 18073	-----	ZF 50	14
1297 304 485	T 18028	-----	ZF 50	27	1316 304 148	T 18074	-----	ZF 50	28
1297 306 120	T 17901	000 268 1149	ZF 50	90	1316 304 149	T 18075	-----	ZF 50	13
1297 333 118	-----	-----	ZF 50	79	1316 304 150	T 18077	001 262 1034	ZF 50	27
1310 304 175	T 14989	001 262 1123	ZF 50	25	1316 304 156	T 17866	-----	ZF 50	26
1310 304 202	T 14983	001 262 1823	ZF 50	9	1316 304 159	T 17867	-----	ZF 50	12
1310 304 202	T 14983	001 262 1823	ZF 50	15	1316 304 162	T 17868	-----	ZF 50	14
1312 202 054	-----	-----	ZF 50	43	1316 304 163	T 17869	-----	ZF 50	28
1312 298 911	T 18625	-----	ZF 50	52	1316 304 167	T 17870	-----	ZF 50	15
1312 302 036	-----	-----	ZF 50	43	1316 304 168	T 17871	-----	ZF 50	13
1312 302 047	-----	-----	ZF 50	43	1316 304 169	T 17872	-----	ZF 50	29
1312 302 052	-----	-----	ZF 50	43	1316 304 170	T 17873	-----	ZF 50	27
1312 302 081	-----	-----	ZF 50	43					
1312 302 096	-----	-----	ZF 50	43					
1312 304 027	T 11729	000 262 5535	ZF 50	2					
1312 304 027	T 11729	000 262 5535	ZF 50	12					
1312 304 052	T 17886	000 262 5835	ZF 50	14					
1312 304 056	T 15103	-----	ZF 50	10					
1312 304 106	T 15090	000 263 2120	ZF 50	19					
1312 304 158	T 18047	-----	ZF 50	24					
1312 304 159	T 17222	000 262 4240	ZF 50	23					
1313 202 013	T 11730	-----	ZF 50	4					
1313 202 014	-----	-----	ZF 50	4					
1313 202 015	-----	-----	ZF 50	4					
1313 202 016	-----	-----	ZF 50	4					
1313 202 017	-----	-----	ZF 50	4					
1313 202 018	-----	-----	ZF 50	4					
1313 202 019	-----	-----	ZF 50	5					

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
50	T 16173	1297 298 955	-----	SYNCHRONIZER REPAIR KIT		16 S 150	ZF 50
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1	16 S 150	ZF 50
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 150	ZF 50
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 150	ZF 50
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 150	ZF 50
9	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 150	ZF 50
10	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1	16 S 150	ZF 50
51	T 18632	1315 298 018	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 150	ZF 50
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 150	ZF 50
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 150	ZF 50
12	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2	16 S 150	ZF 50
13	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 150	ZF 50
14	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	1	16 S 150	ZF 50
15	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 150	ZF 50
51	T 18061	1315 298 055	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 150	ZF 50
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 150	ZF 50
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 150	ZF 50
12	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 150	ZF 50
13	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	2	16 S 150	ZF 50
14	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 150	ZF 50
15	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 150	ZF 50
51	T 17865	1315 298 061	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 150	ZF 50
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 150	ZF 50
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 150	ZF 50
12	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 150	ZF 50
13	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	2	16 S 150	ZF 50
14	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 150	ZF 50
15	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 150	ZF 50
52	T 18625	1312 298 911	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 150	ZF 50
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 150	ZF 50
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 150	ZF 50
19	T 15090	1312 304 106	000 263 2120	SYNCHRONIZER CLUTCH GEAR (63 T.)	2	16 S 150	ZF 50
20	T 15059	1268 304 424	000 262 2636	SYNCHRONIZER INTERNAL RING	2	16 S 150	ZF 50
21	T 15065	1268 304 494	000 262 3436	SYNCHRONIZER INTERMEDIATE RING	2	16 S 150	ZF 50
22	T 15072	1268 304 525	000 262 3934	SYNCHRONIZER BLOCKING RING	2	16 S 150	ZF 50
23	T 17222	1312 304 159	000 262 4240	SYNCHRONIZER SHIFTING PLATE	3	16 S 150	ZF 50
24	T 18047	1312 304 158	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 150	ZF 50
25	T 14989	1310 304 175	001 262 1123	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 150	ZF 50
53	T 18629	1313 204 003	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 150	ZF 50
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 150	ZF 50
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 150	ZF 50
27	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	2	16 S 150	ZF 50
28	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 150	ZF 50
29	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 150	ZF 50

KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
-----	-----	----	----------	-------------	------	-------	-------

53	T 18631	1313 298 909	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 150	ZF 50
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 150	ZF 50
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 150	ZF 50
26	T 18035	1313 304 009	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 150	ZF 50
27	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	2	16 S 150	ZF 50
28	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 150	ZF 50
29	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 150	ZF 50

53	T 18060	1315 298 054	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 150	ZF 50
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 150	ZF 50
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 150	ZF 50
26	T 18072	1316 304 146	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 150	ZF 50
27	T 18077	1316 304 150	001 262 1034	SYNCHRONIZER BLOCKING RING	2	16 S 150	ZF 50
28	T 18074	1316 304 148	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 150	ZF 50
29	T 18070	1315 304 136	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 150	ZF 50

53	T 17864	1315 298 060	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 150	ZF 50
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 150	ZF 50
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 150	ZF 50
26	T 17866	1316 304 156	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 150	ZF 50
27	T 17873	1316 304 170	-----	SYNCHRONIZER BLOCKING RING	2	16 S 150	ZF 50
28	T 17869	1316 304 163	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 150	ZF 50
29	T 17872	1316 304 169	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 150	ZF 50



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16S220


165

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 51
4-510

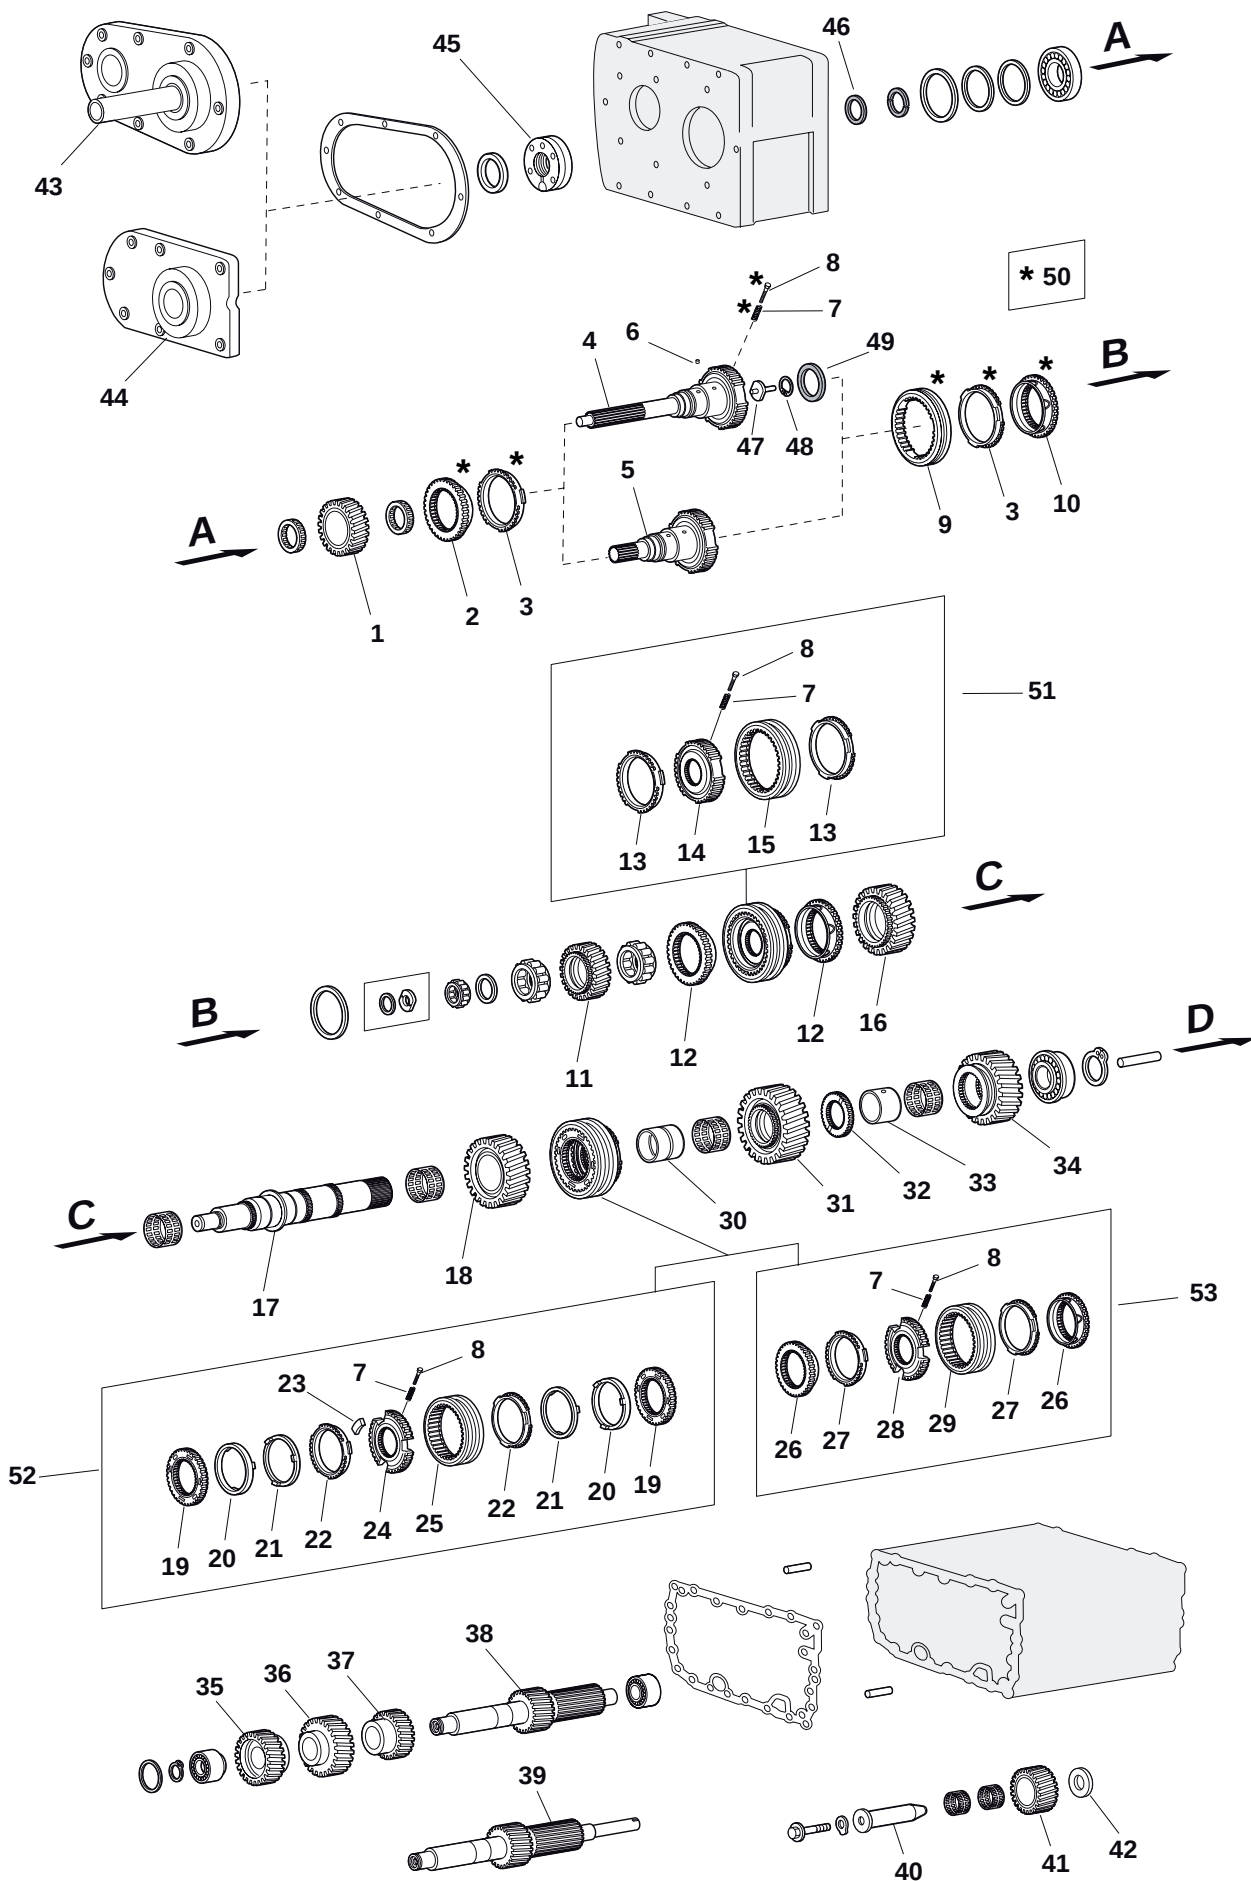

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	-----	1312 302 073	-----	CONSTANT GEAR (34 T.)	
1	-----	1312 302 074	-----	CONSTANT GEAR (30 T.)	
1	-----	1312 302 077	-----	CONSTANT GEAR (28 T.)	
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1
3	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	1
4	-----	1312 202 035	-----	MAIN DRIVE GEAR	A
4	-----	1312 202 036	-----	MAIN DRIVE GEAR	B
4	-----	1312 202 037	-----	MAIN DRIVE GEAR	C
4	-----	1312 202 038	-----	MAIN DRIVE GEAR	D
4	-----	1312 202 039	-----	MAIN DRIVE GEAR	E
4	-----	1312 221 003	-----	MAIN DRIVE GEAR	
5	-----	1312 202 041	-----	MAIN DRIVE GEAR	F
6	-----	0635 470 012	005402 007200	SYNCHRONIZER CYLINDER ROLLER	
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	1-2-3-4-5-6-7-8-9-10
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	1-2-3-4-5-6-7-8-9-10
9	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
10	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1
11	-----	1312 304 029	-----	FOURTH SPEED GEAR (30 T.)	
11	-----	1312 304 031	-----	FOURTH SPEED GEAR (34 T.)	
11	-----	1312 304 032	-----	FOURTH SPEED GEAR (30 T.)	
12	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2
12	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	3
12	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	4
13	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
13	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2
13	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	3
13	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	4
14	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	2
14	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	3
14	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	4
15	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	2
15	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	3
15	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	4
16	-----	1312 304 075	-----	THIRD SPEED GEAR (25 T.)	
16	-----	1312 304 136	-----	THIRD SPEED GEAR (34 T.)	
16	-----	1312 304 137	-----	THIRD SPEED GEAR (32 T.)	
17	-----	1312 304 161	-----	MAINSHAFT	
17	T 17825	1316 304 130	000 262 7805	MAINSHAFT	
18	-----	1312 304 139	000 262 6712	SECOND SPEED GEAR (38 T.)	
18	-----	1312 304 141	-----	SECOND SPEED GEAR (37 T.)	
18	-----	1312 304 142	-----	SECOND SPEED GEAR	
19	-----	1312 304 092	-----	SYNCHRONIZER CLUTCH GEAR	5
19	T 15090	1312 304 106	000 263 2120	SYNCHRONIZER CLUTCH GEAR (63 T.)	6
20	T 15059	1268 304 424	000 262 2636	SYNCHRONIZER INTERNAL RING	5-6
21	T 15065	1268 304 494	000 262 3436	SYNCHRONIZER INTERMEDIATE RING	5-6
22	T 15072	1268 304 525	000 262 3934	SYNCHRONIZER BLOCKING RING	5-6
23	T 17222	1312 304 159	000 262 4240	SYNCHRONIZER SHIFTING PLATE	5-6
24	T 18047	1312 304 158	-----	SYNCHRONIZER HUB (63 T.)	5-6
25	T 14989	1310 304 175	001 262 1123	SYNCHRONIZER SLIDING COLLAR (63 T.)	5-6
26	T 18035	1313 304 009	-----	SYNCHRONIZER CONE (63 T.)	8
26	T 18072	1316 304 146	-----	SYNCHRONIZER CONE (63 T.)	9
26	T 17866	1316 304 156	-----	SYNCHRONIZER CONE (63 T.)	10
27	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	7-8
27	T 18028	1297 304 485	-----	SYNCHRONIZER BLOCKING RING	
27	T 17877	1316 304 150	001 262 1034	SYNCHRONIZER BLOCKING RING	9
27	T 17873	1316 304 170	-----	SYNCHRONIZER BLOCKING RING	10
28	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	7-8
28	T 18074	1316 304 148	-----	SYNCHRONIZER HUB (63 T.)	9
28	T 17869	1316 304 163	-----	SYNCHRONIZER HUB (63 T.)	10
29	T 18070	1315 304 136	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	9
29	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	7-8
29	T 17872	1316 304 169	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	10
30	-----	1312 304 008	-----	FIRST SPEED GEAR SLEEVE	
30	-----	1312 304 084	-----	FIRST SPEED GEAR SLEEVE	
31	-----	1312 304 077	-----	FIRST SPEED GEAR (34 T.)	
31	-----	1312 304 085	-----	FIRST SPEED GEAR (47 T.)	
31	-----	1312 304 086	-----	FIRST SPEED GEAR (44 T.)	
32	-----	1312 304 037	-----	FIRST SPEED AND REVERSE GEAR CONE	
32	-----	1312 304 083	-----	FIRST SPEED AND REVERSE GEAR CONE	
32	-----	1312 304 185	-----	FIRST SPEED AND REVERSE GEAR CONE	
33	-----	1312 304 011	-----	REVERSE SPEED GEAR SLEEVE	

167

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme


Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 174

(*) For the composition of the kits please see page 174.





16 S 220

ZF 51
4-510

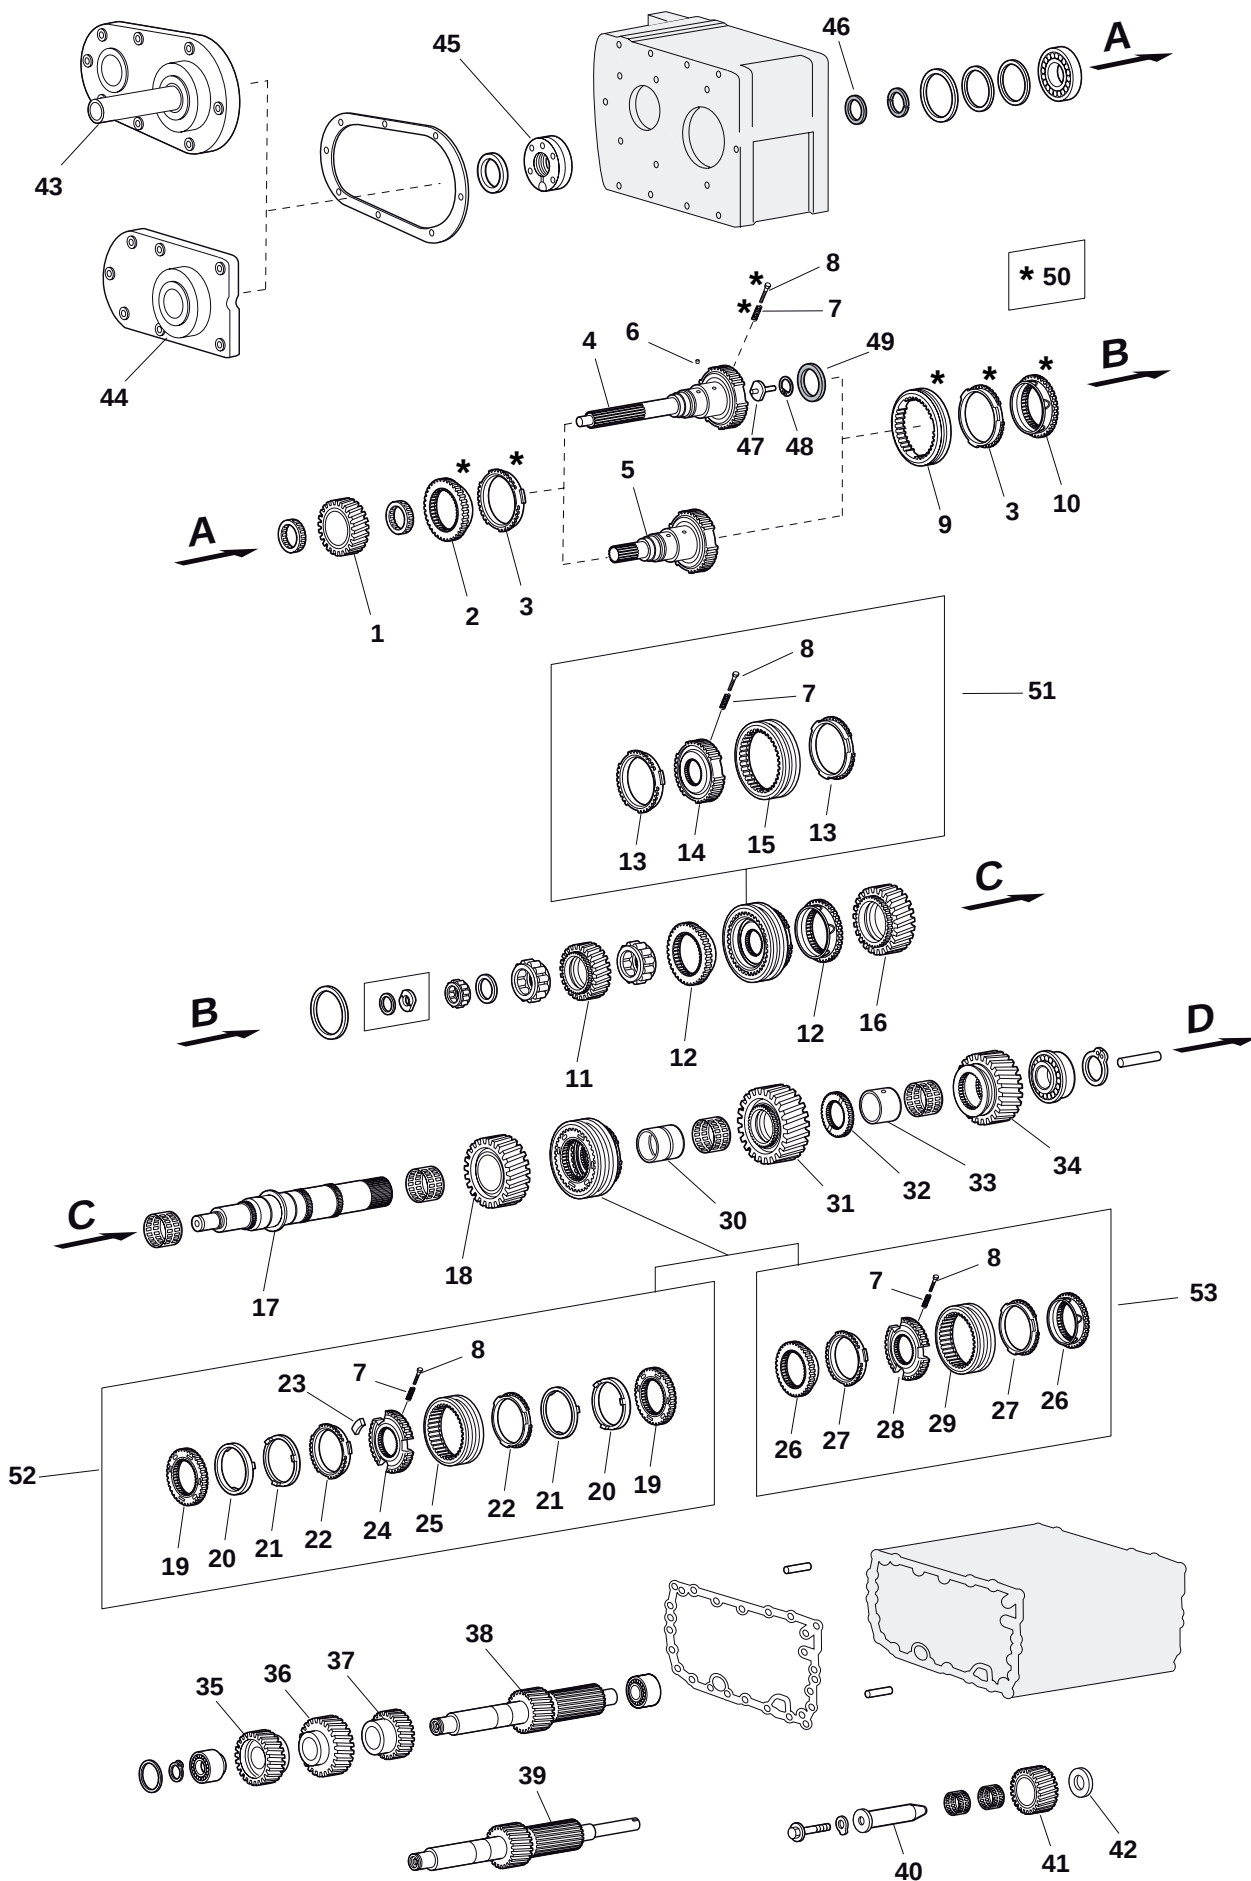

169

ZF 51
4-510

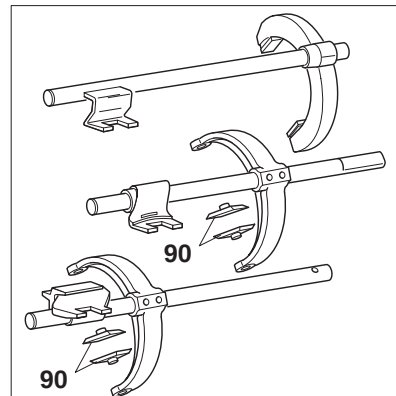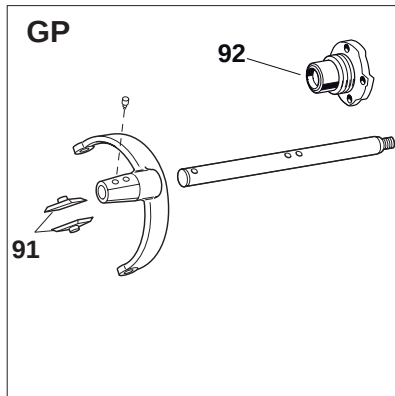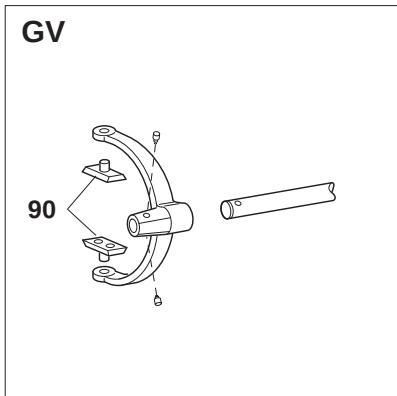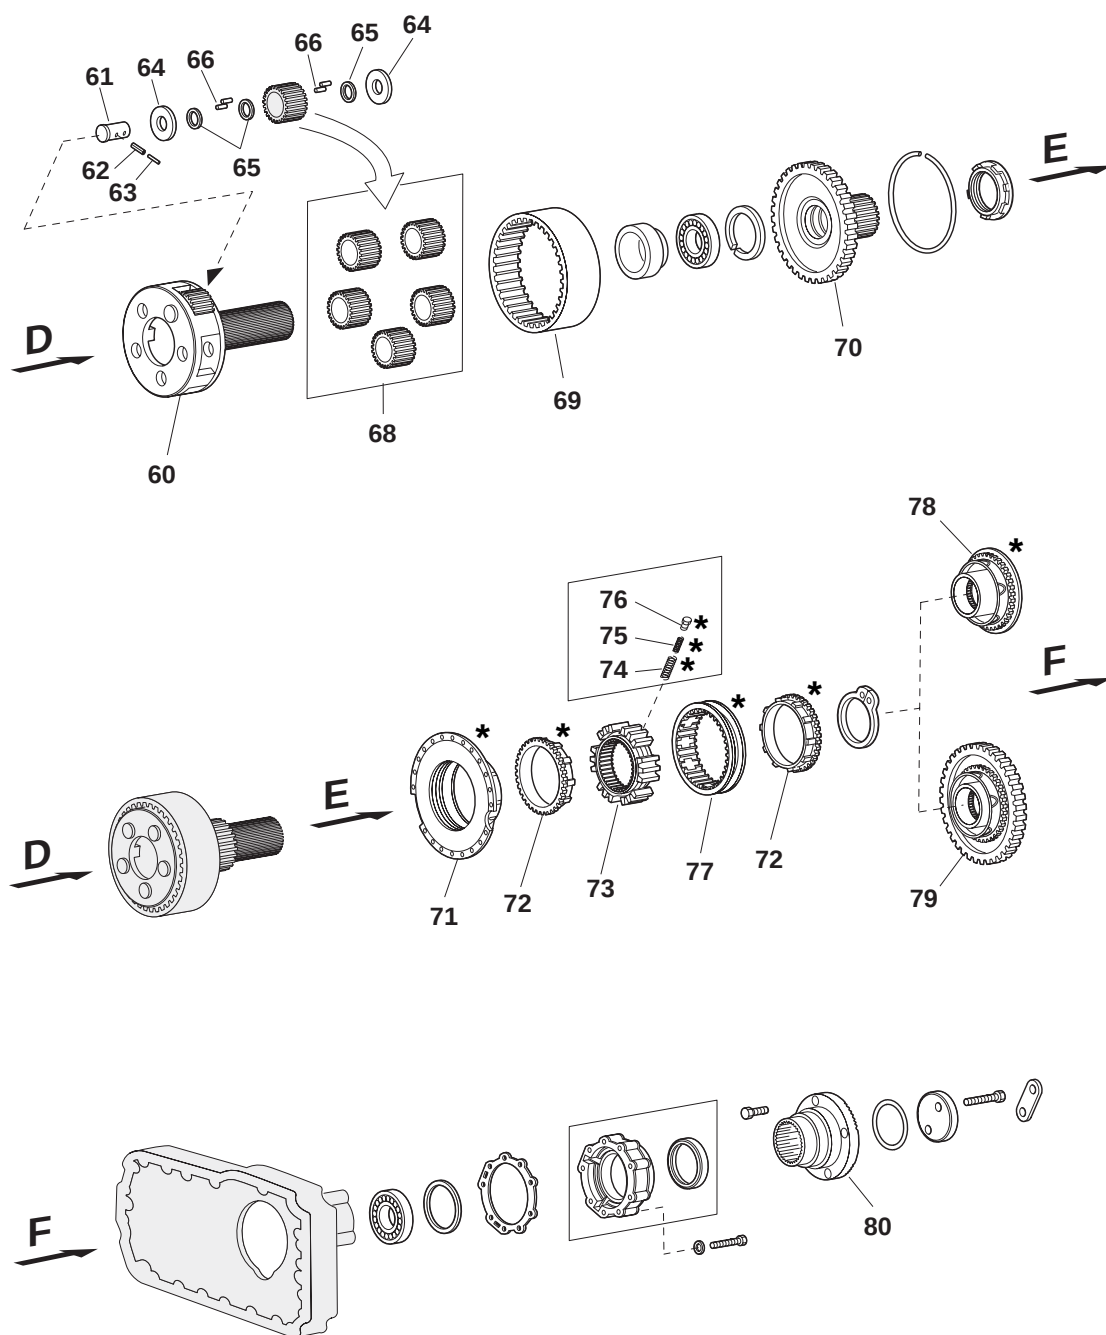

171

ZF 51
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 306 212	T 15745	000 263 0562	ZF 51	64	1312 302 044	-----	-----	ZF 51	43
0501 308 981	-----	000 263 0762	ZF 51	64	1312 302 047	-----	-----	ZF 51	43
0501 314 060	T 18524	-----	ZF 51	49	1312 302 061	-----	-----	ZF 51	44
0630 502 027	T 18530	-----	ZF 51	48	1312 302 064	-----	-----	ZF 51	43
0631 329 051	-----	-----	ZF 51	62	1312 302 073	-----	-----	ZF 51	1
0631 329 167	-----	-----	ZF 51	63	1312 302 074	-----	-----	ZF 51	1
0635 470 012	-----	005402 007200	ZF 51	6	1312 302 077	-----	-----	ZF 51	1
0730 061 816	T 15289	000 262 0673	ZF 51	46	1312 302 096	-----	-----	ZF 51	43
0730 103 846	T 08939	003 264 2052	ZF 51	65	1312 303 003	-----	-----	ZF 51	35
0730 107 168	-----	000 264 0947	ZF 51	65	1312 303 005	-----	-----	ZF 51	35
0730 150 064	T 14283	343 263 0062	ZF 51	42	1312 303 006	-----	-----	ZF 51	35
0730 260 330	T 16568	000 268 2150	ZF 51	-----	1312 303 008	-----	-----	ZF 51	38
0732 040 385	T 08950	336 264 0693	ZF 51	74	1312 303 009	-----	-----	ZF 51	38
0732 040 386	T 08951	336 264 0793	ZF 51	75	1312 303 014	-----	-----	ZF 51	36
0732 040 409	T 13440	005 993 6101	ZF 51	7	1312 303 016	-----	-----	ZF 51	36
0732 040 736	T 09068	002 993 7501	ZF 51	-----	1312 303 017	-----	-----	ZF 51	36
0750 119 116	-----	000 981 4686	ZF 51	66	1312 303 020	-----	-----	ZF 51	37
1240 304 278	T 08949	336 264 0239	ZF 51	76	1312 303 021	-----	-----	ZF 51	37
1268 304 424	T 15059	000 262 2636	ZF 51	20	1312 303 036	-----	-----	ZF 51	37
1268 304 494	T 15065	000 262 3436	ZF 51	21	1312 303 037	-----	-----	ZF 51	38
1268 304 525	T 15072	000 262 3934	ZF 51	22	1312 303 043	-----	-----	ZF 51	39
1295 202 041	T 09751	000 260 1290	ZF 51	45	1312 303 055	-----	-----	ZF 51	38
1295 202 057	-----	-----	ZF 51	45	1312 304 008	-----	-----	ZF 51	30
1295 298 915	T 20194	-----	ZF 51	-----	1312 304 011	-----	-----	ZF 51	33
1295 298 962	T 16168	-----	ZF 51	81	1312 304 027	T 11729	000 262 5535	ZF 51	2
1295 305 056	T 11447	000 263 1430	ZF 51	40	1312 304 027	T 11729	000 262 5535	ZF 51	12
1295 307 243	T 19116	000 267 0474	ZF 51	-----	1312 304 029	-----	-----	ZF 51	11
1295 307 274	T 18581	000 267 0503	ZF 51	-----	1312 304 031	-----	-----	ZF 51	11
1295 307 275	T 18886	000 267 0803	ZF 51	-----	1312 304 032	-----	-----	ZF 51	11
1295 307 294	T 19124	000 267 0820	ZF 51	-----	1312 304 037	-----	-----	ZF 51	32
1295 307 330	T 19994	000 267 1303	ZF 51	-----	1312 304 052	T 17886	000 262 5835	ZF 51	14
1295 307 479	T 18869	000 267 2622	ZF 51	-----	1312 304 056	T 15103	-----	ZF 51	10
1295 307 533	T 19130	000 265 2031	ZF 51	-----	1312 304 075	-----	-----	ZF 51	16
1295 332 086	-----	001 263 2110	ZF 51	69	1312 304 077	-----	-----	ZF 51	31
1296 213 028	T 11462	000 264 4206	ZF 51	-----	1312 304 078	-----	-----	ZF 51	34
1296 233 006	T 08908	000 263 1720	ZF 51	71	1312 304 083	-----	-----	ZF 51	32
1296 312 042	T 16712	000 267 0519	ZF 51	92	1312 304 084	-----	-----	ZF 51	30
1296 333 022	T 09061	000 263 0234	ZF 51	72	1312 304 085	-----	-----	ZF 51	31
1296 333 023	T 09062	000 263 0523	ZF 51	77	1312 304 086	-----	-----	ZF 51	31
1296 333 045	T 15084	000 263 0534	ZF 51	72	1312 304 087	-----	-----	ZF 51	34
1296 334 004	T 17892	000 265 0649	ZF 51	91	1312 304 088	-----	-----	ZF 51	34
1297 232 023	T 10131	000 260 1597	ZF 51	68	1312 304 092	-----	-----	ZF 51	19
1297 233 056	T 15934	000 263 2220	ZF 51	78	1312 304 106	T 15090	000 263 2120	ZF 51	19
1297 298 955	T 16173	-----	ZF 51	50	1312 304 136	-----	-----	ZF 51	16
1297 304 401	T 17880	000 262 4934	ZF 51	27	1312 304 137	-----	-----	ZF 51	16
1297 304 402	T 11724	000 262 3834	ZF 51	3	1312 304 139	-----	000 262 6712	ZF 51	18
1297 304 402	T 11724	000 262 3834	ZF 51	13	1312 304 141	-----	-----	ZF 51	18
1297 304 436	T 15096	000 264 0839	ZF 51	8	1312 304 142	-----	-----	ZF 51	18
1297 304 484	T 15078	000 262 7034	ZF 51	3	1312 304 158	T 18047	-----	ZF 51	24
1297 304 484	T 15078	000 262 7034	ZF 51	13	1312 304 159	T 17222	000 262 4240	ZF 51	23
1297 304 485	T 18028	-----	ZF 51	27	1312 304 161	-----	-----	ZF 51	17
1297 305 011	-----	-----	ZF 51	41	1312 304 185	-----	-----	ZF 51	32
1297 305 012	-----	-----	ZF 51	41	1312 304 187	-----	-----	ZF 51	34
1297 306 120	T 17901	000 268 1149	ZF 51	90	1312 305 003	-----	-----	ZF 51	41
1297 332 080	-----	000 263 6310	ZF 51	69	1312 332 026	-----	000 263 0474	ZF 51	61
1297 332 108	-----	-----	ZF 51	70	1312 333 014	-----	-----	ZF 51	79
1297 332 109	T 15739	000 263 0374	ZF 51	61	1313 204 003	T 18629	-----	ZF 51	53
1297 332 120	-----	-----	ZF 51	70	1313 298 909	T 18631	-----	ZF 51	53
1297 333 110	-----	-----	ZF 51	80	1313 304 008	T 18287	-----	ZF 51	28
1297 333 115	-----	000 263 0935	ZF 51	73	1313 304 009	T 18035	-----	ZF 51	26
1310 304 175	T 14989	001 262 1123	ZF 51	25	1315 298 018	T 18632	-----	ZF 51	51
1310 304 202	T 14983	001 262 1823	ZF 51	9	1315 298 054	T 18060	-----	ZF 51	53
1310 304 202	T 14983	001 262 1823	ZF 51	15	1315 298 055	T 18061	-----	ZF 51	51
1312 202 035	-----	-----	ZF 51	4	1315 298 060	T 17864	-----	ZF 51	53
1312 202 036	-----	-----	ZF 51	4	1315 298 061	T 17865	-----	ZF 51	51
1312 202 037	-----	-----	ZF 51	4	1315 302 196	T 18533	-----	ZF 51	47
1312 202 038	-----	-----	ZF 51	4	1315 304 135	T 18068	-----	ZF 51	15
1312 202 039	-----	-----	ZF 51	4	1315 304 136	T 18070	-----	ZF 51	29
1312 202 041	-----	-----	ZF 51	5	1316 232 006	-----	-----	ZF 51	60
1312 204 044	-----	-----	ZF 51	52	1316 304 078	T 18297	000 262 7623	ZF 51	29
1312 221 003	-----	-----	ZF 51	4	1316 304 130	T 17825	000 262 7805	ZF 51	17
1312 232 014	-----	000 260 2397	ZF 51	68	1316 304 133	-----	000 262 7150	ZF 51	33
1312 232 016	-----	-----	ZF 51	60	1316 304 145	T 18071	-----	ZF 51	12
1312 232 028	-----	-----	ZF 51	60	1316 304 146	T 18072	-----	ZF 51	26
1312 298 911	T 18625	-----	ZF 51	52	1316 304 147	T 18073	-----	ZF 51	14
1312 302 036	-----	-----	ZF 51	43	1316 304 148	T 18074	-----	ZF 51	28

173

ZF 51
4-510

KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
50	T 16173	1297 298 955	-----	SYNCHRONIZER REPAIR KIT		16 S 220	ZF 51
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1	16 S 220	ZF 51
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 220	ZF 51
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 220	ZF 51
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 220	ZF 51
9	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 220	ZF 51
10	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1	16 S 220	ZF 51
51	T 18632	1315 298 018	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 220	ZF 51
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 220	ZF 51
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 220	ZF 51
12	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2	16 S 220	ZF 51
13	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 220	ZF 51
14	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	1	16 S 220	ZF 51
15	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 220	ZF 51
51	T 18061	1315 298 055	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 220	ZF 51
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 220	ZF 51
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 220	ZF 51
12	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 220	ZF 51
13	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	2	16 S 220	ZF 51
14	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 220	ZF 51
15	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 220	ZF 51
51	T 17865	1315 298 061	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 220	ZF 51
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 220	ZF 51
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 220	ZF 51
12	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 220	ZF 51
13	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	2	16 S 220	ZF 51
14	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 220	ZF 51
15	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 220	ZF 51
52	-----	1312 204 044	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 220	ZF 51
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 220	ZF 51
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 220	ZF 51
19	-----	1312 304 092	-----	SYNCHRONIZER CLUTCH GEAR	2	16 S 220	ZF 51
20	T 15059	1268 304 424	000 262 2636	SYNCHRONIZER INTERNAL RING	2	16 S 220	ZF 51
21	T 15065	1268 304 494	000 262 3436	SYNCHRONIZER INTERMEDIATE RING	2	16 S 220	ZF 51
22	T 15072	1268 304 525	000 262 3934	SYNCHRONIZER BLOCKING RING	2	16 S 220	ZF 51
23	T 17222	1312 304 159	000 262 4240	SYNCHRONIZER SHIFTING PLATE	3	16 S 220	ZF 51
24	T 18047	1312 304 158	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 220	ZF 51
25	T 14989	1310 304 175	001 262 1123	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 220	ZF 51
52	T 18625	1312 298 911	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 220	ZF 51
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 220	ZF 51
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 220	ZF 51
19	T 15090	1312 304 106	000 263 2120	SYNCHRONIZER CLUTCH GEAR (63 T.)	2	16 S 220	ZF 51
20	T 15059	1268 304 424	000 262 2636	SYNCHRONIZER INTERNAL RING	2	16 S 220	ZF 51
21	T 15065	1268 304 494	000 262 3436	SYNCHRONIZER INTERMEDIATE RING	2	16 S 220	ZF 51
22	T 15072	1268 304 525	000 262 3934	SYNCHRONIZER BLOCKING RING	2	16 S 220	ZF 51
23	T 17222	1312 304 159	000 262 4240	SYNCHRONIZER SHIFTING PLATE	3	16 S 220	ZF 51
24	T 18047	1312 304 158	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 220	ZF 51
25	T 14989	1310 304 175	001 262 1123	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 220	ZF 51

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
-----	-----	----	----------	-------------	------	-------	-------

53	T 18629	1313 204 003	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 220	ZF 51	
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING		3	16 S 220	ZF 51
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER		3	16 S 220	ZF 51
27	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING		2	16 S 220	ZF 51
28	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)		1	16 S 220	ZF 51
29	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)		1	16 S 220	ZF 51

53	T 18631	1313 298 909	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 220	ZF 51	
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING		3	16 S 220	ZF 51
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER		3	16 S 220	ZF 51
26	T 18035	1313 304 009	-----	SYNCHRONIZER CONE (63 T.)		2	16 S 220	ZF 51
27	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING		2	16 S 220	ZF 51
28	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)		1	16 S 220	ZF 51
29	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)		1	16 S 220	ZF 51

53	T 18060	1315 298 054	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 220	ZF 51	
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING		3	16 S 220	ZF 51
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER		3	16 S 220	ZF 51
26	T 18072	1316 304 146	-----	SYNCHRONIZER CONE (63 T.)		2	16 S 220	ZF 51
27	T 18077	1316 304 150	001 262 1034	SYNCHRONIZER BLOCKING RING		2	16 S 220	ZF 51
28	T 18074	1316 304 148	-----	SYNCHRONIZER HUB (63 T.)		1	16 S 220	ZF 51
29	T 18070	1315 304 136	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)		1	16 S 220	ZF 51

53	T 17864	1315 298 060	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 220	ZF 51	
7	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING		3	16 S 220	ZF 51
8	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER		3	16 S 220	ZF 51
26	T 17866	1316 304 156	-----	SYNCHRONIZER CONE (63 T.)		2	16 S 220	ZF 51
27	T 17873	1316 304 170	-----	SYNCHRONIZER BLOCKING RING		2	16 S 220	ZF 51
28	T 17869	1316 304 163	-----	SYNCHRONIZER HUB (63 T.)		1	16 S 220	ZF 51
29	T 17872	1316 304 169	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)		1	16 S 220	ZF 51

81	T 16168	1295 298 962	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 220	ZF 51	
71	T 08908	1296 233 006	000 263 1720	SYNCHRONIZER FLANGE WITH CONE (63 T.)		1	16 S 220	ZF 51
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING		2	16 S 220	ZF 51
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER		9	16 S 220	ZF 51
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER		9	16 S 220	ZF 51
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER		9	16 S 220	ZF 51
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)		1	16 S 220	ZF 51
78	T 15934	1297 233 056	000 263 2220	SYNCHRONIZER CONE (63 T.)		1	16 S 220	ZF 51



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16S151


177

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 55
4-510

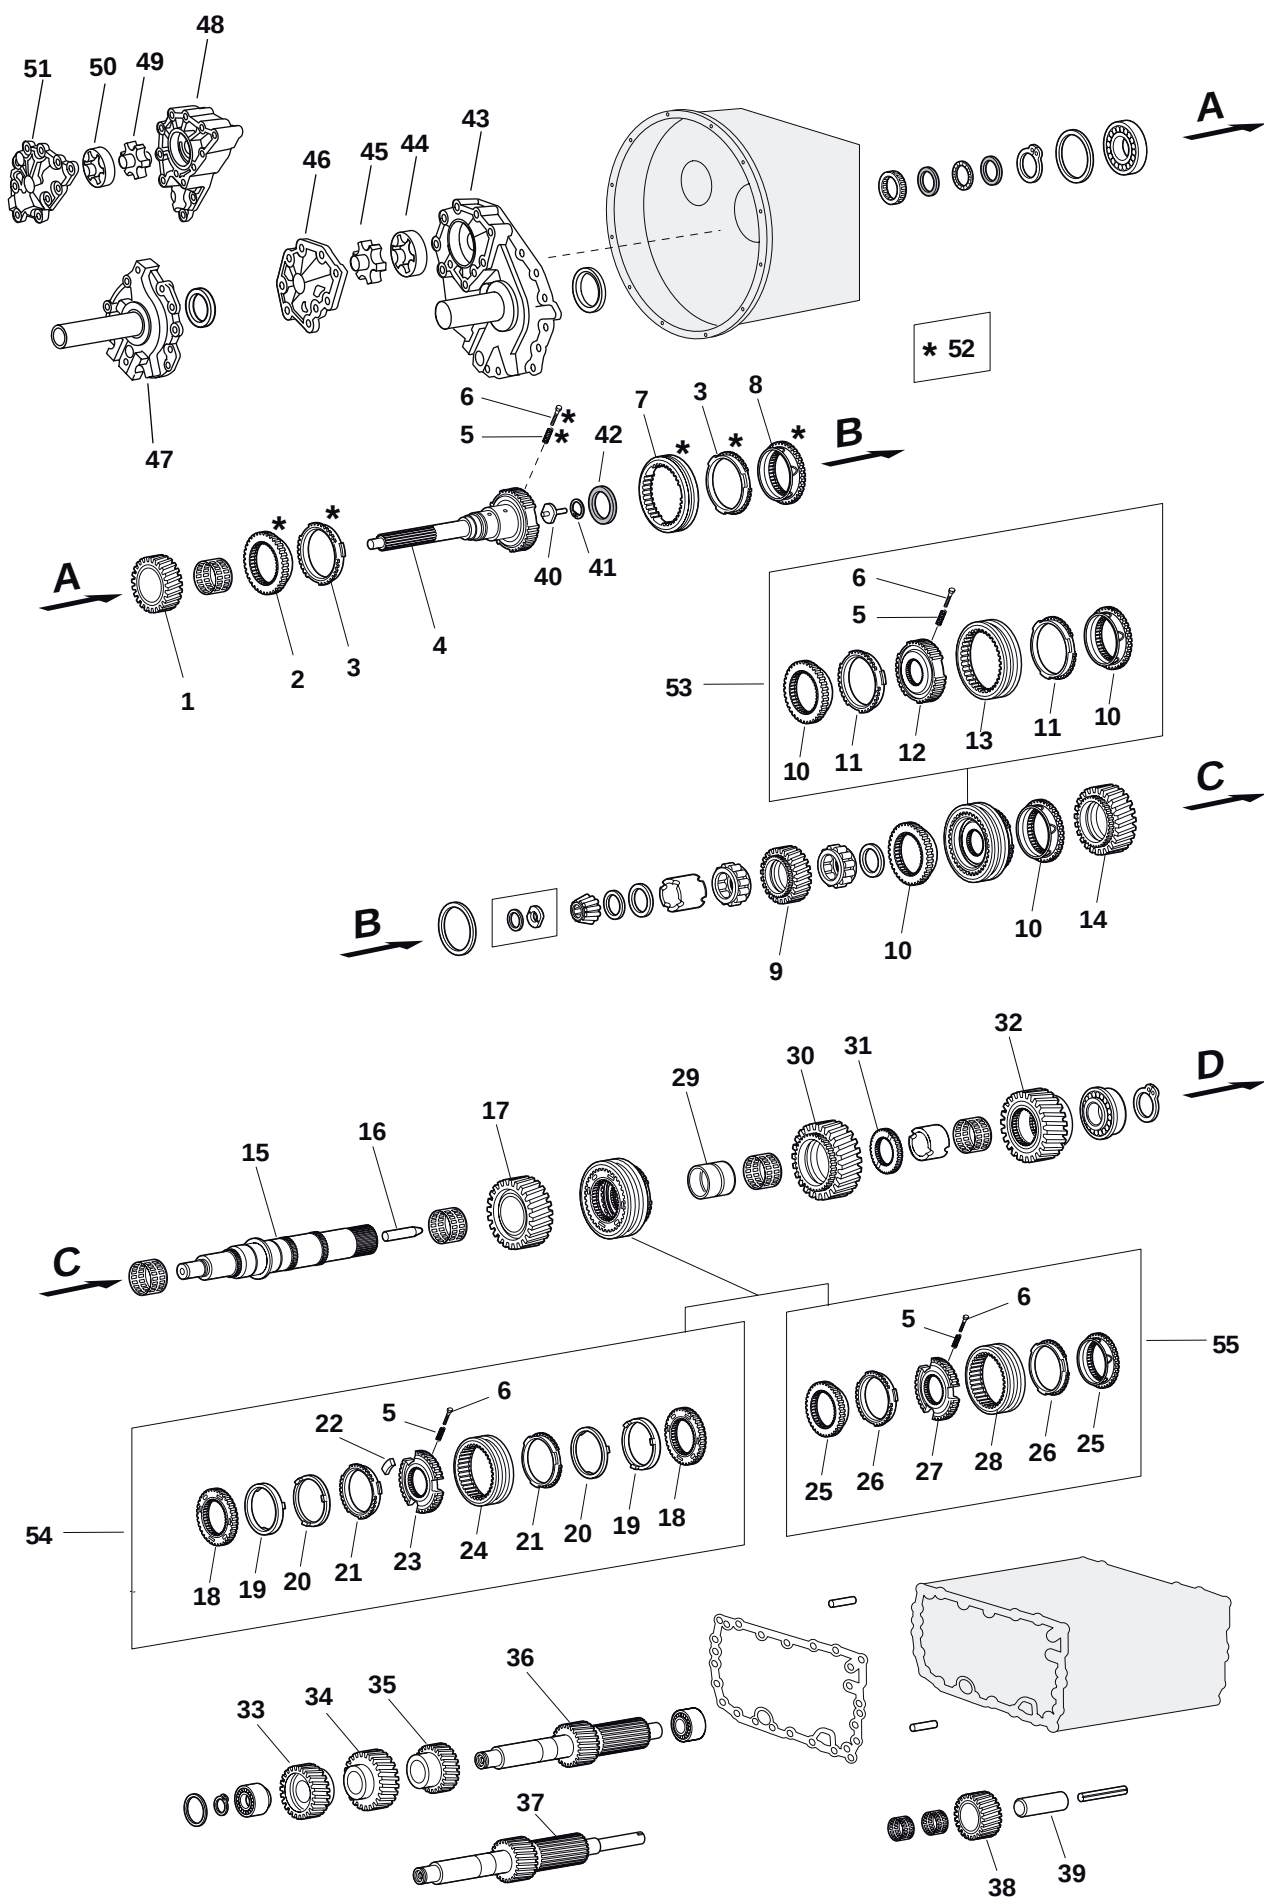

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	-----	1315 302 007	-----	CONSTANT GEAR (30 T.)	
1	T 18554	1315 302 008	-----	CONSTANT GEAR (34-40 T.)	
1	-----	1315 302 157	-----	CONSTANT GEAR (30 T.)	
1	T 19174	1315 302 158	-----	CONSTANT GEAR (30-35 T.)	
1	T 17790	1315 302 173	-----	CONSTANT GEAR (30-34 T.)	
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1
3	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	1
4	T 17603	1315 202 022	-----	MAIN DRIVE GEAR (57 T.)	A
4	T 17692	1315 202 037	-----	MAIN DRIVE GEAR (57 T.)	B
4	-----	1315 202 038	-----	MAIN DRIVE GEAR	C
4	-----	1315 202 039	-----	MAIN DRIVE GEAR (48 T.)	D
4	T 20227	1315 202 040	-----	MAIN DRIVE GEAR (57 T.)	E
4	-----	1315 202 041	-----	MAIN DRIVE GEAR	F
4	-----	1315 202 042	-----	MAIN DRIVE GEAR	G
4	-----	1315 202 043	-----	MAIN DRIVE GEAR	H
4	-----	1315 202 044	-----	MAIN DRIVE GEAR	I
4	-----	1315 202 045	-----	MAIN DRIVE GEAR	J
4	-----	1315 202 046	-----	MAIN DRIVE GEAR	K
4	-----	1315 202 047	-----	MAIN DRIVE GEAR	L
4	-----	1315 202 048	-----	MAIN DRIVE GEAR	M
4	-----	1315 202 050	-----	MAIN DRIVE GEAR	N
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	1-2-3-4-5-6-7-8-9
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	1-2-3-4-5-6-7-8-9
7	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
8	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1
9	T 17807	1315 304 017	-----	FOURTH SPEED GEAR (30-30-30 T.)	
9	T 17696	1315 304 089	-----	FOURTH SPEED GEAR (30-32-30 T.)	
10	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2
10	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	3
10	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	4
11	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
11	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2
11	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	3
11	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	4
12	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	2
12	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	3
12	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	4
13	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	2
13	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	3
13	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	4
14	T 18062	1315 304 027	-----	THIRD SPEED GEAR (34-30 T.)	
14	T 18264	1315 304 028	-----	THIRD SPEED GEAR (32-30 T.)	
15	T 18269	1315 304 029	-----	MAINSHAFT	
15	T 17834	1315 304 130	-----	MAINSHAFT	
15	T 17608	1315 304 131	-----	MAINSHAFT	
16	T 19997	1312 304 150	000 262 1953	MAINSHAFT TUBE	
17	T 19184	1315 304 025	-----	SECOND SPEED GEAR (38-30 T.)	
17	-----	1315 304 026	-----	SECOND SPEED GEAR (37 T.)	
18	T 15090	1312 304 106	000 263 2120	SYNCHRONIZER CLUTCH GEAR (63 T.)	5
19	T 15059	1268 304 424	000 262 2636	SYNCHRONIZER INTERNAL RING	5
20	T 15065	1268 304 494	000 262 3436	SYNCHRONIZER INTERMEDIATE RING	5
21	T 15072	1268 304 525	000 262 3934	SYNCHRONIZER BLOCKING RING	5
22	T 17222	1312 304 159	000 262 4240	SYNCHRONIZER SHIFTING PLATE	5
23	T 18047	1312 304 158	-----	SYNCHRONIZER HUB (63 T.)	5
24	T 14989	1310 304 175	001 262 1123	SYNCHRONIZER SLIDING COLLAR (63 T.)	5
25	T 18035	1313 304 009	-----	SYNCHRONIZER CONE (63 T.)	7
25	T 18072	1316 304 146	-----	SYNCHRONIZER CONE (63 T.)	8
25	T 17866	1316 304 156	-----	SYNCHRONIZER CONE (63 T.)	9
26	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	6-7
26	T 18028	1297 304 485	-----	SYNCHRONIZER BLOCKING RING	
26	T 18077	1316 304 150	001 262 1034	SYNCHRONIZER BLOCKING RING	8
26	T 17873	1316 304 170	-----	SYNCHRONIZER BLOCKING RING	9
27	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	6-7
27	T 18074	1316 304 148	-----	SYNCHRONIZER HUB (63 T.)	8
27	T 17869	1316 304 163	-----	SYNCHRONIZER HUB (63 T.)	9
28	T 18070	1315 304 136	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	8
28	T 17872	1316 304 169	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	9
28	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	6-7
29	T 20028	1313 304 038	-----	FIRST SPEED GEAR SLEEVE	
30	T 19536	1315 304 004	-----	FIRST SPEED GEAR (47-30 T.)	
30	-----	1315 304 014	-----	FIRST SPEED GEAR (44 T.)	

179

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme


Items with same letter or number must be coupled together

(*) Per la composizione dei kit vedi pagina 186

(*) For the composition of the kits please see page 186

16 S 151

ZF 55
4-510

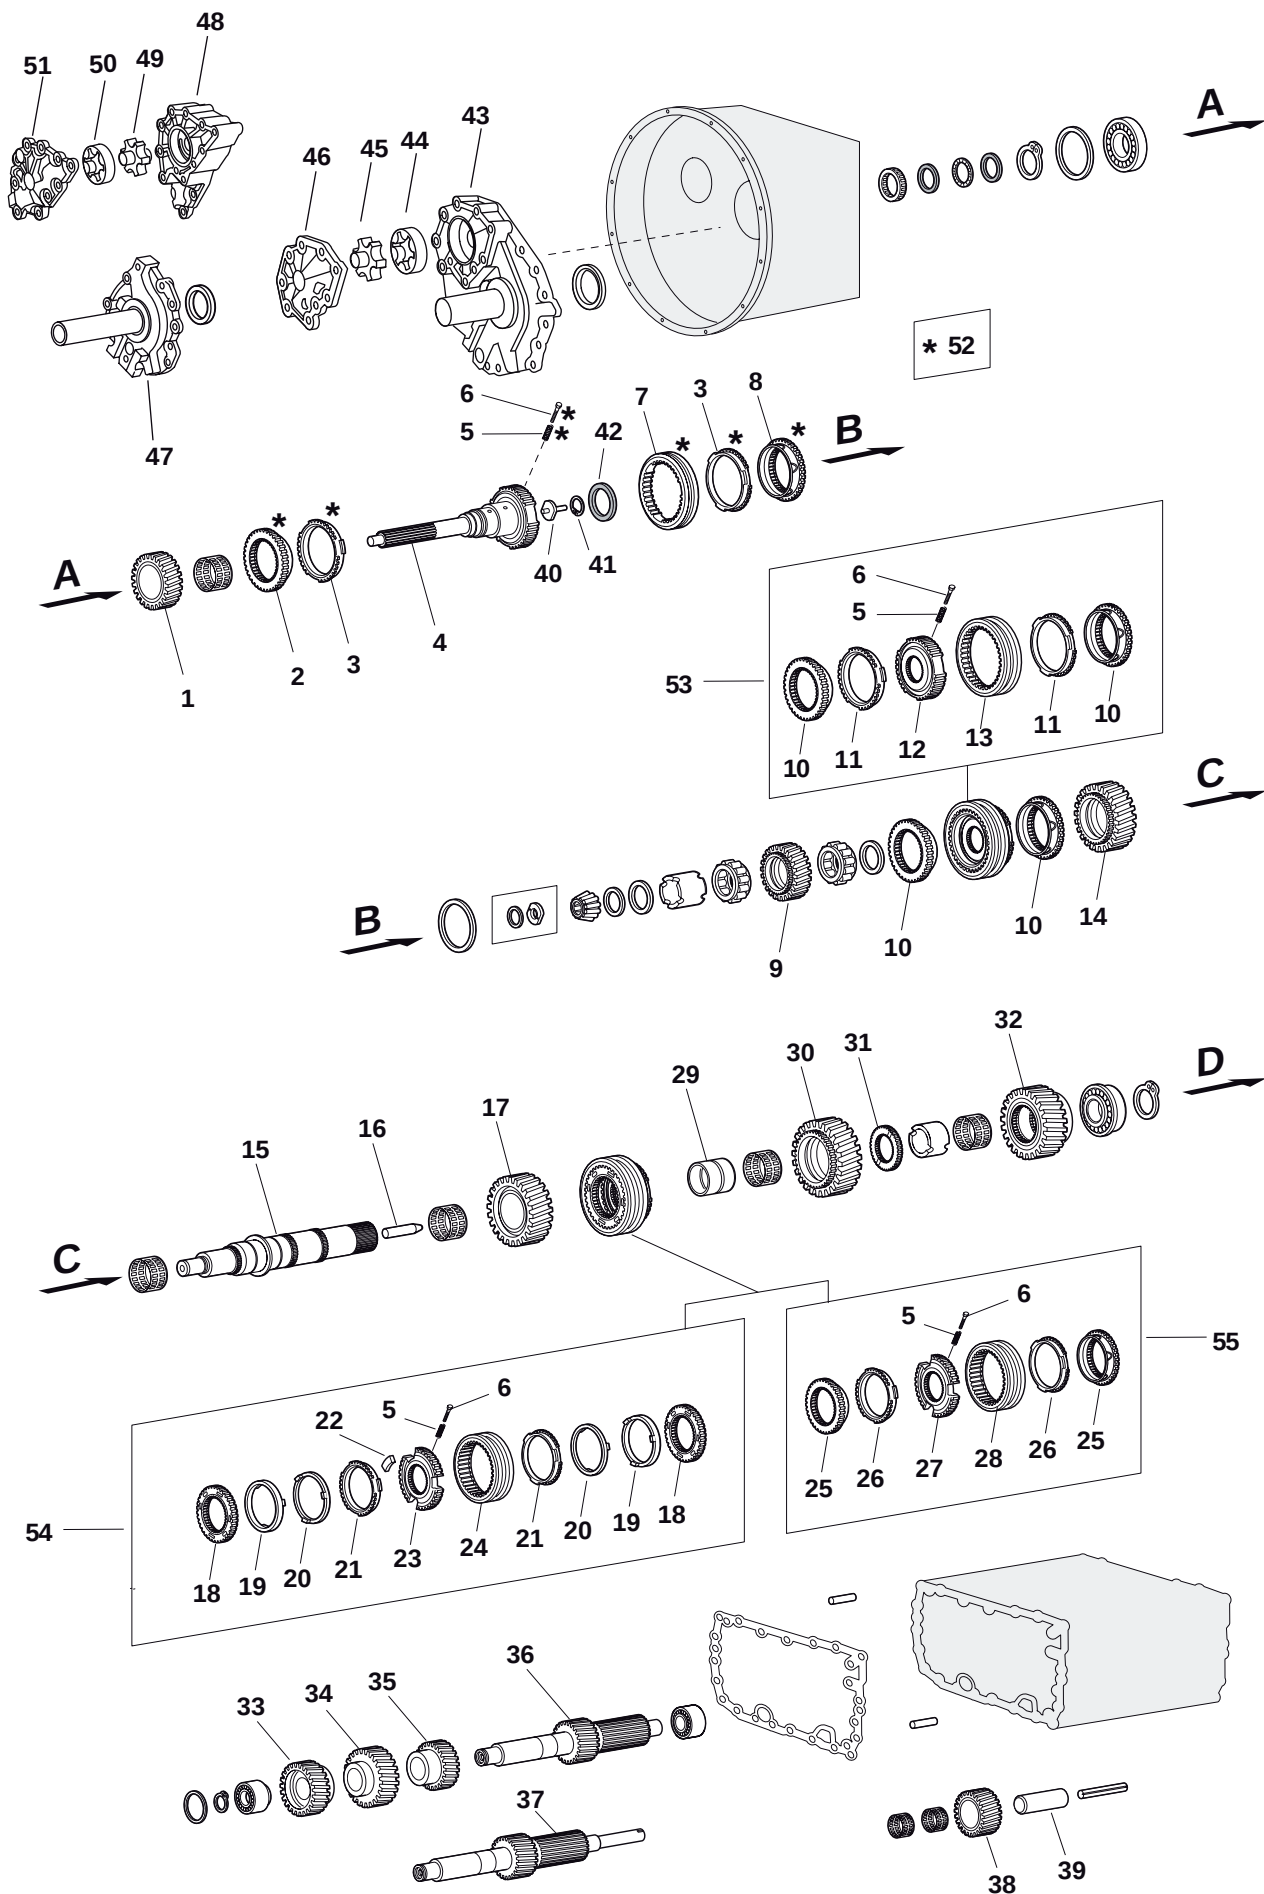

181

Articoli con la stessa lettera o numero vanno accoppiati assieme





Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 186

(*) For the composition of the kits please see page 186.

.

ZF 55
4-510

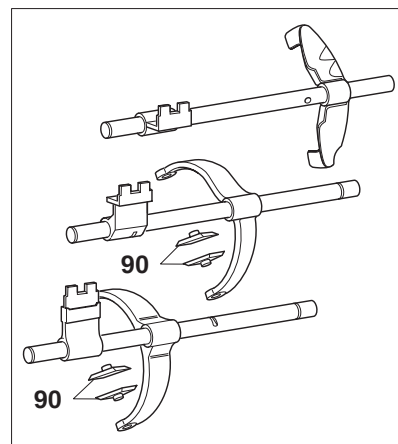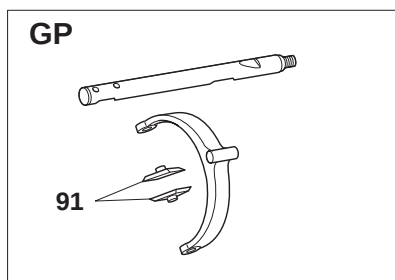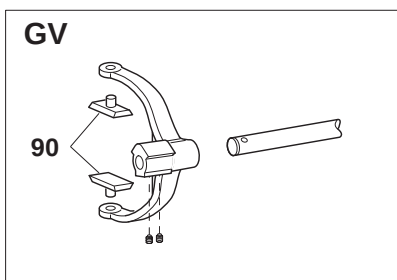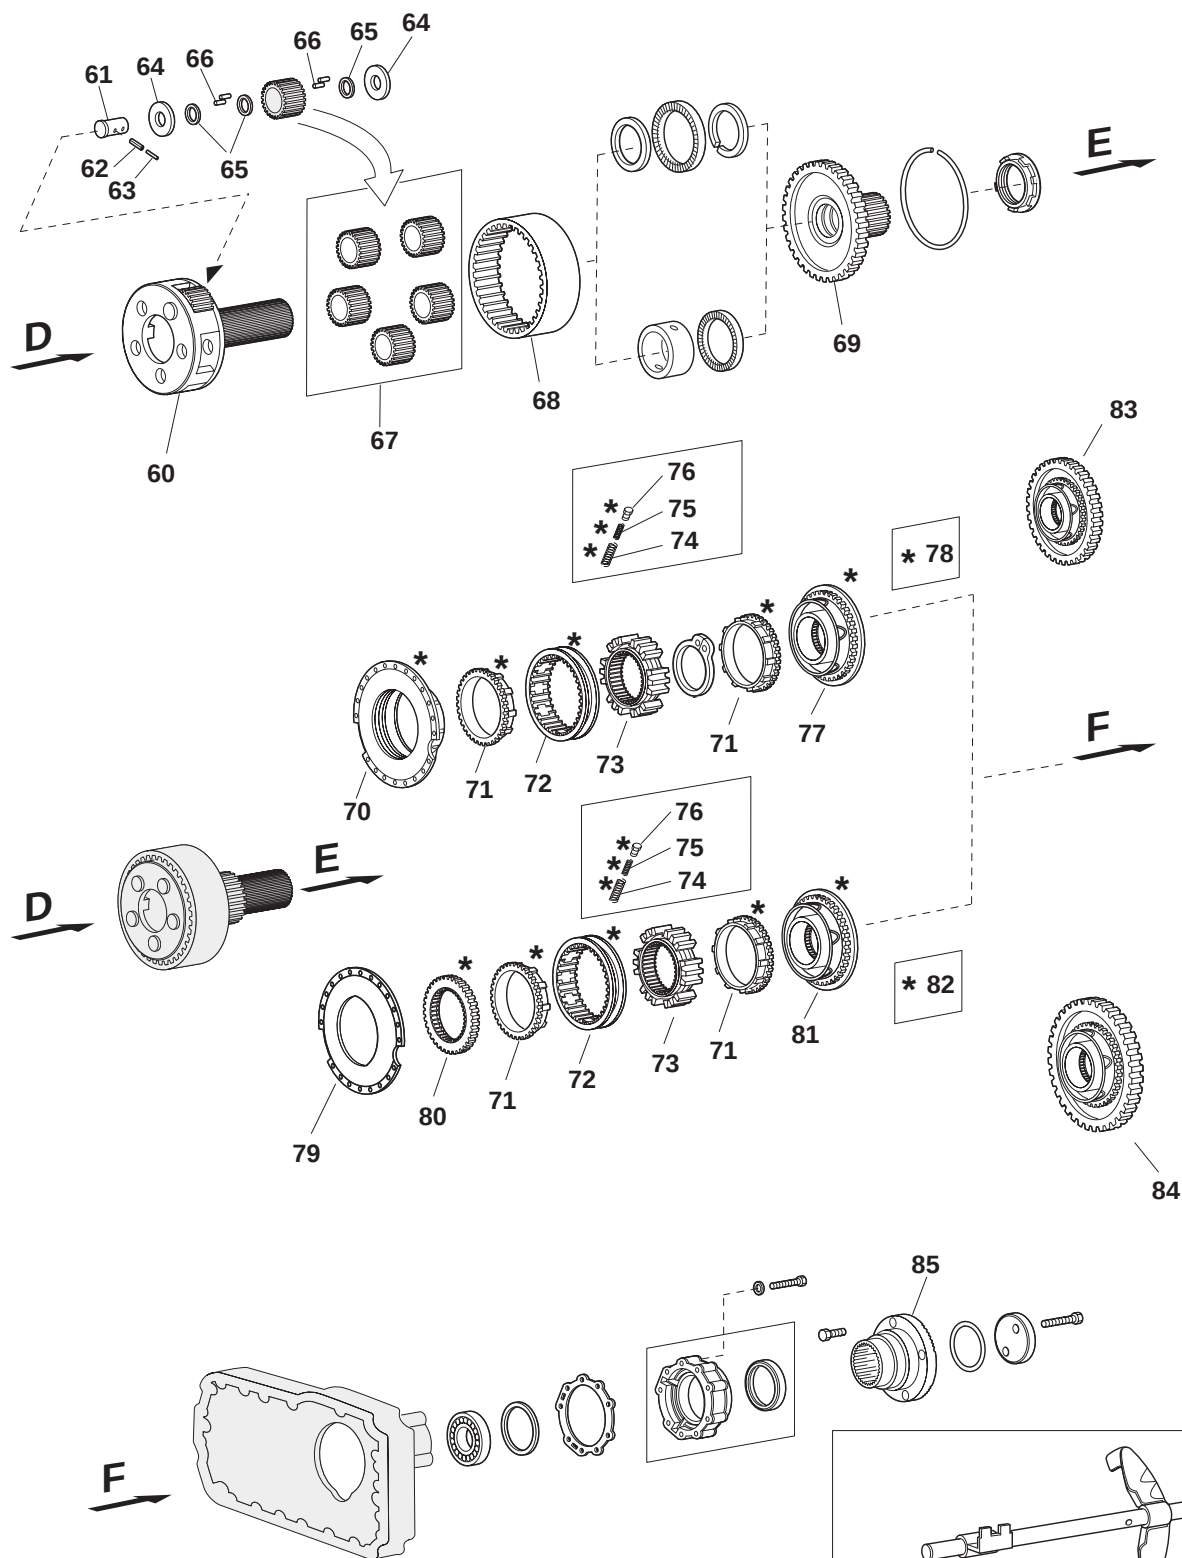

183

ZF 55
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 308 981	-----	000 263 0762	ZF 55	64	1315 202 045	-----	-----	ZF 55	4
0501 314 060	T 18524	-----	ZF 55	42	1315 202 046	-----	-----	ZF 55	4
0630 502 027	T 18530	-----	ZF 55	41	1315 202 047	-----	-----	ZF 55	4
0630 531 055	T 19907	003 994 3841	ZF 55	-----	1315 202 048	-----	-----	ZF 55	4
0631 329 051	-----	-----	ZF 55	62	1315 202 050	-----	-----	ZF 55	4
0631 329 167	-----	-----	ZF 55	63	1315 202 055	-----	-----	ZF 55	47
0635 331 390	T 19914	004 981 8625	ZF 55	-----	1315 202 065	-----	-----	ZF 55	47
0730 107 168	-----	000 264 0947	ZF 55	65	1315 232 001	-----	-----	ZF 55	67
0730 260 330	T 16568	000 268 2150	ZF 55	-----	1315 232 010	T 20230	-----	ZF 55	67
0732 040 385	T 08950	336 264 0693	ZF 55	74	1315 232 016	T 20235	-----	ZF 55	60
0732 040 386	T 08951	336 264 0793	ZF 55	75	1315 233 006	T 11732	-----	ZF 55	70
0732 040 409	T 13440	005 993 6101	ZF 55	5	1315 233 023	-----	-----	ZF 55	83
0735 470 164	-----	-----	ZF 55	66	1315 238 001	-----	-----	ZF 55	85
1240 304 278	T 08949	336 264 0239	ZF 55	76	1315 298 001	T 19441	-----	ZF 55	-----
1240 317 075	T 08917	000 264 1423	ZF 55	-----	1315 298 002	T 19427	-----	ZF 55	-----
1268 304 424	T 15059	000 262 2636	ZF 55	19	1315 298 003	T 19433	-----	ZF 55	-----
1268 304 494	T 15065	000 262 3436	ZF 55	20	1315 298 018	T 18632	-----	ZF 55	53
1268 304 525	T 15072	000 262 3934	ZF 55	21	1315 298 034	T 18078	-----	ZF 55	82
-----	-----	--- 2 --- 4 ---	ZF --	-----	-----	16175	-----	ZF --	7-
1295 332 086	-----	001 263 2110	ZF 55	68	1315 298 054	T 18060	-----	ZF 55	55
1295 338 083	T 19927	000 264 5150	ZF 55	-----	1315 298 055	T 18061	-----	ZF 55	53
1296 213 028	T 11462	000 264 4206	ZF 55	-----	1315 298 060	T 17864	-----	ZF 55	55
1296 232 002	-----	-----	ZF 55	60	1315 298 061	T 17865	-----	ZF 55	53
1296 333 022	T 09061	000 263 0234	ZF 55	71	1315 302 007	-----	-----	ZF 55	1
1296 333 023	T 09062	000 263 0523	ZF 55	72	1315 302 008	T 18554	-----	ZF 55	1
1296 333 045	T 15084	000 263 0534	ZF 55	71	1315 302 013	-----	-----	ZF 55	46
1296 333 046	-----	-----	ZF 55	79	1315 302 045	-----	-----	ZF 55	43
1296 333 050	T 18042	-----	ZF 55	80	1315 302 047	-----	-----	ZF 55	43
1296 334 004	T 17892	000 265 0649	ZF 55	91	1315 302 057	-----	-----	ZF 55	43
1297 203 005	T 19936	000 264 4218	ZF 55	-----	1315 302 075	-----	-----	ZF 55	47
1297 298 955	T 16173	-----	ZF 55	52	1315 302 113	-----	-----	ZF 55	43
1297 304 401	T 17880	000 262 4934	ZF 55	26	1315 302 120	T 20138	-----	ZF 55	51
1297 304 402	T 11724	000 262 3834	ZF 55	3	1315 302 121	T 20143	-----	ZF 55	48
1297 304 402	T 11724	000 262 3834	ZF 55	11	1315 302 124	-----	-----	ZF 55	47
1297 304 436	T 15096	000 264 0839	ZF 55	6	1315 302 134	-----	-----	ZF 55	47
1297 304 484	T 15078	000 262 7034	ZF 55	3	1315 302 136	-----	-----	ZF 55	47
1297 304 484	T 15078	000 262 7034	ZF 55	11	1315 302 141	-----	-----	ZF 55	47
1297 304 485	T 18028	-----	ZF 55	26	1315 302 157	-----	-----	ZF 55	1
1297 306 120	T 17901	000 268 1149	ZF 55	90	1315 302 158	T 19174	-----	ZF 55	1
1297 333 110	-----	-----	ZF 55	85	1315 302 173	T 17790	-----	ZF 55	1
1310 304 175	T 14989	001 262 1123	ZF 55	24	1315 302 181	-----	-----	ZF 55	47
1310 304 202	T 14983	001 262 1823	ZF 55	7	1315 302 193	-----	-----	ZF 55	47
1310 304 202	T 14983	001 262 1823	ZF 55	13	1315 302 196	T 18533	-----	ZF 55	40
1312 298 911	T 18625	-----	ZF 55	54	1315 303 004	T 19178	-----	ZF 55	35
1312 304 027	T 11729	000 262 5535	ZF 55	2	1315 303 008	-----	-----	ZF 55	33
1312 304 027	T 11729	000 262 5535	ZF 55	10	1315 303 010	-----	-----	ZF 55	35
1312 304 052	T 17886	000 262 5835	ZF 55	12	1315 303 027	T 20148	-----	ZF 55	44
1312 304 056	T 15103	-----	ZF 55	8	1315 303 027	T 20148	-----	ZF 55	50
1312 304 106	T 15090	000 263 2120	ZF 55	18	1315 303 030	-----	-----	ZF 55	37
1312 304 150	T 19997	000 262 1953	ZF 55	16	1315 303 041	-----	-----	ZF 55	36
1312 304 158	T 18047	-----	ZF 55	23	1315 303 042	-----	-----	ZF 55	36
1312 304 159	T 17222	000 262 4240	ZF 55	22	1315 303 046	T 17794	-----	ZF 55	34
1313 204 003	T 18629	-----	ZF 55	55	1315 303 048	-----	-----	ZF 55	36
1313 232 003	-----	-----	ZF 55	67	1315 303 049	-----	-----	ZF 55	36
1313 233 001	T 14809	000 263 2020	ZF 55	77	1315 303 050	T 18466	-----	ZF 55	34
1313 298 909	T 18631	-----	ZF 55	55	1315 303 051	T 18559	-----	ZF 55	33
1313 304 008	T 18287	-----	ZF 55	27	1315 303 052	T 17800	-----	ZF 55	33
1313 304 009	T 18035	-----	ZF 55	25	1315 304 004	T 19536	-----	ZF 55	30
1313 304 038	T 20028	-----	ZF 55	29	1315 304 006	T 19542	-----	ZF 55	32
1313 332 020	-----	-----	ZF 55	69	1315 304 013	-----	-----	ZF 55	32
1313 333 001	T 18052	-----	ZF 55	73	1315 304 014	-----	-----	ZF 55	30
1313 338 002	-----	-----	ZF 55	85	1315 304 017	T 17807	-----	ZF 55	9
1313 338 011	-----	-----	ZF 55	85	1315 304 018	T 18563	-----	ZF 55	31
1314 202 039	T 20132	-----	ZF 55	49	1315 304 025	T 19184	-----	ZF 55	17
1315 201 053	-----	-----	ZF 55	39	1315 304 026	-----	-----	ZF 55	17
1315 201 054	-----	-----	ZF 55	39	1315 304 027	T 18062	-----	ZF 55	14
1315 202 014	-----	-----	ZF 55	45	1315 304 028	T 18264	-----	ZF 55	14
1315 202 022	T 17603	-----	ZF 55	4	1315 304 029	T 18269	-----	ZF 55	15
1315 202 037	T 17692	-----	ZF 55	4	1315 304 089	T 17696	-----	ZF 55	9
1315 202 038	-----	-----	ZF 55	4	1315 304 130	T 17834	-----	ZF 55	15
1315 202 039	-----	-----	ZF 55	4	1315 304 131	T 17608	-----	ZF 55	15
1315 202 040	T 20227	-----	ZF 55	4	1315 304 135	T 18068	-----	ZF 55	13
1315 202 041	-----	-----	ZF 55	4	1315 304 136	T 18070	-----	ZF 55	28
1315 202 042	-----	-----	ZF 55	4	1315 305 002	-----	-----	ZF 55	38
1315 202 043	-----	-----	ZF 55	4	1315 305 005	-----	-----	ZF 55	38
1315 202 044	-----	-----	ZF 55	4	1315 305 009	-----	-----	ZF 55	39

185

ZF 55
4-510

KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
52	T 16173	1297 298 955	-----	SYNCHRONIZER REPAIR KIT		16 S 151	ZF 55
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1	16 S 151	ZF 55
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 151	ZF 55
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 151	ZF 55
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 151	ZF 55
7	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 151	ZF 55
8	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1	16 S 151	ZF 55
53	T 18632	1315 298 018	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 151	ZF 55
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 151	ZF 55
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 151	ZF 55
10	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2	16 S 151	ZF 55
11	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 151	ZF 55
12	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	1	16 S 151	ZF 55
13	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 151	ZF 55
53	T 18061	1315 298 055	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 151	ZF 55
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 151	ZF 55
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 151	ZF 55
10	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 151	ZF 55
11	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	2	16 S 151	ZF 55
12	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 151	ZF 55
13	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 151	ZF 55
53	T 17865	1315 298 061	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 151	ZF 55
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 151	ZF 55
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 151	ZF 55
10	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 151	ZF 55
11	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	2	16 S 151	ZF 55
12	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 151	ZF 55
13	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 151	ZF 55
54	T 18625	1312 298 911	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 151	ZF 55
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 151	ZF 55
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 151	ZF 55
18	T 15090	1312 304 106	000 263 2120	SYNCHRONIZER CLUTCH GEAR (63 T.)	2	16 S 151	ZF 55
19	T 15059	1268 304 424	000 262 2636	SYNCHRONIZER INTERNAL RING	2	16 S 151	ZF 55
20	T 15065	1268 304 494	000 262 3436	SYNCHRONIZER INTERMEDIATE RING	2	16 S 151	ZF 55
21	T 15072	1268 304 525	000 262 3934	SYNCHRONIZER BLOCKING RING	2	16 S 151	ZF 55
22	T 17222	1312 304 159	000 262 4240	SYNCHRONIZER SHIFTING PLATE	3	16 S 151	ZF 55
23	T 18047	1312 304 158	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 151	ZF 55
24	T 14989	1310 304 175	001 262 1123	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 151	ZF 55
54	T 18629	1313 204 003	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 151	ZF 55
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 151	ZF 55
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 151	ZF 55
26	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	2	16 S 151	ZF 55
27	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 151	ZF 55
28	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 151	ZF 55

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
-----	-----	----	----------	-------------	------	-------	-------

54	T 18631	1313 298 909	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 151	ZF 55
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 151	ZF 55
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 151	ZF 55
25	T 18035	1313 304 009	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 151	ZF 55
26	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	2	16 S 151	ZF 55
27	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 151	ZF 55
28	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 151	ZF 55

54	T 18060	1315 298 054	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 151	ZF 55
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 151	ZF 55
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 151	ZF 55
25	T 18072	1316 304 146	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 151	ZF 55
26	T 18077	1316 304 150	001 262 1034	SYNCHRONIZER BLOCKING RING	2	16 S 151	ZF 55
27	T 18074	1316 304 148	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 151	ZF 55
28	T 18070	1315 304 136	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 151	ZF 55

54	T 17864	1315 298 060	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 151	ZF 55
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 151	ZF 55
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 151	ZF 55
25	T 17866	1316 304 156	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 151	ZF 55
26	T 17873	1316 304 170	-----	SYNCHRONIZER BLOCKING RING	2	16 S 151	ZF 55
27	T 17869	1316 304 163	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 151	ZF 55
28	T 17872	1316 304 169	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 151	ZF 55

78	T 16175	1315 298 047	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 151	ZF 55
70	T 11732	1315 233 006	-----	SYNCHRONIZER FLANGE WITH CONE (63 T.)	1	16 S 151	ZF 55
71	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 151	ZF 55
72	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 151	ZF 55
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	9	16 S 151	ZF 55
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	9	16 S 151	ZF 55
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	9	16 S 151	ZF 55
77	T 14809	1313 233 001	000 263 2020	SYNCHRONIZER CONE (63 T.)	1	16 S 151	ZF 55

82	T 18078	1315 298 034	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 151	ZF 55
71	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 151	ZF 55
72	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 151	ZF 55
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	9	16 S 151	ZF 55
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	9	16 S 151	ZF 55
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	9	16 S 151	ZF 55
80	T 18042	1296 333 050	-----	SYNCHRONIZER CONE (63-58 T.)	1	16 S 151	ZF 55
81	T 15940	1316 233 015	-----	SYNCHRONIZER CONE (63 T.)	1	16 S 151	ZF 55



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16S181


189

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 56
4-510

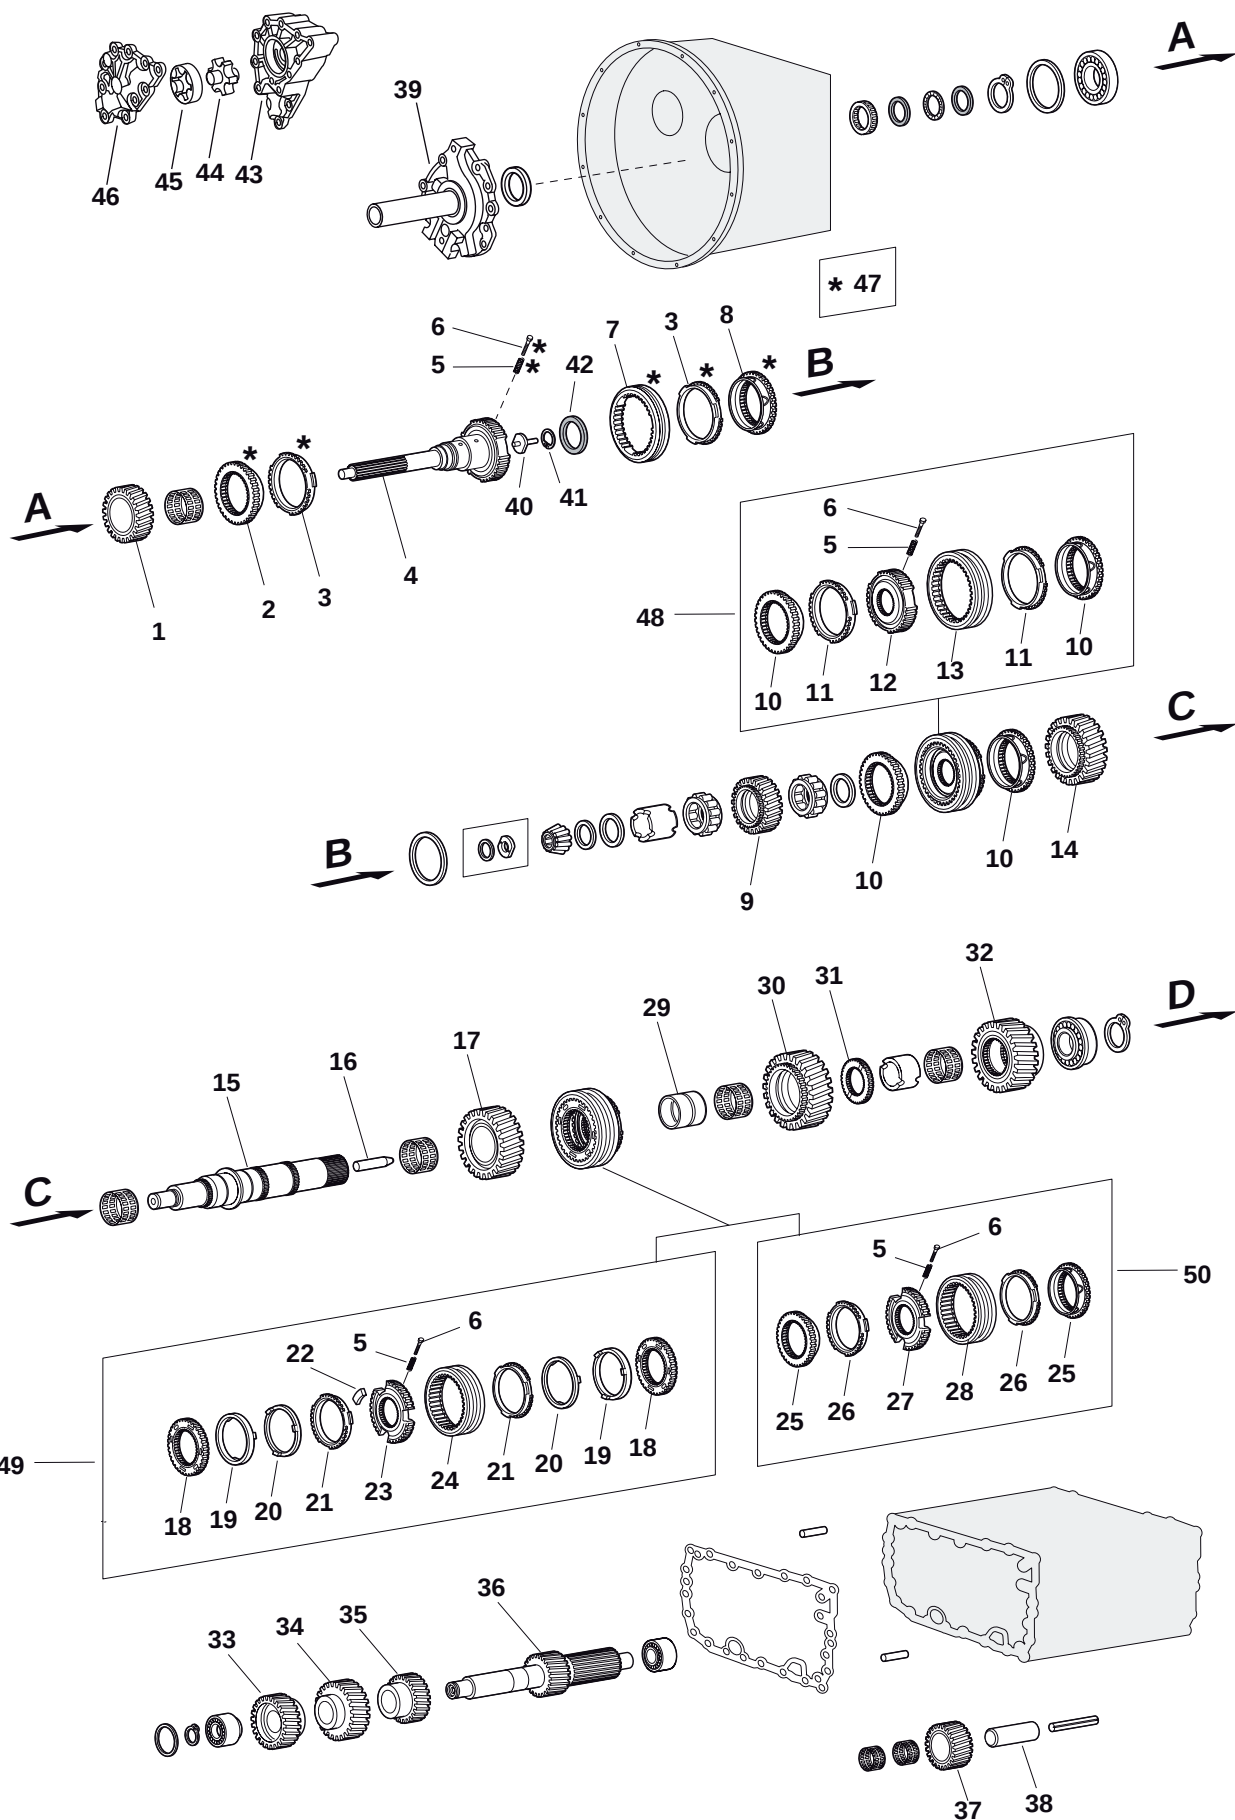

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	T 19379	1316 302 057	-----	CONSTANT GEAR (35-30 T.)	
1	T 19140	1316 302 066	-----	CONSTANT GEAR (30-30 T.)	
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1
3	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	1
4	T 17909	1316 202 025	-----	MAIN DRIVE GEAR (57 T.)	A
4	-----	1316 202 026	-----	MAIN DRIVE GEAR (57 T.)	B
4	-----	1316 202 027	-----	MAIN DRIVE GEAR	C
4	-----	1316 202 031	-----	MAIN DRIVE GEAR	D
4	-----	1316 202 038	-----	MAIN DRIVE GEAR	E
4	-----	1316 202 039	-----	MAIN DRIVE GEAR	F
4	-----	1316 221 017	-----	MAIN DRIVE GEAR	
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	1-2-3-4-5-6-7-8-9
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	1-2-3-4-5-6-7-8-9
7	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
8	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1
9	T 17914	1316 304 103	-----	FOURTH SPEED GEAR (30-32-30 T.)	
10	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2
10	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	3
10	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	4
11	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
11	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2
11	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	3
11	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	4
12	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	2
12	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	3
12	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	4
13	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	2
13	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	3
13	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	4
14	T 19166	1316 304 094	-----	THIRD SPEED GEAR (34-30 T.)	
15	T 17839	1316 304 132	-----	MAINSHAFT	
16	T 19997	1312 304 150	000 262 1953	MAINSHAFT TUBE	
17	T 19160	1316 304 002	-----	SECOND SPEED GEAR (38-30 T.)	
18	T 15090	1312 304 106	000 263 2120	SYNCHRONIZER CLUTCH GEAR (63 T.)	5
19	T 15059	1268 304 424	000 262 2636	SYNCHRONIZER INTERNAL RING	5
20	T 15065	1268 304 494	000 262 3436	SYNCHRONIZER INTERMEDIATE RING	5
21	T 15072	1268 304 525	000 262 3934	SYNCHRONIZER BLOCKING RING	5
22	T 17222	1312 304 159	000 262 4240	SYNCHRONIZER SHIFTING PLATE	5
23	T 18047	1312 304 158	-----	SYNCHRONIZER HUB (63 T.)	5
24	T 14989	1310 304 175	001 262 1123	SYNCHRONIZER SLIDING COLLAR (63 T.)	5
25	T 18035	1313 304 009	-----	SYNCHRONIZER CONE (63 T.)	7
25	T 18072	1316 304 146	-----	SYNCHRONIZER CONE (63 T.)	8
25	T 17866	1316 304 156	-----	SYNCHRONIZER CONE (63 T.)	9
26	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	6-7
26	T 18028	1297 304 485	-----	SYNCHRONIZER BLOCKING RING	
26	T 18077	1316 304 150	001 262 1034	SYNCHRONIZER BLOCKING RING	8
26	T 17873	1316 304 170	-----	SYNCHRONIZER BLOCKING RING	9
27	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	6-7
27	T 18074	1316 304 148	-----	SYNCHRONIZER HUB (63 T.)	8
27	T 17869	1316 304 163	-----	SYNCHRONIZER HUB (63 T.)	9
28	T 18070	1315 304 136	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	8
28	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	6-7
28	T 17872	1316 304 169	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	9
29	-----	1312 304 084	-----	FIRST SPEED GEAR SLEEVE	
30	T 19401	1316 304 010	-----	FIRST SPEED GEAR (47-30 T.)	
31	T 18461	1312 304 124	-----	FIRST SPEED AND REVERSE GEAR CONE (23 T.)	
32	T 19407	1316 304 012	-----	REVERSE GEAR (44-23 T.)	
33	-----	1316 303 055	-----	COUNTERSHAFT CONSTANT GEAR (39 T.)	
33	T 19145	1316 303 056	-----	COUNTERSHAFT CONSTANT GEAR (32 T.)	
34	T 19155	1316 303 063	-----	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	
35	T 19150	1316 303 058	-----	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	
36	T 19046	1316 303 033	-----	COUNTERSHAFT (17-20 T.)	
37	-----	1316 305 001	-----	REVERSE IDLER GEAR (22 T.)	
38	-----	1315 305 009	-----	REVERSE IDLER GEAR SHAFT	
38	-----	1316 201 029	-----	REVERSE IDLER GEAR SHAFT	
39	-----	1315 302 072	-----	MAIN DRIVE GEAR BEARING RETAINER	B
39	-----	1315 302 075	-----	MAIN DRIVE GEAR BEARING RETAINER	A
39	-----	1315 302 124	-----	MAIN DRIVE GEAR BEARING RETAINER	C
39	-----	1315 302 136	-----	MAIN DRIVE GEAR BEARING RETAINER	A E
39	-----	1315 302 141	-----	MAIN DRIVE GEAR BEARING RETAINER	D F
40	T 18533	1315 302 196	-----	MAIN DRIVE GEAR OIL TUBE	10

191

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme


Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 197

(*) For the composition of the kits please see page 197.

16 S 181

ZF 56
4-510

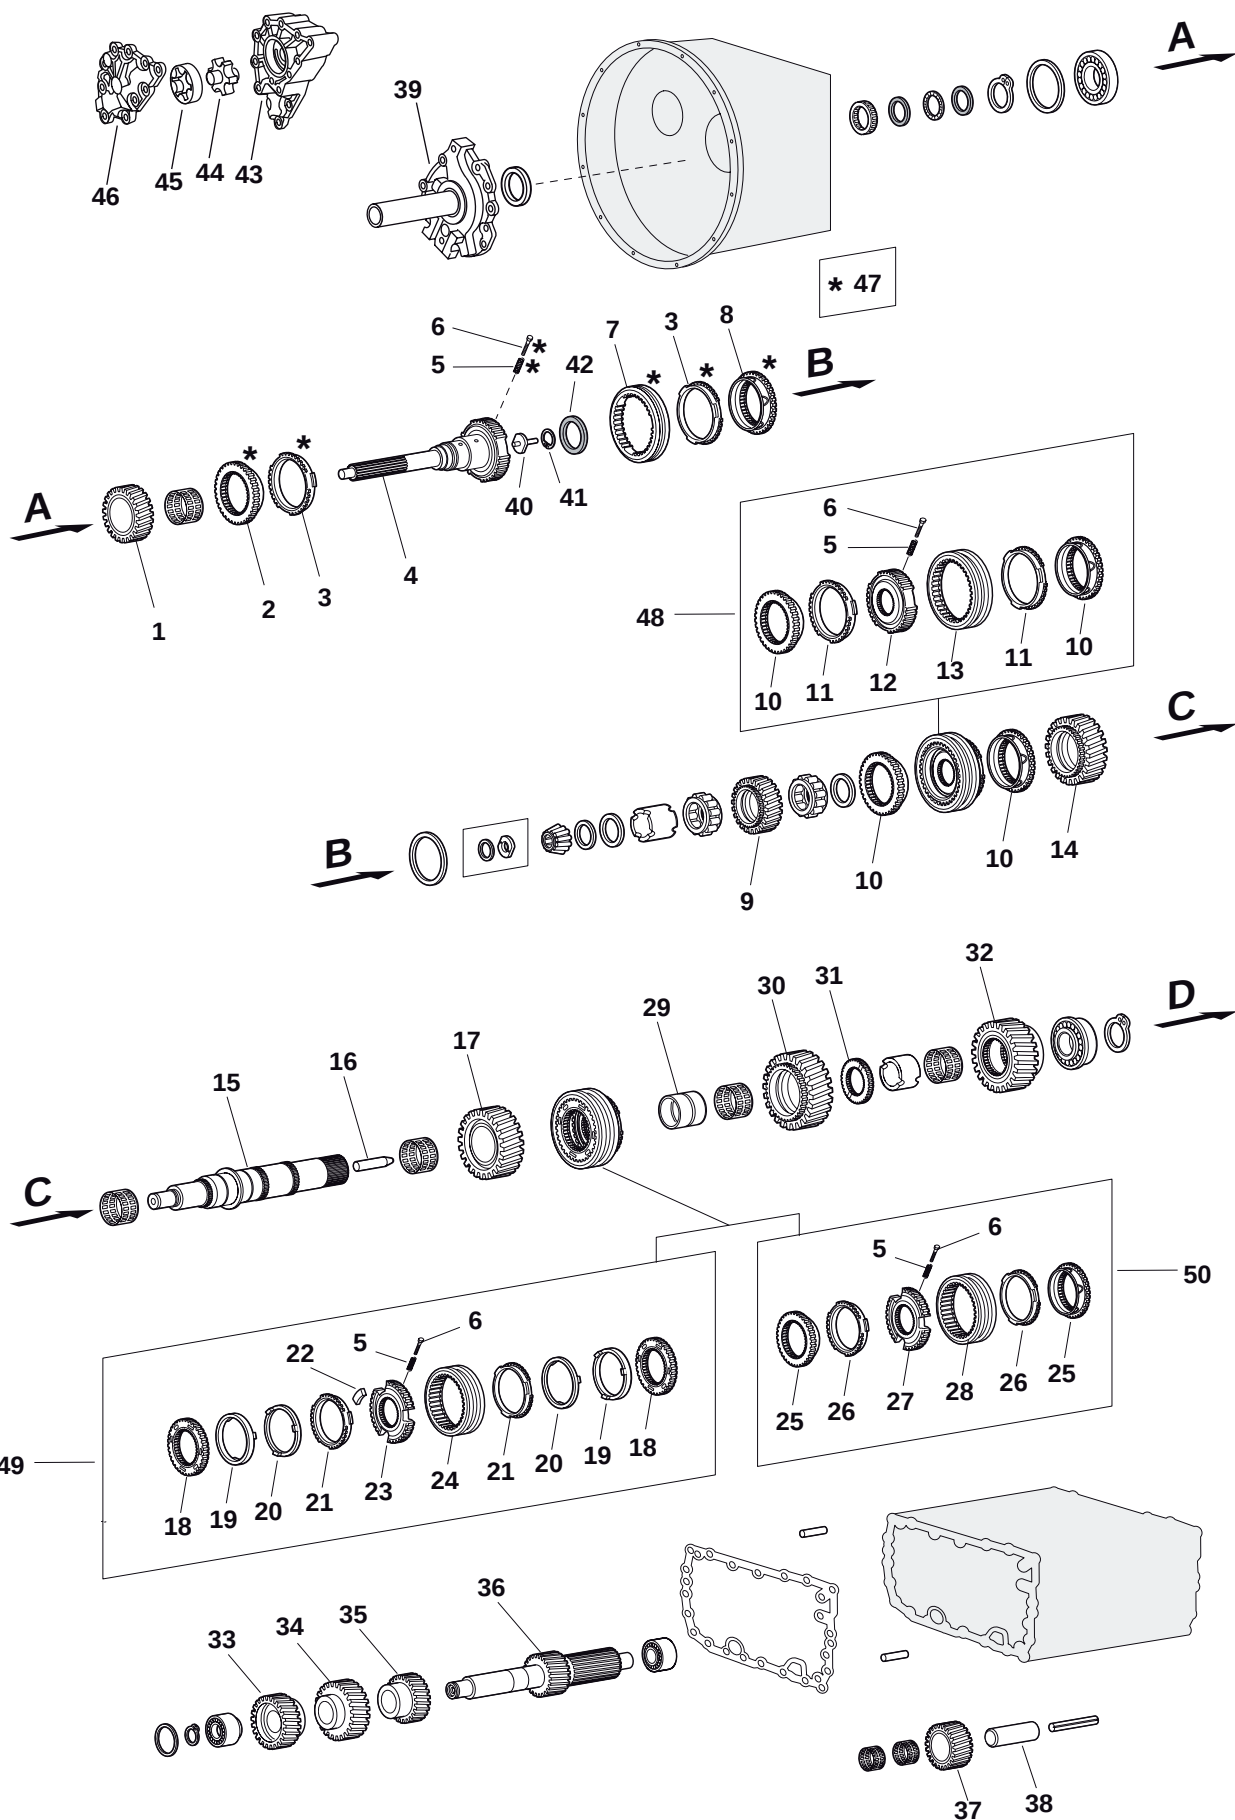

193

Articoli con la stessa lettera o numero vanno accoppiati assieme





Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 197

(*) For the composition of the kits please see page 197.

.

ZF 56
4-510

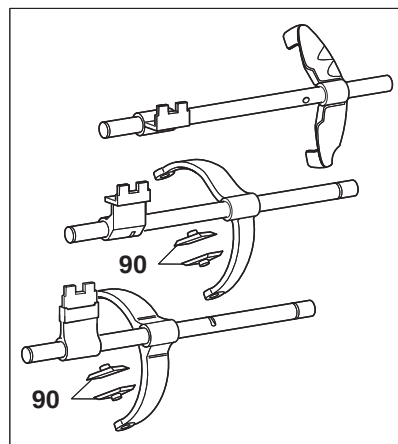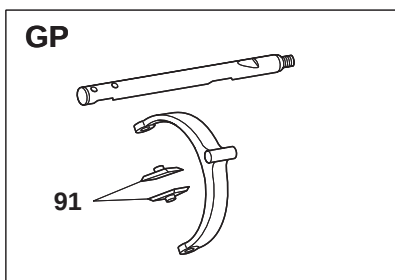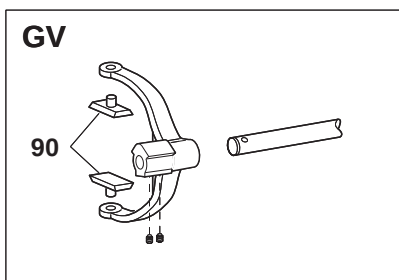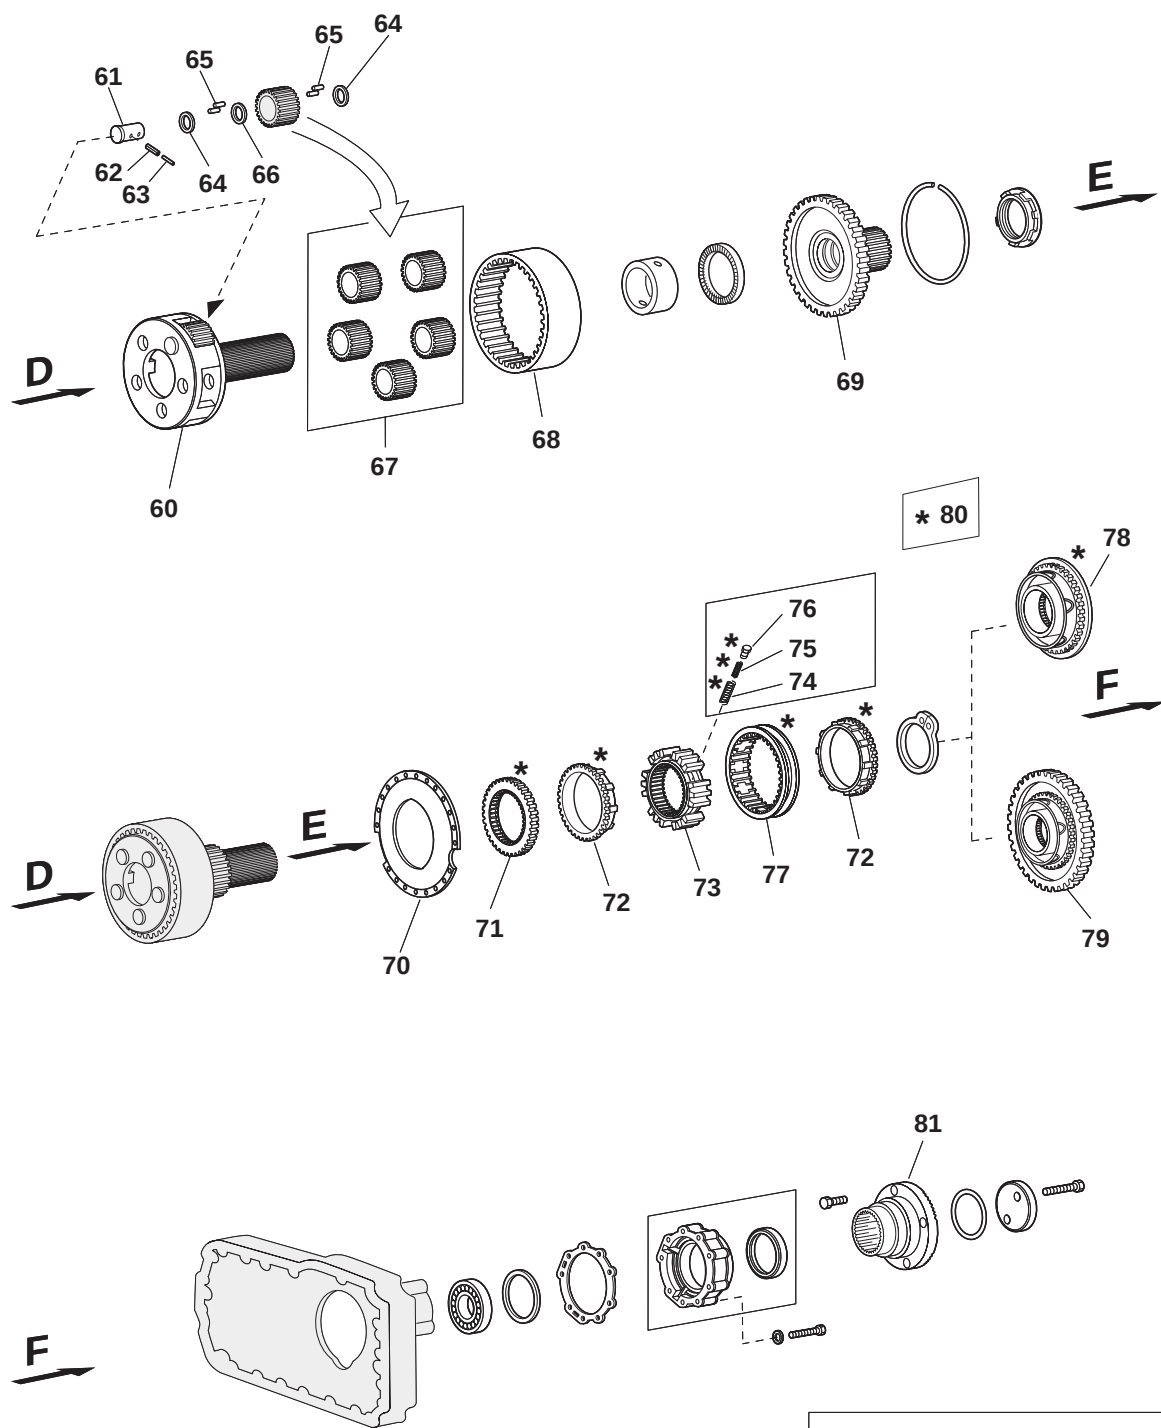

195

Articoli con la stessa lettera o numero vanno accoppiati assieme
Items with same letter or number must be coupled together.
(* Per la composizione dei kit vedi pagina 197
(* For the composition of the kits please see page 197.

ZF 56
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 314 060	T 18524	-----	ZF 56	42	1315 302 141	-----	-----	ZF 56	39
0630 502 027	T 18530	-----	ZF 56	41	1315 302 196	T 18533	-----	ZF 56	40
0630 531 055	T 19907	003 994 3841	ZF 56	-----	1315 303 027	T 20148	-----	ZF 56	45
0631 329 051	-----	-----	ZF 56	62	1315 304 135	T 18068	-----	ZF 56	13
0631 329 167	-----	-----	ZF 56	63	1315 304 136	T 18070	-----	ZF 56	28
0635 331 390	T 19914	004 981 8625	ZF 56	-----	1315 305 009	-----	-----	ZF 56	38
0730 107 168	-----	000 264 0947	ZF 56	66	1316 332 041	T 20250	-----	ZF 56	68
0730 109 309	-----	-----	ZF 56	66	1315 332 053	T 20259	-----	ZF 56	61
0730 109 323	-----	-----	ZF 56	64	1316 201 029	-----	-----	ZF 56	38
0730 260 330	T 16568	000 268 2150	ZF 56	-----	1316 202 025	T 17909	-----	ZF 56	4
0732 040 385	T 08950	336 264 0693	ZF 56	74	1316 202 026	-----	-----	ZF 56	4
0732 040 386	T 08951	336 264 0793	ZF 56	75	1316 202 027	-----	-----	ZF 56	4
0732 040 409	T 13440	005 993 6101	ZF 56	5	1316 202 031	-----	-----	ZF 56	4
0750 119 116	-----	000 981 4686	ZF 56	65	1316 202 038	-----	-----	ZF 56	4
1240 304 278	T 08949	336 264 0239	ZF 56	76	1316 202 039	-----	-----	ZF 56	4
1240 317 075	T 08917	000 264 1423	ZF 56	-----	1316 221 017	-----	-----	ZF 56	4
1268 304 424	T 15059	000 262 2636	ZF 56	19	1316 232 011	-----	-----	ZF 56	67
1268 304 494	T 15065	000 262 3436	ZF 56	20	1316 232 019	-----	-----	ZF 56	60
1268 304 525	T 15072	000 262 3934	ZF 56	21	1316 233 014	T 18292	-----	ZF 56	79
1295 142 011	T 19902	000 260 4605	ZF 56	-----	1316 233 015	T 15940	-----	ZF 56	78
1295 338 083	T 19927	000 264 5150	ZF 56	-----	1316 302 057	T 19379	-----	ZF 56	1
1296 213 028	T 11462	000 264 4206	ZF 56	-----	1316 302 066	T 19140	-----	ZF 56	1
1296 333 022	T 09061	000 263 0234	ZF 56	72	1316 303 033	T 19046	-----	ZF 56	36
1296 333 023	T 09062	000 263 0523	ZF 56	77	1316 303 055	-----	-----	ZF 56	33
1296 333 045	T 15084	000 263 0534	ZF 56	72	1316 303 056	T 19145	-----	ZF 56	33
1296 333 046	-----	-----	ZF 56	70	1316 303 058	T 19150	-----	ZF 56	35
1296 333 050	T 18042	-----	ZF 56	71	1316 303 063	T 19155	-----	ZF 56	34
1296 334 004	T 17892	000 265 0649	ZF 56	91	1316 304 002	T 19160	-----	ZF 56	17
1297 203 005	T 19936	000 264 4218	ZF 56	-----	1316 304 010	T 19401	-----	ZF 56	30
1297 298 955	T 16173	-----	ZF 56	47	1316 304 012	T 19407	-----	ZF 56	32
1297 304 401	T 17880	000 262 4934	ZF 56	26	1316 304 078	T 18297	000 262 7623	ZF 56	28
1297 304 402	T 11724	000 262 3834	ZF 56	3	1316 304 094	T 19166	-----	ZF 56	14
1297 304 402	T 11724	000 262 3834	ZF 56	11	1316 304 103	T 17914	-----	ZF 56	9
1297 304 436	T 15096	000 264 0839	ZF 56	6	1316 304 132	T 17839	-----	ZF 56	15
1297 304 484	T 15078	000 262 7034	ZF 56	3	1316 304 145	T 18071	-----	ZF 56	10
1297 304 484	T 15078	000 262 7034	ZF 56	11	1316 304 146	T 18072	-----	ZF 56	25
1297 304 485	T 18028	-----	ZF 56	26	1316 304 147	T 18073	-----	ZF 56	12
1297 306 120	T 17901	000 268 1149	ZF 56	90	1316 304 148	T 18074	-----	ZF 56	27
1297 333 110	-----	-----	ZF 56	81	1316 304 149	T 18075	-----	ZF 56	11
1310 304 175	T 14989	001 262 1123	ZF 56	24	1316 304 150	T 18077	001 262 1034	ZF 56	26
1310 304 202	T 14983	001 262 1823	ZF 56	7	1316 304 156	T 17866	-----	ZF 56	25
1310 304 202	T 14983	001 262 1823	ZF 56	13	1316 304 159	T 17867	-----	ZF 56	10
1312 298 911	T 18625	-----	ZF 56	49	1316 304 162	T 17868	-----	ZF 56	12
1312 304 027	T 11729	000 262 5535	ZF 56	2	1316 304 163	T 17869	-----	ZF 56	27
1312 304 027	T 11729	000 262 5535	ZF 56	10	1316 304 167	T 17870	-----	ZF 56	13
1312 304 052	T 17886	000 262 5835	ZF 56	12	1316 304 168	T 17871	-----	ZF 56	11
1312 304 056	T 15103	-----	ZF 56	8	1316 304 169	T 17872	-----	ZF 56	28
1312 304 084	-----	-----	ZF 56	29	1316 304 170	T 17873	-----	ZF 56	26
1312 304 106	T 15090	000 263 2120	ZF 56	18	1316 305 001	-----	-----	ZF 56	37
1312 304 124	T 18461	-----	ZF 56	31	1316 332 096	-----	-----	ZF 56	61
1312 304 150	T 19997	000 262 1953	ZF 56	16	1316 332 103	T 20268	-----	ZF 56	69
1312 304 158	T 18047	-----	ZF 56	23					
1312 304 159	T 17222	000 262 4240	ZF 56	22					
1313 204 003	T 18629	-----	ZF 56	50					
1313 298 909	T 18631	-----	ZF 56	50					
1313 304 008	T 18287	-----	ZF 56	27					
1313 304 009	T 18035	-----	ZF 56	25					
1313 333 001	T 18052	-----	ZF 56	73					
1314 202 039	T 20132	-----	ZF 56	44					
1315 232 010	T 20230	-----	ZF 56	67					
1315 232 016	T 20235	-----	ZF 56	60					
1315 298 001	T 19441	-----	ZF 56	-----					
1315 298 002	T 19427	-----	ZF 56	-----					
1315 298 003	T 19433	-----	ZF 56	-----					
1315 298 018	T 18632	-----	ZF 56	48					
1315 298 034	T 18078	-----	ZF 56	80					
1315 298 054	T 18060	-----	ZF 56	50					
1315 298 055	T 18061	-----	ZF 56	48					
1315 298 060	T 17864	-----	ZF 56	50					
1315 298 061	T 17865	-----	ZF 56	48					
1315 302 072	-----	-----	ZF 56	39					
1315 302 075	-----	-----	ZF 56	39					
1315 302 120	T 20138	-----	ZF 56	46					
1315 302 121	T 20143	-----	ZF 56	43					
1315 302 124	-----	-----	ZF 56	39					
1315 302 136	-----	-----	ZF 56	39					

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
47	T 16173	1297 298 955	-----	SYNCHRONIZER REPAIR KIT		16 S 181	ZF 56
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1	16 S 181	ZF 56
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 181	ZF 56
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 181	ZF 56
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 181	ZF 56
7	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 181	ZF 56
8	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1	16 S 181	ZF 56
48	T 18632	1315 298 018	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 181	ZF 56
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 181	ZF 56
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 181	ZF 56
10	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2	16 S 181	ZF 56
11	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 181	ZF 56
12	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	1	16 S 181	ZF 56
13	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 181	ZF 56
48	T 18061	1315 298 055	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 181	ZF 56
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 181	ZF 56
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 181	ZF 56
10	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 181	ZF 56
11	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	2	16 S 181	ZF 56
12	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 181	ZF 56
13	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 181	ZF 56
48	T 17865	1315 298 061	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 181	ZF 56
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 181	ZF 56
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 181	ZF 56
10	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 181	ZF 56
11	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	2	16 S 181	ZF 56
12	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 181	ZF 56
13	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 181	ZF 56
49	T 18625	1312 298 911	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 181	ZF 56
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 181	ZF 56
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 181	ZF 56
18	T 15090	1312 304 106	000 263 2120	SYNCHRONIZER CLUTCH GEAR (63 T.)	2	16 S 181	ZF 56
19	T 15059	1268 304 424	000 262 2636	SYNCHRONIZER INTERNAL RING	2	16 S 181	ZF 56
20	T 15065	1268 304 494	000 262 3436	SYNCHRONIZER INTERMEDIATE RING	2	16 S 181	ZF 56
21	T 15072	1268 304 525	000 262 3934	SYNCHRONIZER BLOCKING RING	2	16 S 181	ZF 56
22	T 17222	1312 304 159	000 262 4240	SYNCHRONIZER SHIFTING PLATE	3	16 S 181	ZF 56
23	T 18047	1312 304 158	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 181	ZF 56
24	T 14989	1310 304 175	001 262 1123	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 181	ZF 56
50	T 18629	1313 204 003	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 181	ZF 56
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 181	ZF 56
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 181	ZF 56
26	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	2	16 S 181	ZF 56
27	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 181	ZF 56
28	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 181	ZF 56

80	T 18078	1315 298 034	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 181	ZF 56	
71	T 18042	1296 333 050	-----	SYNCHRONIZER CONE (63-58 T.)		1	16 S 181	ZF 56
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING		2	16 S 181	ZF 56
74	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER		9	16 S 181	ZF 56
75	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER		9	16 S 181	ZF 56
76	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER		9	16 S 181	ZF 56
77	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)		1	16 S 181	ZF 56
78	T 15940	1316 233 015	-----	SYNCHRONIZER CONE (63 T.)		1	16 S 181	ZF 56



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16S221


201

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 57
4-510

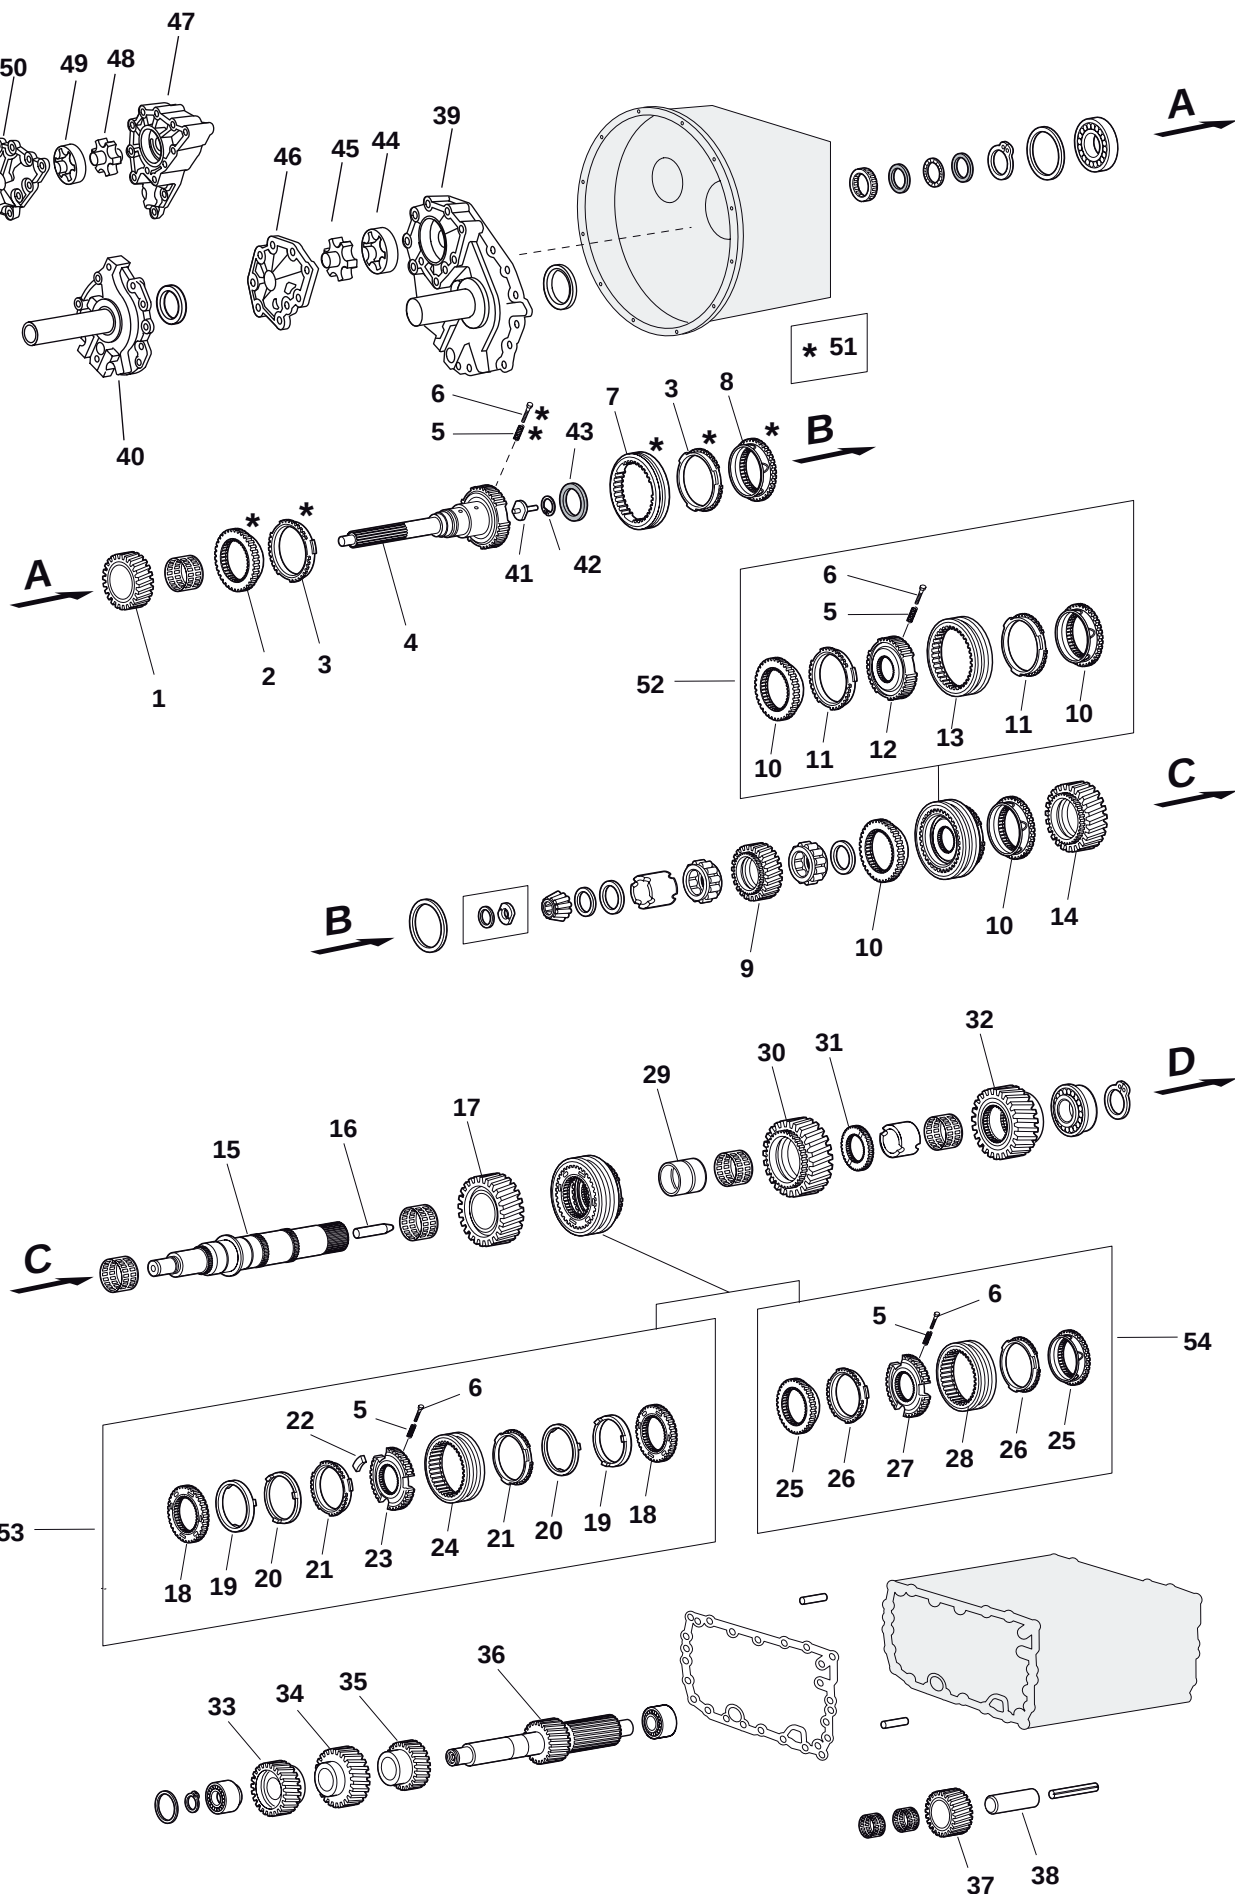

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	T 19384	1316 302 065	-----	CONSTANT GEAR (34-30 T.)	
1	T 19140	1316 302 066	-----	CONSTANT GEAR (30-30 T.)	
1	T 19388	1316 302 067	-----	CONSTANT GEAR (35-30 T.)	
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1
3	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	1
4	T 17909	1316 202 025	-----	MAIN DRIVE GEAR (57 T.)	A
4	-----	1316 202 026	-----	MAIN DRIVE GEAR (57 T.)	B
4	-----	1316 202 027	-----	MAIN DRIVE GEAR	C
4	-----	1316 202 029	-----	MAIN DRIVE GEAR	D
4	-----	1316 202 030	-----	MAIN DRIVE GEAR	E
4	-----	1316 202 031	-----	MAIN DRIVE GEAR	F
4	-----	1316 202 032	-----	MAIN DRIVE GEAR	G
4	-----	1316 202 033	-----	MAIN DRIVE GEAR	H
4	-----	1316 202 036	-----	MAIN DRIVE GEAR	I
4	-----	1316 202 037	-----	MAIN DRIVE GEAR	J
4	-----	1316 202 038	-----	MAIN DRIVE GEAR	K
4	-----	1316 202 039	-----	MAIN DRIVE GEAR	L
4	-----	1316 221 017	-----	MAIN DRIVE GEAR	
4	-----	1316 221 018	-----	MAIN DRIVE GEAR	
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	1-2-3-4-5-6-7-8-9
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	1-2-3-4-5-6-7-8-9
7	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
8	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1
9	T 19397	1316 304 007	-----	FOURTH SPEED GEAR (30-30-30 T.)	
9	T 17914	1316 304 103	-----	FOURTH SPEED GEAR (30-32-30 T.)	
10	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2
10	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	3
10	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	4
11	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
11	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2
11	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	3
11	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	4
12	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	2
12	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	3
12	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	4
13	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	2
13	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	3
13	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	4
14	T 19061	1316 304 008	-----	THIRD SPEED GEAR (34-30 T.)	
14	-----	1316 304 009	-----	THIRD SPEED GEAR (32 T.)	
15	-----	1316 304 001	-----	MAINSHAFT	
15	T 17825	1316 304 130	000 262 7805	MAINSHAFT	
15	T 17839	1316 304 132	-----	MAINSHAFT	
16	T 19997	1312 304 150	000 262 1953	MAINSHAFT TUBE	
17	T 19160	1316 304 002	-----	SECOND SPEED GEAR (38-30 T.)	
17	-----	1316 304 003	-----	SECOND SPEED GEAR (37 T.)	
18	T 15090	1312 304 106	000 263 2120	SYNCHRONIZER CLUTCH GEAR (63 T.)	5
19	T 15059	1268 304 424	000 262 2636	SYNCHRONIZER INTERNAL RING	5
20	T 15065	1268 304 494	000 262 3436	SYNCHRONIZER INTERMEDIATE RING	5
21	T 15072	1268 304 525	000 262 3934	SYNCHRONIZER BLOCKING RING	5
22	T 17222	1312 304 159	000 262 4240	SYNCHRONIZER SHIFTING PLATE	5
23	T 18047	1312 304 158	-----	SYNCHRONIZER HUB (63 T.)	5
24	T 14989	1310 304 175	001 262 1123	SYNCHRONIZER SLIDING COLLAR (63 T.)	5
25	T 18035	1313 304 009	-----	SYNCHRONIZER CONE (63 T.)	7
25	T 18072	1316 304 146	-----	SYNCHRONIZER CONE (63 T.)	8
25	T 17866	1316 304 156	-----	SYNCHRONIZER CONE (63 T.)	9
26	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	6-7
26	T 18028	1297 304 485	-----	SYNCHRONIZER BLOCKING RING	
26	T 18077	1316 304 150	001 262 1034	SYNCHRONIZER BLOCKING RING	8
26	T 17873	1316 304 170	-----	SYNCHRONIZER BLOCKING RING	9
27	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	6-7
27	T 18074	1316 304 148	-----	SYNCHRONIZER HUB (63 T.)	8
27	T 17869	1316 304 163	-----	SYNCHRONIZER HUB (63 T.)	9
28	T 18070	1315 304 136	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	8
28	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	6-7
28	T 17872	1316 304 169	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	9
29	-----	1312 304 084	-----	FIRST SPEED GEAR SLEEVE	
30	T 19401	1316 304 010	-----	FIRST SPEED GEAR (47-30 T.)	
30	-----	1316 304 013	-----	FIRST SPEED GEAR (44 T.)	
31	T 18461	1312 304 124	-----	FIRST SPEED AND REVERSE GEAR CONE (23 T.)	
32	T 19407	1316 304 012	-----	REVERSE GEAR (44-23 T.)	

203

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme


Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 210

(*) For the composition of the kits please see page 210.





16 S 221

ZF 57
4-510

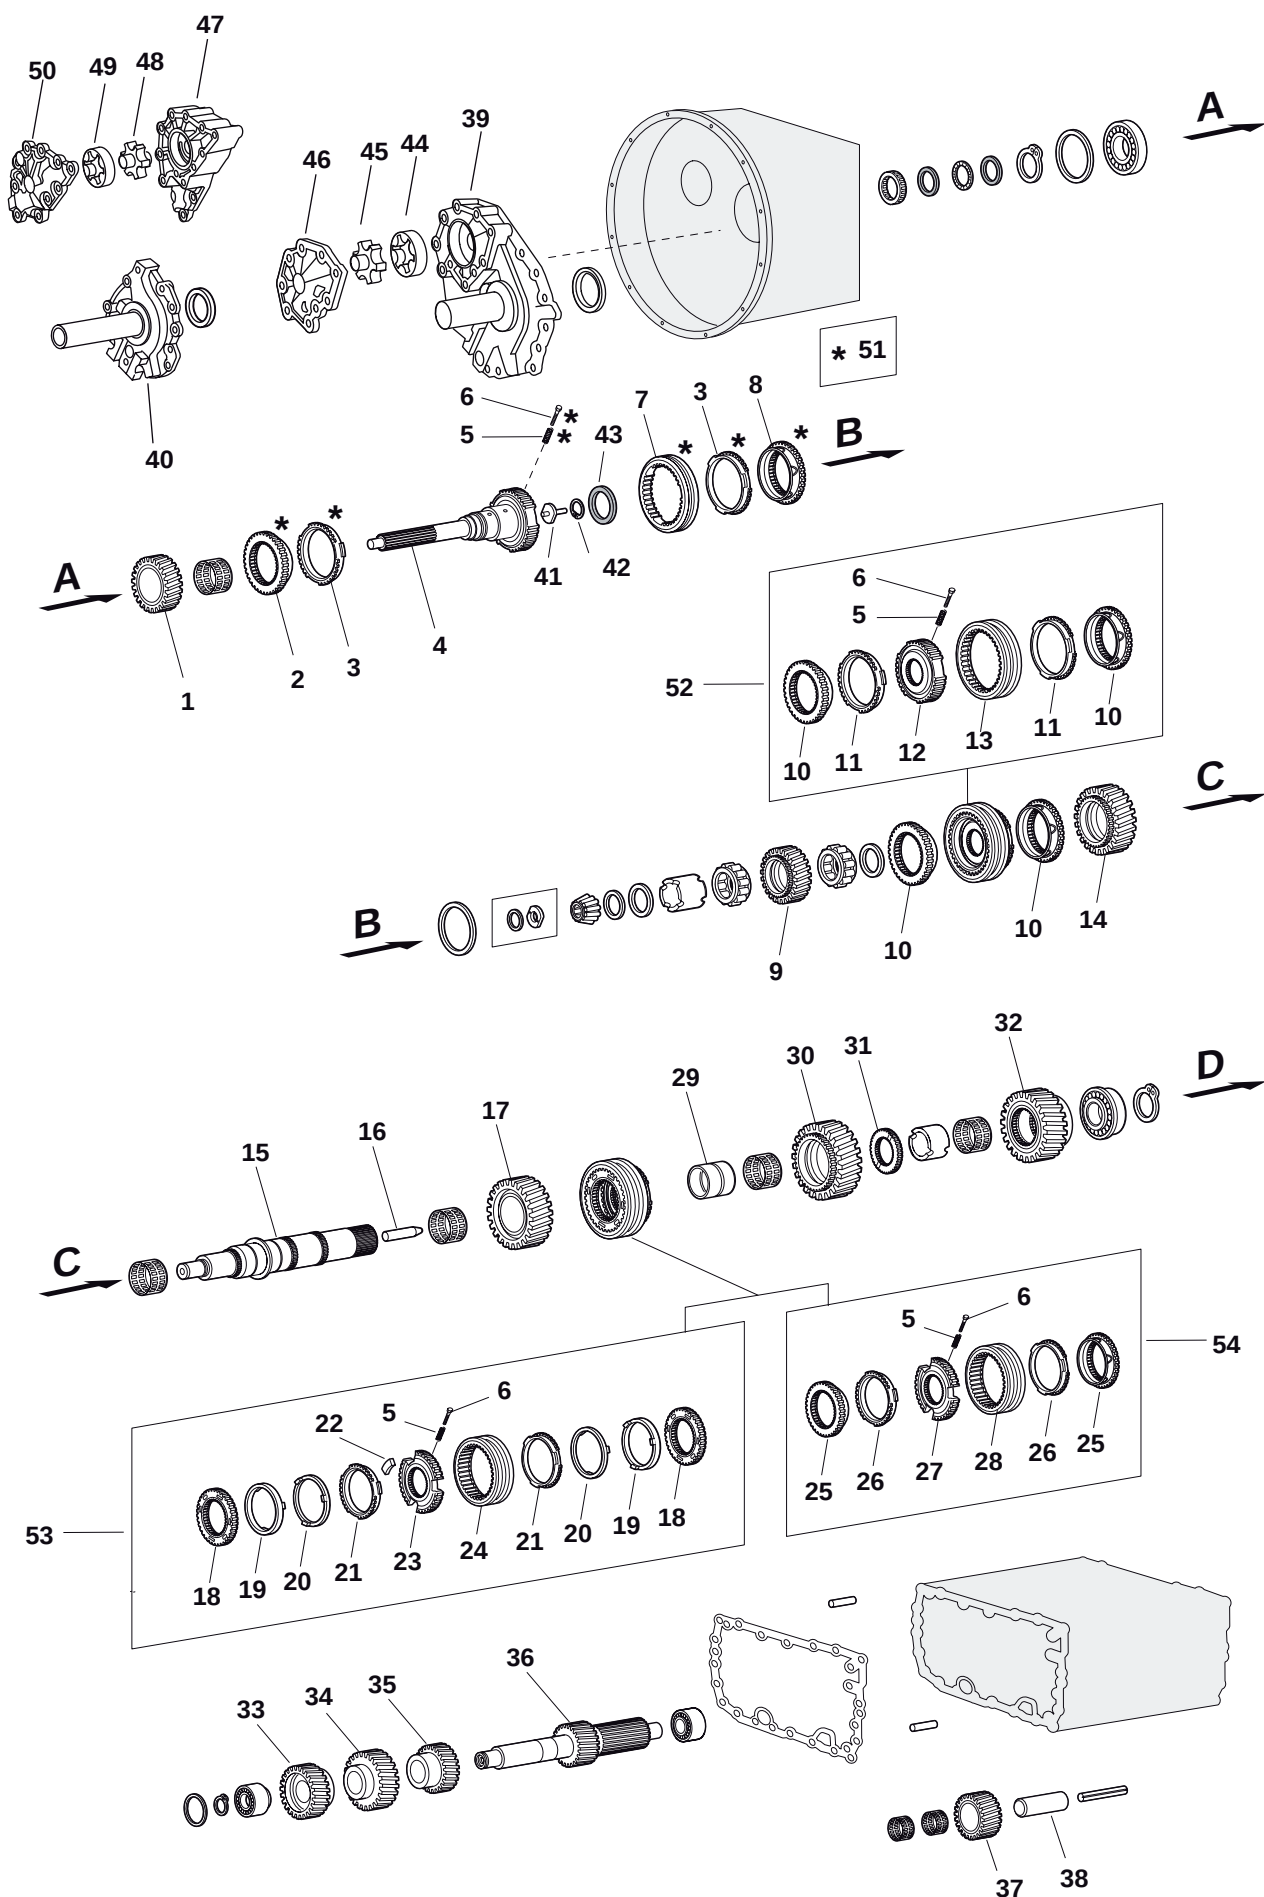

205

ZF 57
4-510

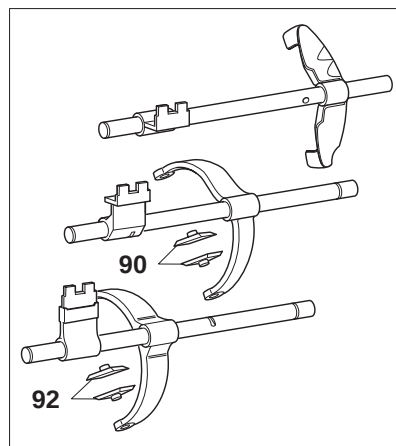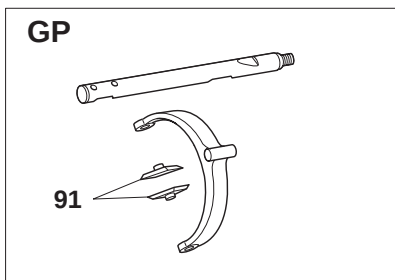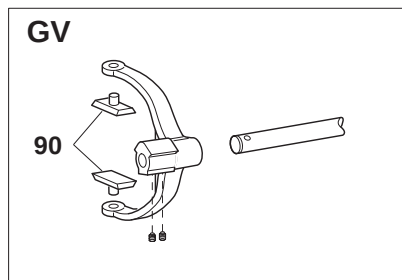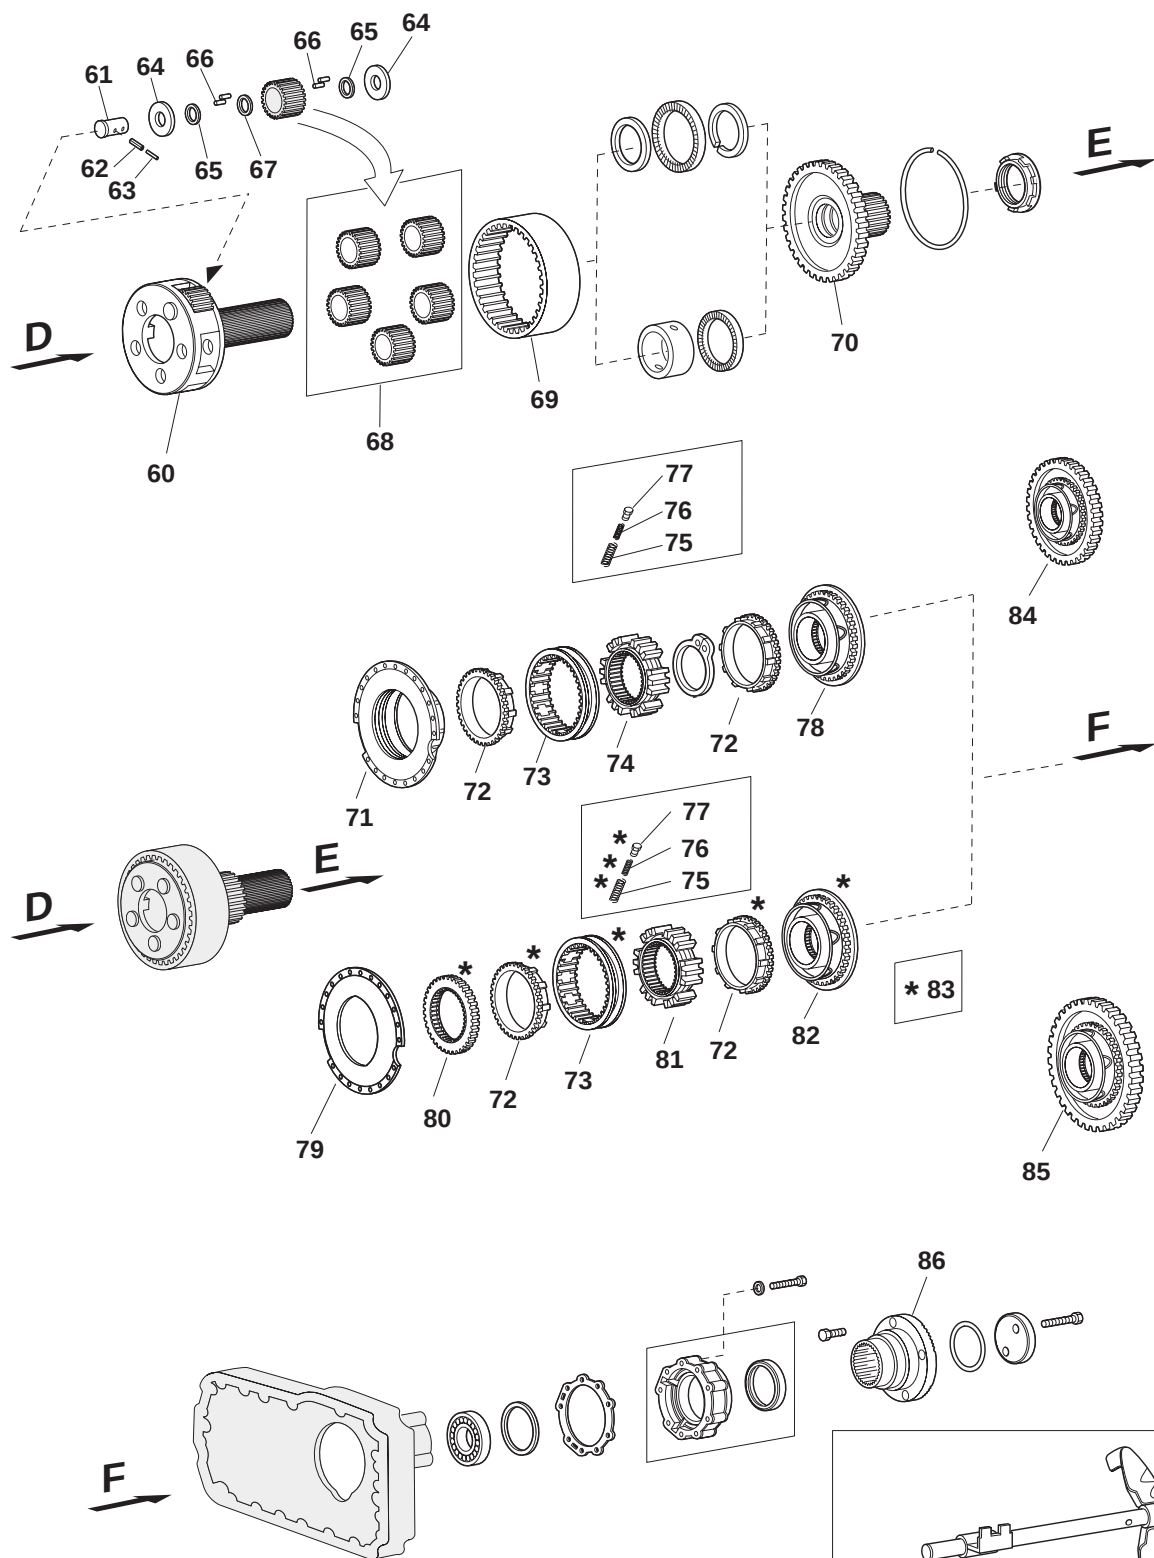

207

ZF 57
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 308 981	-----	000 263 0762	ZF 57	64	1315 298 034	T 18078	-----	ZF 57	83
0501 314 060	T 18524	-----	ZF 57	43	1315 298 054	T 18060	-----	ZF 57	54
0630 502 027	T 18530	-----	ZF 57	42	1315 298 055	T 18061	-----	ZF 57	52
0630 531 055	T 19907	003 994 3841	ZF 57	-----	1315 298 060	T 17864	-----	ZF 57	54
0631 329 051	-----	-----	ZF 57	62	1315 298 061	T 17865	-----	ZF 57	52
0631 329 167	-----	-----	ZF 57	63	1315 302 013	-----	-----	ZF 57	46
0635 331 390	T 19914	004 981 8625	ZF 57	-----	1315 302 045	-----	-----	ZF 57	39
0730 107 168	-----	000 264 0947	ZF 57	65	1315 302 047	-----	-----	ZF 57	39
0730 107 168	-----	000 264 0947	ZF 57	67	1315 302 057	-----	-----	ZF 57	39
0730 109 309	-----	-----	ZF 57	67	1315 302 072	-----	-----	ZF 57	40
0730 109 323	-----	-----	ZF 57	65	1315 302 075	-----	-----	ZF 57	40
0730 260 330	T 16568	000 268 2150	ZF 57	-----	1315 302 084	-----	-----	ZF 57	40
0732 040 385	T 08950	336 264 0693	ZF 57	75	1315 302 106	-----	-----	ZF 57	40
0732 040 386	T 08951	336 264 0793	ZF 57	76	1315 302 113	-----	-----	ZF 57	39
0732 040 409	T 13440	005 993 6101	ZF 57	5	1315 302 120	T 20138	-----	ZF 57	50
0750 119 116	-----	000 981 4686	ZF 57	66	1315 302 121	T 20143	-----	ZF 57	47
1240 304 278	T 08949	336 264 0239	ZF 57	77	1315 302 124	-----	-----	ZF 57	40
1240 317 075	T 08917	000 264 1423	ZF 57	-----	1315 302 134	-----	-----	ZF 57	40
1268 304 424	T 15059	000 262 2636	ZF 57	19	1315 302 136	-----	-----	ZF 57	40
1268 304 494	T 15065	000 262 3436	ZF 57	20	1315 302 141	-----	-----	ZF 57	40
1268 304 525	T 15072	000 262 3934	ZF 57	21	1315 302 181	-----	-----	ZF 57	40
1295 142 011	T 19902	000 260 4605	ZF 57	-----	1315 302 184	-----	-----	ZF 57	40
1295 332 086	-----	001 263 2110	ZF 57	69	1315 302 193	-----	-----	ZF 57	40
1295 338 083	T 19927	000 264 5150	ZF 57	-----	1315 302 196	T 18533	-----	ZF 57	41
1296 213 028	T 11462	000 264 4206	ZF 57	-----	1315 303 027	T 20148	-----	ZF 57	44
1296 333 022	T 09061	000 263 0234	ZF 57	72	1315 303 027	T 20148	-----	ZF 57	49
1296 333 023	T 09062	000 263 0523	ZF 57	73	1315 304 135	T 18068	-----	ZF 57	13
1296 333 045	T 15084	000 263 0534	ZF 57	72	1315 304 136	T 18070	-----	ZF 57	28
1296 333 046	-----	-----	ZF 57	79	1315 305 009	-----	-----	ZF 57	38
1296 333 050	T 18042	-----	ZF 57	80	1315 332 041	T 20250	-----	ZF 57	69
1296 334 004	T 17892	000 265 0649	ZF 57	91	1316 201 029	-----	-----	ZF 57	38
1297 203 005	T 19936	000 264 4218	ZF 57	-----	1316 201 030	-----	-----	ZF 57	38
1297 233 056	T 15934	000 263 2220	ZF 57	78	1316 202 025	T 17909	-----	ZF 57	4
1297 298 955	T 16173	-----	ZF 57	51	1316 202 026	-----	-----	ZF 57	4
1297 304 401	T 17880	000 262 4934	ZF 57	26	1316 202 027	-----	-----	ZF 57	4
1297 304 402	T 11724	000 262 3834	ZF 57	3	1316 202 029	-----	-----	ZF 57	4
1297 304 402	T 11724	000 262 3834	ZF 57	11	1316 202 030	-----	-----	ZF 57	4
1297 304 436	T 15096	000 264 0839	ZF 57	6	1316 202 031	-----	-----	ZF 57	4
1297 304 484	T 15078	000 262 7034	ZF 57	3	1316 202 032	-----	-----	ZF 57	4
1297 304 484	T 15078	000 262 7034	ZF 57	11	1316 202 033	-----	-----	ZF 57	4
1297 304 485	T 18028	-----	ZF 57	26	1316 202 036	-----	-----	ZF 57	4
1297 306 120	T 17901	000 268 1149	ZF 57	90	1316 202 037	-----	-----	ZF 57	4
1297 332 120	-----	-----	ZF 57	70	1316 202 038	-----	-----	ZF 57	4
1297 333 110	-----	-----	ZF 57	86	1316 202 039	-----	-----	ZF 57	4
1297 333 115	-----	000 263 0935	ZF 57	74	1316 221 017	-----	-----	ZF 57	4
1310 304 175	T 14989	001 262 1123	ZF 57	24	1316 221 018	-----	-----	ZF 57	4
1310 304 202	T 14983	001 262 1823	ZF 57	7	1316 232 006	-----	-----	ZF 57	60
1310 304 202	T 14983	001 262 1823	ZF 57	13	1316 232 011	-----	-----	ZF 57	68
1312 232 014	-----	000 260 2397	ZF 57	68	1316 232 019	-----	-----	ZF 57	60
1312 232 015	-----	-----	ZF 57	60	1316 233 010	T 19375	-----	ZF 57	84
1312 298 911	T 18625	-----	ZF 57	53	1316 233 014	T 18292	-----	ZF 57	85
1312 304 027	T 11729	000 262 5535	ZF 57	2	1316 233 015	T 15940	-----	ZF 57	82
1312 304 027	T 11729	000 262 5535	ZF 57	10	1316 302 065	T 19384	-----	ZF 57	1
1312 304 052	T 17886	000 262 5835	ZF 57	12	1316 302 066	T 19140	-----	ZF 57	1
1312 304 056	T 15103	-----	ZF 57	8	1316 302 067	T 19388	-----	ZF 57	1
1312 304 084	-----	-----	ZF 57	29	1316 303 001	-----	-----	ZF 57	33
1312 304 106	T 15090	000 263 2120	ZF 57	18	1316 303 002	-----	-----	ZF 57	33
1312 304 124	T 18461	-----	ZF 57	31	1316 303 004	T 19548	-----	ZF 57	34
1312 304 150	T 19997	000 262 1953	ZF 57	16	1316 303 005	T 19041	-----	ZF 57	35
1312 304 158	T 18047	-----	ZF 57	23	1316 303 006	T 19393	-----	ZF 57	35
1312 304 159	T 17222	000 262 4240	ZF 57	22	1316 303 007	-----	-----	ZF 57	36
1312 332 026	-----	000 263 0474	ZF 57	61	1316 303 008	-----	-----	ZF 57	36
1312 333 018	-----	-----	ZF 57	86	1316 303 030	-----	-----	ZF 57	33
1313 204 003	T 18629	-----	ZF 57	54	1316 303 031	-----	-----	ZF 57	33
1313 298 909	T 18631	-----	ZF 57	54	1316 303 033	T 19046	-----	ZF 57	36
1313 304 008	T 18287	-----	ZF 57	27	1316 303 034	-----	-----	ZF 57	36
1313 304 009	T 18035	-----	ZF 57	25	1316 303 052	-----	-----	ZF 57	36
1313 333 001	T 18052	-----	ZF 57	81	1316 303 053	-----	-----	ZF 57	36
1314 202 039	T 20132	-----	ZF 57	48	1316 303 064	T 19051	-----	ZF 57	33
1315 202 014	-----	-----	ZF 57	45	1316 303 065	T 19056	-----	ZF 57	34
1315 202 065	-----	-----	ZF 57	40	1316 304 001	-----	-----	ZF 57	15
1315 233 006	T 11732	-----	ZF 57	71	1316 304 002	T 19160	-----	ZF 57	17
1315 298 001	T 19441	-----	ZF 57	-----	1316 304 003	-----	-----	ZF 57	17
1315 298 002	T 19427	-----	ZF 57	-----	1316 304 007	T 19397	-----	ZF 57	9
1315 298 003	T 19433	-----	ZF 57	-----	1316 304 008	T 19061	-----	ZF 57	14
1315 298 018	T 18632	-----	ZF 57	52	1316 304 009	-----	-----	ZF 57	14

209

ZF 57
4-510

KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
51	T 16173	1297 298 955	-----	SYNCHRONIZER REPAIR KIT		16 S 221	ZF 57
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1	16 S 221	ZF 57
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 221	ZF 57
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 221	ZF 57
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 221	ZF 57
7	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 221	ZF 57
8	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1	16 S 221	ZF 57
52	T 18632	1315 298 018	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 221	ZF 57
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 221	ZF 57
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 221	ZF 57
10	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2	16 S 221	ZF 57
11	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 221	ZF 57
12	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	1	16 S 221	ZF 57
13	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 221	ZF 57
52	T 18061	1315 298 055	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 221	ZF 57
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 221	ZF 57
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 221	ZF 57
10	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 221	ZF 57
11	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	2	16 S 221	ZF 57
12	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 221	ZF 57
13	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 221	ZF 57
52	T 17865	1315 298 061	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 221	ZF 57
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 221	ZF 57
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 221	ZF 57
10	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 221	ZF 57
11	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	2	16 S 221	ZF 57
12	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 221	ZF 57
13	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 221	ZF 57
53	T 18625	1312 298 911	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 221	ZF 57
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 221	ZF 57
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 221	ZF 57
18	T 15090	1312 304 106	000 263 2120	SYNCHRONIZER CLUTCH GEAR (63 T.)	2	16 S 221	ZF 57
19	T 15059	1268 304 424	000 262 2636	SYNCHRONIZER INTERNAL RING	2	16 S 221	ZF 57
20	T 15065	1268 304 494	000 262 3436	SYNCHRONIZER INTERMEDIATE RING	2	16 S 221	ZF 57
21	T 15072	1268 304 525	000 262 3934	SYNCHRONIZER BLOCKING RING	2	16 S 221	ZF 57
22	T 17222	1312 304 159	000 262 4240	SYNCHRONIZER SHIFTING PLATE	3	16 S 221	ZF 57
23	T 18047	1312 304 158	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 221	ZF 57
24	T 14989	1310 304 175	001 262 1123	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 221	ZF 57
54	T 18629	1313 204 003	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 221	ZF 57
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 221	ZF 57
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 221	ZF 57
26	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	2	16 S 221	ZF 57
27	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 221	ZF 57
28	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 221	ZF 57

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
-----	-----	----	----------	-------------	------	-------	-------

54	T 18631	1313 298 909	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 221	ZF 57
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 221	ZF 57
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 221	ZF 57
25	T 18035	1313 304 009	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 221	ZF 57
26	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	2	16 S 221	ZF 57
27	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 221	ZF 57
28	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 221	ZF 57

54	T 18060	1315 298 054	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 221	ZF 57
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 221	ZF 57
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 221	ZF 57
25	T 18072	1316 304 146	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 221	ZF 57
26	T 18077	1316 304 150	001 262 1034	SYNCHRONIZER BLOCKING RING	2	16 S 221	ZF 57
27	T 18074	1316 304 148	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 221	ZF 57
28	T 18070	1315 304 136	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 221	ZF 57

54	T 17864	1315 298 060	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 221	ZF 57
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 221	ZF 57
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 221	ZF 57
25	T 17866	1316 304 156	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 221	ZF 57
26	T 17873	1316 304 170	-----	SYNCHRONIZER BLOCKING RING	2	16 S 221	ZF 57
27	T 17869	1316 304 163	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 221	ZF 57
28	T 17872	1316 304 169	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 221	ZF 57

83	T 18078	1315 298 034	-----	PLANETARY REDUCTION SYNCHRONIZER REPAIR KIT		16 S 221	ZF 57
72	T 15084	1296 333 045	000 263 0534	SYNCHRONIZER BLOCKING RING	2	16 S 221	ZF 57
73	T 09062	1296 333 023	000 263 0523	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 221	ZF 57
75	T 08950	0732 040 385	336 264 0693	SYNCHRONIZER PRESSURE SPRING, OUTER	9	16 S 221	ZF 57
76	T 08951	0732 040 386	336 264 0793	SYNCHRONIZER PRESSURE SPRING, INNER	9	16 S 221	ZF 57
77	T 08949	1240 304 278	336 264 0239	SYNCHRONIZER PRESSURE PLUNGER	9	16 S 221	ZF 57
80	T 18042	1296 333 050	-----	SYNCHRONIZER CONE (63-58 T.)	1	16 S 221	ZF 57
82	T 15940	1316 233 015	-----	SYNCHRONIZER CONE (63 T.)	1	16 S 221	ZF 57



SPARE PARTS CATALOGUE SUITABLE FOR:

ZF 16S251


213

All replacement parts listed in this catalogue are fully interchangeable with the genuine ones. All original equipment part numbers and diagrams in this catalogue are for reference purposes only.

T.A.S. reserves the right to update or alter this catalogue without prior notice.

Reference numbers shown in this catalogue but not included in the price list are not in production.

ZF 58
4-510

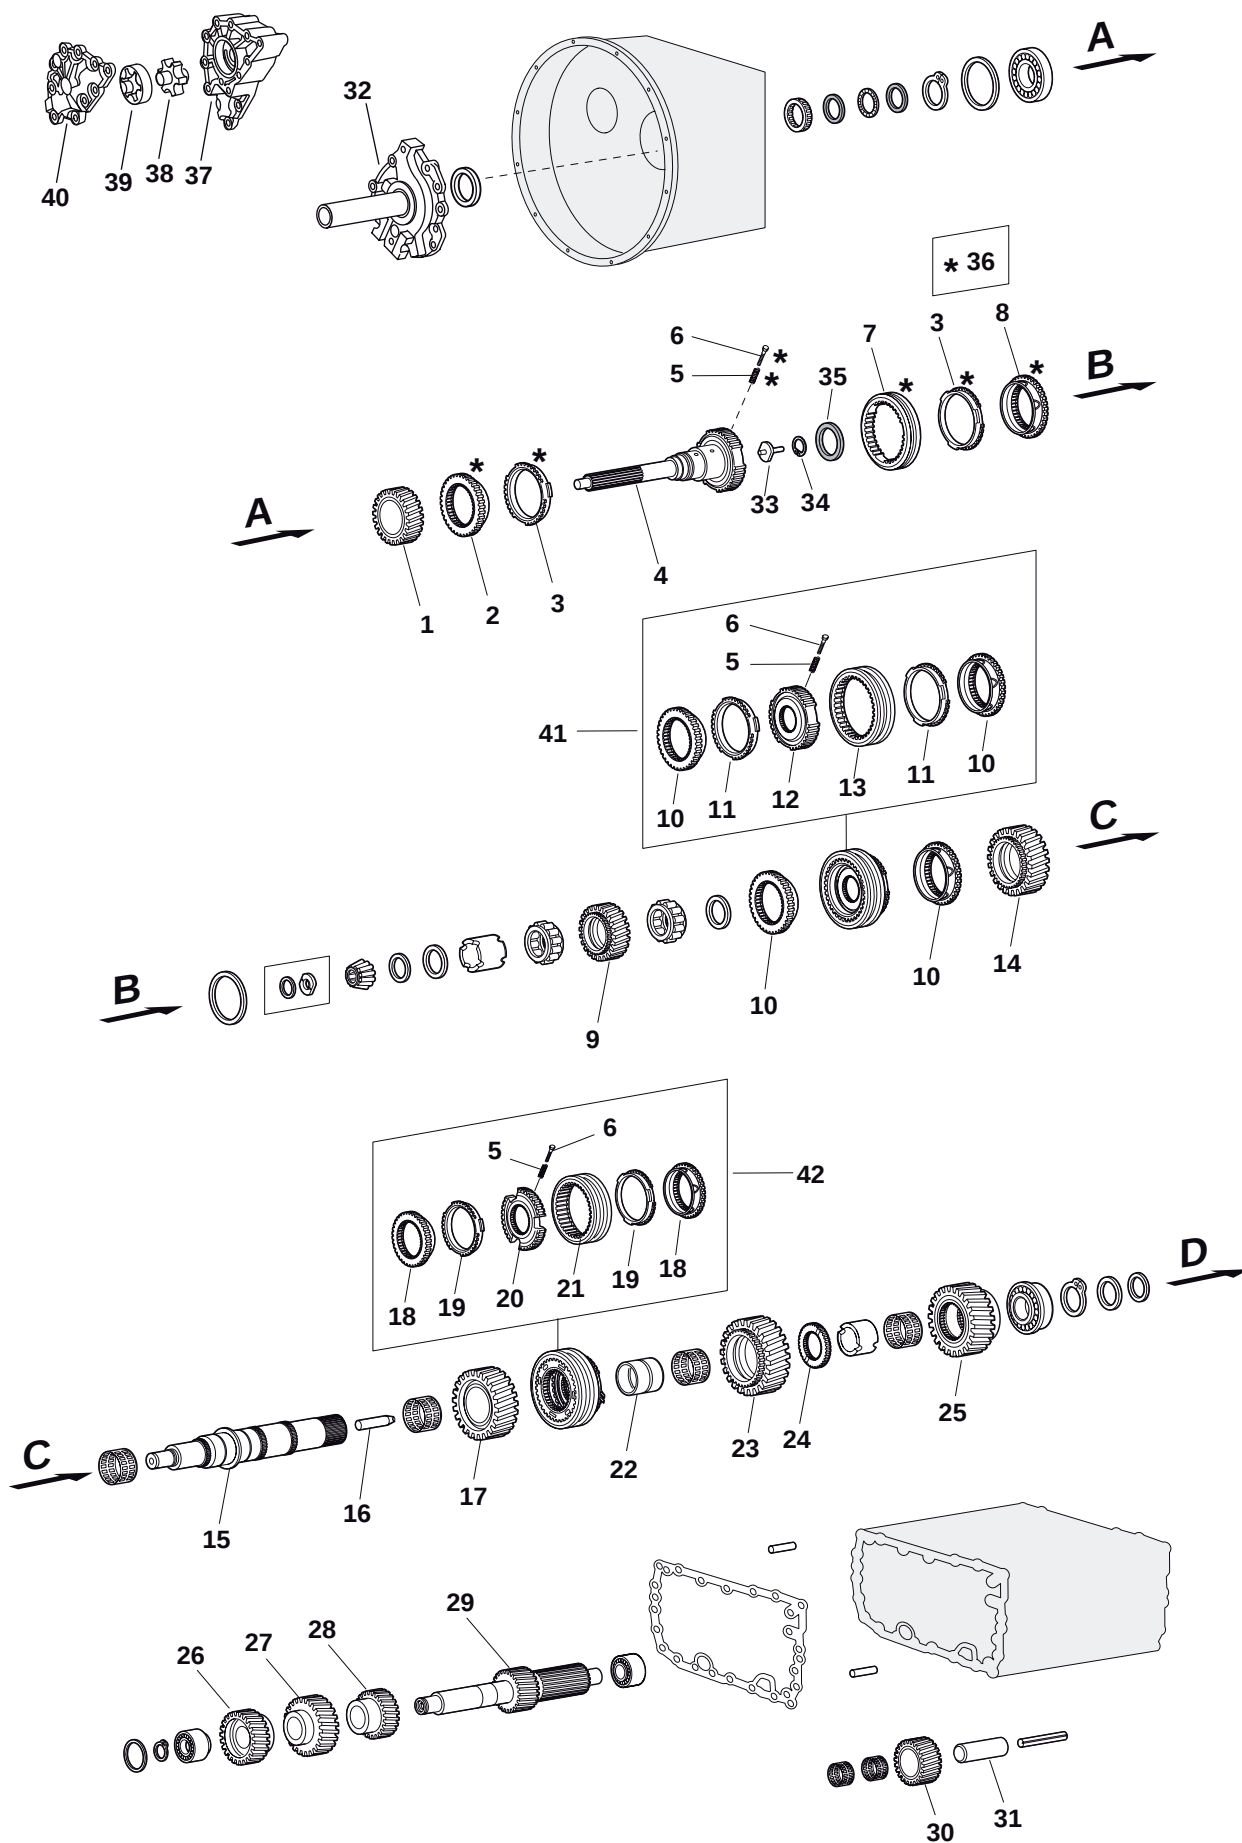

- TRANSMISSION -
MAIN DRIVE GEAR - MAINSHAFT - COUNTERSHAFT - REVERSE IDLER GEAR



KEY	TAS	ZF	MERCEDES	DESCRIPTION	NOTES
1	T 19388	1316 302 067	-----	CONSTANT GEAR (35-30 T.)	
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1
3	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	1
4	T 17909	1316 202 025	-----	MAIN DRIVE GEAR (57 T.)	A
4	-----	1316 202 033	-----	MAIN DRIVE GEAR	B
4	-----	1316 202 037	-----	MAIN DRIVE GEAR	C
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	1-2-3-4-5-6-7-8
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	1-2-3-4-5-6-7-8
7	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1
8	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1
9	T 17914	1316 304 103	-----	FOURTH SPEED GEAR (30-32-30 T.)	
10	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2
10	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	3
10	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	4
11	T 11724	1297 304 402	000 262 3834	SYNCHRONIZER BLOCKING RING	
11	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2
11	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	3
11	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	4
12	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	2
12	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	3
12	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	4
13	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	2
13	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	3
13	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	4
14	-----	1316 304 066	-----	THIRD SPEED GEAR (34 T.)	
15	-----	1316 304 131	-----	MAINSHAFT	
16	-----	1316 304 093	-----	MAINSHAFT TUBE	
17	T 19160	1316 304 002	-----	SECOND SPEED GEAR (38-30 T.)	
18	T 18035	1313 304 009	-----	SYNCHRONIZER CONE (63 T.)	6
18	T 18072	1316 304 146	-----	SYNCHRONIZER CONE (63 T.)	7
18	T 17866	1316 304 156	-----	SYNCHRONIZER CONE (63 T.)	8
19	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	5-6
19	T 18028	1297 304 485	-----	SYNCHRONIZER BLOCKING RING	
19	T 18077	1316 304 150	001 262 1034	SYNCHRONIZER BLOCKING RING	7
19	T 17873	1316 304 170	-----	SYNCHRONIZER BLOCKING RING	8
20	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	5-6
20	T 18074	1316 304 148	-----	SYNCHRONIZER HUB (63 T.)	7
20	T 17869	1316 304 163	-----	SYNCHRONIZER HUB (63 T.)	8
21	T 18070	1315 304 136	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	7
21	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	5-6
21	T 17872	1316 304 169	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	8
22	-----	1312 304 084	-----	FIRST SPEED GEAR SLEEVE	
23	T 19401	1316 304 010	-----	FIRST SPEED GEAR (47-30 T.)	
24	T 18461	1312 304 124	-----	FIRST SPEED AND REVERSE GEAR CONE (23 T.)	
25	T 19407	1316 304 012	-----	REVERSE GEAR (44-23 T.)	
26	T 19051	1316 303 064	-----	COUNTERSHAFT CONSTANT GEAR (32 T.)	
27	T 19056	1316 303 065	-----	COUNTERSHAFT FOURTH SPEED GEAR (35 T.)	
28	-----	1316 303 040	-----	COUNTERSHAFT THIRD SPEED GEAR (26 T.)	
29	-----	1316 303 038	-----	COUNTERSHAFT (17-20 T.)	
30	-----	1316 305 001	-----	REVERSE IDLER GEAR (22 T.)	
31	-----	1315 305 009	-----	REVERSE IDLER GEAR SHAFT	
32	-----	1315 202 060	-----	MAIN DRIVE GEAR BEARING RETAINER	B
32	-----	1315 202 061	-----	MAIN DRIVE GEAR BEARING RETAINER	A
32	-----	1315 202 065	-----	MAIN DRIVE GEAR BEARING RETAINER	A
32	-----	1315 202 066	-----	MAIN DRIVE GEAR BEARING RETAINER	C
32	-----	1315 302 075	-----	MAIN DRIVE GEAR BEARING RETAINER	A
32	-----	1315 302 134	-----	MAIN DRIVE GEAR BEARING RETAINER	A
32	-----	1315 302 161	-----	MAIN DRIVE GEAR BEARING RETAINER	A
32	-----	4130 306 306	-----	MAIN DRIVE GEAR BEARING RETAINER	B
33	T 18533	1315 302 196	-----	MAIN DRIVE GEAR OIL TUBE	9
34	T 18530	0630 502 027	-----	MAIN DRIVE GEAR SEEGER RING	9
35	T 18524	0501 314 060	-----	MAIN DRIVE GEAR DIAPHRAGM	9
36	T 16173	1297 298 955	-----	SYNCHRONIZER REPAIR KIT	1
37	T 20143	1315 302 121	-----	OIL PUMP BODY	
38	T 20132	1314 202 039	-----	OIL PUMP DRIVE GEAR AND SHAFT (6 T.)	
39	T 20148	1315 303 027	-----	OIL PUMP DRIVEN GEAR (7 T.)	
40	T 20138	1315 302 120	-----	OIL PUMP COVER	
41	T 18632	1315 298 018	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	2 (*)
41	T 18061	1315 298 055	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	3 (*)
41	T 17865	1315 298 061	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT	4 (*)
42	T 18629	1313 204 003	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT	5 (*)

215

NOTES:

Articoli con la stessa lettera o numero vanno accoppiati assieme

Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 221


(*) For the composition of the kits please see page 221.

.

.

16 S 251

ZF 58
4-510

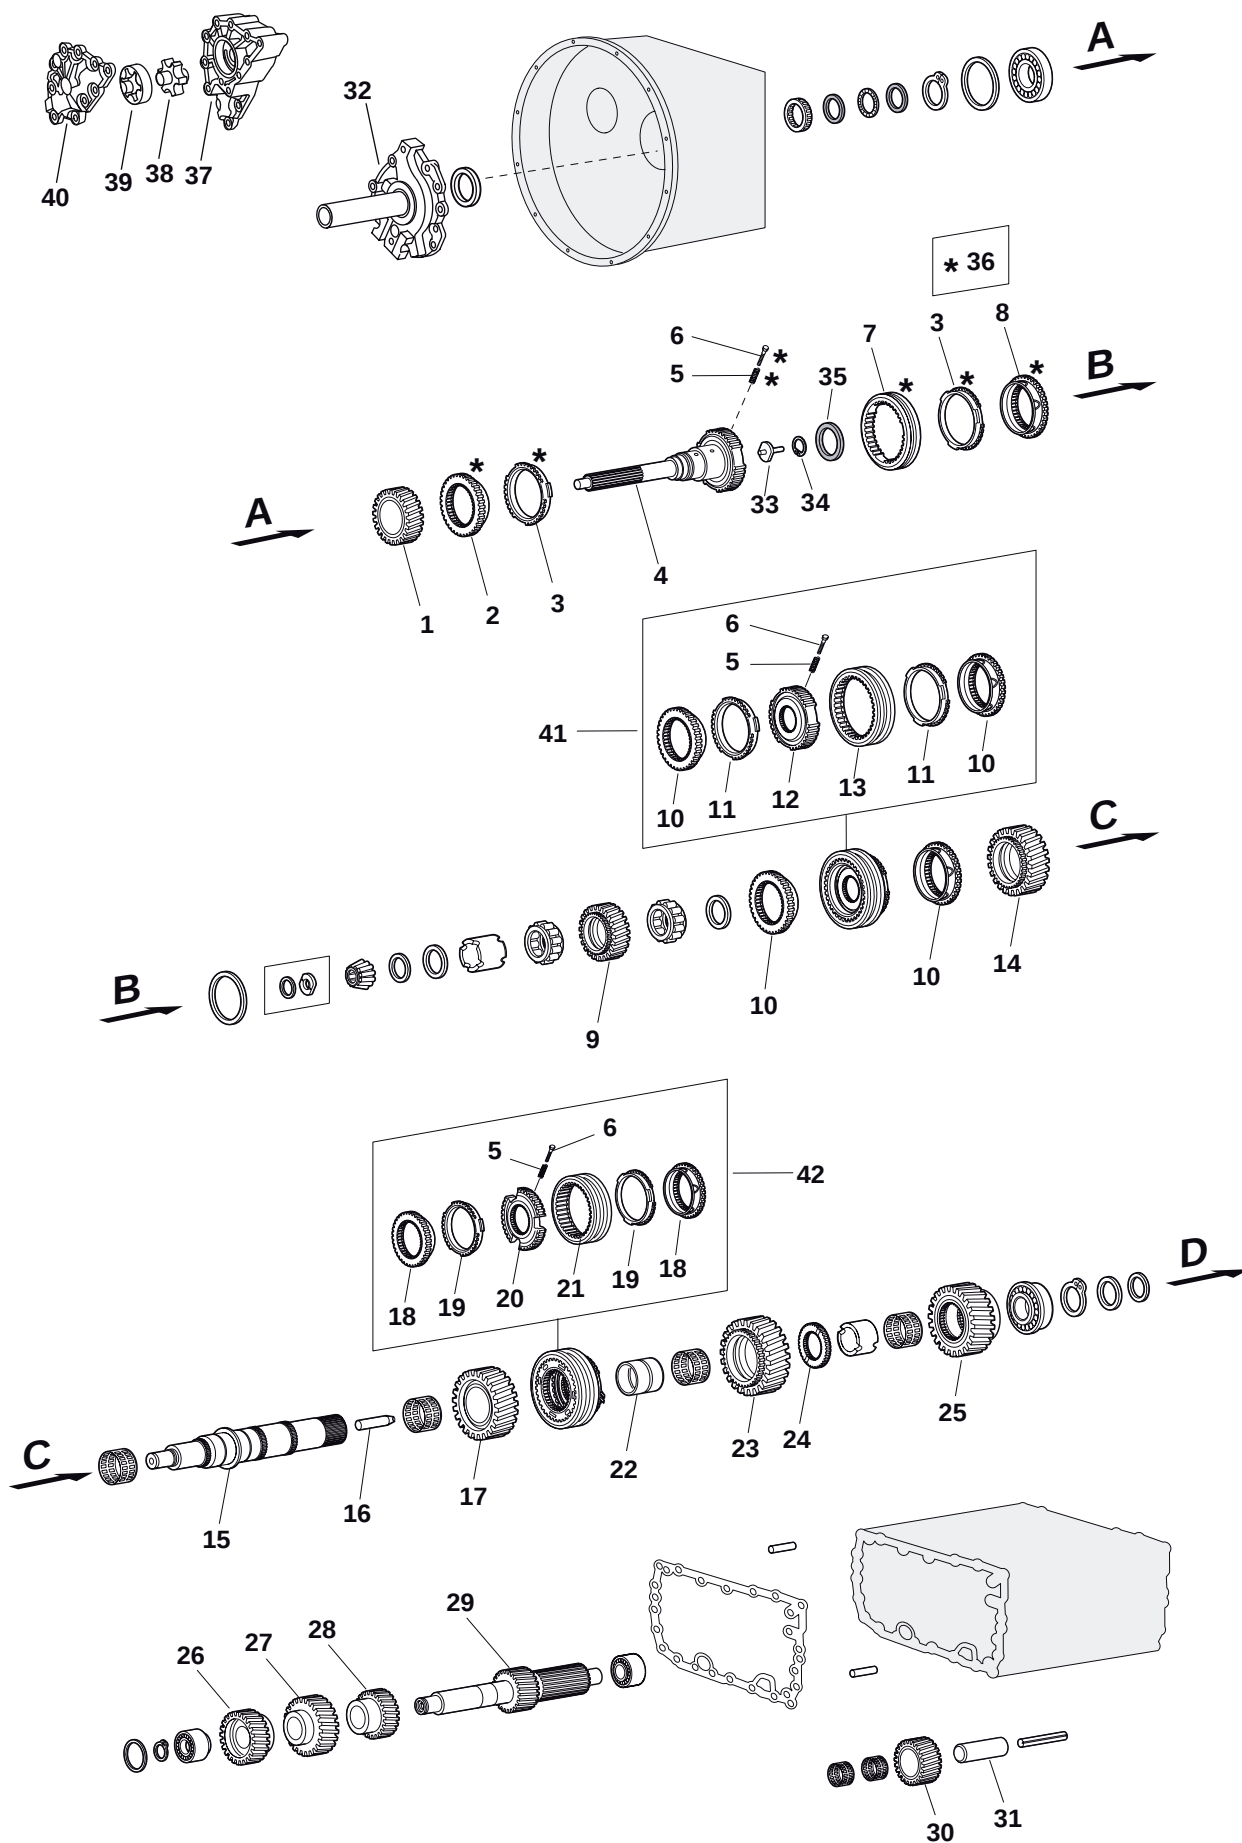

[illegible]





Articoli con la stessa lettera o numero vanno accoppiati assieme

Items with same letter or number must be coupled together.

(*) Per la composizione dei kit vedi pagina 221

(*) For the composition of the kits please see page 221.

ZF 58
4-510

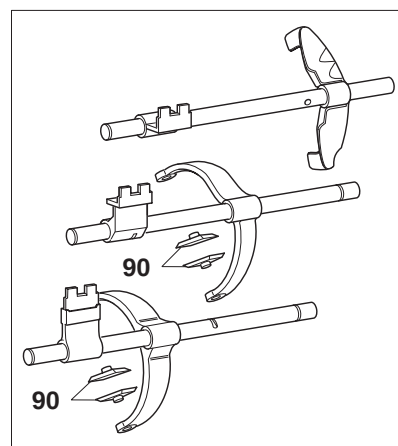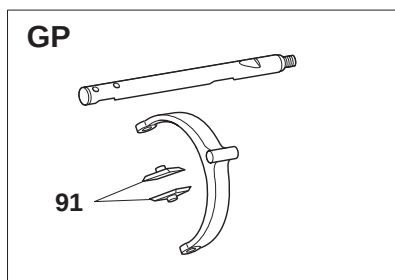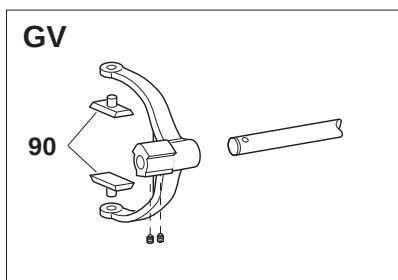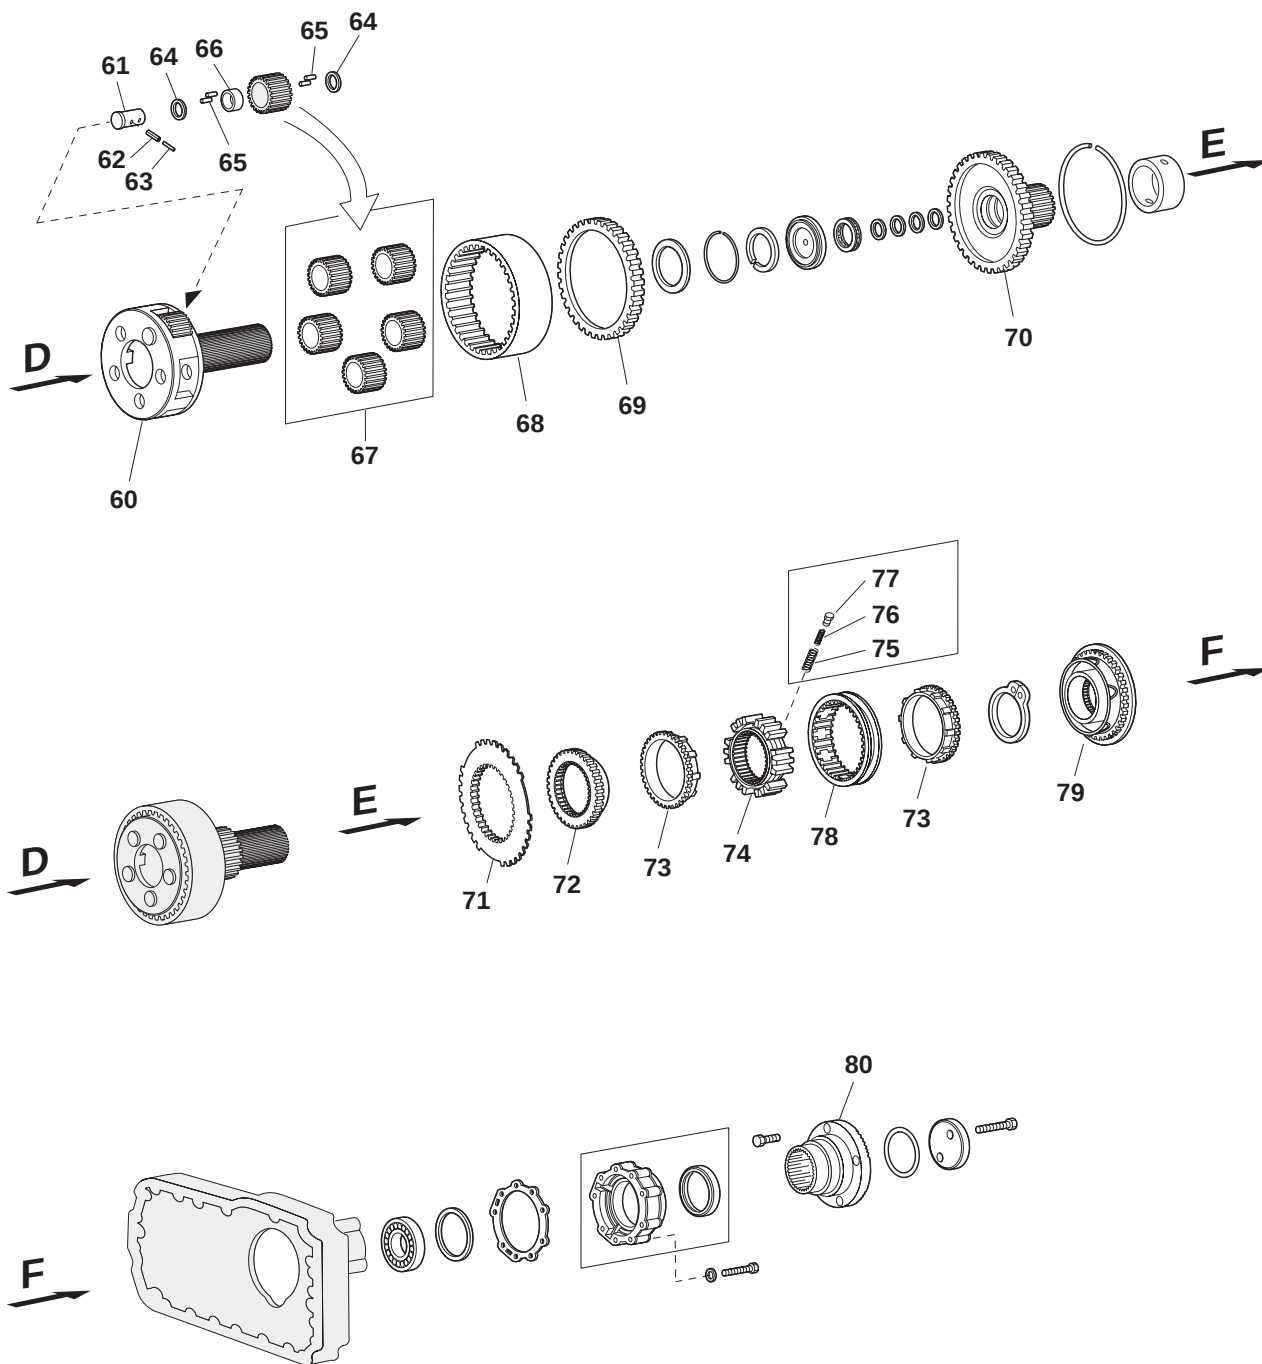

219

ZF 58
4-510

ZF	TAS	MERCEDES	TAB	KEY	ZF	TAS	MERCEDES	TAB	KEY
0501 314 060	T 18524	-----	ZF 58	35	1316 233 015	T 15940	-----	ZF 58	79
0630 502 027	T 18530	-----	ZF 58	34	1316 302 067	T 19388	-----	ZF 58	1
0630 531 055	T 19907	003 994 3841	ZF 58	-----	1316 303 038	-----	-----	ZF 58	29
0631 329 051	-----	-----	ZF 58	62	1316 303 040	-----	-----	ZF 58	28
0631 329 167	-----	-----	ZF 58	63	1316 303 064	T 19051	-----	ZF 58	26
0635 331 390	T 19914	004 981 8625	ZF 58	-----	1316 303 065	T 19056	-----	ZF 58	27
0730 109 323	-----	-----	ZF 58	64	1316 304 002	T 19160	-----	ZF 58	17
0730 162 801	-----	-----	ZF 58	66	1316 304 010	T 19401	-----	ZF 58	23
0730 260 330	T 16568	000 268 2150	ZF 58	-----	1316 304 012	T 19407	-----	ZF 58	25
0732 040 385	T 08950	336 264 0693	ZF 58	75	1316 304 066	-----	-----	ZF 58	14
0732 040 386	T 08951	336 264 0793	ZF 58	76	1316 304 078	T 18297	000 262 7623	ZF 58	21
0732 040 409	T 13440	005 993 6101	ZF 58	5	1316 304 093	-----	-----	ZF 58	16
0750 119 116	-----	000 981 4686	ZF 58	65	1316 304 103	T 17914	-----	ZF 58	9
1240 304 278	T 08949	336 264 0239	ZF 58	77	1316 304 131	-----	-----	ZF 58	15
1240 317 075	T 08917	000 264 1423	ZF 58	-----	1316 304 145	T 18071	-----	ZF 58	10
1295 142 011	T 19902	000 260 4605	ZF 58	-----	1316 304 146	T 18072	-----	ZF 58	18
1295 338 083	T 19927	000 264 5150	ZF 58	-----	1316 304 147	T 18073	-----	ZF 58	12
1296 213 028	T 11462	000 264 4206	ZF 58	-----	1316 304 148	T 18074	-----	ZF 58	20
1296 333 022	T 09061	000 263 0234	ZF 58	73	1316 304 149	T 18075	-----	ZF 58	11
1296 333 023	T 09062	000 263 0523	ZF 58	78	1316 304 150	T 18077	001 262 1034	ZF 58	19
1296 333 045	T 15084	000 263 0534	ZF 58	73	1316 304 156	T 17866	-----	ZF 58	18
1296 333 050	T 18042	-----	ZF 58	72	1316 304 159	T 17867	-----	ZF 58	10
1296 334 004	T 17892	000 265 0649	ZF 58	91	1316 304 162	T 17868	-----	ZF 58	12
1297 203 005	T 19936	000 264 4218	ZF 58	-----	1316 304 163	T 17869	-----	ZF 58	20
1297 298 955	T 16173	-----	ZF 58	36	1316 304 167	T 17870	-----	ZF 58	13
1297 304 401	T 17880	000 262 4934	ZF 58	19	1316 304 168	T 17871	-----	ZF 58	11
1297 304 402	T 11724	000 262 3834	ZF 58	3	1316 304 169	T 17872	-----	ZF 58	21
1297 304 402	T 11724	000 262 3834	ZF 58	11	1316 304 170	T 17873	-----	ZF 58	19
1297 304 436	T 15096	000 264 0839	ZF 58	6	1316 305 001	-----	-----	ZF 58	30
1297 304 484	T 15078	000 262 7034	ZF 58	3	1316 306 015	T 19201	-----	ZF 58	90
1297 304 484	T 15078	000 262 7034	ZF 58	11	1316 332 042	-----	-----	ZF 58	68
1297 304 485	T 18028	-----	ZF 58	19	1316 332 044	-----	-----	ZF 58	69
1297 306 120	T 17901	000 268 1149	ZF 58	90	1316 332 073	-----	-----	ZF 58	70
1297 333 110	-----	-----	ZF 58	80	1316 332 097	-----	-----	ZF 58	61
1310 304 202	T 14983	001 262 1823	ZF 58	7	1316 333 026	-----	-----	ZF 58	71
1310 304 202	T 14983	001 262 1823	ZF 58	13	4130 306 306	-----	-----	ZF 58	32
1312 304 027	T 11729	000 262 5535	ZF 58	2					
1312 304 027	T 11729	000 262 5535	ZF 58	10					
1312 304 052	T 17886	000 262 5835	ZF 58	12					
1312 304 056	T 15103	-----	ZF 58	8					
1312 304 084	-----	-----	ZF 58	22					
1312 304 124	T 18461	-----	ZF 58	24					
1313 204 003	T 18629	-----	ZF 58	42					
1313 298 909	T 18631	-----	ZF 58	42					
1313 304 008	T 18287	-----	ZF 58	20					
1313 304 009	T 18035	-----	ZF 58	18					
1313 333 001	T 18052	-----	ZF 58	74					
1314 202 039	T 20132	-----	ZF 58	38					
1315 202 060	-----	-----	ZF 58	32					
1315 202 061	-----	-----	ZF 58	32					
1315 202 065	-----	-----	ZF 58	32					
1315 202 066	-----	-----	ZF 58	32					
1315 298 001	T 19441	-----	ZF 58	-----					
1315 298 002	T 19427	-----	ZF 58	-----					
1315 298 003	T 19433	-----	ZF 58	-----					
1315 298 018	T 18632	-----	ZF 58	41					
1315 298 054	T 18060	-----	ZF 58	42					
1315 298 055	T 18061	-----	ZF 58	41					
1315 298 060	T 17864	-----	ZF 58	42					
1315 298 061	T 17865	-----	ZF 58	41					
1315 302 075	-----	-----	ZF 58	32					
1315 302 120	T 20138	-----	ZF 58	40					
1315 302 121	T 20143	-----	ZF 58	37					
1315 302 134	-----	-----	ZF 58	32					
1315 302 161	-----	-----	ZF 58	32					
1315 302 196	T 18533	-----	ZF 58	33					
1315 303 027	T 20148	-----	ZF 58	39					
1315 304 135	T 18068	-----	ZF 58	13					
1315 304 136	T 18070	-----	ZF 58	21					
1315 305 009	-----	-----	ZF 58	31					
1315 306 079	-----	-----	ZF 58	90					
1316 202 025	T 17909	-----	ZF 58	4					
1316 202 033	-----	-----	ZF 58	4					
1316 202 037	-----	-----	ZF 58	4					
1316 232 017	-----	-----	ZF 58	67					
1316 232 021	-----	-----	ZF 58	60					

- KITS -



KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
36	T 16173	1297 298 955	-----	SYNCHRONIZER REPAIR KIT		16 S 251	ZF 58
2	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	1	16 S 251	ZF 58
3	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 251	ZF 58
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 251	ZF 58
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 251	ZF 58
7	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 251	ZF 58
8	T 15103	1312 304 056	-----	SYNCHRONIZER CONE (57 T.)	1	16 S 251	ZF 58
41	T 18632	1315 298 018	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 251	ZF 58
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 251	ZF 58
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 251	ZF 58
10	T 11729	1312 304 027	000 262 5535	SYNCHRONIZER CONE (57 T.)	2	16 S 251	ZF 58
11	T 15078	1297 304 484	000 262 7034	SYNCHRONIZER BLOCKING RING	2	16 S 251	ZF 58
12	T 17886	1312 304 052	000 262 5835	SYNCHRONIZER HUB (57 T.)	1	16 S 251	ZF 58
13	T 14983	1310 304 202	001 262 1823	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 251	ZF 58
41	T 18061	1315 298 055	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 251	ZF 58
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 251	ZF 58
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 251	ZF 58
10	T 18071	1316 304 145	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 251	ZF 58
11	T 18075	1316 304 149	-----	SYNCHRONIZER BLOCKING RING	2	16 S 251	ZF 58
12	T 18073	1316 304 147	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 251	ZF 58
13	T 18068	1315 304 135	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 251	ZF 58
41	T 17865	1315 298 061	-----	THIRD AND FOURTH SPEED SYNCHRONIZER REPAIR KIT		16 S 251	ZF 58
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 251	ZF 58
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 251	ZF 58
10	T 17867	1316 304 159	-----	SYNCHRONIZER CONE (57 T.)	2	16 S 251	ZF 58
11	T 17871	1316 304 168	-----	SYNCHRONIZER BLOCKING RING	2	16 S 251	ZF 58
12	T 17868	1316 304 162	-----	SYNCHRONIZER HUB (57 T.)	1	16 S 251	ZF 58
13	T 17870	1316 304 167	-----	SYNCHRONIZER SLIDING COLLAR (57 T.)	1	16 S 251	ZF 58
42	T 18629	1313 204 003	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 251	ZF 58
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 251	ZF 58
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 251	ZF 58
19	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	2	16 S 251	ZF 58
20	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 251	ZF 58
21	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 251	ZF 58
42	T 18631	1313 298 909	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 251	ZF 58
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 251	ZF 58
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 251	ZF 58
18	T 18035	1313 304 009	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 251	ZF 58
19	T 17880	1297 304 401	000 262 4934	SYNCHRONIZER BLOCKING RING	2	16 S 251	ZF 58
20	T 18287	1313 304 008	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 251	ZF 58
21	T 18297	1316 304 078	000 262 7623	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 251	ZF 58
42	T 18060	1315 298 054	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 251	ZF 58
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 251	ZF 58
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 251	ZF 58
18	T 18072	1316 304 146	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 251	ZF 58
19	T 18077	1316 304 150	001 262 1034	SYNCHRONIZER BLOCKING RING	2	16 S 251	ZF 58
20	T 18074	1316 304 148	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 251	ZF 58
21	T 18070	1315 304 136	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 251	ZF 58

KEY	TAS	ZF	MERCEDES	DESCRIPTION	Q.TY	MODEL	TABLE
-----	-----	----	----------	-------------	------	-------	-------

42	T 17864	1315 298 060	-----	FIRST AND SECOND SPEED SYNCHRONIZER REPAIR KIT		16 S 251	ZF 58
5	T 13440	0732 040 409	005 993 6101	SYNCHRONIZER PRESSURE SPRING	3	16 S 251	ZF 58
6	T 15096	1297 304 436	000 264 0839	SYNCHRONIZER PRESSURE PLUNGER	3	16 S 251	ZF 58
18	T 17866	1316 304 156	-----	SYNCHRONIZER CONE (63 T.)	2	16 S 251	ZF 58
19	T 17873	1316 304 170	-----	SYNCHRONIZER BLOCKING RING	2	16 S 251	ZF 58
20	T 17869	1316 304 163	-----	SYNCHRONIZER HUB (63 T.)	1	16 S 251	ZF 58
21	T 17872	1316 304 169	-----	SYNCHRONIZER SLIDING COLLAR (63 T.)	1	16 S 251	ZF 58

T.A.S. PRODUCT WARRANTY

T.A.S. customers are guaranteed protection and satisfaction under this product warranty. We guarantee our products to be free from defect in material and workmanship and to be interchangeable with the equivalent products of the original equipment manufacturer.

We will replace free of charge, F.O.B. Italian port, any piece of our manufacture which we believe to be defective in material or workmanship, provided it was properly installed and used in normal operation. Under no circumstances will we recognise claims for labour charges or consequential damage: our liability being limited to the substitution of such pieces as we deem defective.

No pieces should be returned to us for inspection prior to receiving our written authorisation.

IMPORTANT NOTICES

The data listed herein is correct to the best of our knowledge and belief, having been compiled from reliable and official sources of information. However, we cannot assume any responsibility for possible errors.

Your enquiries for any types of GEARS not included in this catalogue are invited.

The manufacture of any such gears will be contemplated provided the quantity involved proves to be a sufficient justification.

All original equipment manufacturers' names, numbers, symbols and descriptions used in this catalogue are for reference purposes only, and it is not implied that any part listed is the product of these manufacturers.





TRACTOR AUTOMOBILE SPARES

Head Office:

Via Argine, 306 - 80147 Napoli

Tel.: +39 081 7520645

Fax: +39 081 7529475

Branch:

Via dell'Industria, 1 - 40050 Argelato (BO)

Tel: +39 051 758154

Fax: +39 051 732707

web@tas-spa.com

www.tas-spa.com



facebook.com/Tas.Spa.TractorAutomobileSpares